


brother®

USER'S GUIDE

FAX-1360

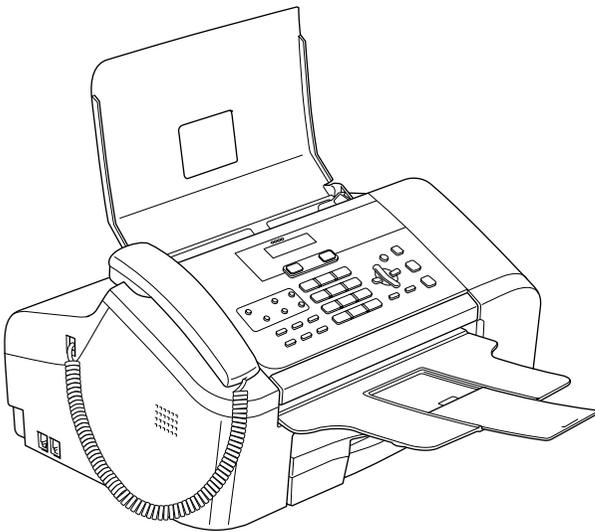

If you need to call Customer Service

Please complete the following information for future reference:

Model Number: FAX-1360

Serial Number: ¹ _____

Date of Purchase: _____

Place of Purchase: _____

¹ The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.

Register your product on-line at

<http://www.brother.com/registration/>

By registering your product with Brother, you will be recorded as the original owner of the product. Your registration with Brother:

- may serve as confirmation of the purchase date of your product should you lose your receipt; and
- may support an insurance claim by you in the event of product loss covered by insurance.

Approval Information and Compilation and Publication Notice

THIS EQUIPMENT IS DESIGNED TO WORK WITH A TWO WIRE ANALOGUE PSTN LINE FITTED WITH THE APPROPRIATE CONNECTOR.

APPROVAL INFORMATION

Brother advises that this product may not function correctly in a country other than where it was originally purchased, and does not offer any warranty in the event that this product is used on public telecommunication lines in another country.

Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Table of Contents

Section I General

1	General Information	2
	Using the documentation	2
	Symbols and conventions used in the documentation	2
	Control panel overview	3
2	Loading documents and paper	5
	Loading documents	5
	Using the ADF	5
	Scanning area	6
	Handling and using plain paper	6
	Choosing the right media for the paper tray	8
	Loading paper	9
	How to load paper	9
	Printable Area	11
3	General setup	12
	Power Save mode	12
	Putting your machine in Power Save mode.....	12
	Bringing your machine out of Power Save mode	12
	Power Save setting.....	12
	Mode Timer.....	13
	Paper settings.....	13
	Paper Size	13
	Volume Settings.....	14
	Ring Volume	14
	Beeper Volume.....	14
	Speaker Volume	14
	Setting Daylight Saving Time.....	15
4	Security features	16
	TX Lock.....	16
	Setting and changing the TX Lock password	16
	Turning the TX Lock on/off	17

Section II Fax

5	Sending a fax	20
	Entering Fax mode	20
	Faxing from the ADF	20
	Cancelling a fax in progress	20
	Broadcasting.....	20
	Cancelling a Broadcast in progress.....	21
	Additional sending operations.....	21
	Sending faxes using multiple settings	21
	Contrast.....	21
	Changing Fax Resolution	22
	Dual access	22
	Real time transmission	23
	Overseas Mode	23
	Delayed Faxing.....	24
	Delayed Batch Transmission.....	24
	Checking and cancelling waiting jobs.....	24
	Sending a fax manually	25
	Sending a fax at the end of a conversation	25
	Out of Memory message	25
6	Receiving a Fax	26
	Receive modes.....	26
	Choosing the Receive Mode	26
	Using receive modes	27
	Fax only.....	27
	Fax/Tel.....	27
	Manual.....	27
	External TAD	27
	Receive mode settings	28
	Ring Delay.....	28
	F/T Ring Time (Fax/Tel mode only).....	28
	Fax Detect	28
	Additional receiving operations.....	29
	Printing a reduced incoming fax	29
	Receiving faxes into memory	29
	Receiving a fax at the end of a conversation.....	30
	Printing a fax from the memory	30
7	Telephone and External devices	31
	Voice Operations	31
	Making a telephone call.....	31
	Hold	31
	Tone or pulse (Not available for New Zealand).....	31
	Fax/Tel mode	31
	Fax/Tel mode in Power Save condition.....	31

10	Printing Reports	52
	Fax reports.....	52
	Transmission Verification Report.....	52
	Fax Journal (activity report)	52
	Reports	53
	How to print a report.....	53

11	Polling	54
	Polling receive	54
	Setup for polling receive	54
	Setup to receive polling with a secure code	54
	Setup for delayed polling receive	54
	Sequential polling	55
	Polled transmit.....	55
	Setup for polled transmit.....	55
	Setup for polled transmit with secure code.....	56

Section III Copy

12	Making copies	58
	How to copy.....	58
	Entering Copy mode.....	58
	Making a single copy	58
	Making multiple copies	58
	Stop copying.....	58
	Copy options.....	59
	Changing copy speed and quality	59
	Enlarging or reducing the image copied	60
	Making N in 1 copies	61
	Sorting copies using the ADF	61
	Adjusting Brightness and Contrast	62
	Paper options	62

Section IV Appendixes

A	Safety and Legal	64
	Choosing a location	64
	To use the machine safely.....	65
	IMPORTANT-For Your Safety	68
	Important Information for Australia	69
	Important safety instructions.....	69
	Important Information for New Zealand	70
	Important Safety Instructions.....	70

Important Information for Some Countries.....	72
Important Safety Instructions	72
Legal limitations for copying	74
Trademarks.....	75
B Troubleshooting and Routine Maintenance	76
Troubleshooting	76
If you are having difficulty with your machine	76
Error messages	79
Transferring your faxes or Fax Journal report	81
Document jam	82
Printer jam or paper jam	83
Dial Tone detection.....	84
Compatibility	84
Routine maintenance	85
Replacing the ink cartridge	85
Cleaning the outside of the machine	87
Cleaning the scanner.....	88
Cleaning the machine printer platen	88
Cleaning the paper pick-up roller.....	89
Cleaning the print head	89
Checking the print quality	89
Checking the print alignment	90
Checking the ink volume	91
Machine Information	91
Checking the serial number.....	91
Packing and shipping the machine	92
C Menu and Features	94
On-screen programming.....	94
Menu table.....	94
Memory storage.....	94
Menu keys	94
Menu Table.....	96
Entering Text	101
D Specifications	102
General	102
Print media.....	104
Fax.....	105
Copy	106
Consumable items	106
E Glossary	107
F Index	111



General

General Information	2
Loading documents and paper	5
General setup	12
Security features	16

Using the documentation

Thank you for buying a Brother machine!
Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold Bold typeface identifies specific keys on the machine's control panel.

Italics Italicized typeface emphasizes an important point or refers you to a related topic.

`Courier New` Text in the Courier New font identifies messages on the LCD of the machine.



Warnings tell you what to do to prevent possible personal injury.



Electrical Hazard icons alert you to possible electrical shock.



Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.




Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.



Improper Setup icons alert you to devices and operations that are not compatible with the machine.

Control panel overview

FAX-1360

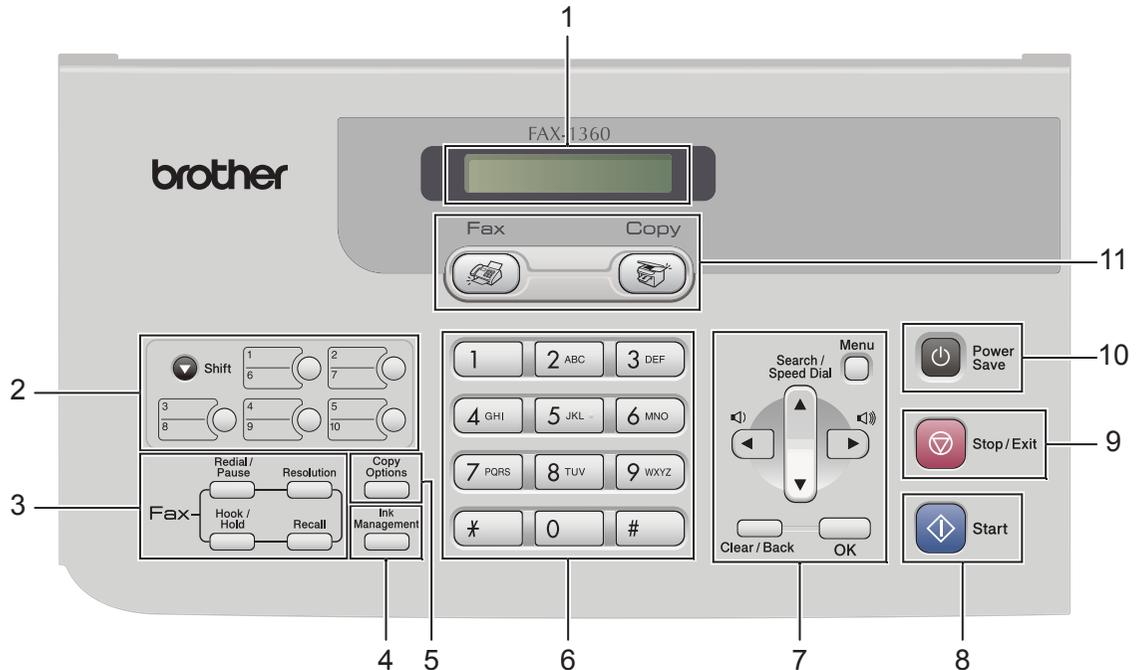

1 LCD (liquid crystal display)

Displays messages on the screen to help you set up and use your machine.

2 One-Touch keys

Instantly accesses your stored Quick-Dial numbers.

■ Shift

When held down, lets you access One-Touch numbers **6** to **10**.

3 Fax keys

■ Redial/Pause

Redials the last number called. It also inserts a pause when programming quick-dial numbers.

■ Resolution

Lets you temporarily change the resolution when sending a fax.

■ Recall

Use this key to gain access to an outside line (Australia and New Zealand only), or transfer a call to another extension when the machine is connected to a PABX.

■ Hook/Hold

Press before dialing if you want to make sure a fax machine will answer, and then press **Start**.

Also, Puts the current phone call on hold.

4 Ink Management

Lets you clean the print head, print a test page to check the print quality, and check the available ink volume.

5 Copy key

■ Copy Options

Lets you temporarily change multiple copy settings when in copy mode.

6 Dial Pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The **#** key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone. (Not Available in New Zealand)

7 Menu keys:

■ **Menu**

Lets you access the menu to program your settings in the machine.

■ **▲ Search/Speed Dial**

Lets you look up and dial numbers that are stored in the memory.

■ **Volume keys**



In Fax mode, you can press these keys to adjust the ring volume.

■ **◀**

Press to scroll backward to a menu selection.

■ **▲ or ▼**

Press to scroll through the menus and options.

■ **Clear/Back**

Press to cancel the current setting and go back to the previous menu.

■ **OK**

Lets you store your settings in the machine or select an item.

8 **Start**

- Lets you start sending faxes or making copies in monochrome.

9 **Stop/Exit**

Stops an operation or exits from a menu.

10 **Power Save**

Lets you put the machine into Power Save mode. All lights will extinguish.

11 **Mode keys:**

■ **Fax**

Lets you access Fax mode.

■ **Copy**

Lets you access Copy mode.

2

Loading documents and paper

Loading documents

You can send a fax and make copies from the ADF (automatic document feeder).

Using the ADF

The ADF can hold up to 20 pages and feeds each sheet individually. Use standard 80 g/m² (20 lb) paper and always fan the pages before putting them in the ADF.

Recommended environment

Temperature:	20 to 30° C (68 to 86° F)
Humidity:	50% to 70%
Paper:	80 g/m ² A4 (20 lb LTR)

Document Sizes and weights Supported

Length:	127 to 355.6 mm (5 to 14 in.)
Width:	89 to 215.9 mm (3.5 to 8.5 in.)
Weight:	64 to 90 g/m ² (17 to 24 lb)

How to load documents

! CAUTION


DO NOT pull on the document while it is feeding.

DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped.

DO NOT use cardboard, newspaper or fabric.


- Make sure documents written with ink are completely dry.

- 1 Open the document support (1) and the document tray (2) and then pull out the extension (3).

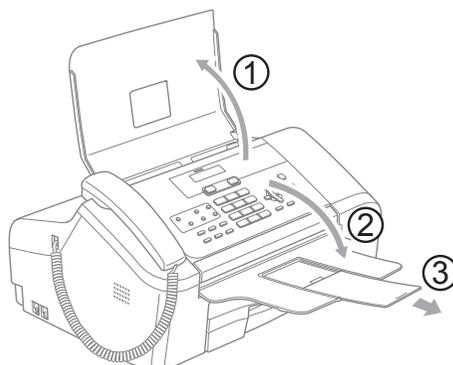


- 2 Fan the pages well. Make sure you put the documents **face down, top edge first** in the ADF until you feel them touch the feed roller.

- 3 Adjust the paper guides (1) to fit the width of your documents.

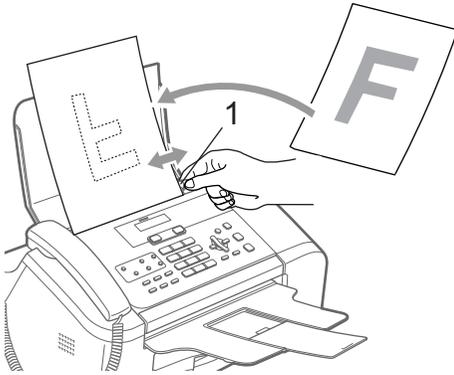

Scanning area

The figures below show the areas you cannot scan on paper.

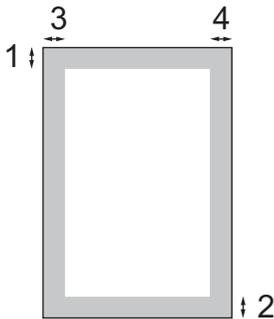

Usage	Document Size	Top (1) Bottom (2)	Left (3) Right (4)
Fax	Letter	3 mm (0.12 in.)	4 mm (0.16 in.)
	A4	3 mm (0.12 in.)	3 mm (0.12 in.)
Copy	Letter	3 mm (0.12 in.)	4 mm (0.16 in.)
	A4	3 mm (0.12 in.)	3 mm (0.12 in.)

Handling and using plain paper

You can use plain paper only.

To get the best print quality, we suggest using Brother paper. (See table below.)

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

Brother paper


Paper Type	Item
A4 Plain	BP60PA

- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.
- Store paper in its original packaging, and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.

Improper Setup

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

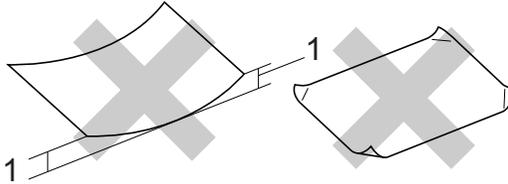

1 2 mm (0.08 in.) or longer

- Extremely shiny or highly textured paper
- Paper already printed on by a printer
- Paper that cannot be arranged uniformly when stacked
- Paper made with a short grain

Paper capacity of the output paper tray

Up to 50 sheets of 20 lb Letter or 80 g/m² A4 paper.

Choosing the right media for the paper tray

Paper type and size for each operation

Paper Type	Paper Size		Usage	
			Fax	Copy
Cut Sheet	Letter	216 × 279 mm (8 1/2 × 11 in.)	Yes	Yes
	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes
	Legal	216 × 356 mm (8 1/2 × 14 in.)	Yes	Yes

Paper weight, thickness and capacity



Paper Type		Weight	Thickness	No. of sheets
Cut Sheet	Plain Paper	64 to 120 g/m ² (17 to 32 lb)	0.08 to 0.15 mm (0.003 to 0.006 in.)	100 ¹

¹ Up to 50 sheets for Legal size paper 80 g/m² (20 lb).
Up to 100 sheets of 80 g/m² (20 lb) paper.


Loading paper

How to load paper


- 1 If the paper support flap (1) is open, close it, and then pull the paper tray completely out of the machine. Open the output tray cover (2).

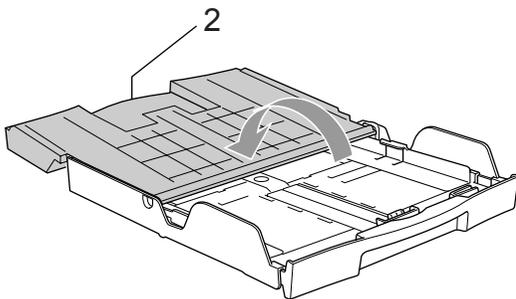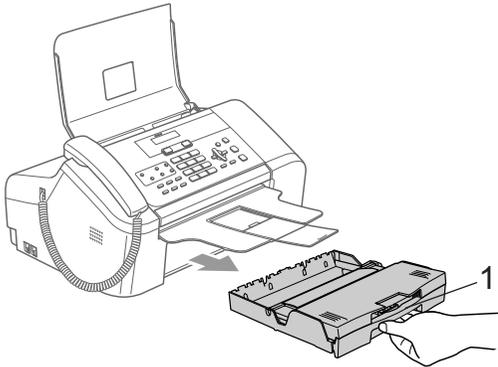


- 2 Press and hold the universal guide release button (1) as you slide out the front of the paper tray to match the paper size you are using.

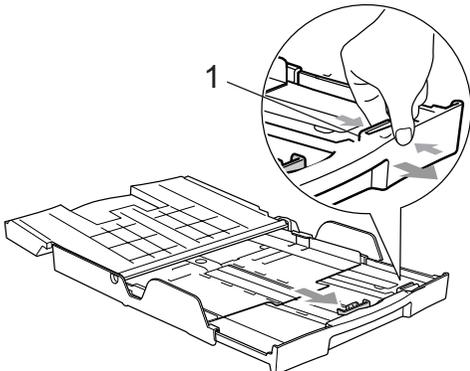

- 3 Press and slide the paper side guides (1) and paper length guide (2) to fit the paper size.

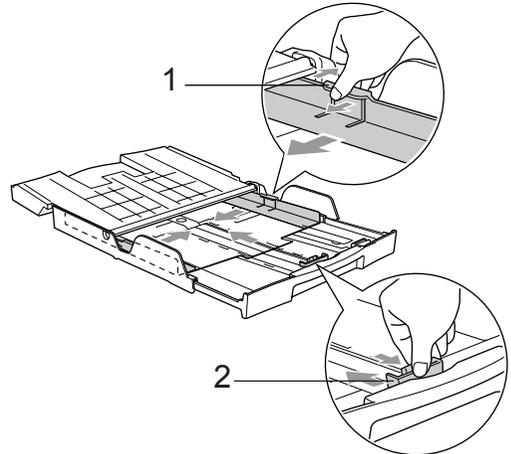


- 4 Fan the stack of paper well to avoid paper jams and misfeeds.

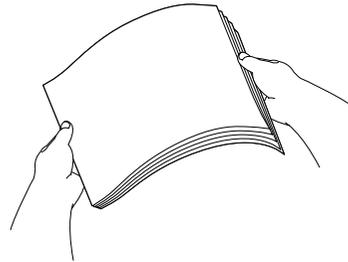


Note

Always make sure the paper is not curled.

- 5 Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.

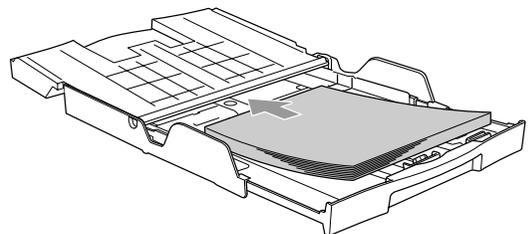


- 6 Gently adjust the paper side guides with both hands and the paper length guide to fit the paper. Make sure that the paper guides touch the edges of the paper.

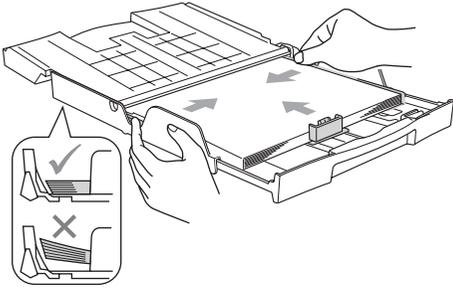


 **Note**

Be careful that you do not push the paper in too far; it may lift at the back of the tray and cause feed problems.


- 7 Close the output paper tray cover (1) and slide it forward.

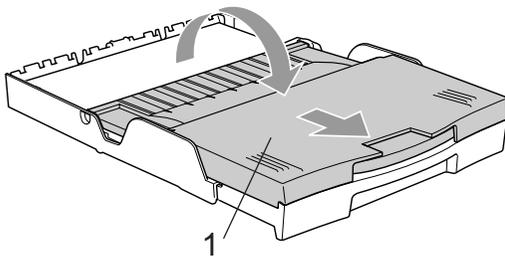

- 8 Slowly push the paper tray completely into the machine.

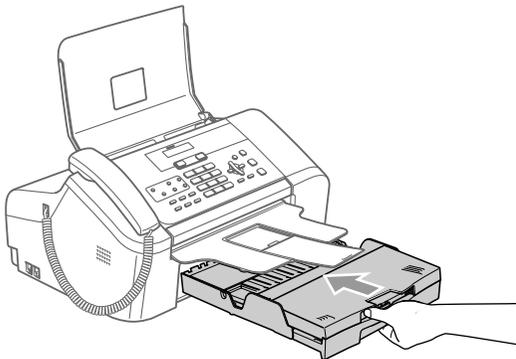

- 9 While holding the paper tray in place, pull out the paper support (1) until it clicks and unfold the paper support flap (2).

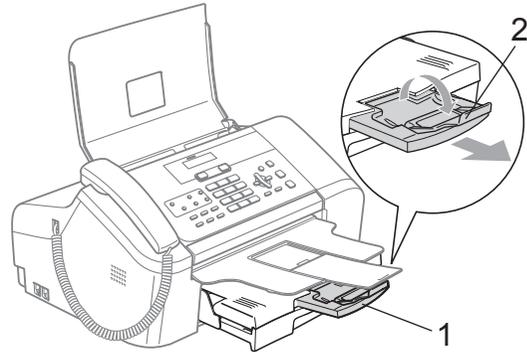


 **Note**

Do not use the paper support flap for Legal size paper.

Printable Area

The figure below shows the unprintable areas on cut sheet paper. The machine cannot print in the shaded areas.

Cut Sheet Paper

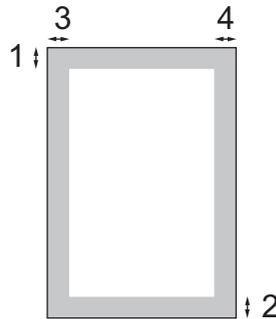

	Top (1)	Bottom (2)	Left (3)	Right (4)
Cut Sheet	3 mm (0.12 in.)	3 mm (0.12 in.)	4 mm (0.16 in.)	4 mm (0.16 in.)

3

General setup

Power Save mode

When the machine is idle, you can put the machine into Power Save mode by pressing the **Power Save** key. You can still receive telephone calls in Power Save mode. For further information on receiving faxes in the power save condition, please see the table on page 12. If you want to do other operations, you must take the machine out of Power Save mode.



Note

- When the machine in Power Save Mode, all lights will extinguish.
- You can retrieve faxes using Remote Retrieval if you are away from your machine. (See *Retrieving fax messages* on page 49)
- If you have connected an external telephone or TAD, it is always available.

Putting your machine in Power Save mode

- 1 Press and hold down the **Power Save** key until the LCD shows *Shutting Down*. The LCD light goes off.

Bringing your machine out of Power Save mode

- 1 Press the **Power Save** key.



Note

- Even if you have put the machine into Power Save mode, it will periodically clean the print head to preserve print quality.
- If you unplug the AC power cord, no machine operations will be available.

- You can customize Power Save mode so that, apart from automatic head cleaning, no machine operations are available. (See *Power Save setting* on page 12.)

Power Save setting

You can customize the machine's **Power Save** key. The default mode is *Fax Receive:On*. Your machine can receive faxes or calls even when the machine is in Power Save mode. If you do not want your machine to receive faxes or calls, turn this setting to *Fax Receive:Off*. (See *Power Save mode* on page 12)

- 1 Press **Menu**, **1**, **5**.
- 2 Press **▲** or **▼** to choose *Fax Receive:On*, or *Fax Receive:Off*. Press **OK**.
- 3 Press **Stop/Exit**.

On/Off setting	Receive mode	Available operations
Fax Receive :On ^{1 2} (factory setting)	Fax Only Fax/Tel External TAD	Fax Receive Fax Detect Delayed Fax ³ Fax Forward ³ Fax Storage ³ Remote Retrieval ³
	Manual	Fax Detect, Delayed Fax ³
Fax Receive :Off	—	No machine operations will be available other than cleaning the print head.

- 1 You cannot receive a fax with **Start**.
- 2 You can receive telephone calls by lifting the handset.
- 3 Should be set before you switch off the machine.

Mode Timer

The machine has two temporary mode keys on the control panel: **Fax** and **Copy**. You can change the amount of time the machine takes after the last Copy operation before it returns to Fax mode (default). If you choose **Off**, the machine stays in the mode you used last.



- 1 Press **Menu, 1, 1**.
- 2 Press **▲** or **▼** to choose 0 Sec, 30 Secs, 1 Min, 2 Mins, 5 Mins or Off. Press **OK**.
- 3 Press **Stop/Exit**.

Paper settings

Paper Size

You can use three sizes of paper for printing faxes and copies: Letter, Legal and A4. When you change the size of paper you load in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press **Menu, 1, 2**.
- 2 Press **▲** or **▼** to choose Letter, Legal or A4. Press **OK**.
- 3 Press **Stop/Exit**.

Volume Settings

Ring Volume

You can choose a range of ring volume levels, from **High** to **Off**.

While in Fax mode , press  ◀ or ▶  to adjust the volume level. The LCD shows the current setting, and each key press will change the volume to the next level. The machine will keep the new setting until you change it.

You can also change the volume through the menu, by following the instructions below:

Setting the Ring Volume from the menu

- 1 Press **Menu, 1, 3, 1**.
- 2 Press **▲** or **▼** to choose **Low, Med, High** or **Off**.
Press **OK**.
- 3 Press **Stop/Exit**.

Beeper Volume

When the beeper is on, the machine will beep when you press a key, make a mistake or after you send or receive a fax.

You can choose a range of volume levels, from **High** to **Off**.

- 1 Press **Menu, 1, 3, 2**.
- 2 Press **▲** or **▼** to choose **Low, Med, High** or **Off**.
Press **OK**.
- 3 Press **Stop/Exit**.

Speaker Volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **Menu, 1, 3, 3**.
- 2 Press **▲** or **▼** to choose **Low, Med, High** or **Off**.
Press **OK**.
- 3 Press **Stop/Exit**.

You can also adjust the speaker volume by pressing **Hook/Hold**.

- 1 Press **Hook/Hold**.
 - 2 Press  ◀ or ▶ .
 - 3 Press **Hook/Hold**.
- This setting will stay until you change it again.

Setting Daylight Saving Time

You can set the machine to change manually for daylight savings time. If you select **On**, it will reset the time forward one hour and if you select **Off**, it will reset the time backward one hour. Make sure you have set the correct date and time in the **Date/Time** setting.

- 1 Press **Menu, 1, 4**.
- 2 Press **▲** or **▼** to choose **On** or **Off**. Press **OK**.
- 3 Press **Stop/Exit**.

4

Security features

TX Lock

TX Lock lets you prevent unauthorized access to the machine.

You will not be able to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on TX Lock so they will not be lost.

While TX Lock is On, the following operations are available:

- Receiving faxes
- Receiving calls
- Fax Forwarding
(If Fax Forwarding was already On.)
- Remote retrieval
(If Fax Storage was already On.)

While TX Lock is On, the following operations are NOT available:

- Sending faxes
- Copying



Note

If you have already set the password, you will not need to set it again.

Setting and changing the TX Lock password



Note

If you forget the TX Lock password, please call your Brother dealer for service.

Setting up the password

- 1 Press **Menu**, **2**, **0**, **1**.
- 2 Enter the 4-digit number for the password.
Press **OK**.
- 3 When the LCD shows *Verify*: re-enter the password.
Press **OK**.
- 4 Press **Stop/Exit**.

Changing the TX Lock password

- 1 Press **Menu**, **2**, **0**, **1**.
- 2 Press **▲** or **▼** to choose *Set Password*.
Press **OK**.
- 3 Enter a 4-digit number for the current password.
Press **OK**.
- 4 Enter a 4-digit number for the new password.
Press **OK**.
- 5 When the LCD shows *Verify*: re-enter the password.
Press **OK**.
- 6 Press **Stop/Exit**.

Turning the TX Lock on/off

Turning TX Lock on

- 1 Press **Menu**, **2**, **0**, **1**.
- 2 Press **▲** or **▼** to choose `Set TX Lock`. Press **OK**.
- 3 Enter the registered 4-digit password. Press **OK**.
The machine goes offline and the LCD shows `TX Lock Mode`.

Turning TX Lock off

- 1 Press **Menu**.
- 2 Enter the registered 4-digit password. Press **OK**.
TX lock is automatically turned off.



Note

If you enter the wrong password, the LCD shows `Wrong Password` and stays offline. The machine will stay in TX Lock mode until the registered password is entered.



Fax

Sending a fax	20
Receiving a Fax	26
Telephone and External devices	31
Dialling and storing numbers	43
Remote fax options	47
Printing Reports	52
Polling	54

5

Sending a fax

Entering Fax mode

To enter fax mode, press  (**Fax**), and the key will glow green.

Faxing from the ADF

- 1 Make sure you are in Fax mode .
- 2 Put the document face down in the ADF.
- 3 Dial the fax number.
- 4 Press **Start**.
The machine starts scanning the document.



Note

- To cancel, press **Stop/Exit**.
- If the memory is full, the document will be sent in real time.

Cancelling a fax in progress

If you want to cancel a fax while the machine is scanning, dialling or sending, press **Stop/Exit**.

Broadcasting

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups (See *Setting up Groups for broadcasting* on page 46), One-Touch, Speed-Dial numbers, and up to 50 manually dialled numbers in the same broadcast.

After the broadcast is finished, a Broadcast Report will be printed.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Enter a number. Press **OK**.
You can use either a One-Touch, a Speed-Dial, a Group, or a manually entered number.
- 4 Repeat 3 until you have entered all the fax numbers you wish to broadcast to.
- 5 Press **Start**.



Note

- If you did not use up any of the numbers for Groups, access codes or credit card numbers, you can 'broadcast' faxes to as many as 160 different numbers.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use dual access.
- Enter the long dialling sequence numbers as you would normally, but remember that each One-Touch and Speed-Dial number counts as one number, so the number of locations you can store becomes limited.

- If the memory is full, press **Stop/Exit** to stop the job. If more than one page has been scanned, press **Start** to send the portion that is in the memory.

Canceling a Broadcast in progress

- 1 Press **Menu**, **2**, **6**.
The LCD will show the fax number being dialed.
- 2 Press **OK**.
The LCD will show the job number:
- 3 Press **1** to clear.
The LCD will then show the Broadcast job number and **1.Clear 2.Exit**.
- 4 To cancel the Broadcast, press **1**.
- 5 Press **Stop/Exit**.

Additional sending operations

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: resolution, contrast, overseas mode and real time transmission.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Choose a setting you want to change. Press **OK**.
- 4 Choose one of the options below:

 - Press **1** to change another setting.
 - Press **2** when you have finished choosing your settings.
- 5 Send the fax as usual.

Contrast

If your document is very light or very dark, you may want to change the contrast. For most documents the default setting **Auto** can be used. It automatically chooses the suitable contrast for your document.

Use **Light** when sending a light document.

Use **Dark** when sending a dark document.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press **Menu**, **2**, **2**, **1**.

- 4 Press ▲ or ▼ to choose *Auto*, *Light* or *Dark*. Press **OK**.

Note

Even if you choose *Light* or *Dark*, the machine will send the fax using the *Auto* setting if you choose *Photo* as the fax resolution.

Changing Fax Resolution

The quality of a fax can be improved by changing the fax resolution. Resolution can be changed for the next fax or for all faxes.

To change the fax resolution for the next fax

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press **Resolution** and then ▲ or ▼ to select the resolution. Press **OK**.

To change the default fax resolution

- 1 Make sure you are in Fax mode .
- 2 Press **Menu**, **2**, **2**, **2**.
- 3 Press ▲ or ▼ to choose the resolution you want. Press **OK**.

Note

- You can choose four different resolution settings for faxes.

<i>Standard</i>	Suitable for most typed documents.
<i>Fine</i>	Good for small print and transmits a little slower than <i>Standard</i> resolution.
<i>S.Fine</i>	Good for small print or artwork and transmits slower than <i>Fine</i> resolution.
<i>Photo</i>	Use when the document has varying shades of grey or is a photograph. This has the slowest transmission.

- The time to send will increase when selecting *S.Fine* or *Photo*.

Dual access

You can dial a number and start scanning the fax into memory—even when the machine is sending from memory or receiving faxes. The LCD shows the new job number and available memory.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.

Note

If the *Out of Memory* message appears while scanning documents, press **Stop/Exit** to cancel or **Start** to send the pages scanned so far.

Real time transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the phone line is free, the machine will start dialling and sending.

If the memory is full, the machine will send the document in real time (even if `Real Time TX` is set to `Off`).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can set `Real Time TX` to `On` for all documents or `Next Fax Only` for the next fax only.

Sending in real time for all faxes

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 2, 5**.
- 3 Press **▲** or **▼** to choose `Realtime TX:On` (or `Realtime TX:Off`). Press **OK**.

Sending in real time for the next fax only

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 2, 5**.
- 3 Press **▲** or **▼** to choose `Next Fax Only`. Press **OK**.
- 4 Press **▲** or **▼** to choose `Next Fax:On` (or `Next Fax:Off`). Press **OK**.



Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the phone line, we recommend that you turn on the Overseas mode. After you send a fax using this feature, the feature will turn itself off.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press **Menu, 2, 2, 7**.
- 4 Press **▲** or **▼** to choose `On` (or `Off`). Press **OK**.

Delayed Faxing

During the day you can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in step 4.

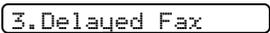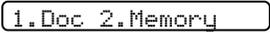- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press **Menu, 2, 2, 3**.

- 4 Do one of the following:
 - Press **OK** to accept the displayed time.
 - Enter the time you want the fax to be sent (in 24-hour format).
 (For example, enter 19:45 for 7:45 PM.)
 Press **OK**.

- 5 Do one of the following:
 - Press **1** to leave the document in the ADF.
 - Press **2** to scan the document into the memory.



Note

The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 2, 4**.
- 3 Press **▲** or **▼** to choose **On** (or **Off**). Press **OK**.
- 4 Press **Stop/Exit**.

Checking and cancelling waiting jobs

You can check which jobs are still waiting in the memory to be sent and cancel a job. (If there are no jobs, the LCD shows **No Jobs Waiting**.)

- 1 Press **Menu, 2, 6**. Any waiting jobs appear on the LCD.
- 2 Press **▲** or **▼** to scroll through the jobs and choose the job you want to cancel. Press **OK**.
- 3 Do one of the following:
 - Press **1** to cancel the selected job.
 - Press **2** to exit without cancelling.
- 4 When you have finished, press **Stop/Exit**.

Sending a fax manually

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Pick up the handset of the machine or press **Hook/Hold** and listen for a dial tone.
- 4 Dial the fax number you want to call.
- 5 When you hear the fax tone, press **Start**.
- 6 If you picked up the handset, replace it.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.

- 1 Ask the other party to wait for fax tones (beeps) and then to press the Start or Send key before hanging up.
- 2 Make sure you are in Fax mode .
- 3 Load your document.
- 4 Press **Start**.
- 5 If you picked up the handset, replace it.

Out of Memory message

If you get an *Out of Memory* message while scanning the first page of a fax, press **Stop/Exit** to cancel the fax.

If you get an *Out of Memory* message while scanning a subsequent page, you will have the option to press **Start** to send the pages scanned so far, or to press **Stop/Exit** to cancel the operation.



Note

- If you get an *Out of Memory* message while faxing and you do not want to delete your stored faxes to clear the memory, you can send the fax in real time. (See *Real time transmission* on page 23.)
- To clear *Out of Memory* message, please see “*Turning off Remote Fax Options*” on page 48, “*Printing a fax from the memory*” on page 30, and “*Checking and cancelling waiting jobs*” on page 24.

6

Receiving a Fax


Receive modes

You must choose the receive mode the external devices and telephone services you have on your line.

Choosing the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct mode.


For more detailed information on the receive modes. See page 27.

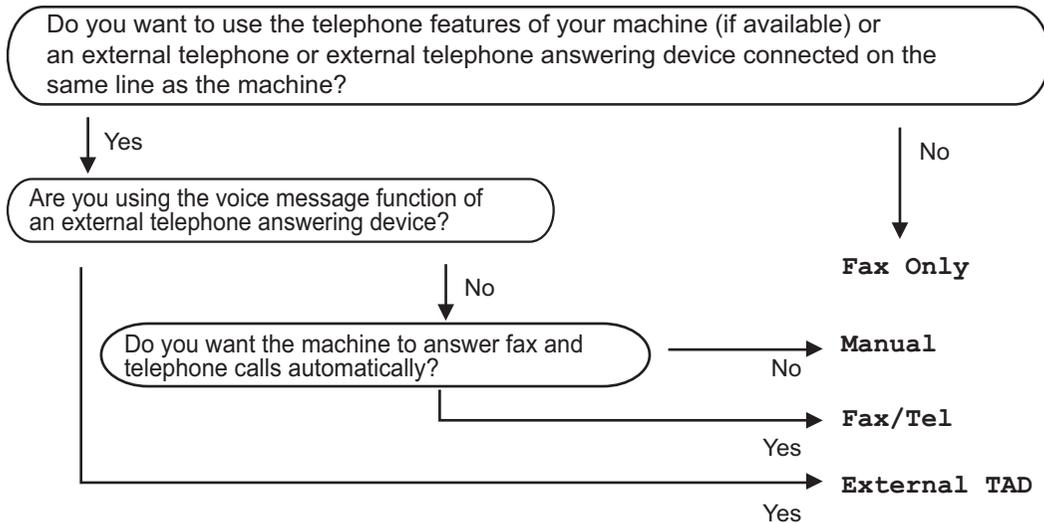

To select or change your Receive Mode

- 1 Press **Menu 0, 1**.
- 2 Press **▲** or **▼** to choose Fax Only, Fax/Tel, External TAD or Manual. Press **OK**.
- 3 Press **Stop/Exit**.

The LCD will display the current receive mode.

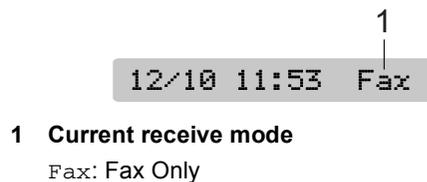

- 1 **Current receive mode**
Fax: Fax Only

Using receive modes

Some receive modes answer faxes automatically (Fax Only and Fax/Tel). You may want to change the ring delay before using these modes. See *Ring Delay* on page 28.

Fax only

The Fax Only mode will automatically answer every call as a fax call. If the call is a fax your machine will receive it.

Fax/Tel

The Fax/Tel mode helps you automatically manage incoming calls, by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T ring to tell you to pick up the line. The F/T ring is a fast double ring made by your machine.
- Use this mode if you receive few voice calls.

Also see *F/T Ring Time (Fax/Tel mode only)* and *Ring Delay* on page 28.

Manual

To receive a fax in manual mode press **Start** when you hear fax tones (short repeating beeps). You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

Also see *Fax Detect* on page 28.

External TAD

The External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

For more information see *Connecting an external TAD (telephone answering device)* on page 40.

Receive mode settings

Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode.

- 1 Press **Menu, 2, 1, 1**.
- 2 Press **▲** or **▼** to choose how many times the line rings before the machine answers (02-10 for Australia, 01-10 for New Zealand, 00-10 for some countries).
Press **OK**.
If you choose 00, the line will not ring at all.
- 3 Press **Stop/Exit**.

F/T Ring Time (Fax/Tel mode only)

If you set the Receive Mode to **Fax/Tel**, you need to decide how long the machine will signal you with its special pseudo/double-ring when you have a voice call. If it's a fax call, the machine receives the fax.

This pseudo/double-ring happens after the initial ringing from the phone company. Only the machine rings and no other phones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any telephone.

- 1 Press **Menu, 2, 1, 2**.
- 2 Press **▲** or **▼** to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds for Australia and some countries, 20, 30, 40 or 55 seconds for New Zealand).
Press **OK**.
- 3 Press **Stop/Exit**.



Note

Even if the caller hangs up during the pseudo/double-ringing, the machine will continue to ring for the set time.

Fax Detect

If Fax Detect is On (default setting):

The machine receives fax calls automatically, even if you lift the machine's handset or lift the handset of an extension or external phone. When you see **Receiving** on the LCD or when you hear 'chirps' through the handset of an extension phone connected to another wall socket/phone socket, just replace the handset and your machine will do the rest.

If Fax Detect is Semi:

The machine will only receive a fax call automatically if you answered it using the machine's handset. If you answered at an extension phone press *** 5 1**. (See *Operation from extension telephones* on page 42.)

If Fax Detect is Off:

If you are at the machine and answer a fax call by lifting the handset, press **Start**.

If you are not at your machine, press *** 5 1** (*** 9 1** for New Zealand) on the extension phone. (See *Operation from extension telephones* on page 42.)

**Note**

- If this feature is set to **On**, but your machine does not connect a fax call when you lift an extension or external phone handset, press the fax receive code ✕ 5 1 (✕ 9 1 for New Zealand). At the machine, press **Start**.
- If you send faxes from a computer on the same phone line and the machine intercepts them, set this feature to **Fax Detect: Off**. (We do not recommend having a PC plus fax on the same line.)


- 1 Press **Menu, 2, 1, 3**.
- 2 Press **▲** or **▼** to choose **On, Semi** or **Off**.
Press **OK**.
- 3 Press **Stop/Exit**.

Additional receiving operations

Printing a reduced incoming fax

The machine automatically reduces each page of an incoming fax to fit on one page of A4, Letter or Legal size paper with **Auto Reduction On**.

The machine calculates the reduction ratio by using the page size of the fax and your **Paper Size** setting (**Menu, 1, 2**).

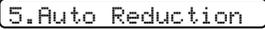- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 1, 5**.

- 3 Use **▲** or **▼** to choose **On** (or **Off**).
Press **OK**.
- 4 Press **Stop/Exit**.

6

Receiving faxes into memory

As soon as the paper tray becomes empty during fax reception, the screen will display **No Paper Fed**, asking you to put paper in the paper tray. (See *How to load paper* on page 9.) If you are unable to put paper in the paper tray the following will happen:

If Memory Receive is **On**:

The machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available. Further incoming faxes will also be stored into memory until the memory is full. When the memory is full the machine will stop automatically answering calls. To print the faxes, put fresh paper in the tray.

If Memory Receive is OFF:

The machine will carry on receiving the current fax, with the remaining pages being stored in memory, if enough memory is available. Further incoming faxes will not be stored in memory. The machine will then stop automatically answering calls until fresh paper is put in the paper tray. To print the last fax you received, put fresh paper in the tray.

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 1, 6**.
- 3 Use **▲** or **▼** to choose **On** or **Off**. Press **OK**.
- 4 Press **Stop/Exit**.


Receiving a fax at the end of a conversation


At the end of a conversation you can ask the other party to send you a fax before you both hang up.

- 1 Ask the other person to place the document in their machine and to press the **Start** or **Send** key.
- 2 When you hear the CNG tones (slowly repeating beeps), press **Start**.
- 3 Replace the handset.

Printing a fax from the memory

If you are using the Fax Storage feature (**Menu, 2, 5, 1**), you can still print a fax from the memory when you are at your machine. (See *Turning off Remote Fax Options* on page 48.)

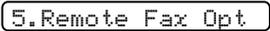- 1 Press **Menu, 2, 5, 3**.

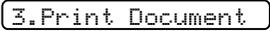

- 2 Press **Start**.

Voice Operations

Voice calls can be made either with the handset, an extension or external telephone, and by dialling manually or by using Quick-Dial numbers.

Making a telephone call

- 1 Pick up the handset.
- 2 When you hear the dial tone, enter a number using the dial pad, One Touch, Speed-Dial or Search.
- 3 Replace the handset.

Hold

- 1 Press **Hook/Hold** to put a call on hold. You can replace the handset without disconnecting the call.
- 2 Pick up the machine's handset to release the call from hold.

Tone or pulse (Not available for New Zealand)

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below:

- 1 Pick up the handset.
- 2 Press **#** on the machine's control panel. Any digits dialled after this will send tone signals. When you hang up, the machine will return to the Pulse dialling service.

Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

If you are at the machine, you can lift the handset to answer.

If you are at an extension phone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** (**# 9 1** for New Zealand) between the pseudo/double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing *** 5 1** (*** 9 1** for New Zealand).

Fax/Tel mode in Power Save condition

When the machine is in Fax/Tel mode and F/T rings to tell you to pick up a voice call, you can only answer by picking up the machine's handset.

If you answer before the machine F/T rings, you can also pick up the call at an external or extension phone.

Telephone Service for Australia

Telstra® FaxStream® Duet® (Distinctive Ring)

Telstra® FaxStream® Duet® is an enhanced Public Switched Telephone Service (PSTS) offered by Telstra® that allows you to have an additional number on one phone line, with its own distinctive ring pattern. Telstra® FaxStream® Duet® is a call handling feature that helps users distinguish voice and facsimile calls. With FaxStream® Duet®, incoming calls to a fax number are announced by a different, distinctive ring signal. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.

Your machine has a Distinctive Ring function, allowing you to dedicate one phone number just for receiving faxes.



Note

After you have set the Distinctive Ring feature to `On`, the receive mode is set to `Manual` automatically. If you don't have a TAD or Voice Mail set up on the Distinctive Ring number, `Manual` mode means you must answer all the voice calls yourself. You can not change the receive mode from `Manual` mode while the Distinctive Ring is set to `on`.

What is the Advantage of using Telstra® FaxStream® Duet® Function?

Using Telstra® FaxStream® Duet® is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring twice with a distinctive ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.


How does Telstra® FaxStream® Duet® Work?

Incoming calls to the voice number, will have the standard ring pattern of long, long tone, followed by a pause, repeated, while the new fax number will have a different ring pattern of three short bursts of ring, repeated at regular intervals.

When FaxStream® Duet® is On and you receive a voice call all extension and external phones will ring with a standard ring pattern. The fax machine will ring on the third ring with a standard ring pattern. All external and the extension phones will continue to ring, until you or a telephone answering device can answer the voice number.

When FaxStream® Duet® is On and you receive a fax call on the Duet® number the Fax machine will answer and automatically receive the fax message without ringing. On the other hand, all extension and external phones will ring twice with a distinctive ring pattern. Do not answer the phone as you are receiving a fax message.

Flowchart Sequence of Incoming call

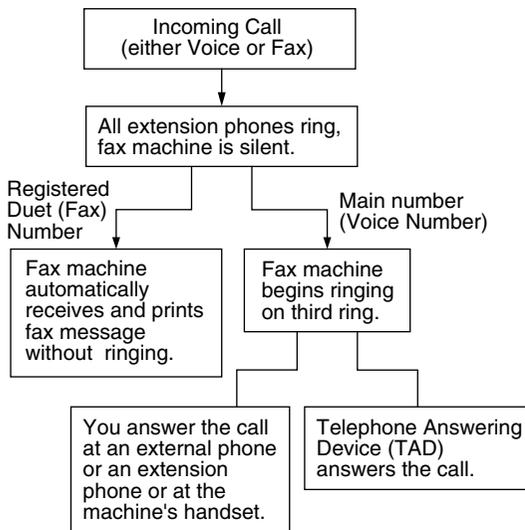

Registering the Distinctive Ring pattern

Very Important!

After you have set the Distinctive Ring feature to on, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, **Manual** mode means you must answer all the calls yourself. You cannot change the receive mode to another mode while the Distinctive Ring is set to on.

- 1 Press **Menu, 2, 0, 3.**
- 2 Press **▲** or **▼** to choose **On.**
Press **OK.**
- 3 Press **Stop/Exit.**
Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press **Menu, 2, 0, 3.**
- 2 Press **▲** or **▼** to choose **Off.**
Press **OK.**
- 3 Press **Stop/Exit.**



Note

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the **Receive Mode** again. (See *Choosing the Receive Mode* on page 26.)

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.



Note

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if the name has stored in the One-Touch and Speed-Dial. Once you press **Hook** and answer the call, the caller's ID disappears. You will see up to the first 16 characters of the number on the display.



Note

- If `Out of Area` appears on the display, it means that the call came from outside your caller ID service area or a public phone.¹
- If `Private Call` appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹

¹ Depends on network function.

The Caller ID is Stored in Your Machine Memory



The machine can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.



■ Printing the Caller ID List.

You can review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID) name, and type of Call (Comment) if available.

Viewing Caller ID List

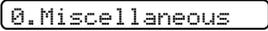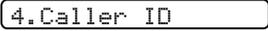- 1 Press **Menu**, **2**, **0**, **4**.


- 2 Press **▲** or **▼** to choose `Display#`. Press **OK**.
 The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and `No Caller ID` will appear on the display.
- 3 Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view. Press **OK**.
 The LCD shows the caller's number, the date, and time of the call.
- 4 Do one of the following:
 - To return to the Caller ID listing, press **▲** or **▼**.
 - To finish viewing, press **Stop/Exit**.

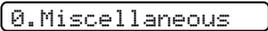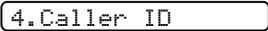Printing Caller ID List

- 1 Press **Menu**, **2**, **0**, **4**.


- 2 Press **▲** or **▼** to choose `Print Report`. Press **OK**.
 If no ID is stored, the beeper will sound and `No Caller ID` will appear on the LCD.
- 3 Press **Start**.
- 4 When the printing has finished, press **Stop/Exit**.

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?

FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in the following page.)


What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognizes the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will quickly learn to recognize the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

Flowchart Sequence of Incoming call

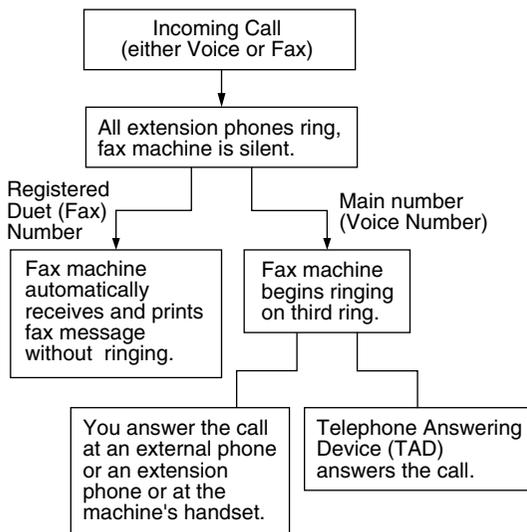

Note

After you have set the FaxAbility feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to on.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat steps ①-③; Step ② is where you can choose either On or Off.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to On. See below.

- ① Press **Menu, 2, 0, 3**.
- ② Press **▲** or **▼** to set FaxAbility to On (or Off).
 If you have FaxAbility service, choose On.
 Press **OK**.
- ③ Press **▲** or **▼** to set Call Waiting to On (or Off).
 If you have Call Waiting service, choose On to avoid the trouble caused by Call Waiting.
 Press **OK**.
- ④ Press **Stop/Exit**.

Caller ID

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.



Note

To get the Caller ID Service, apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if available. Once you press **Hook** and answer the call, the caller's ID disappears. You will see up to the first 16 characters of the number and name if available on the display.



Note

- If `Out of Area` appears on the display, it means that the call came from outside your caller ID service area.¹
- If `Private Call` appears on the display, it means the caller intentionally blocked the transmission of his/her ID.¹

¹ Depends on network function.

Viewing Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

1

Press **Menu, 2, 0, 4.**

0.Miscellaneous

4.Caller ID

2

Press **▲** or **▼** to choose `Display#`. Press **OK**.

The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and `No Caller ID` will appear on the display.

3

Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view.

Press **OK**.

The LCD shows the caller's number, the date, and time of the call.

4

Do one of the following:

- To return to the Caller ID listing, press **▲** or **▼**.
- To finish viewing, press **Stop/Exit**.

Printing Caller ID List

1

Press **Menu, 2, 0, 4.**

0.Miscellaneous

4.Caller ID

2

Press **▲** or **▼** to choose `Print Report`. Press **OK**.

If no ID is stored, the beeper will sound and `No Caller ID` will appear on the LCD.

3

Press **Start**.

4

When the printing has finished, press **Stop/Exit**.



Note

If you use the Caller ID for Dial back;

- Please be sure that you use appropriate dialling procedures for local and national call.
- Please be sure that you make sure of the details of the exact number to be called back, and the need to insert prefix(es) for manual dialling.
- Please understand that your machine may not display precisely the digits to be called.

Telephone Service for Some Countries

Distinctive Ring (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ring subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a Distinctive Ring function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ring to **On**.



Note

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

- The machine will answer only calls to the Distinctive Ring number.



Note

After you have set the Distinctive Ring feature to **On**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, **Manual** mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the Distinctive Ring is set to **on**.

Registering the Distinctive Ring pattern

Very Important!

After you have set the Distinctive Ring feature to **on**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, **Manual** mode means you must answer all the calls yourself. You cannot change the receive mode to another mode while the Distinctive Ring is set to **on**.

- 1 Press **Menu**, **2**, **0**, **3**.

0.Miscellaneous

3.Distinctive

- 2 Press **▲** or **▼** to choose **On**. Press **OK**.

- 3 Press **Stop/Exit**. Distinctive Ring is now set to **on**.

Turning off Distinctive Ring

- 1 Press **Menu**, **2**, **0**, **3**.

0.Miscellaneous

3.Distinctive

- 2 Press **▲** or **▼** to choose **Off**. Press **OK**.

- 3 Press **Stop/Exit**.



Note

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the Receive Mode again. (See *Choosing the Receive Mode* on page 26.)

Caller ID (For Singapore and Hong Kong)

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies. Call your telephone company for details. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings. (See *Printing Caller ID List* on page 39.)

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you press **Hook** and answer the call, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- You will see the first 16 characters of the number or name.
- **Out of Area** display means call originates outside your Caller ID service area.
- **Private Call** display means the caller has intentionally blocked transmission of information.



Note

You can print a list of Caller ID information received by your machine.

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Viewing Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu, 2, 0, 4**.

0.Miscellaneous

4.Caller ID

- 2 Press **▲** or **▼** to choose **Display#**. Press **OK**.

The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and **No Caller ID** will appear on the display.

- 3 Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view. Press **OK**.

The LCD shows the caller's number, the date, and time of the call.

- 4 Do one of the following:

- To return to the Caller ID listing, press **▲** or **▼**.
- To finish viewing, press **Stop/Exit**.

Printing Caller ID List

- 1 Press **Menu, 2, 0, 4**.

0.Miscellaneous

4.Caller ID

- 2 Press **▲** or **▼** to choose **Print Report**. Press **OK**.

If no ID is stored, the beeper will sound and **No Caller ID** will appear on the LCD.

- 3 Press **Start**.

- 4 When the printing has finished, press **Stop/Exit**.


Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine 'listens' for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message.

The TAD must answer within two rings. The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax 'handshake'. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

Note

If you do not receive all your faxes, shorten Ring Delay setting on your external TAD.

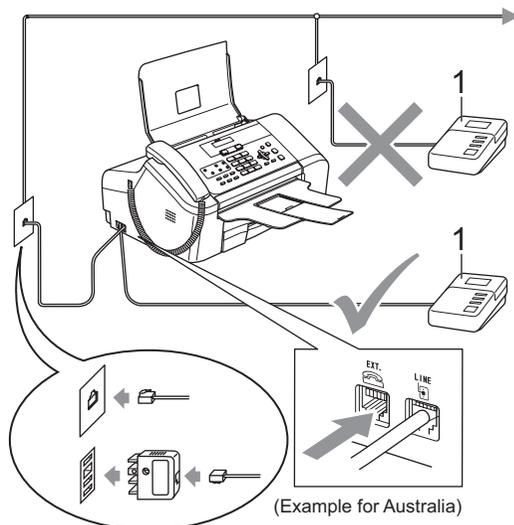

1 TAD

When the TAD answers a call, the LCD shows `Ext. Tel in Use.`

⊘ Improper Setup

Do not connect a TAD elsewhere on the same phone line.

Connections

The external TAD must be connected as shown in the previous illustration.

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to `External TAD.` (See *Choosing the Receive Mode* on page 26.)

Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.



Note

We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Multi-Line connections (PABX)

Most offices use a central telephone system.

Brother recommends that all our machines be connected to a discreet (dedicated) line. Although a particular PABX may appear to work with a particular model of fax machine, we cannot guarantee that the unit will operate correctly.


While it is often relatively simple to connect a fax machine to a PABX, (Private Automatic Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the fax machine for you.

Brother does not recommend the use of a PABX line. PABX limitations in general can cause some functions of the fax machine not to work correctly.

External and extension phones

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below.

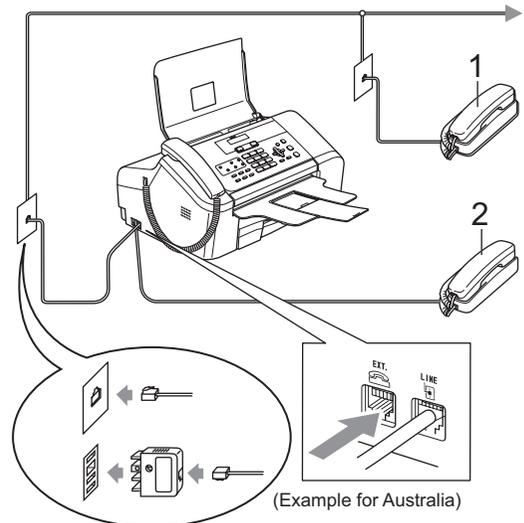

1 Extension telephone

2 External telephone

When you are using an external phone, the LCD shows `Ext. Tel in Use.`

Operation from extension telephones

If you answer a fax call on an extension or an external telephone plugged into the correct socket on the machine, you can make your machine take the call by using the Fax Receive Code. When you press the Fax Receive Code $\star 5 1$ ($\star 9 1$ for New Zealand), the machine starts to receive the fax.

If the machine answers a voice call and pseudo/double-rings for you to take over, use the Telephone Answer Code $\# 5 1$ ($\# 9 1$ for New Zealand) to take the call at an extension phone. (See *F/T Ring Time (Fax/Tel mode only)* on page 28.)

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press $\star 5 1$ ($\star 9 1$ for New Zealand) and wait for the chirp or until the LCD shows *Receiving*, and then hang up.



Note

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 28.)

Using remote codes

Fax receive code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the fax receive code $\star 5 1$ ($\star 9 1$ for New Zealand). Wait for the chirping sounds then replace the handset. (See *Fax Detect* on page 28.) Your caller will have to press **Start** to send the fax.

Telephone answer code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T (double) ring after the initial ring delay. If you pick up the call on an extension phone you can turn the F/T ring off by pressing $\# 5 1$ ($\# 9 1$ for New Zealand) (make sure you press this *between* the rings).

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes (The default setting is on). The preset Fax Receive Code is $\star 5 1$ ($\star 9 1$ for New Zealand). The preset Telephone Answer Code is $\# 5 1$ ($\# 9 1$ for New Zealand). If you want to, you can replace them with your own codes.

- 1 Press **Menu**, **2**, **1**, **4**.

1.Setup Receive

4.Remote Codes
- 2 Press \blacktriangle or \blacktriangledown to choose **On** (or **Off**). Press **OK**.
- 3 Enter the new Fax Receive Code. Press **OK**.
- 4 Enter the new Telephone Answer Code. Press **OK**.
- 5 Press **Stop/Exit**.



Note

- If you are always disconnected when accessing your external TAD remotely, try changing the Fax Receive Code and Telephone Answer Code to another three-digit code using the numbers **0-9**, \star , $\#$.
- Remote Codes might not work with some telephone systems.

How to Dial

Manual dialling


Press all of the digits of the fax number.



One-Touch Dialling


Press the One-Touch key that stores the number you want to call.

To dial One-Touch numbers **6 to 10**, hold down **Shift** as you press the One-Touch key.

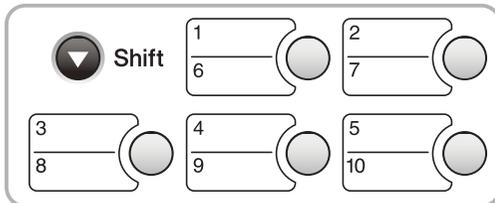

Speed-Dialling

- 1 Press **Search/Speed Dial**, the # (hash) key, and then the two digit Speed-Dial number.

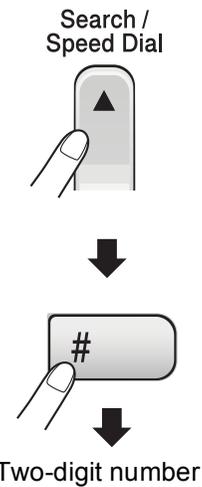


Note

If the LCD shows `Not Registered` when you enter a One-Touch number or a Speed-Dial number, a number has not been stored at this location.

Search

You can search for names you have stored in the One-Touch and Speed-Dial memories.

Press **Search/Speed Dial** and the menu keys to search numerically, or use the dial pad and then the menu keys to search alphabetically.

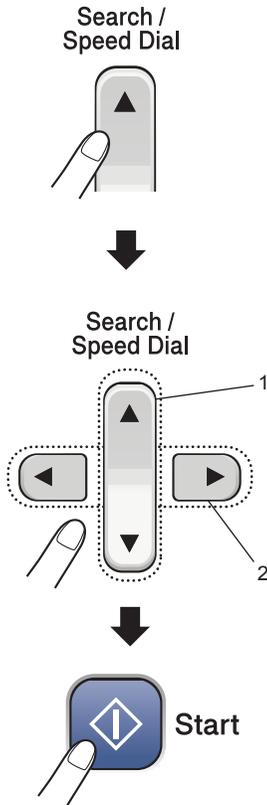

- 1 To search numerically.
- 2 To search alphabetically, you can use the dial pad to enter the first letter of the name you are looking for.

Fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Start** to try again. If you want to make a second call to the last number dialled, you can save time by pressing **Redial/Pause** and **Start**.

Redial/Pause only works if you dialled from the control panel.

If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

Storing numbers

You can set up your machine to do the following types of easy dialling: One-Touch, Speed-Dial and Groups for broadcasting faxes. When you dial a Quick-Dial number, the LCD shows the name, if you stored it, or the number.



Note

If you lose electrical power, the Quick-Dial numbers that are in the memory will not be lost because they are stored permanently.

Storing a pause

Press **Redial/Pause** to put a 3.5-second pause between numbers. If you are dialling overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Storing One-Touch Dial numbers

Your machine has 5 One-Touch keys where you can store 10 fax or phone numbers for automatic dialling. To access numbers **6** to **10**, hold down **Shift** as you press the One-Touch key.

- 1 Press **Menu**, **2**, **3**, **1**.
- 2 Press the One-Touch key where you want to store a number.
- 3 Enter the number (up to 20 digits). Press **OK**.
- 4 Do one of the following:
 - Enter the name using the dial pad (up to 16 characters). (To help you enter letters, see *Entering Text* on page 101.) Press **OK**.
 - To store the number without a name, press **OK**.
- 5 Do one of the following:
 - To store another One-Touch number, go to step 2.
 - To finish storing One-Touch numbers, press **Stop/Exit**.

Storing Speed-Dial numbers

You can store up to 100 Speed-Dial numbers with a name. When you dial you will only have to press a few keys (For example: **Search/Speed Dial**, **#**, the two-digit number, and **Start**).

- 1 Press **Menu**, **2**, **3**, **2**.
- 2 Use the dial pad to enter a 2-digit Speed-Dial location number (00-99). Press **OK**.
- 3 Enter the fax or telephone number (up to 20 digits). Press **OK**.

- 4 Do one of the following:
 - Enter the name (up to 16 characters) using the dial pad.
Press **OK**. (To help you enter letters, see *Entering Text* on page 101.)
 - To store the number without a name, press **OK**.
- 5 Do one of the following:
 - To store another Speed-Dial number, go to step 2.
 - To finish the setting, press **Stop/Exit**.

Changing One-Touch Speed-Dial and Group numbers

If you try to store a One-Touch Speed-Dial or Group number where a number has already been stored, the LCD will show the name or number that has been stored there, and will ask you to do one of the following:

- Press **1** to change the stored number.

#05:MIKE

1.Change 2.Exit

- Press **2** to exit without making a change.

If you chose **1**, you will be able to change the stored number and name, or enter a new one. Follow the instructions below:

- 1 Enter a new number. Press **OK**.
- 2 Enter a new name. Press **OK**.
 - To change a character, use ◀ or ▶ to position the cursor under the character you want to change, then press **Clear/Back**. Re-enter the character.

Setting up Groups for broadcasting

If you regularly want to send the same fax message to many fax numbers you can set up a Group. Groups are stored on a One-Touch key or a Speed-Dial number. Each group uses up a One-Touch key or a Speed-Dial location. You can then send the fax message to all the numbers stored in a Group just by pressing a One-Touch key or entering a Speed-Dial number, and then pressing **Start**.

Before you can add numbers to a Group, you need to store them as One-Touch or Speed-Dial numbers. You can have up to six small Groups, or you can assign up to 99 numbers to one large Group.

- 1 Press **Menu**, **2**, **3**, **3**.

3. Setup Groups

- 2 Choose an empty location where you want to store the Group in one of the following ways:
 - Press a One-Touch key.
 - Press **Search/Speed Dial** and enter a two-digit location. Press **OK**.
 - Choose a One-Touch or a Speed-Dial number that has not already been used to store a number.

- 3 Use the dial pad to enter a Group number (1 to 6). Press **OK**.

Setup Group:G01

- 4 To add One-Touch or Speed-Dial numbers follow the instructions below:
 - For One-Touch numbers, press the One-Touch keys one after the other.
 - For Speed-Dial numbers, press **Search/Speed Dial** then the Speed-Dial number.

The LCD will display your chosen One-Touch numbers with a *, or Speed-Dial numbers with a # (for example *06, #09).

G01:*06 #09

- 5 Press **OK** when you have finished adding numbers.
- 6 Use the dial pad to enter a name for the Group. Press **OK**.
- 7 Press **Stop/Exit**.



Note

You can easily print a list of all your Quick-Dial numbers. Numbers that are part of a group will be marked in the GROUP column. (See *How to print a report* on page 53.)

Combining Quick-Dial numbers

You can combine more than one Quick-Dial number when you dial. This feature may be useful if you need to dial an access code for a cheaper rate long distance carrier.

For example, you might have stored '555' on Speed-Dial #03 and '7000' on Speed-Dial #02. You can use them both to dial '555-7000' if you press the following keys:

Search/Speed Dial, **#03**, **Search/Speed Dial**, **#02**, and **Start**.

Numbers can be added manually by entering them on the dial pad:

Search/Speed Dial, **#03**, **7**, **0**, **0**, **1** (on the dial pad), and **Start**.

This would dial '555-7001'. You can also add a pause by pressing the **Redial/Pause** key.

You can use only *one* remote fax option at a time.

Fax Forwarding

The fax forwarding feature lets you automatically forward your received faxes to another machine. If you choose Backup Print:On the machine will also print the fax (this is a safety feature in case there is a power failure before the fax is forwarded).

- 1 Press **Menu, 2, 5, 1**.
- 2 Press **▲** or **▼** to choose Fax Forward. Press **OK**.
 The LCD will ask you to enter the fax number you want your faxes to be forwarded to.
- 3 Enter the forwarding number (up to 20 digits). Press **OK**.
- 4 Press **▲** or **▼** to choose Backup Print:On or Backup Print:Off. Press **OK**.
- 5 Press **Stop/Exit**.

Fax Storage

The fax storage feature lets you store your received faxes in the machine's memory. You can retrieve stored fax messages from a fax machine at another location using the remote retrieval commands. See *Retrieving fax messages* on page 49. Your machine will automatically print a copy of the stored fax.

- 1 Press **Menu, 2, 5, 1**.
- 2 Press **▲** or **▼** to choose Fax Storage. Press **OK**.
- 3 Press **Stop/Exit**.

Changing Remote Fax Options

If received faxes are left in your machine's memory when you change the remote fax options, the LCD will ask you one of the following messages:

Erase All Doc?

1.Yes 2.No

Print All Fax?

1.Yes 2.No

- If you press **1**, faxes in the memory will be erased or printed before the setting changes. If a backup copy has already been printed it will not be printed again.
- If you press **2**, faxes in the memory will not be erased or printed and the setting will be unchanged.

Turning off Remote Fax Options

- 1 Press **Menu**, **2**, **5**, **1**.

1.Forward/Store

- 2 Press **▲** or **▼** to choose **Off**. Press **OK**.

- 3 Press **Stop/Exit**.



Note

The LCD will give you more options if there are received faxes still in your machine's memory. (See *Changing Remote Fax Options* on page 48.)

Remote Retrieval

You can call your machine from any touch tone telephone or fax machine, then use the remote access code and remote commands to retrieve fax messages.

Setting a Remote Access Code

The remote access code lets you access the remote retrieval features when you are away from your machine. Before you use the remote access and retrieval features, you have to set up your own code. The factory default code is inactive code (---✕).

- 1 Press **Menu**, **2**, **5**, **2**.

2.Remote Access

- 2 Enter a three-digit code using numbers **0-9**, **✕**, or **#**. Press **OK**. (The preset '✕' cannot be changed.)

- 3 Press **Stop/Exit**.



Note

Do not use the same code as your fax receive code (✕ **5 1** (✕ **9 1** for New Zealand)) or telephone answer code (**# 5 1** (**# 9 1** for New Zealand)). (See *Operation from extension telephones* on page 42.)

You can change your code at any time by entering a new one. If you want to make your code inactive, press **Clear/Back** in step 2 to restore the inactive setting (---✕) and press **OK**.

Using your Remote Access Code

- 1 Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your machine answers, enter your remote access code (3 digits followed by ✖) during a period of silence.
- 3 The machine signals if it has received messages:
 - **1 long beep — Fax messages**
 - **No beeps — No messages**
- 4 When the machine gives two short beeps, enter a command. The machine will hang up if you wait longer than 30 seconds to enter a command. The machine will beep three times if you enter an invalid command.
- 5 Press **9 0** to stop Remote Access when you have finished.
- 6 Hang up.



Note

If your machine is set to `Manual` mode and you want to use the remote retrieval features, wait about 2 minutes after it starts ringing, and then enter the remote access code within 30 seconds.

Retrieving fax messages

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by ✖) during a period of silence. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 6 2**.
- 4 Wait for the long beep, use the dial pad to enter the number (up to 20 digits) of the remote fax machine where you want your fax messages forwarded followed by **# #**.



Note

You cannot use ✖ and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using touch tone.

- 1 Dial your fax number.
- 2 When your machine answers, enter your remote access code (3 digits followed by ✕) during a period of silence. If you hear one long beep, you have messages.
- 3 When you hear two short beeps, press **9 5 4**.
- 4 Wait for the long beep, and then use the dial pad to enter the new number (up to 20 digits) of the remote fax machine where you want your fax messages forwarded followed by **# #**.



Note

You cannot use ✕ and # as dial numbers. However, press # if you want to create a pause.

- 5 Press **9 0** when you have finished.
- 6 Hang up after you hear your machine beep.

Remote fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your remote access code (3 digits followed by *), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	Change the Fax Forwarding or Fax Storage settings	
	1 OFF	You can choose OFF after you have retrieved or erased all your messages.
	2 Fax Forwarding	If you hear one long beep, the change has been accepted. If you hear three short beeps, you cannot change it because something has not been set up (for example, registering a Fax Forwarding number). You can register your Fax Forwarding number by entering 4. (See <i>Changing your Fax Forwarding number</i> on page 50.)
	4 Fax Forwarding number	
	6 Fax Storage	
96	Retrieve a fax	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 49.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	Check the receiving status	
	1 Document	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	Change the Receive Mode	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	Exit	Pressing 9 0 will allow you to exit Remote Retrieval. Wait for the long beep, then replace the handset.

Fax reports

You need to set up the Transmission Verification Report and Journal Period using the **Menu** key.

Transmission Verification Report

You can use the Transmission Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you choose **On** or **On+Image**, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Choosing **On+Image** or **Off+Image** will print a section of the fax's first page on the report to help you remember.

When the Verification Report is turned **Off** or **Off+Image**, the Report will only print if there is a transmission error, with **NG** in the **RESULT** column.

- 1 Press **Menu**, **2**, **4**, **1**.
- 2 Press **▲** or **▼** to choose **Off+Image**, **On**, **On+Image** or **Off**. Press **OK**.
- 3 Press **Stop/Exit**.

Fax Journal (activity report)

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can still print the report by following the steps in *How to print a report* on page 53. The default setting is **Every 50 Faxes**.

- 1 Press **Menu**, **2**, **4**, **2**.
- 2 Press **▲** or **▼** to choose an interval. Press **OK**.
(If you choose 7 days, the LCD will ask you to choose the first day for the 7-day countdown.)
 - 6, 12, 24 hours, 2 or 7 days
The machine will print the report at the chosen time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you chose has passed, the machine will print the Journal early and then erase all jobs from the memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from the memory.
 - Every 50 Faxes
The machine will print the Journal when the machine has stored 50 jobs.
- 3 Enter the time to start printing in 24-hour format. Press **OK**.
(For example: enter 19:45 for 7:45 PM.)
- 4 Press **Stop/Exit**.

Reports

The following reports are available:

1. **XMIT Verify**
Prints a Transmission Verification Report for your last transmission.
2. **Help List**
A help list about how to quickly program your machine.
3. **Quick-Dial**
Lists names and numbers stored in the One-Touch and Speed-Dial memory and shows groups, in numerical order.
4. **Fax Journal**
Lists information about the last incoming and outgoing faxes. (TX: Transmit.) (RX: Receive.)
5. **User Settings**
Lists your settings.

How to print a report

- 1 Press **Menu**, **4**.
- 2 Choose one of the options below:
 - Press **▲** or **▼** to choose the report you want. Press **OK**.
 - Enter the number of the report you want to print. For example, press **2** to print the Help List.
- 3 Press **Start**.

11


Polling

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polling receive

Polling receive lets you call another fax machine to receive a fax.


Setup for polling receive

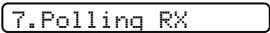- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 1, 7**.

- 3 Press **▲** or **▼** to choose **Standard**. Press **OK**.
- 4 Enter the fax number you are polling.
- 5 Press **Start**.

Setup to receive polling with a secure code

Secure Polling restricts who can retrieve the documents you set up to be polled.

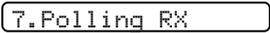
Secure Polling only works with Brother fax machines. If you want to retrieve a fax from a secured Brother machine you have to enter the secure code.

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 1, 7**.

- 3 Press **▲** or **▼** to choose **Secure**. Press **OK**.

- 4 Enter a four-digit secure code. Press **OK**.
This is the security code of the fax machine you are polling.
- 5 Enter the fax number you are polling.
- 6 Press **Start**.

Setup for delayed polling receive

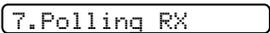Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up one delayed polling operation.

- 1 Make sure you are in Fax mode .
- 2 Press **Menu, 2, 1, 7**.

- 3 Press **▲** or **▼** to choose **Timer**. Press **OK**.
- 4 Enter the time (in 24-hour format) you want to start polling. Press **OK**.
For example, enter 21:45 for 9:45 PM.
- 5 Enter the fax number you are polling.
- 6 Press **Start**.
The machine makes the polling call at the time you entered.



Note

If the other fax machine that you are calling has not been set-up for polling, you will receive the message
Connection Fail.

Sequential polling

The machine can request documents from several fax machines in one operation.

- 1 Make sure you are in Fax mode .
- 2 Press **Menu**, **2**, **1**, **7**.
- 3 Press **▲** or **▼** to choose *Standard*, *Secure* or *Timer*. Press **OK**.
- 4 Do one of the following:
 - If you chose *Standard*, go to step 5.
 - If you chose *Secure*, enter a four-digit number, press **OK**, go to step 5.
 - If you did not enter the correct Secure Code you will receive the following message *Disconnected*.
 - If you chose *Timer*, enter the time (24-hour format) you want to begin polling and press **OK**, go to step 5.
- 5 Specify the destination fax machines, which you wish to poll by using One-Touch, Speed-Dial, Search, a Group or the dial pad. You must press **OK** between each location.
- 6 Press **Start**.
The machine polls each number or group in turn for a document.

Press **Stop/Exit** while the machine is dialling to cancel the polling process.

To cancel all sequential polling receive jobs, see *Checking and cancelling waiting jobs* on page 24.

Polled transmit

Polled Transmit is when you set up your machine to wait with a document so another fax machine can call and retrieve it.

Setup for polled transmit

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press **Menu**, **2**, **2**, **6**.
- 4 Press **▲** or **▼** to choose *Standard*. Press **OK**.
- 5 Do one of the following:
 - Press **1** to leave a paper document waiting in the ADF.

If you want to use the ADF before the paper document is polled, you must control the job.
 - Press **2** to scan the document into the memory.
- 6 The LCD shows:
- 7 Press **2** and press **Start**.



Note

Once a document has been stored in memory for Polling Transmit, it can be sent and received more than once.

Setup for polled transmit with secure code

Secure Polling restricts who can retrieve the documents you set up to be polled.

Secure Polling only works with Brother fax machines. If another person wants to retrieve a fax from your machine they will have to enter the secure code.

1 Make sure you are in Fax mode .

2 Load your document.

3 Press **Menu**, **2**, **2**, **6**.

6.Polled TX

4 Press **▲** or **▼** to choose *Secure*.
Press **OK**.

5 Enter a four-digit number.
Press **OK**.

1.Doc 2.Memory

6 Do one of the following:

- Press **1** to leave a paper document waiting in the ADF.

If you want to use the ADF before the paper document is polled, you must control the job.

- Press **2** to scan the document into the memory.

7 The LCD shows:

Next

1.Yes 2.No

8 Press **2** and press **Start**.



Copy

Making copies

58


12

Making copies

How to copy

Entering Copy mode

Press  (**Copy**) to enter Copy mode. The default setting is Fax mode. You can change the number of seconds or minutes that the machine stays in Copy mode. (See *Mode Timer* on page 13.)

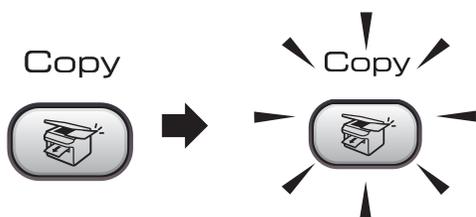

The LCD shows the default copy settings:



- 1 Copy Ratio
- 2 Quality
- 3 No of Copies

Making a single copy

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Press **Start**.

Making multiple copies

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press **Start**.



Note

To sort your copies, press **Copy Options**. (See *Sorting copies using the ADF* on page 61.)

Stop copying

To stop copying, press **Stop/Exit**.

Copy options

When you want to quickly change the copy settings temporarily for the next copy, use the Copy Options key.



The machine returns to its default settings after it finishes copying, or if the mode timer returns the machine to Fax mode. For more information see *Mode Timer* on page 13.

Press	Menu selection/	Options	Page
Press 	Quality	Normal Fast Best	59
	Enlarge/ Reduce	50%/78%/83%/93%/ 97%/100%/104%/ 142%/186%/198%/ 200%/ Custom(25-400%)	60
	Paper Size	Letter Legal A4	62
	Brightness	- □□■□□ +	62
	Stack/Sort	Stack Sort	61
	Page Layout	Off(1 in 1) 2 in 1 (P) 2 in 1 (L) 4 in 1 (P) 4 in 1 (L)	61
	No. of Copies	No. of Copies: 01 (01 - 99)	

Note

You can save the copy settings you use most often by setting them as default. You can find instructions on how to do this in the section for each feature.

Changing copy speed and quality

You can choose from a range of quality settings. The default setting is *Normal*.

To temporarily change the quality setting, follow the instructions below:

Press  and ▲ or ▼ to choose Quality	Normal	Normal is the recommended mode for ordinary printouts. This produces good copy quality with good copy speed.
	Fast	Fast copy speed and lowest ink consumption. Use to save time printing documents to be proof-read, large documents or many copies.
	Best	Use best mode to copy precise images such as photographs. This provides the highest resolution and the slowest speed.

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Do one of the following:
 - Press **Copy Options** and ▲ or ▼ to choose *Quality*.
 - Press **OK**.

5 Press ▲ or ▼ to choose Normal, Fast or Best. Press **OK**.

6 Press **Start**.

To change the default setting, follow the instruction below:

1 Press **Menu, 3, 1**.

1. Quality

2 Press ▲ or ▼ to choose Normal, Fast or Best. Press **OK**.

3 Press **Stop/Exit**.

Enlarging or reducing the image copied

You can choose the following enlargement or reduction ratios:

Custom (25–400%) allows you to enter a ratio from 25% to 400%.

Press  and ▲ or ▼ to choose Enlarge/Reduce	Custom (25–400%)
	200%
	198% 10x15cm→A4
	186% 10x15cm→LTR
	142% A5→A4
	104% EXE→LTR
	100%
	97% LTR→A4
	93% A4→LTR
	83% LGL→A4
	78% LGL→LTR
	50%

To enlarge or reduce the next copy follow the instruction below:

1 Make sure you are in Copy mode .

2 Load your document.

3 Use the dial pad to enter the number of copies (up to 99).

4 Press **Copy Options** and ▲ or ▼ to choose Enlarge/Reduce. Press **OK**.

5 Choose one of the options below:

■ Use ▲ or ▼ to choose the enlargement or reduction ratio you want. Press **OK**.

■ Use ▲ or ▼ to choose Custom (25–400%). Press **OK**. Use the dial pad to enter an enlargement or reduction ratio from 25% to 400% in 1% increments. (For example, press **5 3** to enter 53%.) Press **OK**.

6 Press **Start**.



Note

Page Layout Options 2 in 1(P), 2 in 1(L), 4 in 1(P) or 4 in 1(L) are *not* available with Enlarge/Reduce.

Making N in 1 copies

The N in 1 copy feature can help you save paper by letting you copy two or four pages onto one printed page.

Important

- Please make sure paper size is set to A4.
- You cannot use the Enlarge/Reduce setting with the N in 1.
- (P) means Portrait and (L) means Landscape.

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press **Copy Options** and ▲ or ▼ to choose *Page Layout*. Press **OK**.
- 5 Press ▲ or ▼ to choose *Off(1 in 1)*, *2 in 1 (P)*, *2 in 1 (L)*, *4 in 1 (P)*, or *4 in 1 (L)*. Press **OK**.
- 6 Press **Start** to scan the document.

Place your document face down in the direction shown below:


■ 2 in 1 (P)




■ 2 in 1 (L)



■ 4 in 1 (P)

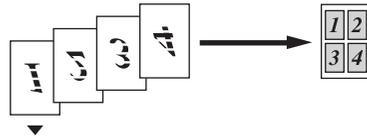

■ 4 in 1 (L)

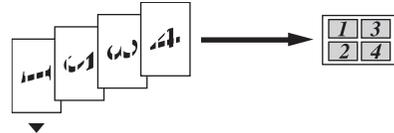

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 1 2 3, 1 2 3, 1 2 3, and so on.

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press **Copy Options** and ▲ or ▼ to choose *Stack/Sort*. Press **OK**.
- 5 Press ▲ or ▼ to choose *Sort*. Press **OK**.
- 6 Press **Start**.

Adjusting Brightness and Contrast

Brightness

To temporarily change the brightness setting, follow the instructions below:

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press **Copy Options** and ▲ or ▼ to choose **Brightness**. Press **OK**.

- 5 Press ▲ or ▼ to make the copy lighter or darker. Press **OK**.
- 6 Press **Start**.


To change the default setting follow the instructions below:

- 1 Press **Menu, 3, 2**.
- 2 Press ▲ or ▼ to make the copy lighter or darker. Press **OK**.
- 3 Press **Stop/Exit**.

Contrast

Adjust the contrast to help an image look sharper and more vivid.

To change the default setting follow the instructions below:

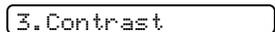- 1 Press **Menu, 3, 3**.

- 2 Press ▲ or ▼ to change the contrast. Press **OK**.
- 3 Press **Stop/Exit**.

Paper options

Paper size

If copying on paper other than A4 size, you will need to change the paper size setting. You can copy on Letter, Legal or A4.

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press **Copy Options** and ▲ or ▼ to choose **Paper Size**. Press **OK**.
- 5 Press ▲ or ▼ to choose the size of paper you are using **Letter, Legal, A4**. Press **OK**.
- 6 Press **Start**.



Note

To change the default paper type setting see *Paper Size* on page 13.



Appendixes

Safety and Legal	64
Troubleshooting and Routine Maintenance	76
Menu and Features	94
Specifications	102
Glossary	107

A

Safety and Legal

Choosing a location

Put your machine on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the machine near a telephone socket and a standard electrical socket. Choose a location where the temperature remains between 10° and 35° C (50° F and 95° F).

! CAUTION

- Avoid placing your machine in a high-traffic area.
- Avoid placing your machine on a carpet.
- DO NOT put the machine near heaters, air conditioners, refrigerators, medical equipment, chemicals or water.
- DO NOT expose the machine to direct sunlight, excessive heat, moisture, or dust.
- DO NOT connect your machine to electrical sockets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the machine's memory.
- DO NOT connect your machine to electrical sockets on the same circuit as large appliances or other equipment that might disrupt the power supply.
- Avoid interference sources, such as other cordless telephone systems or speakers.



To use the machine safely


Please keep these instructions for later reference and read them before attempting any maintenance.




WARNING



There are high voltage electrodes inside the machine. Before you clean the inside of the machine, make sure you have unplugged the telephone line cord first and then the power cord from the electrical socket. Doing this will prevent an electrical shock.

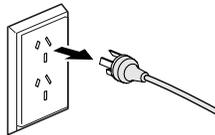


DO NOT handle the plug with wet hands. Doing this may cause an electrical shock.

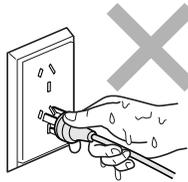


DO NOT pull in the middle of the AC power cord. Doing this might cause an electrical shock.




DO NOT put your hands on the edge of the machine under the panel cover, or touch the document feed rollers. Doing this may cause injury.

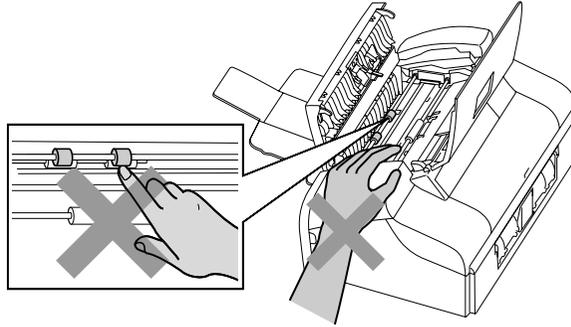

DO NOT put your hands on the edge of the paper tray under the output paper tray cover. Doing this may cause injury.

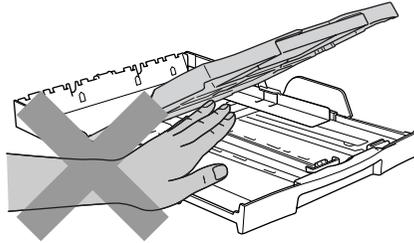


DO NOT touch the paper feed roller. Doing this may cause injury.

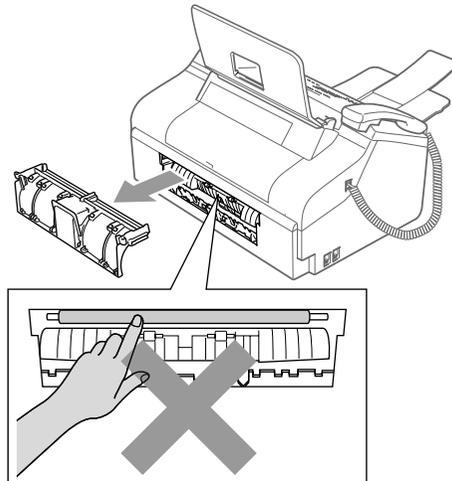




DO NOT touch the area shaded in the illustration. Doing this may cause injury.

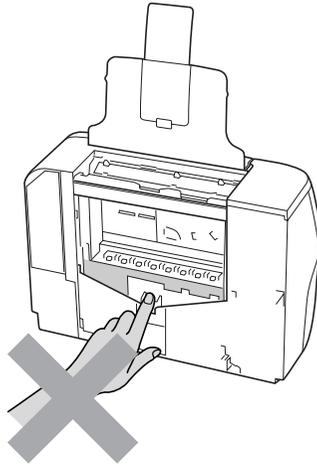

When moving the machine you must lift it from the base, by placing a hand at each side of the unit as shown in the illustration.

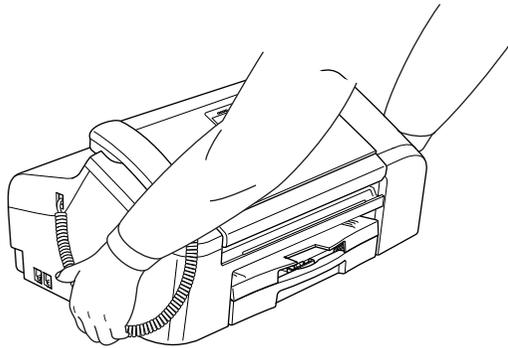

If the machine becomes hot, releases smoke or generates any strong smells, immediately unplug the machine from the AC power outlet. Call your Brother dealer.

If metal objects, water or other liquids get inside the machine, immediately unplug the machine from the AC power outlet. Call your Brother dealer.

WARNING

- Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been unplugged at the wall socket. Never install telephone wiring during a lightning storm. Never install a telephone wall socket in a wet location.
- This product must be installed near an electrical socket that is easily accessible. In case of an emergency, you must unplug the power cord from the electrical socket to shut off the power completely.
- Always make sure the plug is fully inserted.

WARNING

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to people, including the following:

- 1 DO NOT use this product near water, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- 2 Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- 3 DO NOT use this product to report a gas leak in the vicinity of the leak.

IMPORTANT-For Your Safety

To ensure safe operation the two-pin plug or the three-pin plug supplied must be inserted only into a standard two-pin power point or three-pin power point which is effectively grounded through the normal household wiring.

Extension cords used with the equipment must be two-conductor or three-conductor and be correctly wired to provide connection to ground. Incorrectly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Disconnect device

This product must be installed near an electrical socket that is easily accessible. In case of emergencies, you must disconnect the power cord from the electrical socket to shut off power completely.

Important Information for Australia

Important safety instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall socket before cleaning the outside of the machine and the scanner glass. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 Do not use this product near water.
- 6 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless adequate ventilation is provided.
- 8 This product should be connected to an AC power source within the range indicated on the rating label. Do NOT connect it to a DC power source. If you are not sure, contact a qualified electrician.
- 9 This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.
- 10 Do not place anything on top of the power cord including this machine. Do not allow the power cord to be stepped on.
- 11 Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- 12 Do not touch a document during printing.
- 13 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 14 Do not attempt to service this product yourself, because opening or removing covers may expose you to dangerous voltage points and/or other risks. Refer all servicing to service personnel.
- 15 Wait until pages have exited the machine before picking them up.
- 16 Unplug this product from the electrical socket and refer servicing to Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.

- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

Important Information for New Zealand

Important Safety Instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall outlet before cleaning the outside of the machine. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- 6 This equipment does not fully meet Telecom's impedance requirements. Performance limitations may occur when used in conjunction with some parts of the network. Telecom will accept no responsibility should difficulties arise in such circumstances.
- 7 If a charge for local calls is acceptable, the "Dial Button" should not be used for local calls. Only the 7-digits of the local number should be dialled from your telephone. Do not dial the area code digit or the "0" prefix.
- 8 This equipment shall not be set to make automatic calls to the Telecom '111' Emergency Service.
- 9 This equipment should not be used under any circumstances which may constitute a nuisance to other Telecom customers.
- 10 Not all telephones will respond to incoming ringing when connected to the extension socket.
- 11 The answer delay setting of this equipment shall not be set to less than the default setting as this will destroy Caller ID information.
- 12 All persons using this device for recording telephone conversations shall comply with New Zealand law. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the Principles enumerated in the Privacy Act 1993 shall be complied with in respect to the nature of the personal information collected, the purpose for its collection, how it is to be used and what it disclosed to any other party.

- 13 Do not place this product on an unstable surface, stand, or table. The product may fall, causing serious damage to the product.
- 14 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 15 This product should be connected to an AC power source within the range indicated on the rating label. Do NOT connect it to a DC power source. If you are not sure, contact a qualified electrician.
- 16 This product is equipped with a 3-wire earthed plug. This plug will fit into only an earthed socket. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete socket. Do not defeat the purpose of an earthed plug.
- 17 Do not place anything on top of the power cord including this machine. Do not allow the power cord to be stepped on.
- 18 Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- 19 Do not touch a document during printing.
- 20 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 21 Do not attempt to service this product yourself, because opening or removing covers may expose you to dangerous voltage points and/or other risks. Refer all servicing to service personnel.
- 22 Unplug this product from the mains power and telephone line sockets, and refer servicing to qualified Service Personnel under the following conditions:
 - If the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- 23 This unit will only work in conjunction with a tone signalling (DTMF) telephone, but some telephones are not compatible. Since noise or speech from the telephone can upset dialling from this unit, errors may result if the devices are used together in other than quiet conditions.
- 24 Where it is necessary to dial prefix digits, such as a Caller Display override code ("0196" or "0197"), this unit will have to be used in conjunction with an associated tone signalling (DTMF) telephone.

- 25 Note that some telephones are not compatible with this unit and dialling errors may result if the two devices are used together in other than quiet conditions. The Telecom Faults Service is not to be called should such problems arise. In such cases, it is recommended that the prefix and wanted number are dialled manually.
- 26 This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

Important Information for Some Countries

Important Safety Instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall outlet before cleaning the outside of the machine and the scanner glass. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 Do not place this product near water.
- 6 Do not place this product on an unstable cart, stand, or table. The product may drop, causing serious damage to the product.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or on a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 8 This product should be connected to an AC power source within the range indicated on the rating label. Do NOT connect it to a DC power source. If you are not sure, contact a qualified electrician.
- 9 This product is equipped with a 2-wire grounding type plug or a 3-wire grounding type plug (Only for Singapore, Malaysia, Hong Kong and India), a plug having two or three pins. This plug will only fit into only a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
- 10 Do not place anything on top of the power cord including this machine. Do not allow the power cord to be stepped on.
- 11 If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating.
- 12 Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- 13 Do not touch a document during printing.

- 14 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product.
- 15 Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points and/or other risks, and may void your warranty. Please refer all servicing to our Authorized Service Personnel. A list of Authorized Service Centres has been included for your convenience, or you may contact the Brother Dealer for Service.
- 16 Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:
 - If the power cord is damaged or frayed.
 - If the product has been spilled by liquid.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- 17 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

**WARNING**

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Brother cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.

Legal limitations for copying

It is an offence to make reproductions of certain items or documents with the intent to commit fraud. This memorandum is intended to be a guide rather than a complete list.

We suggest you check with relevant legal authorities if in doubt about a particular item or document.

- Money
- Bonds or other certificates of indebtedness
- Certificates of Deposit
- Armed Forces Service or Draft papers.
- Passports
- Postage Stamps (cancelled or uncanceled)
- Immigration Papers
- Welfare documents
- Cheques or Drafts drawn by Governmental Agencies
- Identification Documents, badges or insignias
- Licences and Certificates of Title to motor vehicles

Copyrighted works cannot be copied. Sections of a copyrighted work can be copied for 'fair dealing'. Multiple copies would indicate improper use.

Works of art should be considered the equivalent of copyrighted works.

Licenses and Certificates of Title to motor vehicles may not be copied under certain state/provincial laws.

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

Multi-Function Link is a registered trademark of Brother International Corporation.

© 2006 Brother Industries, Ltd. All rights reserved.

All other brand and product names mentioned in this User's Guide and the Software User's Guide are registered trademarks of their respective companies.

B

Troubleshooting and Routine Maintenance

Troubleshooting

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at <http://solutions.brother.com>.

If you are having difficulty with your machine

Printing Copies and Received Faxes

Difficulty	Suggestions
No printout	Make sure the machine is plugged in and not in Power Save mode.
	The ink cartridge is empty. (See <i>Replacing the ink cartridge</i> on page 85.)
	Check to see if the LCD is showing an error message. (See <i>Error messages</i> on page 79.)
Poor printing quality	Check the print quality. (See <i>Checking the print quality</i> on page 89.)
	Make sure that your ink cartridge is fresh. The following may cause ink to clog: <ul style="list-style-type: none"> ■ The expiration date written on the cartridge package has passed. (Cartridges stay usable for up to two years if kept in their original packaging.) ■ The ink cartridge was in your machine over six months. ■ The ink cartridge may not have been stored properly before use.
	The recommended environment for your machine is between 20° C to 33° C (68° F to 91° F).
White horizontal lines appear in text or graphics.	Clean the print head. (See <i>Cleaning the print head</i> on page 89.)
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> on page 89.)
Characters and lines are stacked.	Check the printing alignment. (See <i>Checking the print alignment</i> on page 90.)
Printed text or images are skewed.	Make sure the paper is loaded properly in the paper tray and the paper side guide is adjusted correctly. (See <i>How to load paper</i> on page 9.)
	Make sure the Lower Jam Clear Cover is set properly.
Smudged stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See <i>Handling and using plain paper</i> on page 6.)
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See <i>Cleaning the machine printer platen</i> on page 88.)
	Make sure you are using the paper support flap. (See <i>How to load paper</i> on page 9.)
Machine feeds multiple pages	Make sure the paper is loaded properly in the paper tray. (See <i>How to load paper</i> on page 9.)
Printed pages are not stacked neatly.	Make sure you are using the paper support flap. (See <i>How to load paper</i> on page 9.)

Difficulty	Suggestions
Printed pages double-feed and cause a paper jam.	Close the output paper tray cover and slide it forward, then push the paper tray firmly back into the machine. While holding the paper tray in place, pull out the paper support flap. (See the illustrations in <i>Loading paper</i> on page 9.)

Printing Received Faxes

Difficulty	Suggestions
Condensed print and white streaks across the page or the top and bottom of sentences are cut off.	You probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Left and Right margins are cut off or a single page is printed on two pages.	Turn on Auto Reduction. (See <i>Printing a reduced incoming fax</i> on page 29.)

Phone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Check that the machine is plugged in and switched on.
	Check all line cord connections.
	(Not available in New Zealand) Change Tone/Pulse setting. (See <i>Quick Setup Guide</i> .)
	Lift the either the external phone's handset, (or the machine's handset if available), and then dial the number to send a manual fax.
The machine does not answer when called.	Make sure the machine is in the correct receiving mode for your setup. (See <i>Receive modes</i> on page 26.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

Receiving Faxes

Difficulty	Suggestions
Cannot receive a fax	Check all line cord connections.
	Make sure the machine is in the correct receiving mode for your setup. (See <i>Receive modes</i> on page 26.)

Sending Faxes

Difficulty	Suggestions
Cannot send a fax	Check all line cord connections.
	Make sure that the Fax  key is illuminated. (See <i>Entering Fax mode</i> on page 20.)
	Ask the other party to check that the receiving machine has paper.
	Print the Transmission Verification Report and check for an error. (See <i>Reports</i> on page 53.)
	Make sure the panel cover is completely closed.
Transmission Verification Report says 'Result:NG' or 'Result:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If the problem continues, ask the telephone company to check your phone line.
	If you often get transmission errors due to possible interference on the phone line, try changing the menu setting of Compatibility to <i>Basic</i> . (See <i>Compatibility</i> on page 84.)
Poor fax send quality.	Try changing your resolution to <i>Fine</i> or <i>S.Fine</i> . Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner</i> on page 88.)
Vertical black lines when sending.	If the copy you made shows the same problem, clean the scanner. (See <i>Cleaning the scanner</i> on page 88.)

Handling Incoming Calls

Difficulty	Suggestions
The machine 'Hears' a voice as a CNG Tone.	If Fax Detect is set to on, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing Stop/Exit . Try avoiding this problem by turning Fax Detect to off. (See <i>Fax Detect</i> on page 28.)
Sending a fax call to the machine.	If you answered at the machine, press Start and hang up at once. If you answered on an external or extension phone, press your Fax Receive Code (default setting is *51 (*91 for New Zealand)). When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, an alarm system or other custom feature on a single phone line with your machine, it may create a problem sending or receiving faxes. For example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. Brother's ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate phone line with no custom features is recommended.

Menu Setting Difficulty

Difficulty	Suggestions
The machine beeps when you try to access the Setup Receive menu.	If the Fax  key is not illuminated, press it to turn on Fax mode. The Setup Receive setting is available only when the machine is in Fax mode.

Copying Difficulty

Difficulty	Suggestions
Cannot make a copy	Make sure that the Copy  key is illuminated. (See <i>Entering Copy mode</i> on page 58.)
	Make sure the panel cover is completely closed.
Vertical streaks appear in copies	If you see vertical streaks on copies, clean the scanner. (See <i>Cleaning the scanner</i> on page 88.)

Error messages

As with any sophisticated office product, errors may occur. If this happens, your machine identifies the error and shows an error message. The most common error messages are shown below.

You can correct most errors by yourself. If you need more help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com>.

Error Message	Cause	Action
Change Unable XX Clean Unable XX	The machine has a mechanical problem. —OR— A foreign objects such as a clip or ripped paper is in the machine.	Open the Upper Clear Jam Cover and remove any foreign objects inside the machine. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 81 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power for several minutes and then reconnect it.
Comm. Error	Poor phone line quality caused a communication error.	Try sending the fax again or try connecting the machine to another telephone line. If the problem continues, call the telephone company and ask them to check your phone line.
Cover Open Close all covers	The Upper Jam Clear Cover is not completely closed. The ink cartridge cover is not completely closed.	Open the Upper Jam Clear Cover and then close it again. Firmly close the ink cartridge cover until it clicks.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.
Document Jam	The document was not inserted or fed properly, or the document scanned from the ADF was too long.	See <i>Using the ADF</i> on page 5. See <i>Document jam</i> on page 82.
	The panel cover is open.	Close the panel cover and press Stop/Exit .
High Temperature	The print head is too warm.	Allow the machine to cool down.

Error Message	Cause	Action
Init Unable XX	The machine has a mechanical problem. —OR— A foreign objects such as a clip or ripped paper is in the machine.	Open the Upper Jam Clear Cover and remove any foreign objects inside the machine. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 81 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power for several minutes and then reconnect it.
Ink Empty Black	The ink cartridge is empty. The machine will stop all print operations. While memory is available, faxes will be stored in the memory.	Replace the ink cartridge. (See <i>Replacing the ink cartridge</i> on page 85.)
Low Temperature	The print head is too cold.	Allow the machine to warm up.
Near Empty Black	The ink cartridge is running out of ink.	Order a new ink cartridge.
No Caller ID	There is no incoming call history. You have not received any calls, you have not activated the Caller ID feature on your machine, or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature call your telephone company. (See <i>Caller ID (For Singapore and Hong Kong)</i> on page 39.)
No Cartridge	An ink cartridge is not installed properly.	Take out the ink cartridge and put it in again seating it properly. (See <i>Replacing the ink cartridge</i> on page 85.)
No Paper Fed	The machine is out of paper or paper is not properly loaded in the paper tray.	Do one of the following: <ul style="list-style-type: none"> ■ Refill the paper in the paper tray, and then press Start. ■ Remove the paper and load it again and then press Start.
	The paper is jammed in the machine.	See <i>Printer jam or paper jam</i> on page 83.
No Response/Busy	The number you dialed does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a Speed Dial number that is not programmed.	Set up the Speed Dial number. (See <i>Storing Speed-Dial numbers</i> on page 45.)
Out of Memory	The machine's memory is full.	Fax sending or copy operation in progress Press Stop/Exit and wait until the other operations in progress finish and then try again. <ul style="list-style-type: none"> ■ Clear the data in the memory. To gain extra memory, you can turn off Fax Storage. (See <i>Turning off Remote Fax Options</i> on page 48.) ■ Print the faxes that are in the memory. (See <i>Printing a fax from the memory</i> on page 30.)

Error Message	Cause	Action
Paper Jam	Paper is jammed in the machine.	Open the Upper and Lower Jam Clear Covers (at back of machine) and remove the jammed paper. (See <i>Printer jam or paper jam</i> on page 83.)
Print Unable XX Scan Unable XX	The machine has a mechanical problem. —OR— A foreign objects such as a clip or ripped paper is in the machine.	Open the Upper Jam Clear Cover and remove any foreign objects inside the machine. If the error message continues, see <i>Transferring your faxes or Fax Journal report</i> on page 81 before disconnecting the machine so you will not lose any important messages. Then, disconnect the machine from the power for several minutes and then reconnect it.
Wrong Paper Size	Paper is not the correct size.	Load the correct size of paper (Letter, Legal or A4), and then press Start .

Transferring your faxes or Fax Journal report

If the LCD shows:

Change Unable XX

Clean Unable XX

Init Unable XX

Print Unable XX

Scan Unable XX

We recommend transferring your faxes to another fax machine. (See *Transferring faxes to another fax machine* on page 81.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring Fax Journal report to another fax machine* on page 82.)



Note

If there is an error message on the machine's LCD, after the faxes have been transferred, disconnect the machine from the power source for several minutes, and then reconnect it.

Transferring faxes to another fax machine

If you have not set up your Station ID (See Quick Setup Guide), you cannot enter fax transfer mode.

- 1 Press **Stop/Exit** to interrupt the error temporarily.
- 2 Press **Menu, 9, 0, 1**.
- 3 Do one of the following:
 - If the LCD shows `No Data`, there are no faxes left in the machine's memory.
Press **Stop/Exit**.
 - If the LCD shows `Enter Fax No.`, enter the fax number to which faxes will be forwarded.
- 4 Press **Start**.

Transferring Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode.


- 1 Press **Menu 9, 0, 2**.
- 2 Enter the fax number to which the Fax Journal report will be forwarded.
- 3 Press **Start**.

Document jam

Documents can jam if they are not inserted or fed properly, or if they are too long. Follow the steps below to clear a document jam.

Document is jammed inside the front of the machine


- 1 Take out any paper from the ADF that is not jammed.
- 2 Pull the jammed document (1) out toward the front of the machine.

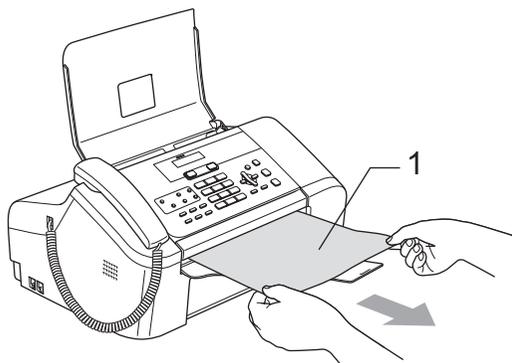

- 3 Press **Stop/Exit**.

Document is jammed inside the panel cover

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the panel cover.
- 3 Pull the jammed document out.

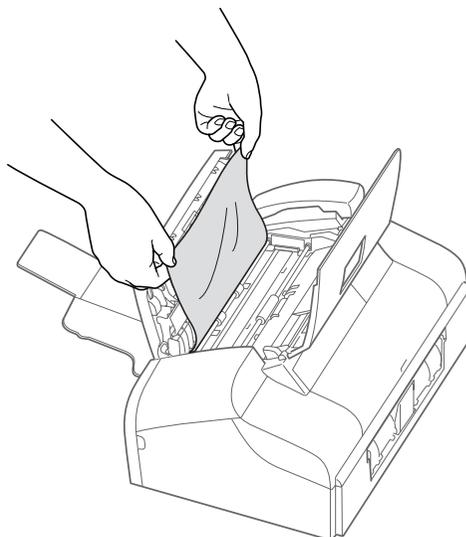


- 4 Close the panel cover.
- 5 Press **Stop/Exit**.


Printer jam or paper jam

Take out the jammed paper depending on where it is jammed in the machine. Open and close the Upper Jam Clear Cover to clear the error.

- 1 Pull the paper tray (1) out of the machine.

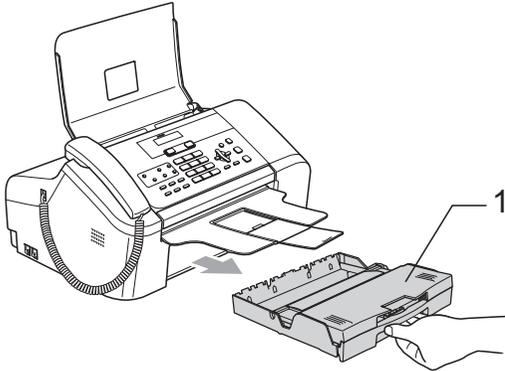


- 2 Pull out the jammed paper (1).

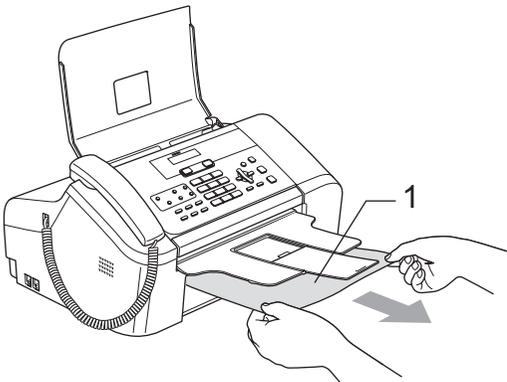


- If you cannot remove the jammed paper from the front side, or the error message still appears on the LCD after you remove the jammed paper, please go to the next step.


- 3 Remove the Lower Jam Clear Cover (1) from the back of the machine. Pull the jammed paper out of the machine.

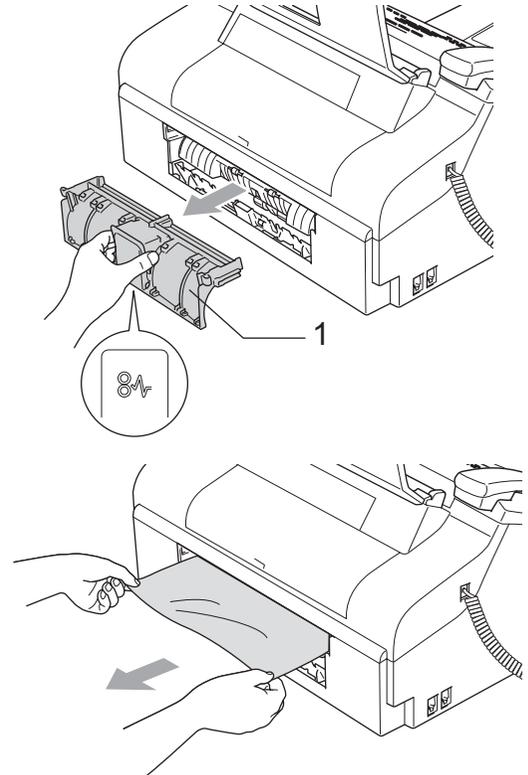

- 4 Put the Lower Jam Clear Cover back on. Make sure the cover is set properly.

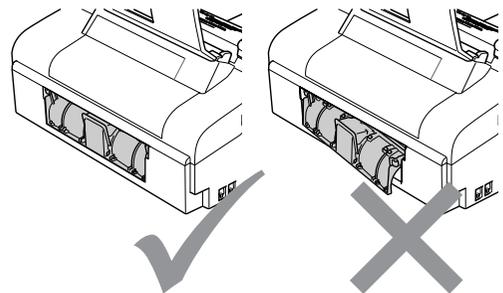


- 5 Open the Upper Jam Clear Cover (1). Make sure that there is no jammed paper left in the corners of the machine.

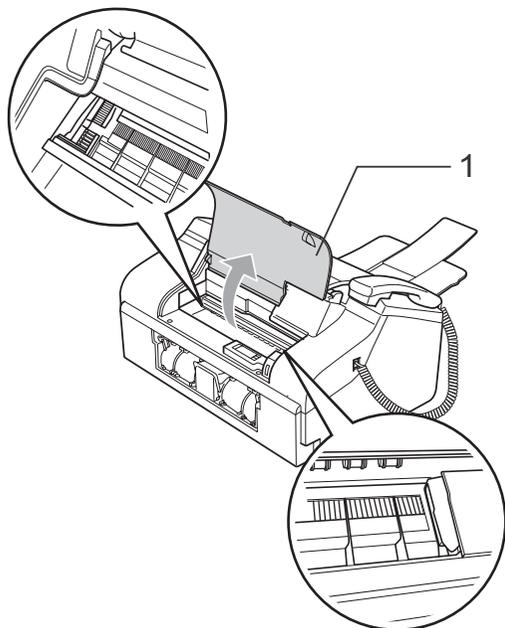

 **Note**

If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to take out the paper.

- 6 Close the Upper Jam Clear Cover.

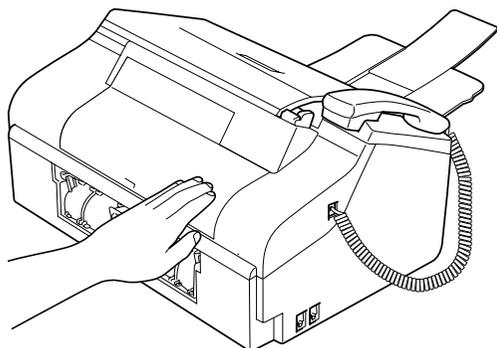

- 7 Push the paper tray firmly back into the machine. While holding the paper tray in place, pull out the paper support until it clicks and unfold the paper support (See the illustrations in *Loading paper* on page 9).

Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to *Detection* you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialing you should change back to the default *No Detection* setting.

- 1 Press **Menu, 0, 5**.
- 2 Press **▲** or **▼** to choose *Detection* or *No Detection*. Press **OK**.
- 3 Press **Stop/Exit**.

Compatibility

If you are having problems sending or receiving a fax due to possible interference on the phone line, we recommend that you adjust the Equalization for compatibility to reduce the modem speed for fax operations.

- 1 Press **Menu, 2, 0, 2**.
- 2 Press **▲** or **▼** to choose *Basic* (or *Normal*).
 - *Basic* cuts the modem speed to 9600 bps. Unless interference is a recurring problem on your phone line, you may prefer to use it only when needed.
 - *Normal* sets the modem speed at 14400 bps. (Default)Press **OK**.

- 3 Press **Stop/Exit**.

 **Note**

When you change the compatibility to *Basic*, the ECM feature is not available.

Routine maintenance



Replacing the ink cartridge

Your machine is equipped with an ink sensor. The ink dot counter automatically monitors the level of ink in the cartridge. When the machine detects an ink cartridge is running out of ink, the machine will tell you with a message on the LCD.


Be sure to follow the LCD prompts to replace the ink cartridge in the correct order.

Even though the machine tells you that an ink cartridge is empty, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from entering the print head assembly.

- 1 Open the ink cartridge cover. If the ink cartridge is empty, the LCD shows *Ink Empty Black and Replace Ink*.
- 2 Pull the lock release lever down and take out the ink cartridge.

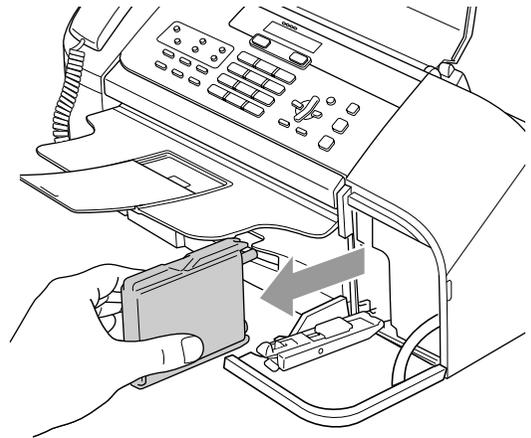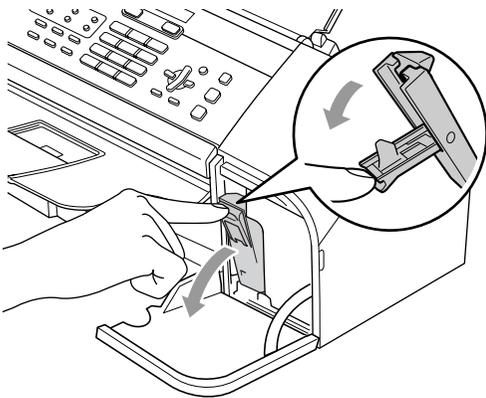


- 3 Open the new ink cartridge bag, and then take out the ink cartridge.
- 4 Remove the protective yellow cap (1).

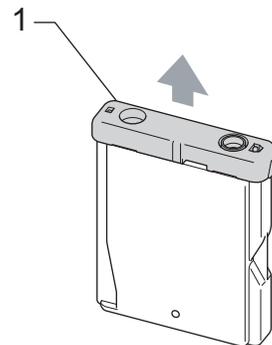

Improper Setup


DO NOT touch the area shown in the illustration below.

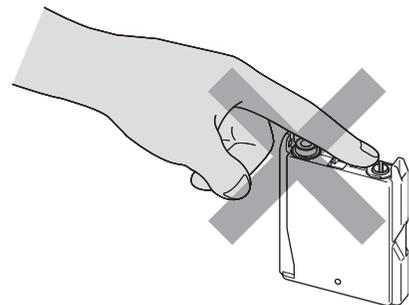


 **Note**

If the protective yellow cap comes off when you open the bag, the cartridge will not be damaged.

- 5 The ink cartridge has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

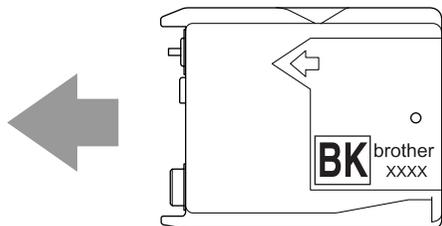

- 6 Lift the lock release lever gently and push it until it clicks, and then close the ink cartridge cover.

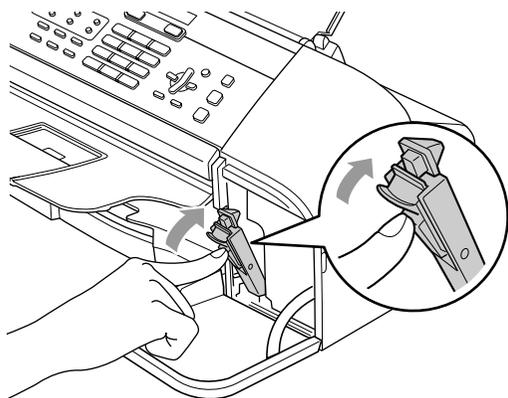

- 7 The machine will automatically reset the ink dot counter.

 **Note**

- If you replaced an ink cartridge before the LCD shows *Near Empty* or *Ink Empty*, the LCD will ask you to verify that it was a brand new one. (For example, *Did You Change Blck?*) For each new cartridge you installed, press 1 (*Yes*) to automatically reset the ink dot counter for the colour. If the ink cartridge you installed is not brand new one, be sure to press 2 (*No*).
- If the LCD shows *No Cartridge* after you install the ink cartridge, check that the ink cartridge is installed properly.

 **WARNING**

If ink gets in your eyes, wash them out with water at once and call a doctor if you are concerned.

 **CAUTION**

DO NOT take out the ink cartridge if you do not need to replace it. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.

DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.

If ink stains your skin or clothing, wash with soap or detergent at once.

Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.

DO NOT dismantle or tamper with the ink cartridge; this can cause the ink to leak out of the cartridge.

Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance when used with genuine Brother Branded ink cartridges. Brother cannot guarantee this optimum performance if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than genuine Brother Branded cartridges or the refilling of empty cartridges with this machine or the refilling of empty cartridges with ink from other sources. If damage is caused to the print head or other parts of this machine as a result of using incompatible products with this machine, any repairs required as a result may not be covered by the warranty.

Cleaning the outside of the machine

! CAUTION


Use neutral detergents. Cleaning with volatile liquids such as thinner or benzene will damage the outside surface of the machine.

DO NOT use cleaning materials that contain ammonia.


DO NOT use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.

Clean the outside of the machine as follows:

- 1 Pull the paper tray (1) completely out of the machine.

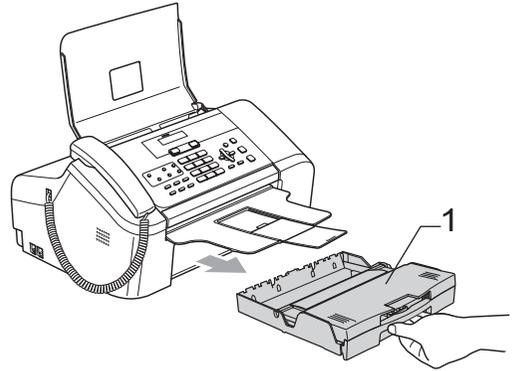


- 2 Wipe the outside of the machine with a soft cloth to remove dust.

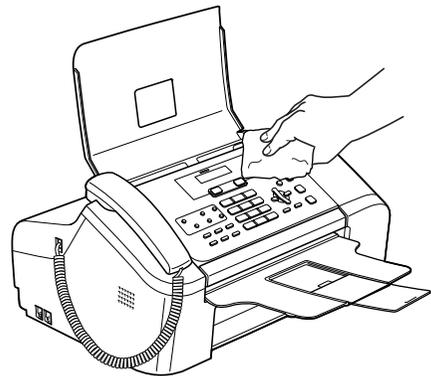

- 3 Remove anything that is stuck inside the paper tray.


- 4 Lift the output paper tray cover and wipe the inside and outside of the paper tray with a soft cloth to remove dust.

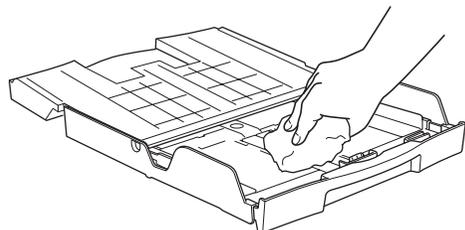

- 5 Close the output paper tray cover and put the paper tray firmly back in the machine.

Cleaning the scanner

- 1 Unplug the machine, open the panel cover (1). Clean the white bar (2) and the glass strip (3) with isopropyl alcohol on a soft lint-free cloth.

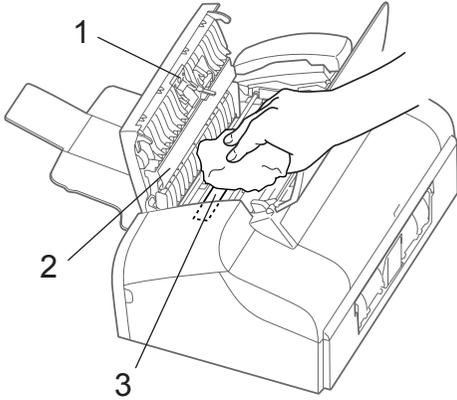


Cleaning the machine printer platen

WARNING


Unplug the machine from the AC power outlet before cleaning the printer platen (1).

- 1 Clean the machine printer platen (1) and the area around it. Wiping off any scattered ink with a soft *dry*, lint-free cloth.

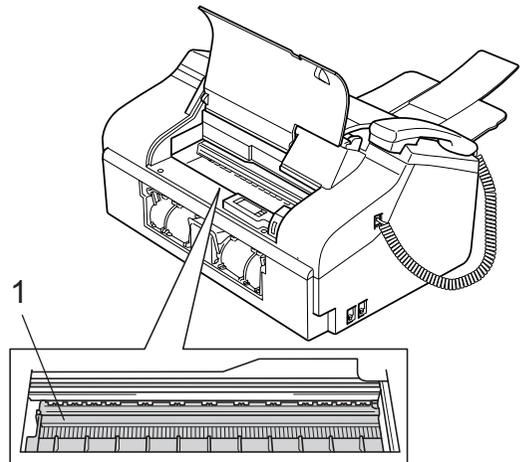


Cleaning the paper pick-up roller

- 1 Pull the paper tray completely out of the machine.
- 2 Unplug the machine from the electrical socket and remove the Lower Jam Clear Cover (1).

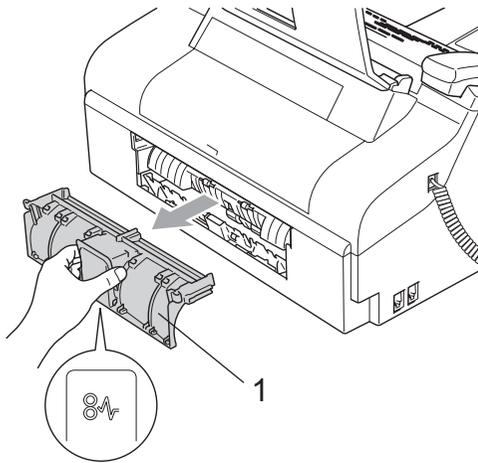

- 3 Clean the Paper Pick-up Roller (1) with isopropyl alcohol on a cotton swab.

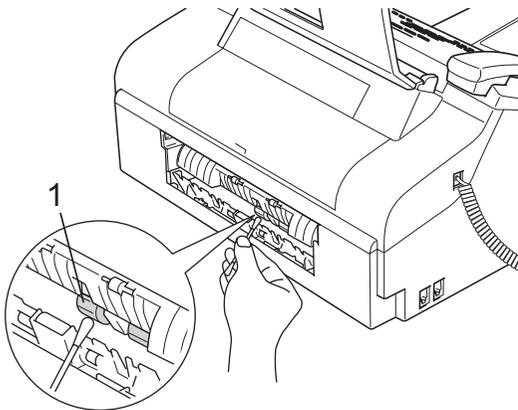

- 4 Put the Lower Jam Clear Cover back on. Make sure the cover is set properly.
- 5 Put the paper tray firmly back in the machine.
- 6 Re-connect the power cord.

Cleaning the print head

To ensure good print quality, the machine will regularly clean the print head. You can start the cleaning process manually if needed.

Clean the print head and ink cartridges if you get a horizontal line in the text or graphics on your printed pages.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

! CAUTION

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Cleaning**. Press **OK**.
The machine cleans the print head. When cleaning is finished, the machine will go back to standby mode automatically.



Note

If you clean the print head at least five times and the print has not improved, call your Brother dealer for service.

Checking the print quality

If faded or streaked text appear on your output, some of the nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Test Print**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Print Quality**. Press **OK**.

- 4 Press **Start**.
The machine begins printing the Print Quality Check Sheet.

- 5 Check the quality of the blocks on the sheet.

Is Quality OK?

1.Yes 2.No

- 6 Do one of the following:
- If all lines are clear and visible, press **1** to choose **Yes**.
Press **Stop/Exit**.
 - If you can see missing short lines as shown below, press **2** to choose **No**.

OK



Poor



- 7 The LCD asks you if you want to start cleaning.

Start Cleaning?

1.Yes 2.No

Press **1** (Yes).
The machine starts cleaning the print head.

- 8 Press **Stop/Exit**.
If you repeat this procedure at least five times and the print quality is still poor, replace the ink cartridge.
After replacing the ink cartridge, check the print quality. If the problem still exists, repeat the cleaning and test print procedures at least five times for the new ink cartridge. If ink is still missing, call your Brother dealer.

! CAUTION

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

Note



When a print head nozzle is clogged the printed sample looks like this.



After the print head nozzle is cleaned, the printed sample looks like this.

Checking the print alignment

You may need to adjust the print alignment after transporting the machine if your printed text becomes blurred or images become faded.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose **Test Print**. Press **OK**.
- 3 Press **▲** or **▼** to choose **Alignment**. Press **OK**.
- 4 Press **Start**.
The machine starts printing the Alignment Check Sheet.

Is Alignment OK?

1.Yes 2.No

- 5 Check the 600 dpi test print to see if number 5 most closely matches number 0.
 - If the number 5 sample of the 600 dpi is the best match, press **1** (Yes) to finish Alignment Check, and go to step 7.
 - If another test print number is a better match for 600 dpi, press **2** (No) to choose it.

- 6 Press the number of the test print that most closely matches the number 0 sample (1-8).

600dpi Adjust

Select Best #5

- 7 Press **Stop/Exit**.

Checking the ink volume

You can check the ink that is left in the cartridge.

- 1 Press **Ink Management**.
- 2 Press **▲** or **▼** to choose Ink Volume. Press **OK**. The LCD shows the ink volume.

Ink Volume

BK: -□□□■□□□+

- 3 Press **Stop/Exit**.

Machine Information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press **Menu, 5, 1**.

1.Serial No.

- 2 Press **OK**.

XXXXXXXXXX

- 3 Press **Stop/Exit**.


Packing and shipping the machine

When you transport the machine, use the packing materials that came with your machine. If you do not pack the machine properly, you could void your warranty.

! CAUTION

It is important to allow the machine to 'park' the print head after a print job. Listen carefully to the machine before unplugging it to make sure that all mechanical noise has stopped. Not allowing the machine to finish this parking process may lead to print problems and possible damage to the print head.


- 1 Open the ink cartridge cover.
- 2 Pull the lock release lever down and take out the ink cartridge. (See *Replacing the ink cartridge* on page 85.)
- 3 Install the yellow protective part, lift the lock release lever and push it until it clicks, and then close the ink cartridge cover.

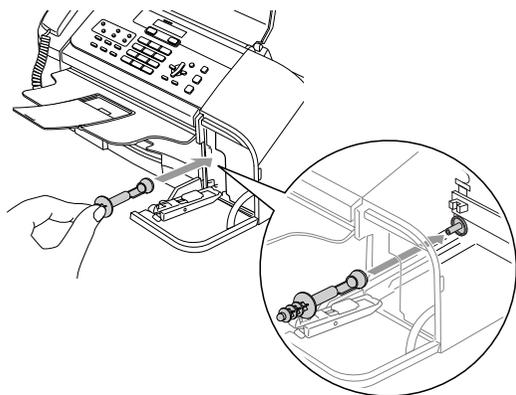


! CAUTION


If you are not able to find the yellow protective part, DO not remove the ink cartridge before shipping. It is essential that the machine be shipped with either the yellow protective part or the ink cartridge in position. Shipping without them will cause damage to your machine and may void your warranty. Please keep the machine upright.

- 4 Unplug the machine from the telephone wall socket and take the telephone line cord out of the machine.
- 5 Unplug the machine from the electrical socket.
- 6 Unplug the interface cable from the machine, if it is connected.
- 7 If your machine has a handset, remove it and the handset curled cord.
- 8 Wrap the machine in the bag and put it in the original carton with the original packing material.

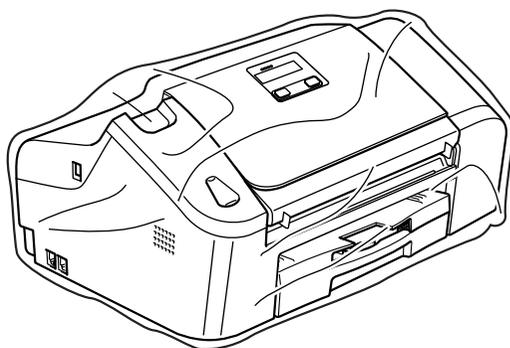

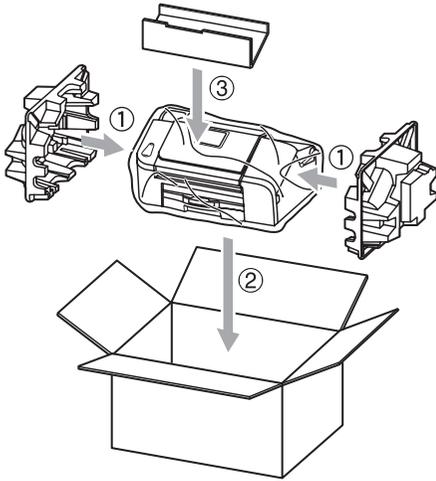

- 9 Pack the printed materials and additional parts in the original carton as shown below. Do NOT pack the used ink cartridges in the carton.

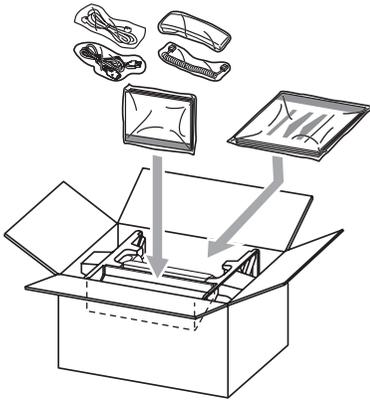

- 10 Close the carton and tape it shut.

On-screen programming

Your machine is designed to be easy to use with LCD on-screen programming using the menu keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

You can program your machine by using the Menu table that begins on page 96. These pages list the menu selections and options.

Press **Menu** followed by the menu numbers to program your machine.


For example, to set beeper volume to **Low**.

- 1 Press **Menu**, **1**, **3**, **2**.
- 2 Press **▲** or **▼** to choose **Low**.
- 3 Press **OK**.

Memory storage

Even if there is a power failure, you will not lose your menu settings because they are stored permanently. Temporary settings (such as Contrast, Overseas mode, and so on) will be lost. You may have to reset the date and time.

Menu keys

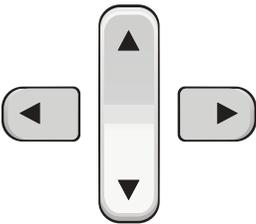	
 Menu	Access the menu
 OK	Go to the next menu level Accept an option
 Clear / Back	Go back to the previous menu level. Delete an incorrect letter when you need to enter text into the machine.
	Scroll through the current menu level.
	Go back to the previous menu level.
	Exit the menu.

To access the menu mode:


- 1 Press **Menu**.
- 2 Choose an option.
 - Press **1** for General Setup menu.
 - Press **2** for Fax menu.
 - Press **3** for Copy menu.
 - ⋮
 - Press **0** for Initial Setup menu.

You can scroll more quickly through each menu level by pressing **▲** or **▼** for the direction you want.

- 3 Press **OK** when that option appears on the LCD.
The LCD will then show the next menu level.
- 4 Press **▲** or **▼** to scroll to your next menu selection.
- 5 Press **OK**.
When you finish setting an option, the LCD shows *Accepted*.

Menu Table

The menu table will help you understand the menu selections and options that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.

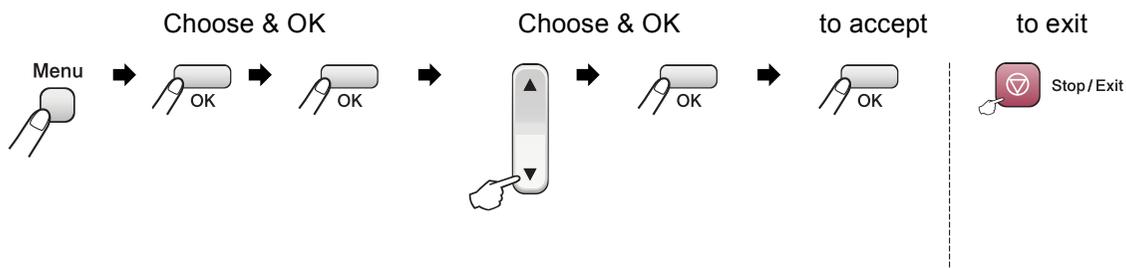

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page	
1.General Setup	1.Mode Timer	—	0 Sec* 30 Secs 1 Min 2 Mins 5 Mins Off	Sets the time to return to Fax mode.	13	
	2.Paper Size	—	Letter Legal A4*	Sets the size of the paper in the paper tray.	13	
	3.Volume	1.Ring	—	Off Low Med* High	Adjusts the ring volume.	14
		2.Beeper	—	Off Low* Med High	Adjusts the volume level of the beeper.	14
		3.Speaker	—	Off Low Med* High	Adjusts the speaker volume.	14
	4.Daylight Save	—	On Off	Changes for Daylight Savings Time manually.	15	
5.P.Save Setting	—	—	On* Off	Customizes the Power Save key not to receive faxes in power save mode.	12	

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup (Continued)	6.LCD Contrast	—	Light Dark*	Adjusts the contrast of the LCD.	See Quick Setup Guide
2.Fax	1.Setup Receive (In Fax mode only)	1.Ring Delay	(Example for Australia) 02* 03 04 05 06 07 08 09 10	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	28
		2.F/T Ring Time	20 Sec 30 Sec* 40 Sec 70 Sec (For New Zealand) 20 Sec 30 Sec* 40 Sec 55 Sec	Sets the pseudo/double-ring time in Fax/Tel mode.	28
		3.Fax Detect	On* Semi Off	Receives fax messages without pressing Start .	28
		4.Remote Codes	On* (✕51, #51) (✕91, #91 for New Zealand) Off	Allows you to answer all calls at an extension or external phone and use codes to turn the machine on or off. You can personalize these codes.	42
		5.Auto Reduction	On* Off	Cuts the size of incoming faxes.	29
		6.Memory Receive	On* Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	29
		7.Polling RX	Standard* Secure Timer	Sets up your machine to poll answer fax machine.	54

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. Fax (Continued)	2. Setup Send (In Fax mode only)	1. Contrast	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	21
		2. Fax Resolution	Standard* Fine S. Fine Photo	Sets the default resolution for outgoing faxes.	22
		3. Delayed Fax	—	Set the time of day in 24 hour format that the delayed faxes will be sent.	24
		4. Batch TX	On Off*	Combines delayed faxes to the same fax number at the same time of day into one transmission.	24
		5. Real Time TX	Next Fax Only Off* On	Sends a fax without using the memory.	23
		6. Polled TX	Standard* Secure	Sets up the document on your machine to be retrieved by another fax machine.	55
		7. Overseas Mode	On Off*	If you are having problems sending faxes overseas, set this to on.	23
	3. Set Quick-Dial	1. One-Touch Dial	—	Stores One-Touch Dial numbers, so you can dial by pressing only a few keys (and Start).	45
		2. Speed-Dial	—	Stores Speed-Dial numbers, so you can dial by pressing only a few keys (and Start).	45
		3. Setup Groups	—	Sets up a Group number for Broadcasting.	46
	4. Report Setting	1. Transmission	On On+Image Off* Off+Image	Sets initial setup for Transmission Verification Report and Fax Journal.	52
		2. Journal Period	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days		52

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page	
2.Fax (Continued)	5.Remote Fax Opt	1.Forward/Store	Off* Fax Forward Fax Storage	Sets the machine to forward fax messages or to store incoming faxes in the memory so you can retrieve them while you are away from your machine.	47	
		2.Remote Access	---✳	You must set your own code for Remote Retrieval.	48	
		3.Print Document	—	Prints incoming faxes stored in the memory.	30	
	6.Remaining Jobs	—	—	Checks which jobs are in the memory and lets you cancel chosen jobs.	24	
	0.Miscellaneous	1.TX Lock	—	—	Prohibits most operations other than receiving faxes.	16
		2.Compatibility	Normal* Basic	Adjusts the equalization for transmission problems.	84	
		3.Distinctive (Not available in New Zealand)	On Off*	Use with phone company distinctive ringing service allows you to have a voice number and fax number on the one phone line.	33 38	
		3.Faxability (For New Zealand only)	On Off*	If you have FaxAbility from Telecom, you can use this function to store the ringing pattern of your fax number. And if you set in to ON, you should use the registered number only.	36	
		4.Caller ID	On* Off Display# Print Report	View or print a list of the last 30 Caller IDs stored in memory.	35 37 39	
	3.Copy	1.Quality	—	Best Fast Normal*	Chooses the Copy resolution for your type of document.	59
2.Brightness		—	-□□□□■+ -□□□■□+ -□□■□□+* -□■□□□+ -■□□□□+	Adjusts the brightness for copies.	62	

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Copy (Continued)	3.Contrast	—	-□□□□■+ -□□□■□+ -□□■□□+* -□■□□□+ -■□□□□+	Adjusts the contrast for copies.	62
4.Print Reports	1.XMIT Verify	—	—	Prints a Transmission Verification Report for your last transmission.	53
	2.Help List	—	—	Prints the Help List so you can see at-a-glance how to quickly program your machine.	53
	3.Quick-Dial	—	—	Lists name and numbers stored in the One-Touch and Speed-Dial memory, in numerical order.	53
	4.Fax Journal	—	—	Lists information about the last incoming and outgoing faxes. (TX means Transmit. RX means Receive.)	53
	5.User Settings	—	—	Lists your settings.	53
5.Machine Info.	1.Serial No.	—	—	Lets you check the serial number of your machine.	91
0.Initial Setup	1.Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	Choose the receive mode that best suits your needs.	26
	2.Date/Time	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See Quick Setup Guide
	3.Station ID	—	Fax: Name:	Set your name and fax number to appear on each page you fax.	
	4.Tone/Pulse (Not available in New Zealand)	—	Tone* Pulse	Choose the dialling mode.	
	5.Dial Tone	—	Detection No Detection*	Turns Dial Tone Detection on or off.	84

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to enter text into the machine. Most dial pads have three or four letters printed on keys. The keys for **0**, **#** and **✖** do not have printed letters because they are used for special characters.

By pressing the correct dial pads repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
2	A	B	C	2
3	D	E	F	3
4	G	H	I	4
5	J	K	L	5
6	M	N	O	6
7	P	Q	R	S
8	T	U	V	8
9	W	X	Y	Z

Putting spaces

To enter a space in a fax number, press ► once between numbers. To enter a space in a name, press ► twice between characters.

Making corrections

If you entered an incorrect letter and want to change it, press ◀ to move the cursor under the incorrect character. Then press **Clear/Back**. Re-enter the correct character. You can also back up and insert letters.

Repeating letters

If you need to enter a letter that is on the same key as the letter before, press ► to move the cursor to the right before you press the key again.

Special characters and symbols

Press **✖**, **#** or **0**, and then press ◀ or ► to move the cursor under the special character or symbol you want. Then press **OK** to choose it.


Press **✖** for (space)! " # \$ % & ' () ✖
+ , - . / €

Press **#** for ; : < = > ? @ [] ^ _

Press **0** for Ä Ë Ö Ü À Ç È É 0

General

Memory Capacity	16 MB
ADF (automatic document feeder)	Up to 20 pages Temperature: 20° C - 30° C (68° F - 86° F) Humidity: 50% - 70% (for using the ADF) Paper: [80 g/m ² (20 lb)] A4 size
Paper Tray	100 Sheets [80 g/m ² (20 lb)]
Printer Type	Ink Jet
Print Method	Mono: Piezo with 94 × 1 nozzles
LCD (liquid crystal display)	16 characters × 1 line
Power Source	AC 220 to 240V 50/60Hz
Power Consumption	Power Save Average 4 W Mode: Average 6 W Standby: Average 26 W Operating:

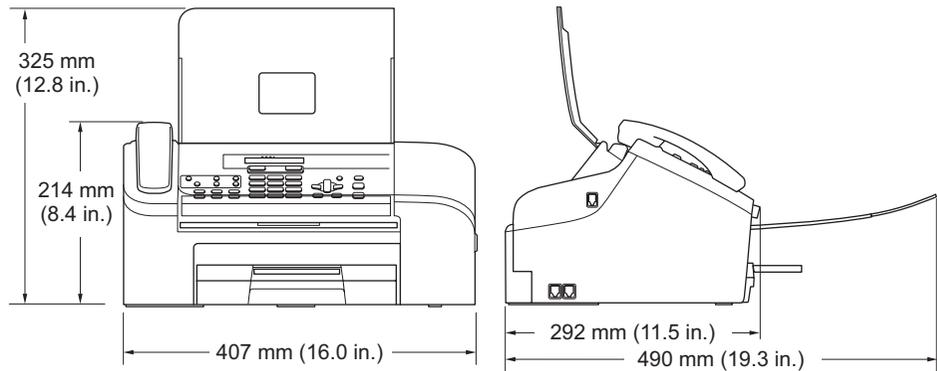Dimensions**Dimensions****Weight** 5.85 kg (12.9 lb)**Noise** Operating: 50 dB ¹

Temperature Operating: 10 to 35° C (50° F to 95° F)
 Best Print Quality: 20 to 33° C (68° F to 91° F)

Humidity Operating: 20 to 80% (without condensation)
 Best Print Quality: 20 to 80% (without condensation)

¹ This depends on printing conditions.

Print media

Paper Input

Paper Tray

- Paper type:

Plain paper

- Paper size:

Letter, Legal, A4

For more details, see *Paper weight, thickness and capacity* on page 8.

Width: 89 mm (3.5 in) - 216 mm (8.5 in)

Height: 127 mm (5.0 in) - 356 mm (14.0 in)

- Maximum paper tray capacity: Up to 100 sheets of 80 g/m² (20 lb) plain paper

Paper Output

Up to 50 sheets of 80 g/m² (20 lb) plain paper (Face up print delivery to the output paper tray)

Fax

Compatibility	ITU-T Group 3
Coding System	MH/MR/MMR
Modem Speed	Automatic Fallback 14,400 bps
Document Size	ADF Width: 89 mm to 215.9 mm (3.5 in. to 8.5 in.) ADF Height: 127 mm to 355.6 mm (5 in. to 14 in.)
Scanning Width	208 mm (8.2 in.)
Printing Width	204 mm (8.03 in.)
Grey Scale	64 levels
Polling Types	Receive: Standard, Secure, Timer, Sequential Transmit: Standard, Secure
Contrast Control	Automatic/Light/Dark (manual setting)
Resolution	<ul style="list-style-type: none"> ■ Horizontal 8 dot/mm (203 dot/in.) ■ Vertical <ul style="list-style-type: none"> Standard 3.85 line/mm (98 line/in.) Fine 7.7 line/mm (196 line/in.) Photo 7.7 line/mm (196 line/in.) Superfine 15.4 line/mm (392 line/in.)
Speed-Dial	100 stations
One-Touch	10 stations
Broadcasting	160 stations
Automatic Redial	3 times at 5 minute intervals
Auto Answer	2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for Australia) 1, 2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for New Zealand) 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 or 10 rings (for some countries)
Communication Source	Public switched telephone network.
Memory Transmission	Up to 300 ¹ / ₂₅₀ ² pages
Out of Paper Reception	Up to 300 ¹ / ₂₅₀ ² pages

¹ 'Pages' refers to the 'Brother Standard Chart No. 1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

² 'Pages' refers to the 'ITU-T Test Chart #1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Colour/Monochrome	No/Yes
Document Size	ADF Width: 89 mm to 215.9 mm (3.5 in. to 8.5 in.) ADF Height: 127 mm to 355.6 mm (5.8 in. to 14 in.)
Copy Speed	Up to 18 pages/minute (A4 paper) ¹
Multiple Copies	Stacks up to 99 pages Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	■ Scans up to 203×600 dpi ■ Prints up to 600×600 dpi

¹ Based on Brother standard pattern. (Fast mode/Stack Copy) Copy speeds vary with the complexity of the document.

Consumable items

Ink	The machine uses an individual Black ink cartridge that is separate from the print head assembly.
Service Life of Ink Cartridge	Black - Approximately 500 pages at 5% coverage <ul style="list-style-type: none">■ The first time you install an ink cartridge the machine will use an amount of ink to fill the ink delivery tubes for high quality print outs. This process will only happen once. With all following ink cartridge you can print the specified number of pages.■ The number of pages a cartridge will print may change depending on how often you use the machine and how many pages you print with each use.■ The machine will automatically and periodically clean the print head assembly, a process that uses a small amount of ink.■ When the machine identifies a cartridge as empty there may be a small amount of ink left in it. This is necessary to prevent air from drying out and damaging the print head assembly.
Replacement Consumables	<Black> LC57BK

E

Glossary

This is a comprehensive list of features and terms that appear in Brother manuals. Availability of these features depends on the model you purchased.

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic fax transmission

Sending a fax without picking up the handset of an external phone.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine can print a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

(Black and white faxes only) As a cost saving feature, all delayed faxes to the same fax number can be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Brightness

Changing the Brightness makes the whole image lighter or darker.

Broadcasting

The ability to send the same fax message to more than one location.

Caller ID

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

Cancel Job

Cancels a programmed job, like Delayed Fax or Polling.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR) and Modified Modified Read (MMR), if the receiving machine has the same capability.

Communication error (Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified time later.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension phone

A telephone using the same line as your fax but plugged into a separate wall socket.

External phone

A TAD (telephone answering device) or telephone that is connected to your machine.

F/T Ring Time

The length of time that the Brother machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

FaxAbility

A subscriber service purchased from the telephone company that provides another phone number on an existing phone line. The Brother fax machine uses the new number to simulate a dedicated fax line.

Fax Detect

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Receive Code

Press this code (✖ 5 1 (✖ 9 1 for New Zealand)) when you answer a fax call on an extension or external phone.

Fax Storage

You can store received faxes in the memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203 × 196 dpi. It is used for small print and graphs.

Grey scale

The shades of grey available for copying and faxing photographs.

Group number

A combination of One-Touch and Speed-Dial numbers that are stored on a One-Touch key or a Speed-Dial location for Broadcasting.

Help list

A printout of the complete Menu table that you can use to program your machine when you do not have the User's Guide with you.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (liquid crystal display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax

On some models you can dial a fax number and listen to the receiving fax machine answer your call before you press **Start** to begin sending the fax.

Menu mode

Programming mode for changing your machine's settings.

One-Touch

Keys on the machine's control panel where you can store numbers for easy dialing. You can store a second number on each key if you press **Shift** and the One-Touch Key together.

Out of Paper Reception

Receives faxes into the machine's memory when the machine is out of paper.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas phone lines.

Pause

Allows you to place a 3.5 second delay in the dialling sequence stored on One-Touch and Speed-Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.

Polling

The process of a fax machine calling another fax machine to retrieve waiting a fax.

Pulse (Not available in New Zealand)

A form of rotary dialling on a telephone line.

Quick Dial List

A listing of names and numbers stored in One-Touch and Speed-Dial memory, in numerical order.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which jobs are waiting in memory and cancel jobs individually.

Remote Access Code

Your own four-digit code (---*) that allows you to call and access your machine from a remote location.

Remote Retrieval Access

The ability to access your machine remotely from a touch tone phone.

Resolution

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

Ring Delay

The number of rings before the machine answers in Fax Only and Fax/Tel modes.

Ring Volume

Volume setting for the machine's ring.

Search

An electronic, alphabetical listing of stored One-Touch, Speed-Dial and Group numbers.

Speed-Dial

A pre-programmed number for easy dialling. You must press **Search/Speed Dial**, #, the two digit code, and **Start** to start the dialling process.

Standard resolution

203 × 97 dpi. It is used for regular size text and quickest transmission.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Super Fine resolution

392 × 203 dpi. Best for very small print and line art.

Temporary settings

You can choose certain options for each fax transmission and copy without changing the default settings.

Tone (Not available in New Zealand)

A form of dialling on the telephone line used for Touch Tone telephones.

Transmission

The process of sending faxes over the phone lines from your machine to the receiving fax machine.

Transmission Verification Report

A listing for each fax sent, that shows its date, time and number.

User Settings

A printed report that shows the current settings of the machine.

F

Index

A

ADF (automatic document feeder)	5, 20
ADF cover	82
Answering machine (TAD)	40
connecting	40
Automatic	
fax receive	26
Fax Detect	28

B

Broadcasting	20
setting up Groups for	46

C

Canceling	
Fax Forwarding	48
Fax Storage	48
jobs awaiting redial	24
Cleaning	
paper pick-up roller	89
print head	89
printer platen	88
scanner	88
Connecting	
external TAD	40
external telephone	41
Consumable item	106
Control panel overview	3
Copy	
enlarge/reduce	60
enter Copy mode	58
key	59
multiple	58
single	58
Sort	61
temporary settings	59
using ADF	58
Copy Options key (copying)	
paper Size	62
Custom telephone features on a single line	78

D

Daylight Saving Time	15
Dialing	
a pause	44
Groups	20
manual	43
Distinctive Ring	
setting ring pattern	33, 38
turning off	33, 38
Dual Access	22

E

Error messages on LCD	79
Change Unable	79
Clean Unable	79
Comm. Error	79
Init. Unable	80
Ink Empty	80
Near Empty	80
No Paper Fed	80
Not Registered	43
Out of Memory	80
Print Unable	81
Scan Unable	81
Extension telephone, using	42
External telephone, connecting	41

F

Fax codes	
changing	42, 48
Fax Receive Code	42
Remote Access Code	48
Telephone Answer Code	42
Fax Detect	28
Fax Forwarding	
changing remotely	50, 51
programming a number	47
Fax Storage	47
turning off	48
turning on	47
Fax Stream [®] Duet	32

Fax, stand-alone	
receiving	26
at end of conversation	27, 30
difficulties	76, 77
F/T Ring Time, setting	28
Fax Forwarding	51
Fax Stream® Duet	32
from extension phone	42
phone line interference	84
Receive Mode, choosing	26
reducing to fit on paper	29
retrieving from a remote site	49
Ring Delay, setting	28
sending	20, 54
at end of conversation	25
Broadcasting	20
canceling from memory	24
contrast	21
delayed batch transmission	24
delayed fax	24
enter Fax mode	20
from memory (Dual Access)	22
manual	25
overseas	23
phone line interference	84
Real Time Transmission	23
Resolution	22
Fax/Tel mode	
answering at extension phones	42
double-ringing (voice calls)	28
F/T Ring Time	28
Fax Receive Code	42
Ring Delay	28
Telephone Answer Code	42

G

Gray scale	105
Groups for Broadcasting	46

H

HELP	
LCD messages	94
using menu keys	94
Menu Table	94
Help List	53
Hook/Hold key	25

I

Ink cartridge	
checking ink volume	91
ink dot counter	85
replacing	85

J

Jacks	
EXT	
external telephone	40
TAD (answering machine)	40
Jams	
document	82
paper	82

L

LCD (liquid crystal display)	94
Help List	53

M

Maintenance, routine	85
Manual	
dialing	43
receive	26
transmission	25
Menu Table	94
Mode, entering	
Copy	58
Fax	20
Multi-line connections (PABX)	41

O

One-Touch	
changing	45
setting up	45
Out of Memory message	25

P

Paper	6, 104
capacity	8
document size	5, 20
loading	9
size	8, 13
type	8
Phone line	
connections	40
difficulties	77
interference	84
multi-line (PABX)	41
Power failure	94
Print	
area	11
checking alignment	89
difficulties	76, 77
improving quality	89
paper jams	83
reports	53
Programming your machine	94

Q

Quick-Dial	
Broadcasting	20
using Groups	20
Group dial	
changing	45
setting up Groups for Broadcasting ...	46
One-Touch	
changing	45
setting up	45
Search	44
Speed-Dial	
changing	45
setting up	45
using	43

R

Receive Mode	26
External TAD	26
Fax Only	26
Fax/Tel	26
Manual	26
Redial/Pause key	44
Reducing	
copies	60
incoming faxes	29
Remote Retrieval	48
access code	48, 49
commands	51
getting your faxes	49
Reports	52
Fax Journal	53
Journal Period	52
Help List	53
how to print	53
Quick-Dial List	53
Transmission Verification	52, 53
User Settings	53
Resolution	
copy	106
fax	105
setting for next fax	22
Ring Delay, setting	28

S

Serial Number	
how to find	see inside the front cover
Shipping the machine	92
Speed-Dial	
changing	45
setting up	45
using	43

T

TAD (telephone answering device),	
external	26, 40
connecting	40
receive mode	26
recording OGM	41
Temporary copy settings	59
Text, entering	101
special characters	101
Transferring your faxes or Fax Journal	81
Troubleshooting	76
checking ink volume	91
document jam	82
error messages on LCD	79
if you are having difficulty	
copying	79
document jam	82
incoming calls	78
phone line or connections	77
printing	76
printing receiving faxes	77
receiving faxes	77
sending faxes	78
paper jam	83
print quality	89
TX Lock (Security)	16

V

Volume, setting	
beeper	14
ring	14
speaker	14

For Australia

Warranty – For details about the warranty on your Brother Product, please visit:
www.brother.com.au

Repair – For warranty service for your Brother Product you will need evidence of original purchase (e.g. a copy of the sales docket).

Contact Brother International (Aust) Pty Ltd for details about your nearest Authorised Warranty Centre or visit: www.brother.com.au

Support – For support for your Brother Product other than what you can resolve through the User Guide,

Visit our website: www.brother.com.au

or visit our Solutions website for FAQs (Frequently Asked Questions), Driver Updates & Utilities, Product Support: <http://solutions.brother.com>

You can contact the Product Support Centre for any technical or customer care/support enquiry you may have about your Brother Product.

Product Support Centre - Australia

Brother International (Aust) Pty Ltd

Phone: 02 8875 6000 Fax: 02 9870 7223

email: productsupport@brother.com.au

<http://www.brother.com.au>

brother®

Visit us on the World Wide Web
<http://www.brother.com>

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.

ARL/ASA/NZ