


User's Guide

QL-800

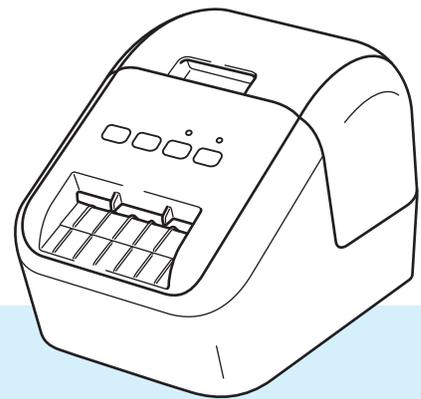

Introduction

Important Notice

- The contents of this document and the specifications of this product are subject to change without notice.
- Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publications.
- Screen images in this document may differ depending on your computer's operating system, your product model, and software version.
- Before using the label printer, make sure you read all the documents included with the printer for information about safety and proper operation.
- The printer shown in the illustrations may be different from your printer.
- The available options and supplies may vary depending on the country.

Available Manuals

Visit the Brother support website at support.brother.com and click Manuals on your model page to download the latest manuals.

Product Safety Guide ¹	This guide provides safety information; read it before you use the printer.
Quick Setup Guide ¹	This guide provides basic information about using the printer along with troubleshooting tips.
User's Guide ²	This guide provides additional information about the printer settings and operations, troubleshooting tips, and maintenance instructions.

¹ Printed manual in the box

² PDF manual on the Brother support website

Symbols Used in This Guide

The following symbols are used throughout this guide:

 WARNING	Tells you what to do to avoid the risk of injury.
 CAUTION	Tells you about procedures you must follow to avoid minor personal injury or damage to the label printer.
 Important	Indicates information or directions that should be followed. Ignoring them may result in damage, or failed operations.
 Note	Indicates notes that provide information or directions that can help you better understand and use the product more efficiently.

General Precautions

DK Roll (DK Label and DK Tape)

- Use only genuine Brother accessories and supplies (with  and  marks). DO NOT use any unauthorised accessories or supplies.
- If the label is attached to a wet, dirty, or oily surface, it may peel off easily. Before applying the label, clean the surface to which the label will be applied.
- DK Rolls use thermal paper or film that can fade in colour or peel off surfaces if exposed to ultraviolet light, wind or rain.
- DO NOT expose the DK Rolls to direct sunlight, high temperatures, high humidity, or dust. Store in a cool, dark place. Use the DK Rolls soon after opening the package.
- Scratching the printed surface of the label with your finger nails or metal objects, or touching the printed surface with damp or wet hands can cause the colour to change or fade.
- DO NOT apply labels to any persons, animals, or plants. In addition, never apply labels to public or private property without permission.
- As the end of the DK Roll is designed to not adhere to the label spool, the last label may not be cut correctly. If this happens, remove the remaining labels, insert a new DK Roll, and reprint the last label.
Note: To account for this, the number of DK Labels included on each DK Roll may be more than indicated on the package.
- When a label is removed after being applied to a surface, a portion of the label may remain applied.
- Prior to using CD/DVD labels, be sure to follow the instructions in your CD/DVD player's instruction guide regarding applying CD/DVD labels.
- DO NOT use CD/DVD labels in a slot loading CD/DVD player.
- DO NOT peel off the CD/DVD label once it is applied to the CD/DVD, a thin surface layer may come off, resulting in damage to the disc.
- DO NOT apply CD/DVD labels to CDs/DVDs designed for use with inkjet printers. Labels peel off these discs easily and using discs with peeling labels can result in loss or damage of data.
- When applying CD/DVD labels, use the applicator included with the CD/DVD label rolls. Failure to do so could cause damage to the CD/DVD player.
- Users shall take full responsibility for applying CD/DVD labels. Brother accepts no responsibility for any loss or damage of data caused by the inappropriate use of CD/DVD labels.
- Be careful not to drop the DK Roll.
- DK Rolls use thermal paper and thermal film. Both the label and print will fade with sunlight and heat. DO NOT use DK Rolls for any outdoor use that requires durability.
- Depending on the area, material, and environmental conditions, the label may unpeel or become irremovable, or the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material. Test the label by affixing a small piece of it to an inconspicuous area of the intended surface.
- If print results are not as expected, use the adjustment options in the printer driver or the Printer Setting Tool.

IMPORTANT NOTE

- Windows Vista® in this document represents all editions of Windows Vista®.
- Windows® 7 in this document represents all editions of Windows® 7.
- Windows® 8 in this document represents all editions of Windows® 8.
- Windows® 8.1 in this document represents all editions of Windows® 8.1.
- Windows® 10 in this document represents Windows® 10 Home, Windows® 10 Pro, Windows® 10 Enterprise, and Windows® 10 Education.
Windows® 10 in this document does not represent Windows® 10 Mobile, Windows® 10 Mobile Enterprise, or Windows® 10 IoT Core.
- Not all models are available in all countries.

© 2017 Brother Industries, Ltd. All rights reserved.

Table of Contents

Section I Basic Operations

1	Setting Up the Label Printer	2
	Parts Description	2
	Front	2
	Rear	3
	Loading the DK Roll.....	4
	Connecting the AC Power Cord.....	6
	Turning Power On/Off.....	6
2	Printing Using a Computer (P-touch Editor)	7
	Installing the Software and Printer Drivers to a Computer.....	7
	Connecting the Label Printer to a Computer	7
	Printing from a Computer.....	8
	Available Applications.....	8
	Creating Labels from Your Computer.....	9
	Attaching Labels	10
3	Printing Using the Mobile Device	11
	Installing Applications for Use with Mobile Devices.....	11
	Available Applications.....	11
	Printing from a Mobile Device.....	12
	Attaching Labels	12
4	Changing the Label Printer Settings	13
	Printer Setting Tool for Windows®	13
	Before Using the Printer Setting Tool	13
	Using the Printer Setting Tool for Windows®	14
	Device Settings for Windows®	16
	Settings Dialog Box	16
	Menu Bar	18
	Basic Tab.....	18
	Advanced Tab	19
	Applying Setting Changes to Multiple Label Printers.....	19
	Printer Setting Tool for Mac.....	20
	Before Using the Printer Setting Tool	20
	Using the Printer Setting Tool for Mac.....	20
	Settings Dialog Box	21
	Basic Tab.....	22
	Advanced Tab	22
	Applying Setting Changes to Multiple Label Printers.....	23

5	Other Functions	24
	Confirming the Label Printer Settings	24
	2-color Printing Configuration with Other Applications	24
	Distributed Printing (Windows® only)	26

Section II Application

6	How to Use P-touch Editor	30
	For Windows®	30
	Starting P-touch Editor	30
	Printing with P-touch Editor	32
	Printing Using a 62 mm Black/Red DK Roll.....	34
	Adjusting the red range, brightness, and contrast	37
	For Mac.....	39
	Starting P-touch Editor	39
	Operation modes	40
	2-colour Printing Configuration	41
	Adjusting the red.....	42
7	How to Use P-touch Library (Windows® only)	43
	P-touch Library	43
	Starting P-touch Library	43
	Opening and Editing Templates	44
	Printing Templates.....	45
	Searching for Templates.....	46
8	How to use P-touch Editor Lite (Windows® only)	48
9	How to Update P-touch Software	52
	Updating P-touch Editor.....	52
	For Windows®	52
	For Mac	54
	Updating P-touch Editor Lite (Windows® only) and the Firmware	55
	For Windows®	55
	For Mac	57

Section III Appendix

10	Resetting the Label Printer	60
	Resetting All Settings to the Factory Settings Using the Label Printer Buttons.....	60

	Resetting Data Using the Printer Setting Tool	60
11	Maintenance	61
	Cleaning the Exterior of the Unit.....	61
	Cleaning the Print Head.....	61
	Cleaning the Roller	61
	Cleaning the Label Outlet	63
12	Troubleshooting	64
	Overview.....	64
	Printing Problems	65
	Version Information	68
	LED Indicators	69
	Troubleshooting.....	71
13	Product Specifications	72
	Label Printer Specifications	72



Basic Operations

Setting Up the Label Printer	2
Printing Using a Computer (P-touch Editor)	7
Printing Using the Mobile Device	11
Changing the Label Printer Settings	13
Other Functions	24


1

Setting Up the Label Printer

1

Parts Description

Front

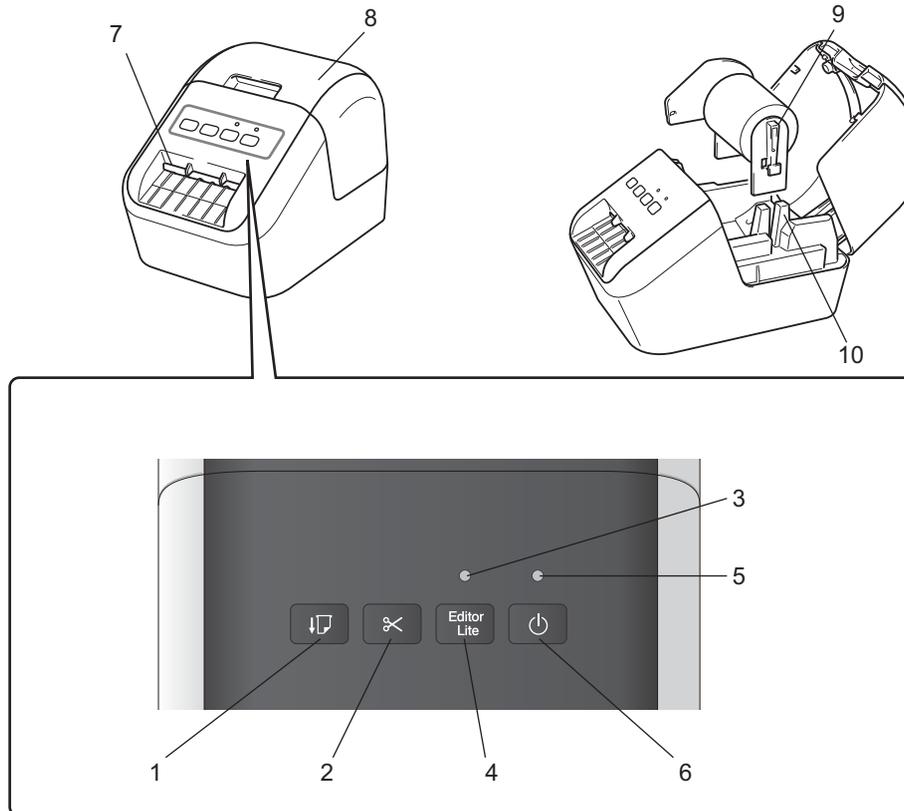


- 1 Feed Button
- 2 Cutter Button
- 3 Editor Lite LED
- 4 Editor Lite Button
- 5 Status LED
- 6 Power Button

- 7 Label Output Slot
- 8 DK Roll Compartment Cover
- 9 Roll Spool Arm
- 10 Roll Spool Guide

Rear

1

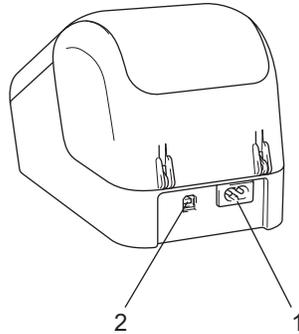

1 Power Cord Slot

2 USB Port

⚠ Important

Before using the printer, make sure you remove the protective sheet according to the following procedure:

- 1 Make sure that the printer is turned Off.
Hold the printer by the front, and firmly lift the DK Roll Compartment Cover to open it.
- 2 Remove the protective sheet from the Label Output Slot.




- **Do not throw away the protective sheet.**
- When the printer is not in use, lift the DK Roll Compartment Cover and remove any DK Rolls from inside the printer. Reinsert the protective sheet into the Label Output Slot to maintain good printing quality.

Loading the DK Roll


- 1 Make sure that the label printer is turned Off.
Hold the printer by the front and firmly lift the DK Roll Compartment Cover to open it.




- 2 Place the DK Roll into the Roll Spool Guide.
 - Make sure that the Roll Spool Arm is inserted firmly in the Roll Spool Guide.
 - Make sure the stabiliser (1) slides into the notch of the printer.
 - Make sure the **[Paper Type]** (Windows) / **[Print Media]** (Mac) in P-touch Editor matches the installed media.

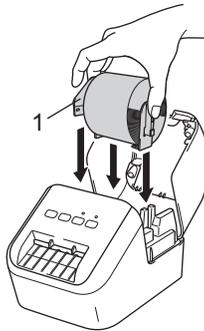

- 3 Thread the DK Roll through the printer.
 - Align the edge of the DK Roll with the upright edge of the Label Output Slot.
 - Insert the first label into the slot inside the compartment.
 - Push the label through the Label Output Slot until the end reaches the mark, as shown below:

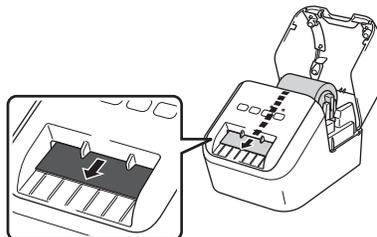


- 4 Close the DK Roll Compartment Cover.
When you press the Power (⏻) Button to turn the printer On, the end of the DK Roll aligns automatically.

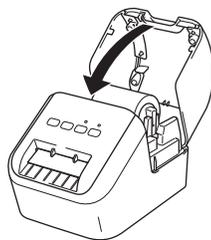

! **Important** Do not leave any printed labels in the printer. Doing so will cause the labels to jam.

Connecting the AC Power Cord

Connect the AC Power Cord to the printer. Then, plug the AC Power Cord into an earthed electrical socket.

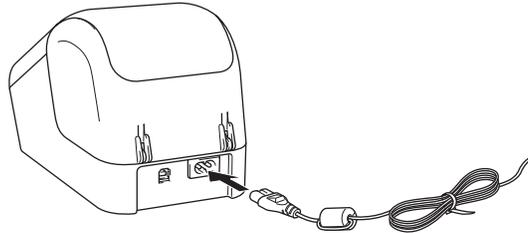

Turning Power On/Off

On: Press the Power (⏻) Button to turn the printer On. The Status LED turns green.

Off: Press and hold the Power (⏻) Button again to turn the printer Off.

⚠ Important

When turning the printer Off, do not disconnect the AC Power Cord until the orange Status LED turns Off.

Installing the Software and Printer Drivers to a Computer

To print from your Windows® computer or Mac, install the printer drivers, P-touch Editor, and other applications to your computer.

For Windows®

Printer Driver, P-touch Editor, P-touch Update Software, and Printer Setting Tool.

For Mac

Printer Driver, P-touch Editor, P-touch Update Software, and Printer Setting Tool.

❗ Important

When printing with P-touch Editor, press and hold the P-touch Editor Lite Button until the green Editor Lite LED turns off.

- 1 Visit our website (install.brother) and download the Software Installer for the latest software and manuals.
- 2 Double-click the downloaded EXE file (for Windows®) or DMG file (for Mac), and follow the on-screen instructions to proceed with the installation.
- 3 Close the dialog box when the installation is complete.

Connecting the Label Printer to a Computer

- 1 Before connecting the USB cable, make sure that the printer is turned Off.
- 2 Connect the USB cable to the USB Port on the back of the printer.
- 3 Connect the USB cable to the USB Port on the computer.
- 4 Turn the printer On.

Printing from a Computer

Available Applications

To use the printer effectively, a number of applications and functions are available.

You must install the printer driver to use these applications.

Visit our website (install.brother) and download the installer for the applications and printer driver.

Application	Windows	Mac	Features
P-touch Editor	✓	✓	Designs and prints custom labels with built-in drawing tools, text using different fonts and styles, imported graphic images and barcodes.
P-touch Library	✓		Manages and prints P-touch Editor templates. This application is installed with P-touch Editor.
P-touch Update Software	✓	✓	Updates software to the latest version.
Printer Setting Tool	✓	✓	Specifies the printer's device settings from a computer.

Function	Windows	Mac	Features
Distributed printing	✓		When printing a large number of labels, printing can be distributed among multiple printers. Because printing is performed at the same time, the total printing time can be reduced. For more information, see <i>Distributed Printing (Windows® only)</i> on page 26.

Creating Labels from Your Computer

There are various methods for printing with this printer.


The following describes the procedure for printing from a computer using P-touch Editor.

- 1 Start P-touch Editor, and then open the document you want to print.
- 2 Create a label design.
- 3 Check the cutting options.
- 4 Select [**File**] and then select [**Print**] from the menu bar or click the [**Print**] icon.

Cutting Options

The cutting options allow you to specify how the item is fed and cut when it is printed. Use the printer driver to select the cutting option when printing from the computer.

Label Cut Option Table

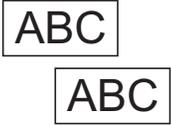Auto Cut	Cut at end	Image
No	Yes	
No	No	
Yes	Yes or No	

Attaching Labels

- 1 Peel the backing from the label.
- 2 Position the label, and then press firmly from top to bottom with your finger to attach the label.



Note

Labels may be difficult to attach to surfaces that are wet, dirty, or uneven. The labels may peel off easily from these surfaces.

Installing Applications for Use with Mobile Devices

You can use your printer as a stand-alone printer or connect it to a mobile device. To create and print labels directly from your mobile device, install the Brother mobile applications, and then connect your printer to your mobile device with the USB cable.

Available Applications

The following free Brother applications can be downloaded from Google Play™:

Application	Features
Brother iPrint&Label	Create and print labels using templates on a smartphone, tablet or other mobile device directly to your printer.

**Note**

You must purchase a USB cable to connect your printer and Android mobile device.

Printing from a Mobile Device

- 1 Make sure that the printer is connected to your mobile device.
Start the mobile printing application on your mobile device.
- 2 Select a label template or design.
You can also select a previously designed label or image and print it.
- 3 Tap **[Print]** in the application menu.

Cutting Options

See *Cutting Options* on page 9.

Attaching Labels

- 1 Peel the backing from the label.
- 2 Position the label, and then press firmly from top to bottom with your finger to attach the label.



Note

Labels may be difficult to attach to surfaces that are wet, dirty, or uneven. The labels may peel off easily from these surfaces.

Printer Setting Tool for Windows[®]

Use the Printer Setting Tool to specify the printer's device settings from a Windows[®] computer.

! Important


- The Printer Setting Tool is available only with compatible Brother printers.
- "Printer Setting Tool" appears in English as "Printer Setting Tool" in the [Control Panel] and shortcut icon.

Before Using the Printer Setting Tool

- Make sure the AC Power Cord is connected to the printer and to an electrical socket.
- Make sure the printer driver has been installed correctly and you can print.
- Connect your printer to a computer with a USB cable.

Using the Printer Setting Tool for Windows®

- 1 Connect the printer you want to configure to the computer.
- 2 Start the Printer Setting Tool.
 - **For Windows Vista® / Windows® 7**
Click **Start > All Programs > Brother > Label & Mobile Printer > Printer Setting Tool**.
 - **For Windows® 8 / Windows® 8.1**
On the **Apps** screen, click the **Printer Setting Tool**.
 - **For Windows® 10**
Click **Start > Brother > Label & Mobile Printer > Printer Setting Tool**.
The main window appears.

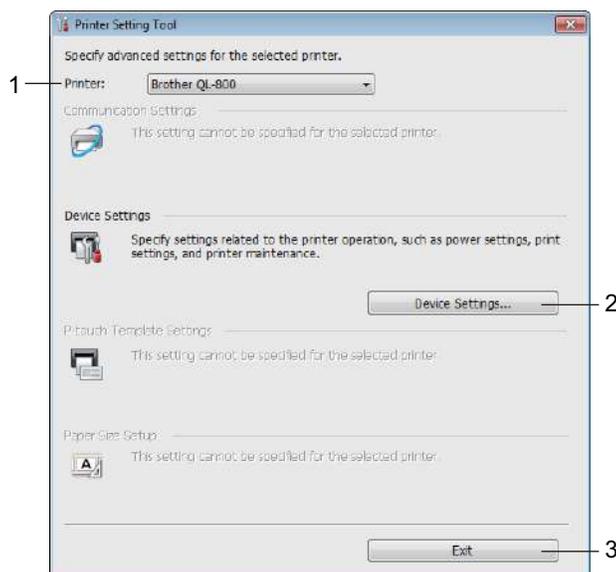

1 Printer

Lists the connected printers.

2 Device Settings

Specifies printer device settings, such as power settings and printer settings.

3 Exit

Closes the window.

- 3 Check that the printer you want to configure appears next to **[Printer]**. If a different printer appears, select the printer you want from the drop-down list.



Note

If only one printer is connected, it is unnecessary to make a selection because only that printer is available.

- 4 Select the settings you want to change, and then specify or change the settings in the dialog box. For more information on the settings dialog boxes, see *Device Settings for Windows®* on page 16.

5 Click [**Apply**], and then click [**Exit...**] to apply the settings to the printer.

6 Click **Exit**.

! **Important**

Use the Printer Setting Tool to configure the printer *only* when the printer is waiting for the next print job. The printer may malfunction if you try to configure it while it is handling a job.


Device Settings for Windows®

Use [Device Settings] in the Printer Setting Tool to specify or change printer settings when connecting the printer and computer with a USB cable. Not only can you change the device settings for one printer, but you can also apply the same settings to multiple printers.

When printing from a computer application, various printing settings can be specified from the printer driver; however, by using [Device Settings] in the Printer Setting Tool, more advanced settings can be specified.

When [Device Settings] is opened, the printer's current settings are retrieved and displayed. If the current settings could not be retrieved, the previous settings are displayed. If the current settings could not be retrieved and previous settings have not been specified, this machine's factory settings are displayed.

Settings Dialog Box

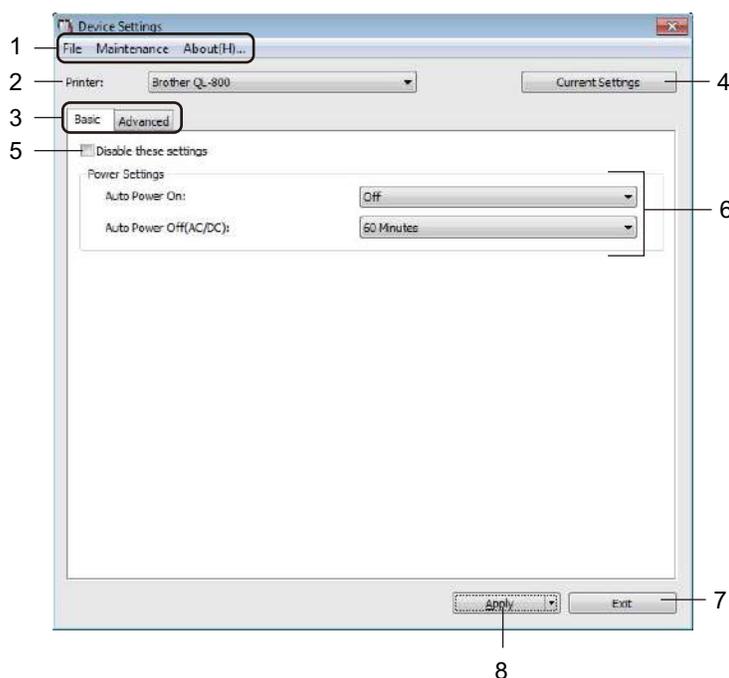

! Important

To display these tabs, you must have administrator privileges for the computer or the printer. You can confirm the administrator privileges for the printer in the [Printer properties] - [Security] tab.

1 Menu Bar

Selects a command contained in each menu from the list.

2 Printer

Specifies the printer you want to configure.

If only one printer is connected, it is unnecessary to make a selection because only that printer will appear.

3 Settings Tabs

Contains settings that may be specified or changed.



Note

If  appears in the tab, the settings in that tab cannot be specified or changed. In addition, the settings in the tab will not be applied to the printer even if **[Apply]** is clicked. The settings in the tab will also not be saved or exported when the **[Save in Command File]** or **[Export]** command is used.

4 Current Settings

Retrieves the settings from the currently connected printer and displays them in the dialog box. Settings will also be retrieved for parameters on tabs with .

5 Disable these settings

When this check box is selected,  appears in the tab, and the settings can no longer be specified or changed.

Settings in a tab where  appears will not be applied to the printer even if **[Apply]** is clicked. In addition, the settings in the tab will not be saved or exported when the **[Save in Command File]** or **[Export]** command is used.

6 Parameters

Displays the current settings.

7 Exit

Exits **[Device Settings]**, and returns to the main window of the Printer Setting Tool.

8 Apply

Applies the settings to the printer.

To save the specified settings in a command file, select **[Save in Command File]** from the drop-down list.

Menu Bar

The following explains about the menu items in the Settings Dialog Box.

- **Apply Settings to the Printer**
Applies the settings to the printer.
Performs the same operation as when **[Apply]** is clicked.
- **Check Setting**
Displays the current settings.
- **Save Settings in Command File**
Saves the specified settings in a command file.
Performs the same operation as when **[Save in Command File]** is selected from the **[Apply]** drop-down list.
- **Import**
Imports the exported file.
- **Export**
Saves the current settings in a file.
- **Factory Reset**
Resets all printer settings to factory settings.
- **Option Settings**
If the **[Do not display an error message if the current settings cannot be retrieved at startup]** check box is selected, a message will not be displayed next time.

Basic Tab

The following explains about the Basic Tab in the Settings Dialog Box.

- **Auto Power On**
Specifies whether the printer turns on automatically when the AC Power Cord is plugged into an electrical socket.
Available settings: **[On]**, **[Off]**
- **Auto Power Off (AC/DC)**
Specifies the period of time that passes before the printer turns off automatically when connected to an electrical socket.
Available settings: **[None]**, **[10/20/30/40/50/60 Minutes]**

Advanced Tab

The following explains about the Advanced Tab in the Settings Dialog Box.

- **Print Density (Black)**
Sets the density of black.
Available settings: [+6/+5/+4/+3/+2/+1/0/-1/-2/-3/-4/-5/-6]
- **Print Density (Red)**
Sets the density of red.
Available settings: [+6/+5/+4/+3/+2/+1/0/-1/-2/-3/-4/-5/-6]
- **Print Data after Printing**
Specifies whether or not print data is erased after printing.
Available settings: [Keep Print Data], [Erase All Print Data]

Applying Setting Changes to Multiple Label Printers

- 1 After applying settings to the first printer, disconnect the printer from the computer, and then connect the second printer to the computer.
- 2 Select the newly connected printer from the **[Printer]** drop-down list.
- 3 Click **[Apply]**. The same settings that were applied to the first printer are applied to the second printer.
- 4 Repeat steps 1 – 3 for all printers whose settings you want to change.



Note

To save the current settings in a file, click **[File]** - **[Export]**.

The same settings can be applied to another printer by clicking **[File]** - **[Import]**, and then selecting the exported settings file. For further information, see *Device Settings for Windows*® on page 16.

Printer Setting Tool for Mac

Using the Printer Setting Tool, you can specify the printer's device settings from a Mac. Not only can you change the device settings for one printer, but you can also apply the same settings to multiple printers.



Note

The Printer Setting Tool is installed automatically when you use the initial installer to install the printer driver. For more information, see *Installing the Software and Printer Drivers to a Computer* on page 7.



Important

The Printer Setting Tool is available only with compatible Brother printers.

Before Using the Printer Setting Tool

- Make sure the AC Power Cord is connected to the printer and to an electrical socket.
- Make sure the printer driver has been installed correctly and you can print.
- Connect your printer to a computer with a USB cable.

Using the Printer Setting Tool for Mac


- 1 Connect the printer you want to configure to the computer.
- 2 Click **[Macintosh HD]** - **[Applications]** - **[Brother]** - **[Printer Setting Tool]** - **[Printer Setting Tool.app]**. The **[Printer Setting Tool]** window appears.
- 3 Check that the printer you want to configure appears next to **[Printer]**. If a different printer appears, select the printer you want from the pop-up list.
- 4 Select a settings tab, and then specify or change the settings.
- 5 Click **[Apply Settings to the Printer]** in the settings tab to apply the settings to the printer.
- 6 Click **[Exit]** to finish specifying settings.



Important

Use the Printer Setting Tool to configure the printer only when the printer is waiting for the next print job. The printer may malfunction if you try to configure it while it is handling a job.

Settings Dialog Box

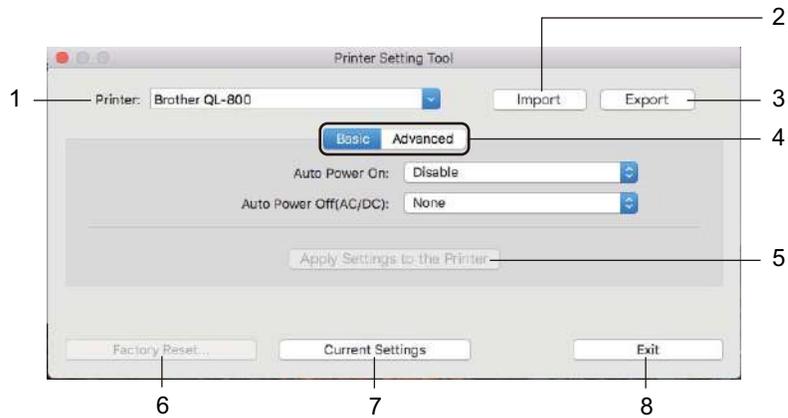

- 1 Printer**
Lists the connected printers.
- 2 Import**
Imports settings from a file.
- 3 Export**
Saves the current settings in a file.
- 4 Settings Tabs**
Contain settings that may be specified or changed.
- 5 Apply Settings to the Printer**
Applies the settings to the printer.
- 6 Factory Reset**
Resets printer settings to factory settings.
- 7 Current Settings**
Retrieves the settings from the currently connected printer and displays them in the dialog box.
- 8 Exit**
Exits the Printer Setting Tool.

Basic Tab

The following explains about the Basic Tab in the Settings Dialog Box.

- **Auto Power On**

Specifies whether the printer turns on automatically when the AC Power Cord is plugged into an electrical socket.

Available settings: [**Disable**], [**Enable**]

- **Auto Power Off (AC/DC)**

Specifies the period of time that passes before the printer turns off automatically when connected to an electrical socket.

Available settings: [**None**], [**10/20/30/40/50/60 Minutes**]

Advanced Tab

The following explains about the Advanced Tab in the Settings Dialog Box.

- **Print Density (Black)**

Sets the density of black.

Available settings: [**+6/+5/+4/+3/+2/+1/0/-1/-2/-3/-4/-5/-6**]

- **Print Density (Red)**

Sets the density of red.

Available settings: [**+6/+5/+4/+3/+2/+1/0/-1/-2/-3/-4/-5/-6**]

- **Print Data after Printing**

Specifies whether or not print data is erased after printing.

Available settings: [**Keep Print Data**], [**Erase All Print Data**]

Applying Setting Changes to Multiple Label Printers

- 1 After applying settings to the first printer, disconnect the printer from the computer, and then connect the second printer to the computer.
- 2 Select the newly connected printer from the **[Printer]** drop-down list.
- 3 Click **[Apply Settings to the Printer]**.
The same settings that were applied to the first printer are applied to the second printer.
- 4 Repeat steps 1 – 3 for all printers whose settings you want to change.



Note

To save the current settings in a file, click **[Export]**.

The same settings can be applied to another printer by clicking **[Import]**, then selecting the exported settings file. For more information, see *Settings Dialog Box* on page 21.

Confirming the Label Printer Settings

You can print the settings report, which contains the following information: the firmware version, device settings, and serial number.

- 1 Turn on the printer.
- 2 Press and hold the Cutter (>✂) Button to print the report.



Note


When you print this report, recommend a DK Roll with labels 29 mm or wider and a print length of 64 mm. DK Rolls for 2-colour printing cannot be used.

2-color Printing Configuration with Other Applications

Follow the process below when carrying out 2-colour printing from any application other than P-touch Editor.


For Windows®

- 1 Open the **Devices and Printers** window, select [QL-800] and right-click it. Click [**Printer Properties**].
- 2 Select the [**General**] tab, then click the [**Preferences...**] button.
- 3 Select [**Black/Red**] from the [**Paper Type**] section.

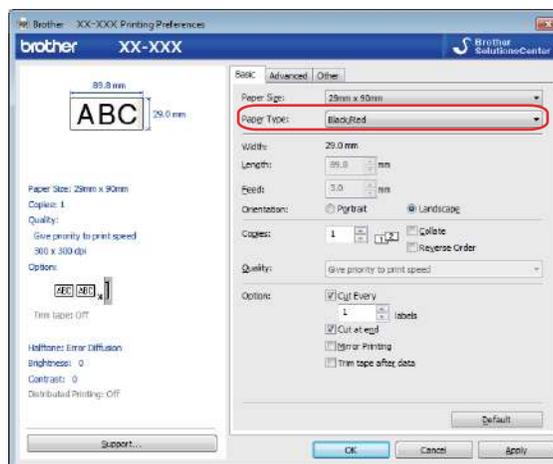

For Mac

- 1 Click **[File]**, and then select **[Print]**.
The print screen appears.
- 2 Click the **[Show Details]** button.
Then the other print screen appears.
Click the **[Notes]** pull down to select **[Advanced]**.
- 3 Select **[2-Color (Black/Red)]** from the **[Color]** section.

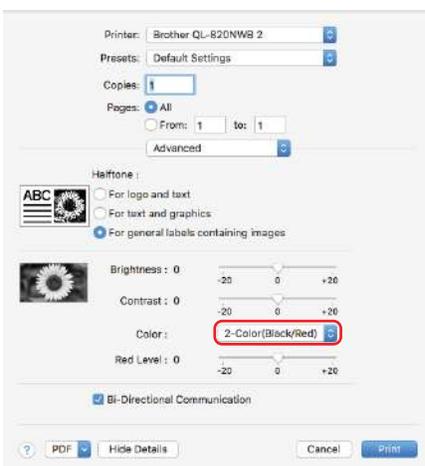

! Important

Make sure you use these settings when printing in monochrome using a 62 mm Black/Red DK roll.


Distributed Printing (Windows[®] only)

When printing a large number of labels, printing can be distributed among multiple printers. Because printing is performed at the same time, the total printing time can be reduced.




Note

- Printing can be distributed to printers connected via a USB connection.
- The number of pages is automatically divided among the selected printers. If the specified number of pages cannot be evenly divided among the printers, it will be divided in the order of the printers listed in the dialog box when the print settings are specified in step 4.

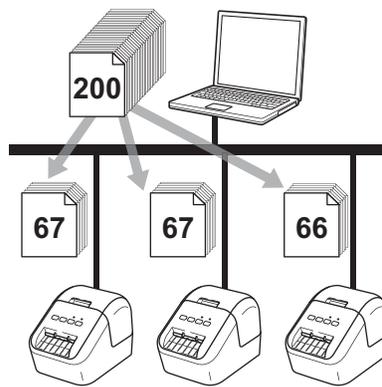


- 1 From the **[File]** menu in P-touch Editor, click **[Print]**.
- 2 Click **[Properties...]**.

- Click the **[Advanced]** tab, select the **[Distributed Printing]** check box, and then click **[Settings]**.

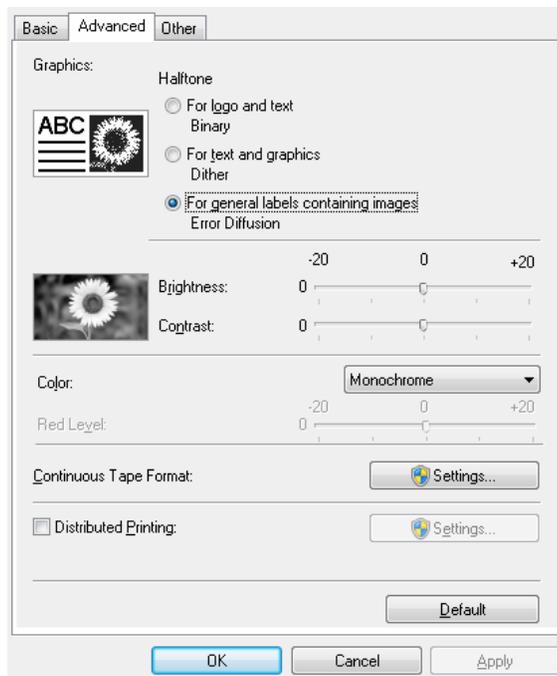

- In the **Distributed Printing Settings** dialog box, select the printers you want to use for distributed printing.

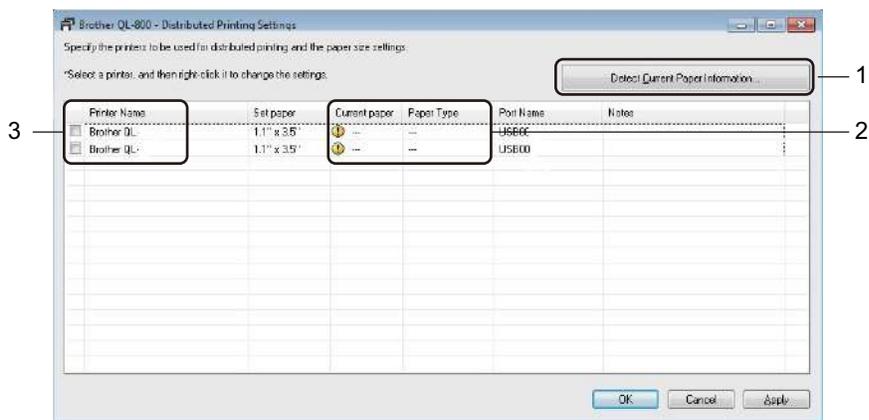

- Click **[Detect Current Paper Information...]** (1).
- The current printer information that was detected appears below **[Current Paper]** and **[Paper Type]** (2).
- Select the check box next to the **[Printer Name]** you want (3).

Note

If the selected label width is different from that displayed in the **[Current Paper]** column icon appears. Load the printer with the label width specified in **[Set Width]**.

5 Specify the label size.

A. If only one printer has been selected.

In the **Distributed Printing Settings** dialog box from step 4, select the printer whose setting you want to specify, and then either double-click it or right-click it, and then click **[Settings]**. From the **[Set Width]** drop-down list, select the label size.



Note

Information displayed in the **[Distributed Printing Settings]** dialog box from step 4 can be entered in the **[Notes]** text box.

B. If multiple printers have been selected.

In the **Distributed Printing Settings** dialog box from step 4, select the printers whose settings you want to specify, right-click them, and then click **[Settings]**. From the **[Set Width]** drop-down list, select the label size. The same label size setting is applied to all selected printers.



Note

The settings below **[Printer Settings]** and **[Notes]** are not available.

6 Click **[OK]** to close the label size setting window.

7 Click **[OK]** to close the **[Distributed Printing Settings]** window.
Setup is completed.

8 Click **[OK]** to start distributed printing.



Note

- It may not be possible to detect information for a printer connected using a USB hub or print server. Before printing, enter the settings manually, and check if the printer can be used for printing.
- We recommend performing a connection test for your operating environment. Contact your information technology manager or administrator for assistance.



Application

How to Use P-touch Editor	30
How to Use P-touch Library (Windows® only)	43
How to use P-touch Editor Lite (Windows® only)	48
How to Update P-touch Software	52

To use your printer with your computer, install P-touch Editor and the printer driver.

To download the latest driver and software, visit the Brother support website at support.brother.com
[Select your region/country.] - [Downloads] - [Choose your product]

For Windows®

Starting P-touch Editor

1 Start the P-touch Editor.

■ **For Windows Vista® / Windows® 7**

From the Start button, click [All Programs] - [Brother P-touch] - [P-touch Editor 5.x], or double-click [P-touch Editor 5.x] shortcut icon on the desktop.

■ **For Windows® 8 / Windows® 8.1**

Click [P-touch Editor 5.x] on the [Apps] screen or double-click [P-touch Editor 5.x] on the desktop.

■ **For Windows® 10**

From the Start button, click [P-touch Editor 5.x] under [Brother P-touch], or double-click [P-touch Editor 5.x] on the desktop.




2 When P-touch Editor starts, select whether you want to create a new layout or open an existing layout.

Note

To change how P-touch Editor functions when it starts, click [Tools] - [Options] in the P-touch Editor menu bar to display the **Options** dialog box. On the left side, select the [General] heading, and then the setting you want in the [Operations] list box under [Startup Settings]. The factory setting is [Display New View].

3 Select one of the displayed options:

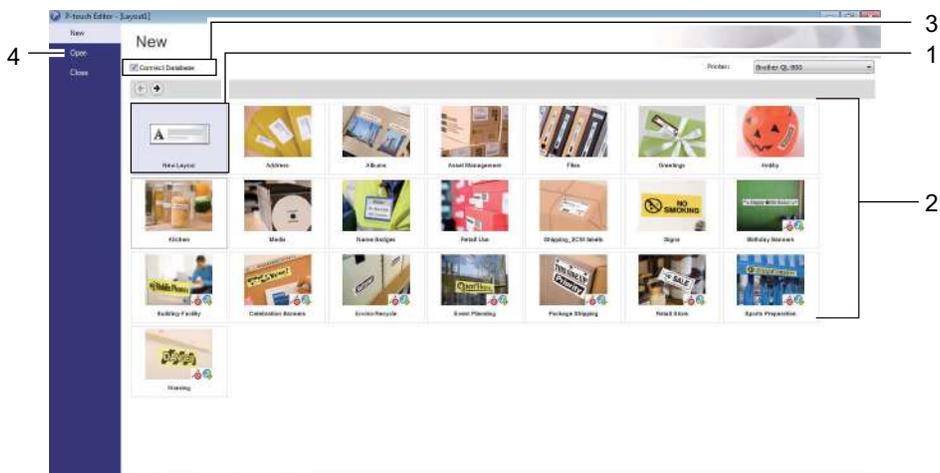


- 1 To create a new layout, double-click **[New Layout]**, or click **[New Layout]** and then click **[→]**.
- 2 To create a new layout using a preset layout, double-click a category button, or select a category button and then click **[→]**.
- 3 To connect a preset layout to a database, select the check box next to **[Connect Database]**.
- 4 To open an existing layout, click **[Open]**.

Printing with P-touch Editor

■ Express mode


This mode allows you to quickly create layouts that include text and images.

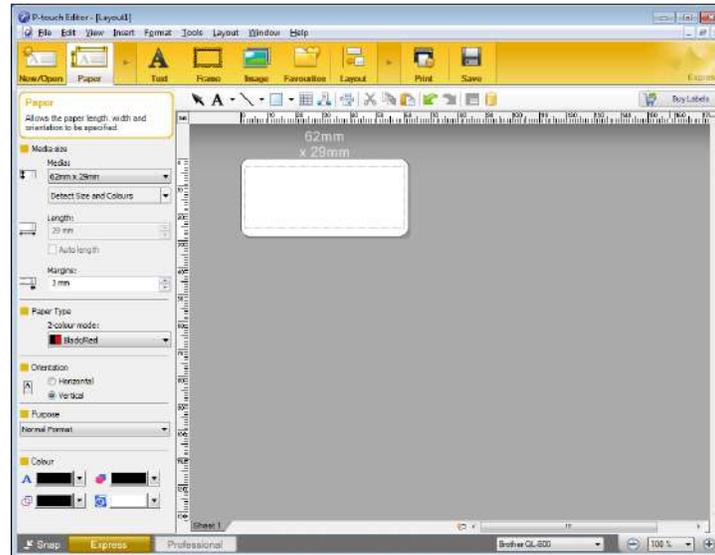

To print, click **[File]** - **[Print]** from the menu bar or click the **[Print]** icon. Before printing, configure the print settings in the Print screen.

■ Professional mode

This mode allows you to create layouts using a wide-range of advanced tools and options.

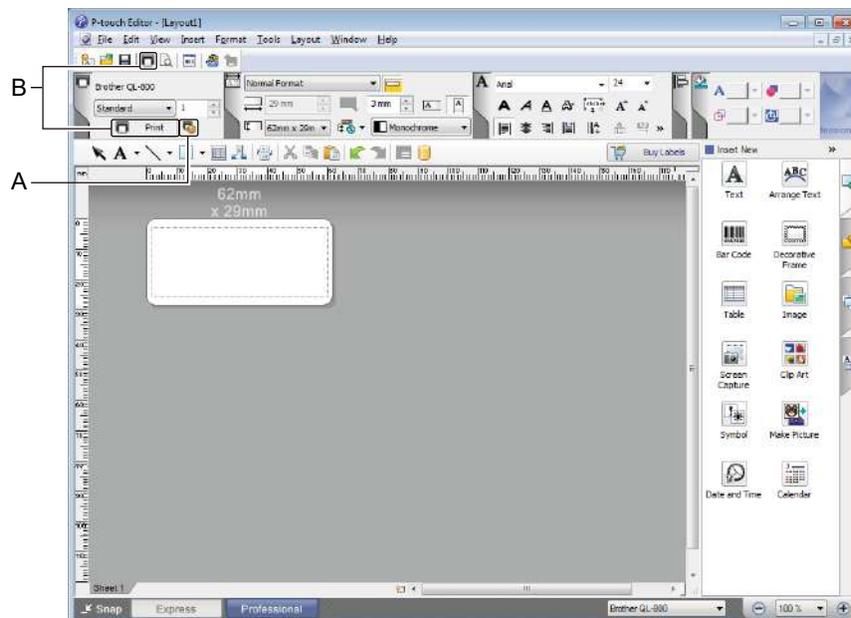


To print, click **[File]** - **[Print]** from the menu bar or click the **[Print]** icon (A). Before printing, configure the print settings in the Print screen.

In addition, you can click the **[Print]** icon “B” to start printing without changing the printing settings.


■ Snap mode

This mode allows you to capture all or a portion of your computer screen display, print it as an image, and save it for future use.

- 1 Click the **[Snap]** mode selection button.
The **Description of Snap mode** dialog box appears.

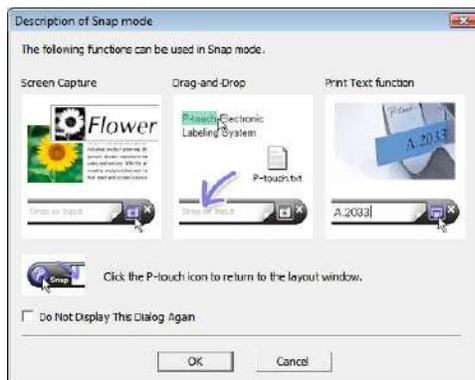

- 2 Click **[OK]**.
The **Snap** mode palette appears.

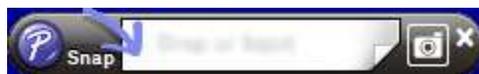


Printing Using a 62 mm Black/Red DK Roll

Use the following settings when using the trial roll (62 mm) included with the label printer, or a commercially available DK-22251 continuous length paper tape (black/red).


Configuration with P-touch Editor

Express mode

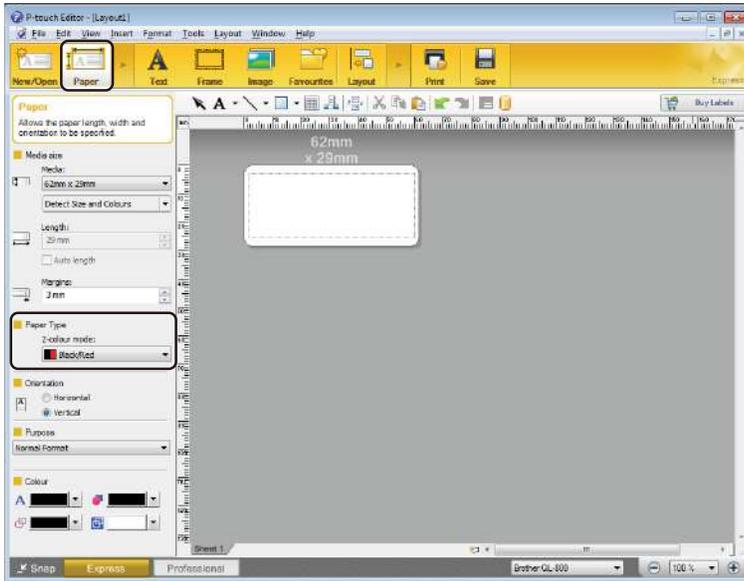


- 1 Select  [Paper] then the Two-colour Mode appears.
- 2 Select [Black/Red] for [2-colour mode:].

6


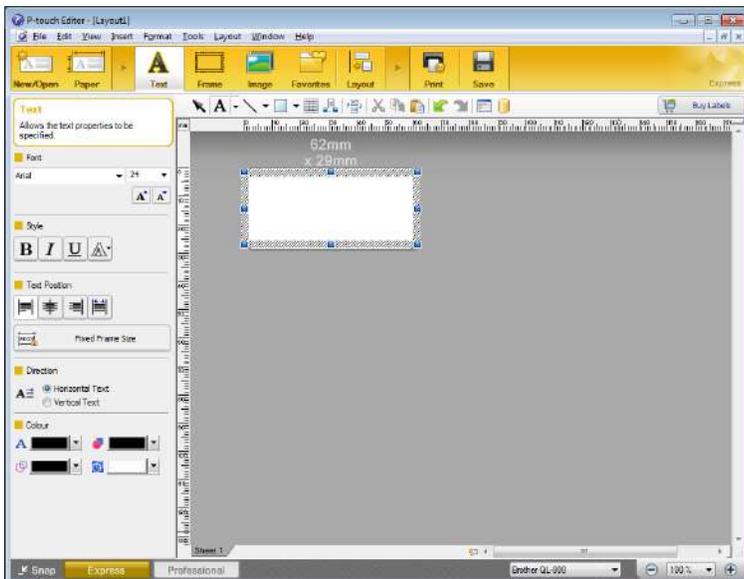


- 3 Select [Text] to edit the colour of the text.
- 4 Select [Frame] to edit the colour of the frame.

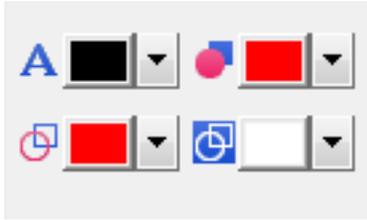


- Use [Sets Text Colour for Selected Text] to edit the colour of the text.
- Use [Changes the fill colour] to edit the colour to fill an enclosed area with.
- Use [Changes the colour of the line] to edit the colour of the line.
- Use [Changes the background colour of the object] to edit the background colour of the object.


Professional mode

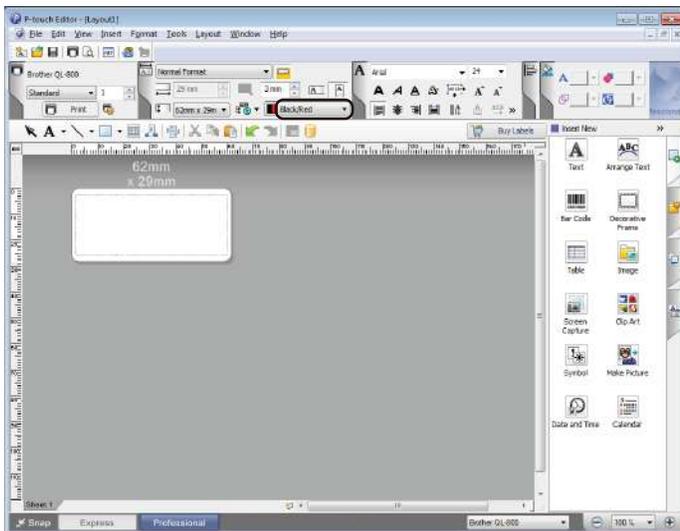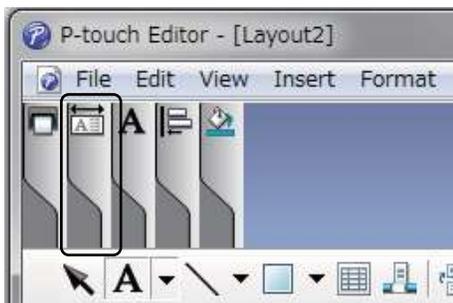

- 1 Click the illustration , then the detailed item will appear.
- 2 Select [Black/Red] from the [Paper] tab.

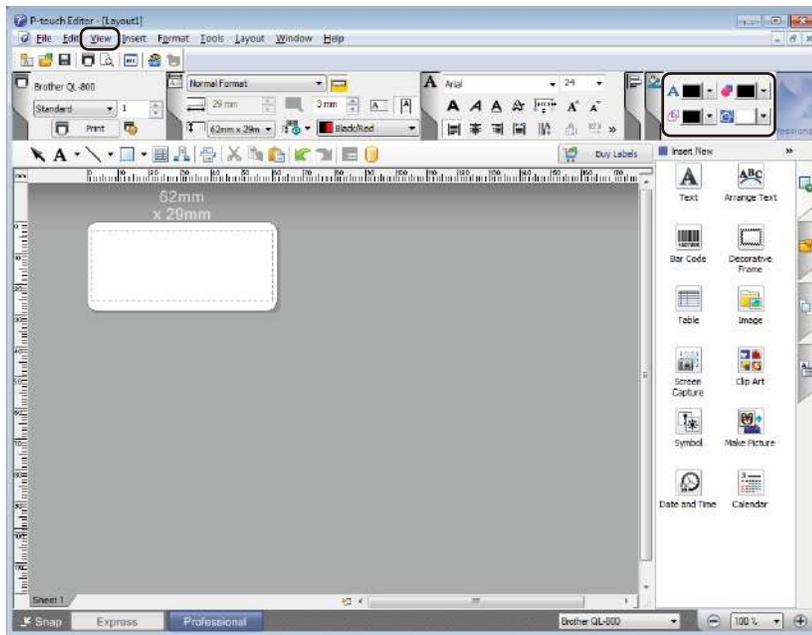

- 3 Click **[View]**, then select **[Property Palette]**, and click **[Colour]**. The Colour editing palette appears.

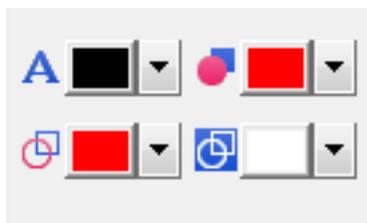

- Use **A** **[Sets Text Colour for Selected Text]** to edit the colour of the text.
- Use **[Changes the fill colour]** to edit the colour to fill an enclosed area with.
- Use **[Changes the colour of the line]** to edit the colour of the line.
- Use **[Changes the background colour of the object]** to edit the background colour of the object.



Note

- The Black/Red Print density can be adjusted using the Printer Setting Tool.
- You cannot select High Resolution mode when using 2-colour printing.

Adjusting the red range, brightness, and contrast




- 1 Open the P-touch Editor [**Print**] dialog box.





- 2 Click [**Properties**].

6

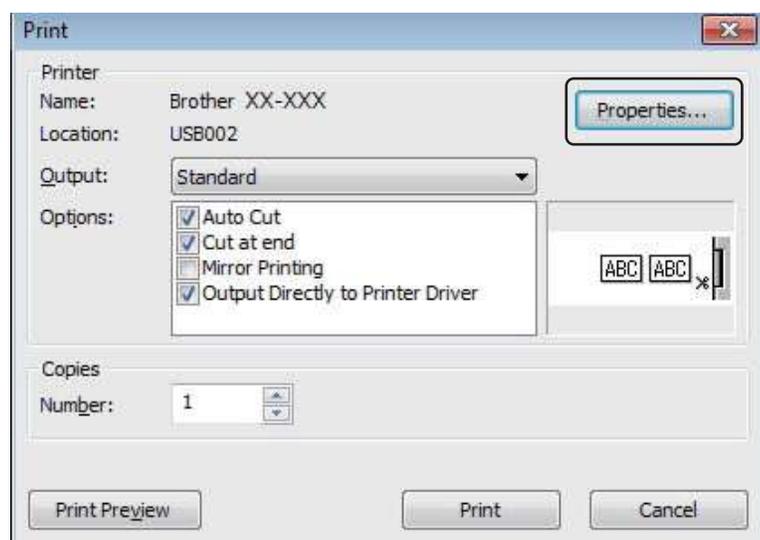

- 3 Select the [**Basic**] tab.
- 4 Set [**Paper Type**] to [**Black/Red**].

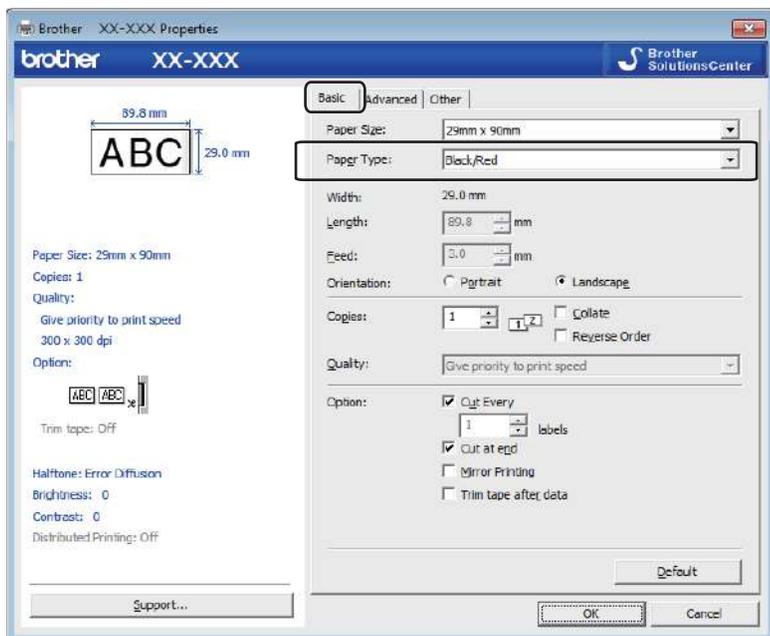

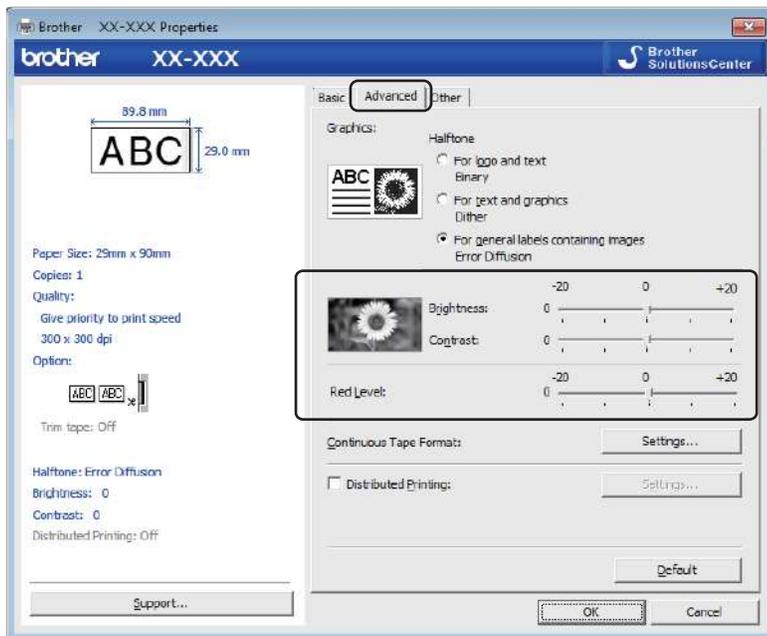

- 5 Select the **[Advanced]** tab.
- 6 Set the **[Brightness]** and **[Contrast]**. (Between -20 and +20)
- 7 Set the **[Red Level]**. (Possible setting range: -20 to +20)

For Mac

Starting P-touch Editor

Double-click **[Macintosh HD]** - **[Applications]**, and then double-click the **[P-touch Editor]** application icon.



Note


When using a Mac, you cannot transfer label data created using P-touch Editor to the printer.

Operation modes

■ Standard Mode

This mode allows you to create labels with text and images.

The Layout Window consists of the following sections:

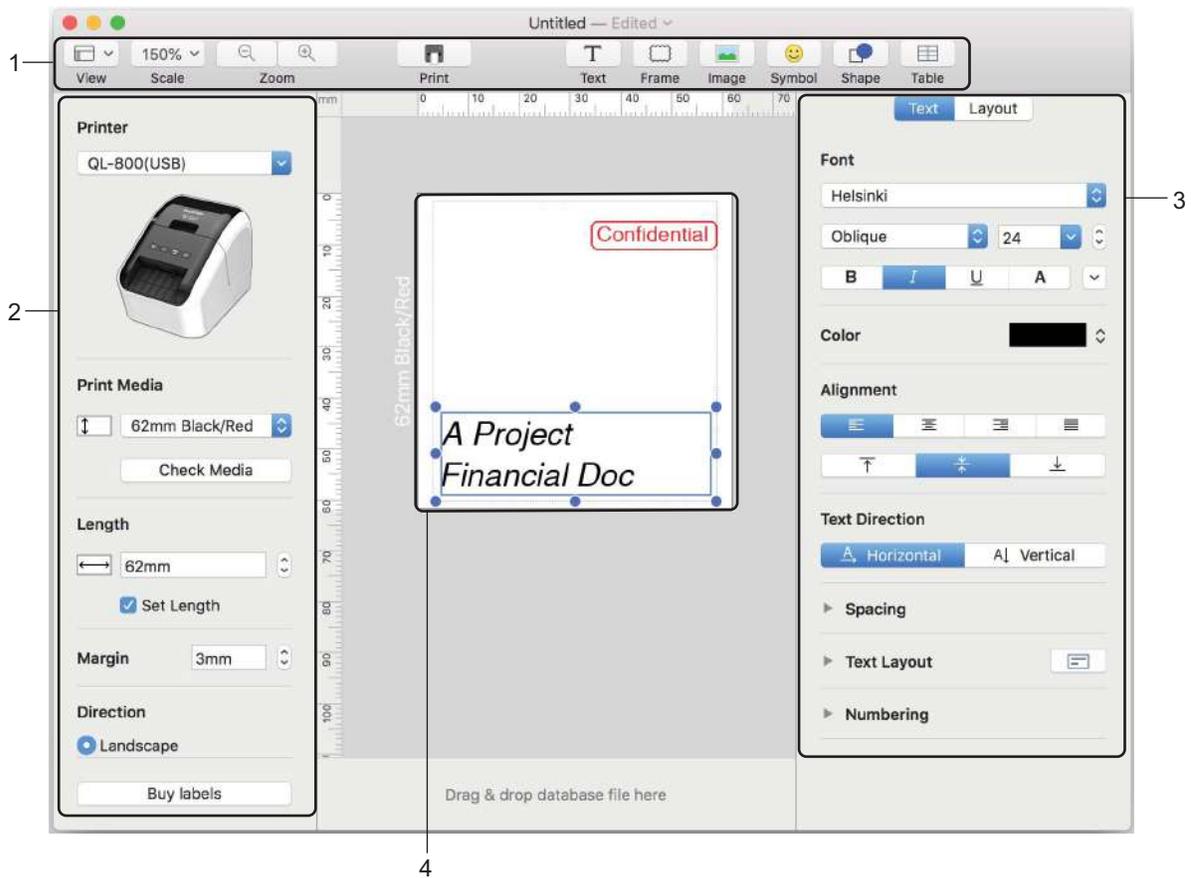

- 1 Toolbar
- 2 Label Inspector
- 3 Object Inspector
- 4 Label Editing Area


2-colour Printing Configuration

The printer is capable of 2-colour printing.


Configuration with P-touch Editor

Standard mode

- 1 Select [62 mm Black/Red].

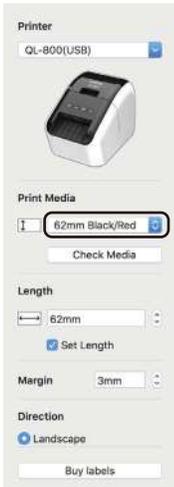


- 2 Select the text and object colours.

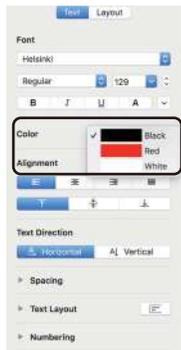


Note

The Black/Red Print density can be adjusted using the Printer Setting Tool.

Adjusting the red

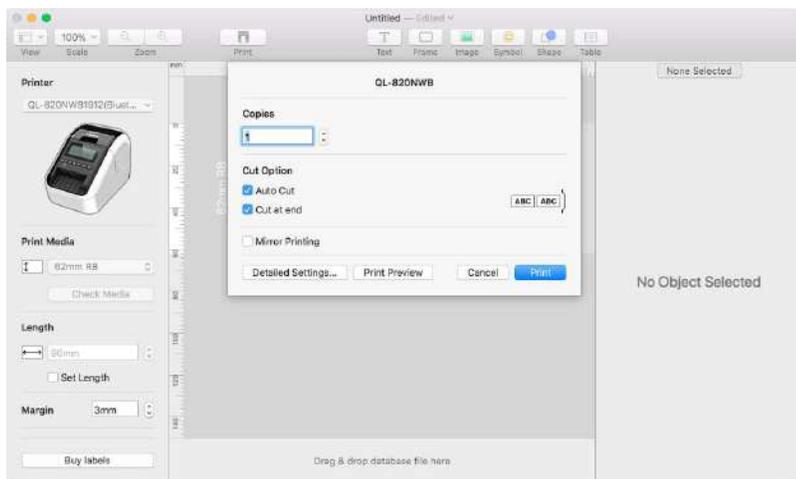

- 1 Open the P-touch Editor [**Print**] dialog box.
- 2 Click the [**Detailed Settings**] button.

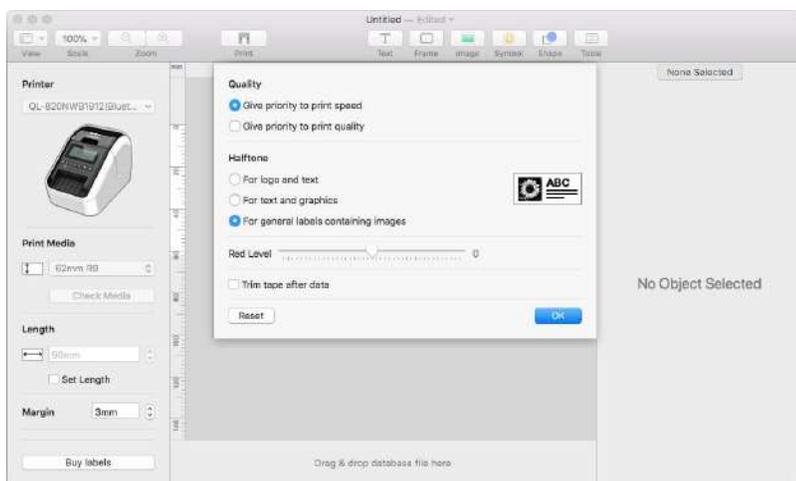

- 3 Set the [**Red Level**]. (Between -20 and +20)

7

How to Use P-touch Library (Windows[®] only)

P-touch Library

This program allows you to manage and print P-touch Editor templates.

Starting P-touch Library

■ For Windows Vista[®] / Windows[®] 7

From the Start button, click [All Programs] - [Brother P-touch] - [P-touch Tools] - [P-touch Library 2.2].

■ For Windows[®] 8 / Windows[®] 8.1


Click [P-touch Library 2.2] on the [Apps] screen.

■ For Windows[®] 10

From the Start button, click [P-touch Library 2.2] under [Brother P-touch].

When P-touch Library starts, the Main window appears.

Main window

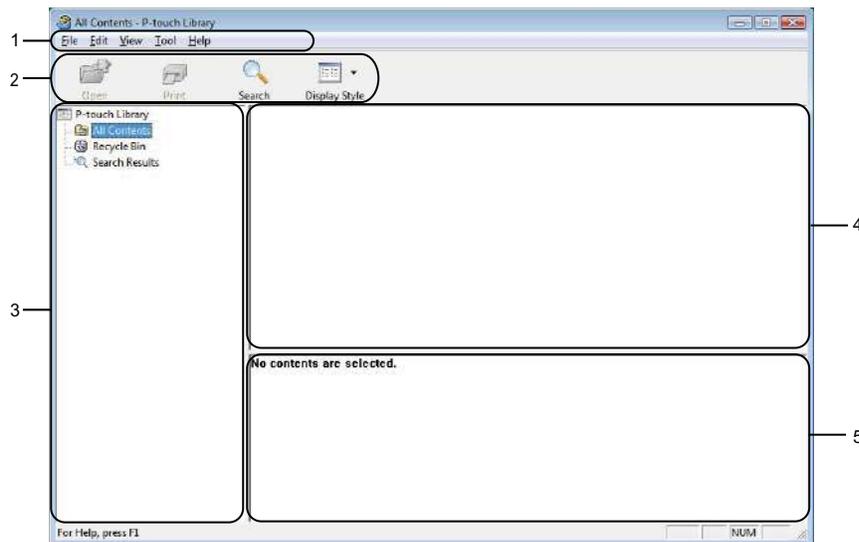

1 Menu Bar

Provides access to all available commands, which are grouped under each menu title ([File], [Edit], [View], [Tool], and [Help]) according to their functions.

2 Toolbar

Provides access to frequently used commands.

3 Folder List

Displays a list of folders. When you select a folder, the templates in the selected folder appear in the templates list.

4 Templates List

Displays a list of the templates in the selected folder.

5 Preview


Displays a preview of the templates selected in the templates list.

Explanations of the Toolbar Icons

Icon	Button name	Function
	Open	Opens the selected template.
	Print	Prints the selected template with the printer.
	Search	Allows you to search for templates registered to P-touch Library.
	Display Style	Changes the file display style.

Opening and Editing Templates


Select the template you want to open or edit, and then click **[Open]**.

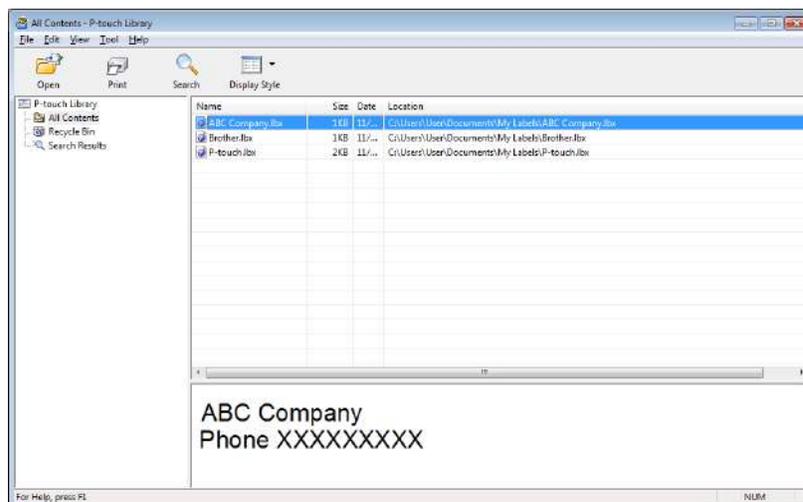

The program associated with the template starts so that you can edit the template.

Printing Templates

Select the template you want to print, and then click **[Print]**.

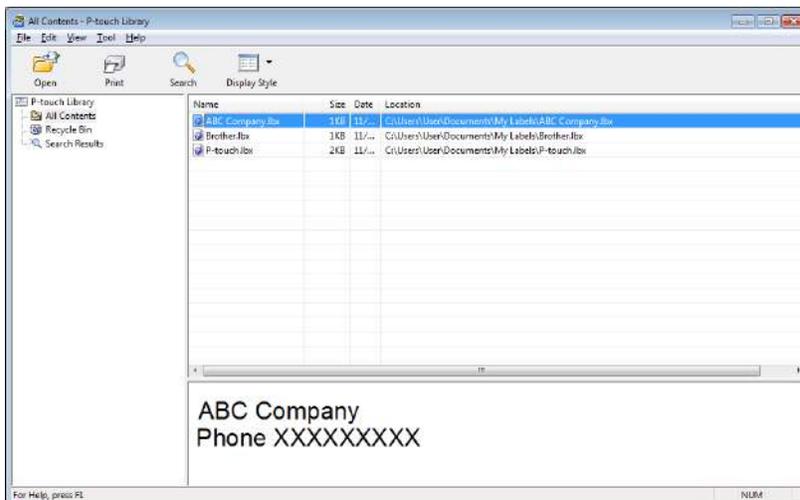


The connected printer prints the template.

Searching for Templates

You can search for templates registered to P-touch Library.

- 1 Click **[Search]**.
The **Search** dialog box appears.

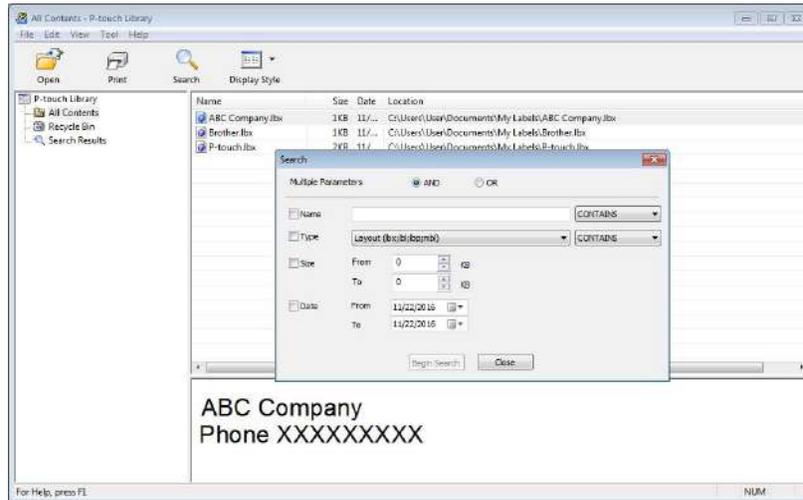

- 2 Specify the search criteria.
The following search criteria are available:

Settings	Details
Multiple Parameters	Determines how the program searches when multiple criteria are specified. If you select [AND] , the program searches for files that satisfy all of the criteria. If you select [OR] , the program searches for files that satisfy any of the criteria.
Name	Search for a template by specifying the file name.
Type	Search for a template by specifying the file type.
Size	Search for a template by specifying the file size.
Date	Search for a template by specifying the file date.

- 3 Click **[Begin Search]**.
The search begins.
The search result is displayed on the screen.

- 4 Close the **Search** dialog box.
To confirm the search results, click [**Search Results**] in the folder view.



Note

You can register templates to P-touch Library by dragging and dropping them into the [**All Contents**] folder or to the folder list. You can also configure P-touch Editor to register templates to P-touch Library automatically, using the following procedure:

- 1 From the P-touch Editor menu, select [**Tools**] - [**Options**].
- 2 In the **Options** dialog box, click [**Registration Settings**] in the [**General**] tab.
- 3 Select the timing for registering templates created with P-touch Editor, and then click [**OK**].

How to use P-touch Editor Lite (Windows[®] only)

With P-touch Editor Lite, you can quickly create various simple label layouts without installing any drivers or software.

P-touch Editor Lite is only supported when the printer is connected using a USB cable.


After the USB cable is connected, a dialog box appears on the computer screen.

- For Windows Vista[®], click  (P-touch Editor Lite).
- For Windows[®] 7 / Windows[®] 8 / Windows[®] 8.1 / Windows[®] 10, click "Open folder to view files" and then double-click .

P-touch Editor Lite starts.

* The printer must be set to P-touch Editor Lite mode. Press and hold the Editor Lite Button until the Editor Lite LED turns on.

Layout Window

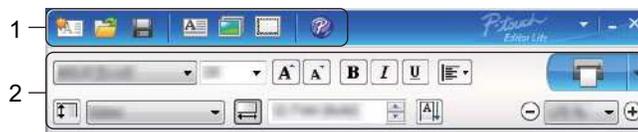



1 Command Toolbar

Icon	Function
	Displays the new label creation screen.
	Opens a saved file with P-touch Editor Lite.
	Saves the data to your computer, but not to the printer.
	Inserts a new text box (useful when creating labels containing both single and multiple lines of text).
	Inserts an image into your label. From file: Inserts an image stored on your computer. Screen capture: Inserts the selected area of the computer screen as a graphic. Symbol: Inserts one of your computer's built-in symbols.
	Inserts a frame.
	Exits P-touch Editor Lite and starts up P-touch Editor.
	Displays the menu. The menu includes all P-touch Editor Lite functions.

Icon	Function
	Minimises P-touch Editor Lite.
	Exits P-touch Editor Lite.

2 Property Toolbar

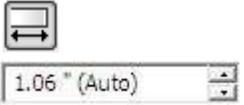Icon	Function
	Click  to change the font.
	Click  to specify the font size. You can adjust the font size up or down one level by clicking  or  .
	Specifies the font style:   Bold   Italic   Underline
	Specifies the alignment of text in a text box.
	Sets the width of the label. Click  to automatically detect the width of the inserted label.
	Sets the length of the label. Click  to automatically adjust the length of the label to accommodate the entered text.
	Sets/cancels the label direction to vertical.
	Click  to set the zoom factor for the Label View. You can also change the zoom factor by clicking  or  .
	Click  to print normally or  to print with options. Auto Cut: Each label is automatically cut after printing. Cut at end: Cuts labels after the last label is printed. Copies: Prints multiple copies of a label.

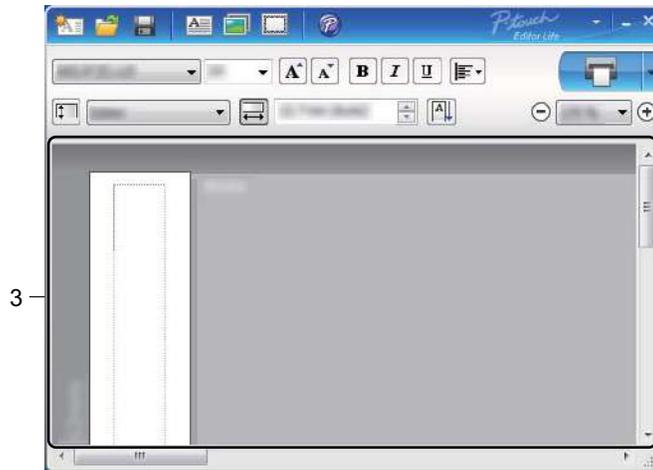

3 Label View

Display	Function
	<p>This label view is displayed when the software is started. The width of label currently set is displayed on the left of the label image. When "Auto" is shown on the right, the length of label is automatically adjusted to the length of text.</p>
	<p>To manually change the length and width of the label, move the pointer to the label area's border, and then drag it when the blue line appears.</p>
	<p>To adjust the size of the P-touch Editor Lite window, move the pointer over an edge of the window and drag it when the pointer changes to an arrow.</p>
	<p>Guidelines are sometimes displayed when moving objects. They are shown when the object is aligned at the left, right, top, or bottom edge of the Printable area, or in the centre. In the illustration on the left, the guidelines indicate that the object is centred at the top edge of the label.</p>
	<p>Inserted text boxes, images, and frames are treated as objects. Objects are surrounded by handles (indicated by eight blue points).</p>
	<p>Indicates that an object is selected.</p>
	<p>The pointer changes to an arrow when moved over a handle. Drag the handles to change the object's size.</p>
	<p>To move objects, drag them when the pointer changes to a crosshair. For text objects, the pointer only changes to a crosshair over the border of the object.</p>

Right-click in the layout view area to select and execute the following menu items.

Other Functions (right-click to view)

Menu	Do this
Undo Redo	Click Undo to undo the last operation. Click Redo to redo the last operation.
Cut Copy Paste	Select the text area (or object) that you want to cut or copy and select Cut or Copy . Click in the destination area and select Paste .
Margins	The function is not available for QL printers.
Insert	Click Insert . Select Text box to insert text into the label. Select From File to insert an image stored on your computer. Select Screen Capture to insert the selected area of the computer screen. Select Symbol to insert one of your computer's built-in symbols. Select Frame to insert one of P-touch Editor Lite's built-in frames.
Direction	Select the text object and click either Horizontal Text or Vertical Text to change the direction of the text.
Numbering	Select the number or letter within your text and click Numbering to insert an incremented number or letter on each label. Click  to the right of the Print button and click Print Options . Select the Numbering box and enter the number of labels for printing in the Count field. Click the Print button.
Change Image	Select the image and click Change Image to replace the current image with a different image.
Rotate	Rotate objects to 0° , 90° , 180° or 270° .
Order	Select one of the objects and click Order , then select Bring to Front , Send to Back , Bring Forward , or Send Backward to set the order of each object in the layer.
P-touch Editor...	Click P-touch Editor to temporarily use P-touch Editor. For continuous use of P-touch Editor, press and hold the Editor Lite Button until the Editor Lite LED turns off.
Options	Click Options . Select either millimetres (mm) or inches (in) to set the measurement unit setting. Select the P-touch Editor Lite language. Restart the application to apply the new selected "Language" . Select either Display New Value after Printing or Reset to Original Value after Printing to set the numbering option.
Brother Solutions Center	Click Brother Solutions Center to go to the website for assistance and information.
About...	Click About to learn about the P-touch Editor Lite version.
Exit	Click Exit to exit P-touch Editor Lite.

The software can be upgraded to the latest available version using the P-touch Update Software.



Note

- The actual software and the contents of this manual may differ.
- Do not turn off the power when transferring data or updating firmware.

Updating P-touch Editor



Important

(Windows[®] only) Before updating P-touch Editor, install the printer driver.

For Windows[®]



1 Start the P-touch Update Software.

■ For Windows Vista[®] / Windows[®] 7

Double-click the **[P-touch Update Software]** icon.



Note

The following method can also be used to start P-touch Update Software:

Click the Start button, and then select **[All Programs] - [Brother P-touch] - [P-touch Update Software]**.

■ For Windows[®] 8 / Windows[®] 8.1


Click **[P-touch Update Software]** on the **[Apps]** screen or double-click **[P-touch Update Software]** on the desktop.

■ For Windows[®] 10


From the Start button, click **[Brother P-touch] - [P-touch Update Software]**, or double-click **[P-touch Update Software]** on the desktop.



- 2 Click the **[Computer software update]** icon.

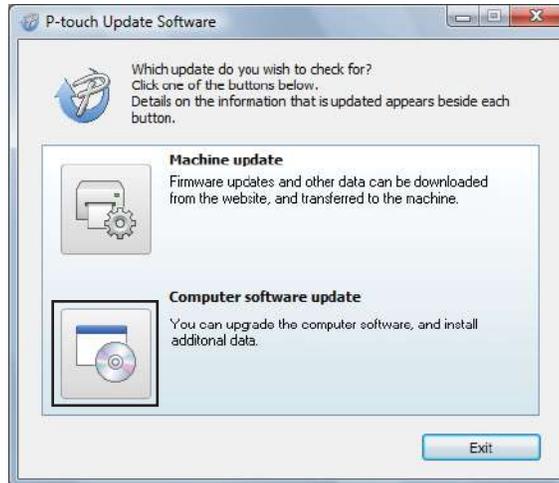

- 3 Select the **[Printer]** and **[Language]**, select the check boxes next to Cable Label Tool and P-touch Editor, and then click **[Install]**.

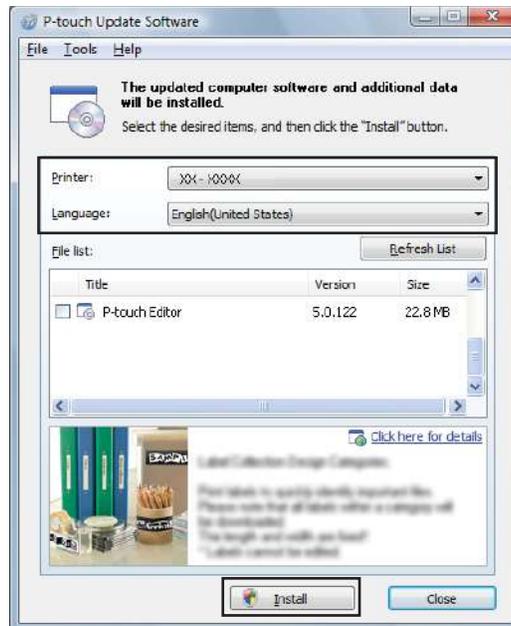

- 4 A message appears indicating that the installation has finished.

For Mac

- 1 Double-click the [**P-touch Update Software**] icon on the desktop.



Note

The following method can also be used to start P-touch Update Software:

Double-click [**Macintosh HD**] - [**Applications**] - [**P-touch Update Software**], and then double-click the [**P-touch Update Software**] application icon.



- 2 Click the [**Computer software update**] icon.



- 3 Select the [**Printer**] and [**Language**], select the check box next to P-touch Editor, and then click [**Install**].
- 4 A message appears indicating that the installation has finished.

Updating P-touch Editor Lite (Windows[®] only) and the Firmware

❗ Important

- Before updating the firmware you must install the printer driver.
- Do not turn off the power when transferring data or updating firmware.
- If another application is running, exit the application.

For Windows[®]

1 Turn on the printer and connect the USB cable.

2 Start the P-touch Update Software.

■ **For Windows Vista[®] / Windows[®] 7**

Double-click the **[P-touch Update Software]** icon.



Note

The following method can also be used to start P-touch Update Software:

Click the Start button, and then select **[All Programs] - [Brother P-touch] - [P-touch Update Software]**.

■ **For Windows[®] 8 / Windows[®] 8.1**

Click **[P-touch Update Software]** on the **[Apps]** screen or double-click **[P-touch Update Software]** on the desktop.

■ **For Windows[®] 10**


From the Start button, click **[Brother P-touch] - [P-touch Update Software]**, or double-click **[P-touch Update Software]** on the desktop.



- 3 Click the **[Machine update]** icon.




- 4 Select the **[Printer]**, make sure that **[The machine is connected correctly.]** message appears, and then click **[OK]**.

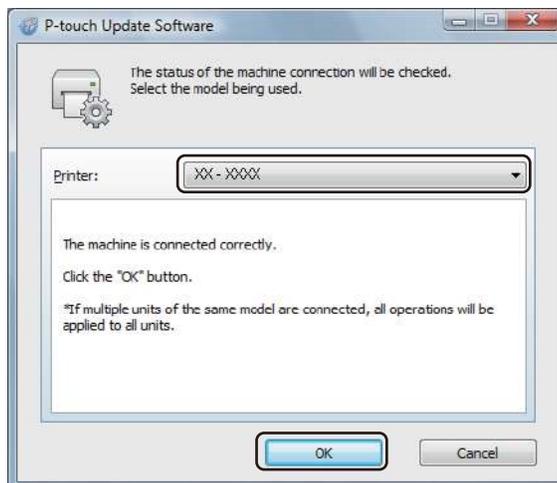

- 5 Select the **[Language]**, select the check box next to the firmware you want to update to, and then click **[Transfer]**.

! Important

Do not turn off the printer or disconnect the cable during data transfer.

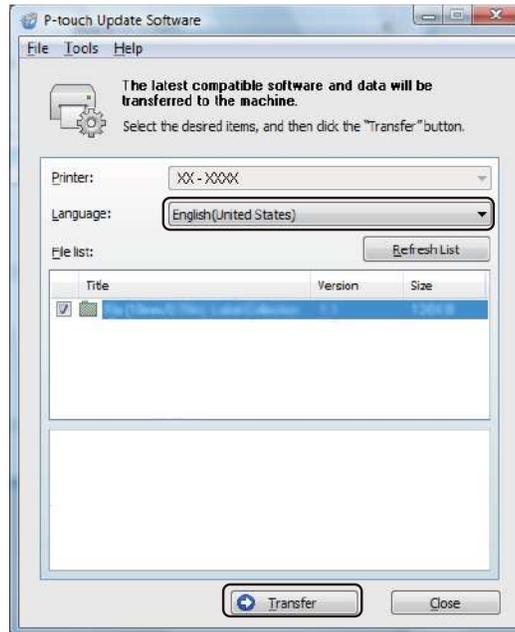

- 6 Check the content to be updated, and then click **[Start]** to begin the update. The firmware update begins.

! Important

Do not turn off the printer or disconnect the cable during the update process.

For Mac

- 1 Turn on the printer and connect the USB cable.
- 2 Double-click the **[P-touch Update Software]** icon on the desktop.

Note

The following method can also be used to start P-touch Update Software:

Double-click **[Macintosh HD]** - **[Applications]** - **[P-touch Update Software]**, and then double-click the **[P-touch Update Software]** application icon.



- 3 Click the **[Machine update]** icon.



- 4 Select the **[Printer]**, ensure that **[The machine is connected correctly.]** appears, and then click **[OK]**.
- 5 Select the **[Language]**, select the check box next to the firmware you want to update to, and then click **[Transfer]**.

! Important

Do not turn off the printer or disconnect the cable during data transfer.

- 6 Check the content you want to update, and then click **[Start]** to begin the update. The firmware update begins.

Note

Do not turn off the printer during the update process.



Appendix

Resetting the Label Printer	60
Maintenance	61
Troubleshooting	64
Product Specifications	72

Reset the internal memory of your printer to clear all saved label files, or if the printer is not operating correctly.

Resetting All Settings to the Factory Settings Using the Label Printer Buttons

To reset the printer, perform the following procedure.

- 1 Turn off the printer.
- 2 Press and hold the Power (⏻) Button, and then press the Cutter (✂) Button.
The Status LED lights in orange and the Editor Lite LED flashes in green.
- 3 Press the Cutter (✂) Button three times to reset all settings (including device settings) to the factory settings.
The Status LED lights in orange and the Editor Lite LED lights in green.

Resetting Data Using the Printer Setting Tool

You can also use the Printer Setting Tool from your computer to reset all printer settings to the factory settings.

For more information, see *Factory Reset* on page 18.

We recommend cleaning your printer on a regular basis to maintain its correct performance.

**Note**

Always disconnect the AC Power Cord before cleaning the printer.

Cleaning the Exterior of the Unit

Wipe any dust and marks from the main unit using a soft, dry cloth.

Use a cloth slightly damp with water on difficult to remove marks.

**Note**

Do not use paint thinner, benzene, alcohol or any other organic solvent.

These may deform or damage the case of your printer.

Cleaning the Print Head

The DK Roll (thermal recording paper type) used with the machine is designed to clean the print head automatically. When the DK Roll passes the print head during printing and label feeding, the print head is cleaned.

Cleaning the Roller

Clean the roller using the Cleaning Sheet (available separately).

The printer contains only one Cleaning Sheet.

**Note**


When cleaning the roller, be sure to use the Cleaning Sheet supplied exclusively for this printer.

If using other Cleaning Sheet, the surface of the roller may be damaged and may cause a malfunction.

- 1 Turn off the power to the printer.
- 2 Hold the printer by the front and firmly lift the DK Roll compartment cover to open it.



- 3 Remove the DK Roll.

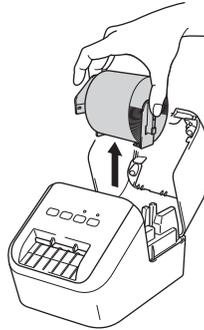


 **Note**

Be sure to remove the DK Roll before cleaning the roller. The roller cleaning function will not operate correctly if the DK Roll is not removed.

- 4 Remove Part (B) of the Cleaning Sheet. Insert edge (A) of the Cleaning Sheet into the printing units.

 **Note**

The printed side of the Cleaning Sheet should be facing upwards.

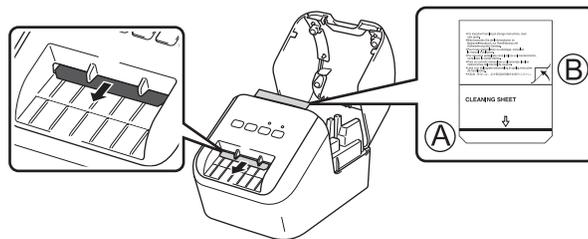

- 5 Close the DK Roll Compartment Cover and turn on the printer.
- 6 Press the Feed () Button for more than one second.
The Cleaning Sheet is ejected.
The adhesive face of the Cleaning Sheet removes any stains or dust on the roller.

 **Note**

- If the Cleaning Sheet is not ejected, press and hold the Feed () Button until the Cleaning Sheet is ejected.
- Dispose of the Cleaning Sheet after use.

Cleaning the Label Outlet

If a label causes the machine to jam due to adhesive residue attached to the label outlet, clean the label outlet with a cloth.

Use a slightly damp cloth on difficult to remove adhesive, if necessary.

12 Troubleshooting

Overview

This chapter explains how to resolve typical problems you may encounter when using the printer. If you have any problems with the printer, first make sure you have performed the following tasks correctly:

- Connect the printer to an AC power socket. For more information, see *Connecting the AC Power Cord* on page 6.
- Remove all protective packaging from the printer.
- Install and select the correct printer driver. For more information, see *Installing the Software and Printer Drivers to a Computer* on page 7.
- Connect the printer to a computer or mobile device. For more information, see *Connecting the Label Printer to a Computer* on page 7.
- Close the DK Roll Compartment Cover completely.
- Insert a DK Roll correctly. For more information, see *Loading the DK Roll* on page 4.

If you still have problems, read the troubleshooting tips in this chapter for help. If, after reading this chapter, you are unable to resolve your problem, visit the Brother support website at support.brother.com

Printing Problems

Problem	Solution
The printer does not print, or a printing error is received.	<ul style="list-style-type: none"> • Is the cable loose? Check that the cable is connected securely. • Is the DK Roll installed correctly? If not, remove the DK Roll and reinstall it. • Is there enough roll remaining? Check that there is enough roll remaining. • Is the DK Roll Compartment Cover open? Check that the DK Roll Compartment Cover is closed. • Has a print error or transmission error occurred? Turn off the printer and then turn it on again. If there is still a problem, contact your Brother dealer. • If the printer is connected via a USB hub, try connecting it directly to the computer. If not, try connecting it to another USB port. • Make sure the [Paper Type] (Windows) / [Print Media] (Mac) in P-touch Editor matches the installed media.
The Status LED is not lit.	<ul style="list-style-type: none"> • Is the AC Power Cord inserted correctly? Check that the AC Power Cord is inserted. If it is inserted correctly, try plugging it into another electrical socket.
The printed label contains streaks or poor quality characters, or the label is not fed correctly.	<ul style="list-style-type: none"> • Is the print head or roller dirty? While the print head generally remains clean under normal use, lint or dirt from the roller may become stuck on the printer head. If this occurs, clean the roller. For more information, see <i>Cleaning the Roller</i> on page 61.
A data transmission error appears on the computer.	<ul style="list-style-type: none"> • Is the printer in cooling mode (the Status LED is flashing in orange)? Wait until the Status LED stops flashing and then try printing again.
The label is not ejected correctly after printing.	<ul style="list-style-type: none"> • Check that the Label Output Slot is not blocked. • Check that the DK Roll is set correctly by removing the DK Roll and reinstalling it. • Ensure that the DK Roll Compartment Cover is closed correctly.
I want to cancel the current printing job.	<ul style="list-style-type: none"> • Make sure that the printer is On, and press Power (⏻) Button.
The print quality is poor.	<ul style="list-style-type: none"> • Is there dirt or lint on the roller preventing it from rolling freely? Clean the roller using the cleaning sheet available separately. For more information, see <i>Cleaning the Roller</i> on page 61.
After replacing the Roll while the Add-In feature was activated, the layout style was not updated.	<ul style="list-style-type: none"> • Close P-touch Editor to exit the Add-In, and then reactivate the Add-In.
The P-touch Add-In icon is not displayed in Microsoft® Word.	<ul style="list-style-type: none"> • Is Microsoft® Word started up from Microsoft® Outlook®? • Is Microsoft® Word chosen as the default editor for Microsoft® Outlook®? Due to program limitations, the Microsoft® Word Add-In does not work with the above settings. Quit Microsoft® Outlook®, and restart Microsoft® Word.

Problem	Solution
Cutter error.	<ul style="list-style-type: none"> If a cutter error occurs, keep the DK Roll Compartment Cover closed and press the Power (⏻) Button. The cutter moves back to the normal position and the printer turns off automatically. After the printer is Off, check the label outlet and remove any jammed labels. Contact Brother customer service.
I want to reset the printer.	<p>Press and hold the Cutter (✂) Button while holding the Power (⏻) Button when the printer is turned off. When the Editor Lite LED starts flashing and the Status LED lights in orange, press the Cutter (✂) Button three times while continuing to hold the Power (⏻) Button. The printer will be reset to factory settings.</p>

Problem	Solution
<p>Printed barcodes cannot be read.</p>	<ul style="list-style-type: none"> ■ Print labels so that barcodes are aligned with the print head as shown below: <div data-bbox="889 390 1208 552" style="text-align: center;"> </div> <ol style="list-style-type: none"> 1 Print head 2 Barcodes 3 Printing orientation <ul style="list-style-type: none"> ■ Try using another scanner. ■ We recommend printing the Barcode with Print Quality options set to [Give priority to print quality] (except for 2-colour printing). <p>For Windows Vista®</p> <p>To display the [Quality] options, open the printer properties by clicking the Start button - [Control Panel] - [Hardware and Sound] - [Printers], right-clicking the printer you want to set up, and then clicking [Printing Preferences].</p> <p>For Windows® 7</p> <p>To display the [Quality] options, open the printer properties by clicking the Start button - [Devices and Printers], right-clicking the printer you want to set up, and then clicking [Printing Preferences].</p> <p>For Windows® 8 / Windows® 8.1</p> <p>To display the [Quality] options, open the printer properties by clicking [Control Panel] in the [Apps] screen - [Hardware and Sound] - [Devices and Printers], right-clicking the printer you want to set up, and then clicking [Printing Preferences].</p> <p>For Windows® 10</p> <p>To display the [Quality] options, open the printer properties by clicking the Start button - [Settings] - [Devices] - [Printers & scanners] - [Devices and Printers], right-clicking the printer you want to set up, and then clicking [Printing Preferences].</p> <p>For Mac</p> <p>To change the Print Quality options, open the Print dialog box and choose [Basic] from the print options pop-up menu.</p>
<p>A white vertical line appears when printed in red.</p>	<ol style="list-style-type: none"> 1 Remove the DK Roll from the printer. 2 Close the DK Roll Compartment Cover completely. 3 Press and hold the Editor Lite Button for more than five seconds. Wait while the platen roller rotates. 4 When the platen roller stops rotating, load the DK Roll. <p>The roller will rotate for about 40 seconds.</p>

Problem	Solution
I want to feed the label.	Press the Feed (↑) Button for one second.

Version Information

Problem	Solution
I do not know the version number of the firmware for the printer.	<p>You can use the following procedure.</p> <ol style="list-style-type: none"> 1 Turn your printer on. 2 Press and hold the Cutter (✂) Button for several seconds to print the report. When you print this report, recommend a DK Roll with labels 29 mm or wider and a print length of 64 mm. DK Rolls for 2-colour printing cannot be used.
I want to confirm whether I am using the latest version of the software.	<p>Use the P-touch Update Software to confirm whether you have the latest version.</p> <p>For more information about the P-touch Update Software, see <i>How to Update P-touch Software</i> on page 52.</p>

LED Indicators

The indicators light and flash to indicate the printer status.

-  or  or  Indicator is lit in the colour shown
-  or  or  Indicator is flashing in the colour shown
-  Indicator can be off, lit or flashing in any colour
-  Indicator is off

Status LED	Editor Lite LED	Condition
		Power Off
		Power On
		Feeding mode
		Printing mode
		Forward/reverse roller rotation mode
		Cutting mode
		Cleaning mode
		
		Print preparation mode
		Cancelling job
		Receiving data from the computer
		Transferring data
		The DK Roll Compartment Cover is open. Close the DK Roll Compartment Cover correctly
		Resetting mode For more information, see <i>Resetting All Settings to the Factory Settings Using the Label Printer Buttons</i> on page 60.
		The Cutter (✂) Button is pressed three times in resetting mode
		System OFF mode
		The Cutter (✂) Button is pressed once or twice in resetting mode
		Cooling mode
		Data overwrite mode
		Boot mode

Status LED	Editor Lite LED	Condition
 (1 time for 2 seconds)		End of DK Roll
		Feed error
		The DK Roll Compartment Cover was opened while the printer was in use
		No media error
		Incorrect media error
		Communication command error
 (2 times for 2 seconds)		Cutter error
		System error

Troubleshooting

Problem	Solution
Received data in buffer	<p>Print data is saved in the buffer. If the printer has not received the complete data, printing will not start.</p> <p>Turn off the printer, and then turn it on again.</p>
Head is cooling down	<p>The thermal head is too hot.</p> <p>The printer stops and resumes printing only after the thermal head has cooled down. The head may become too hot if you are printing a large number of labels.</p> <p>When the thermal head becomes too hot, it may produce imaging outside the print area. To avoid or delay overheating, make sure the printer has adequate ventilation and is not located in an enclosed space.</p> <p>If the printer must cool down because it overheated due to the type of DK Roll you are using or the contents of the label, printing may take longer than usual.</p> <p> Note _____</p> <p>This condition may occur more often when the printer is used at high altitude (more than 3048 m) due to a lower air density available to cool the printer.</p>
The printer is in boot mode	<p>To resolve the issue, contact your Brother dealer or Brother customer service for assistance.</p>
DK Roll errors	<p>Check the following:</p> <ul style="list-style-type: none"> • You are using the correct DK Roll. • There are enough labels remaining. • The DK Roll is installed correctly.
I want to reset an error	<p>To reset an error:</p> <ol style="list-style-type: none"> 1 Open the DK Roll Compartment Cover, and then close it. 2 If the error is not reset, press the Cutter (✂) Button. 3 If the error is not reset, turn off the printer, and then turn it on again. 4 If the error is not reset, contact Brother customer service.

Label Printer Specifications

Size		
Dimensions	Approximately 125.3 (W) × 213 (D) × 142 (H) mm	
Weight	Approximately 1.15 kg (without DK Rolls)	
LED Indicators		
Editor Lite LED (green), Status LED (green, orange, red)		
Buttons		
Power Button, Feed Button, Cutter Button, Editor Lite Button		
Printing		
Method	Direct thermal printing via thermal head	
Print head	300 dpi / 720 dots	
Print resolution	Standard: 300 dpi × 300 dpi High resolution mode: 300 dpi × 600 dpi	
Printing speed	Black print only: Max. 148mm/sec 2 colour (black and red on white DK Roll) Print: Max 24 mm/sec Actual print speed varies depending on the conditions.	
Maximum printing width	58 mm	
Interface		
USB port	Version 2.0 Full Speed (Peripheral)	
Power Supply		
Power Supply	220-240 VAC 50/60 Hz 1.1 A	
Auto Power-off	Off/10/20/30/40/50/60 Minutes (To change the Auto Power-off setting, see <i>Changing the Label Printer Settings</i> on page 13.)	
Other		
Cutter	Durable automatic cutter	
Environment	Operating temperature/humidity	When running: between 10°C and 35°C / between 20% and 80% The maximum wet bulb temperature: 27°C
Compatible operating systems		
See support.brother.com for a complete and updated list of software.		

brother