

Shark® StainStriker™

PX200
SERIES




IMPORTANT SAFETY INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of fire, electric shock, injury, or property damage:

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- DO NOT** modify the plug provided with the appliance. If the grounded plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified electrician.
- DO NOT** force into outlet or try to modify it.
- DO NOT** pull, close door, or wrap around sharp edges or corners on the cord. To unplug, grasp the plug, not the cord. Keep cord away from heated surfaces.
- To reduce the risk of fire or electric shock due to internal component damage, use **ONLY** Shark CarpetXpert/StainStriker formula in the correct tanks, as intended for use with this appliance. See Instructions below.
- The areas around where you are cleaning may become wet, use care to avoid slipping and falling.
- Use care when removing and reattaching the hand tool to the Spot Cleaner to avoid accidental activation of the cleaning solution.
- DO NOT** spray solution on your skin or in your eyes.
- DO NOT** fill solution tanks while installed on the appliance. Remove before filling.
- DO NOT** operate if there is any wetting of the exterior surfaces of the appliance. If the appliance is wet, dry with a cloth before use.
- To reduce the risk of shock and unintended operation, turn off and unplug Spot Cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
- Before each use, carefully inspect each part for damage or wear. If a part is damaged or worn out, immediately discontinue use. **DO NOT** use if any part is damaged or if Spot Cleaner is not working as it should, has been dropped, left outdoors, or dropped into water.
- DO NOT** immerse or spray water on the body of the Spot Cleaner. To clean the surface, wipe with a dry cloth.
- DO NOT** allow to be used by children or as a toy. Close supervision is necessary when used near children.
- DO NOT** handle plug or Spot Cleaner with wet hands.
- DO NOT** use without the dirty water tank, clean solution tank, or filter in place.
- Use only identical replacement parts. Only use Shark® branded filters and accessories.
- If plugging unit into extension cord, ensure cord is no more than 50' to prevent damage to the motor.
- DO NOT** place Spot Cleaner on uneven surfaces.
- DO NOT** use to pick up:
 - Large objects
 - Hard or sharp objects (glass, nails, screws, or coins)
 - Large quantities of dust (e.g., drywall dust).
 - Smoking or burning objects (hot coals, cigarette butts, or matches)
 - Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
 - Toxic materials (chlorine bleach, ammonia, or drain cleaner)

grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding attachment plug. This appliance is for use on a nominal 120V circuit. Make sure that the appliance is connected to an outlet with the same configuration as the plug that is properly installed and grounded in accordance with all local codes and ordinances. No adapter should be used with this appliance.

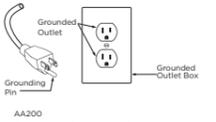

21. DO NOT use the following areas:


- Poorly lit areas
 - Outdoor areas
 - Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
22. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
23. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. **GROUNDING INSTRUCTIONS:** This appliance must be

26. Do not store unit where temperatures reach freezing levels to avoid damaging internal parts.
27. First aid keep out reach of children. Causes skin and serious eye irritation. If in eyes, rinse continuously with water for minutes. Remove contact lenses if present and easy to do so. Continue rinsing. If on skin, wash with soap and water. If skin and eye irritation persists, seek medical attention.
28. Please recycle container. Dispose of contents/container with licensed waste disposal site in accordance with the requirements of the local waste disposal authority. Do not dispose in drains or watercourses in concentrate form.

SAVE THESE INSTRUCTIONS. READ ALL INSTRUCTIONS BEFORE USING THIS SPOT CLEANER.

PARTS

- | | | |
|----------------------------|---------------------------------------|------------------------|
| A CarpetXpert Tank | F Hose-Cleaning Tool | J Spray Trigger |
| B Dirty Water Tank | G Reversible Bristles | K Power Button |
| C StainStriker Tank | H 6 oz. Deep Clean Pro Formula | L Detach Button |
| D Crevice Tool | I 12 oz. OXY Multiplier | M 7" Hand Tool |
| E 3.5" Hand Tool | | N Pet Mess Tool |

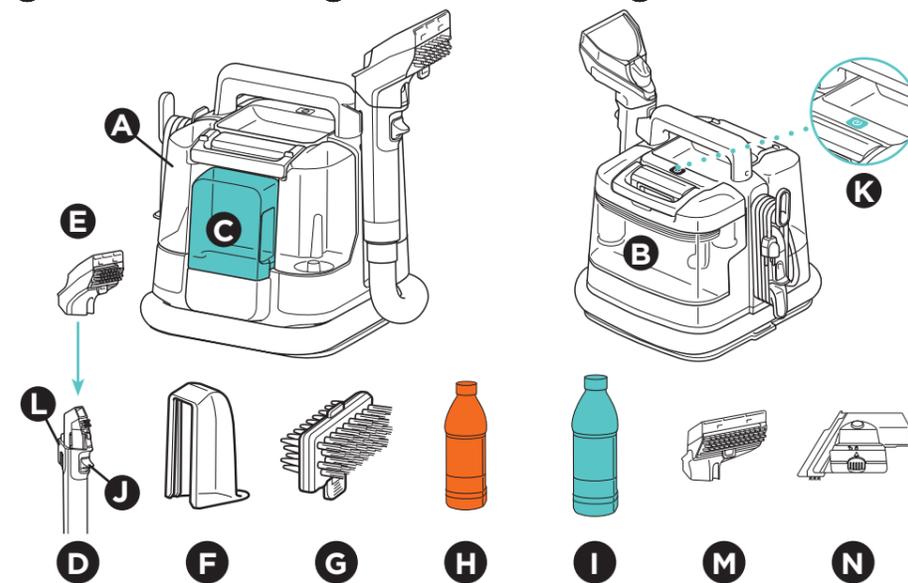

Crevice Tool - Best for removing stains in tight spaces and spraying directly on the stain.

3.5" Hand Tool - Excellent for cleaning small stain areas on carpet and upholstery.


7" Hand Tool - Great for cleaning larger stain areas.

Pet Mess Tool - Collects pet messes and keeps them out of the interior of the unit.


NOTE: Not all accessories come with all units. Tools may vary by model. For additional accessories available, please visit sharkaccessories.com

GETTING STARTED WITH YOUR SPOT CLEANER


IMPORTANT: Vacuum with traditional vacuum cleaner first before using Spot Cleaner.

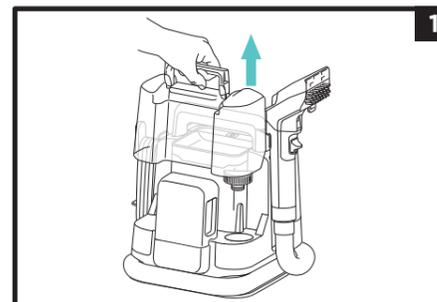


1. Lift CarpetXpert Tank by the handle to detach it, then remove the cap.

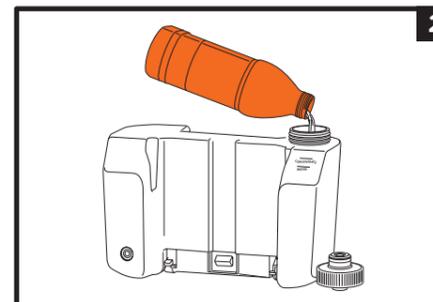


2. Add water to the CarpetXpert Tank up to the Water fill line. Then add Shark Deep Clean Pro Formula to the Concentrate fill line. Do not use water hotter than 140°F (60°C).

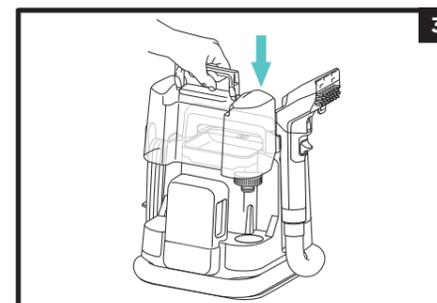


3. Reattach the cap, then reinstall the tank until it clicks into place.

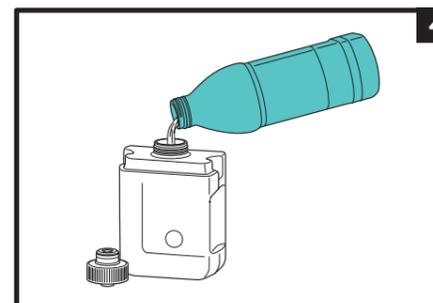


4. Lift StainStriker Tank by its sides to remove it, and fill with Shark OXY Multiplier. Replace the cap and tighten it.

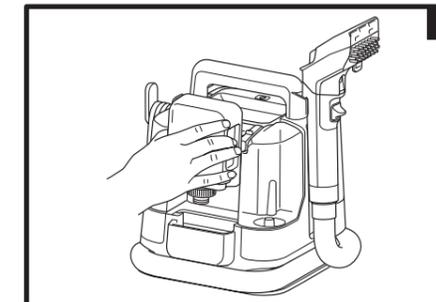


5. Reinstall the StainStriker tank until it clicks into place.

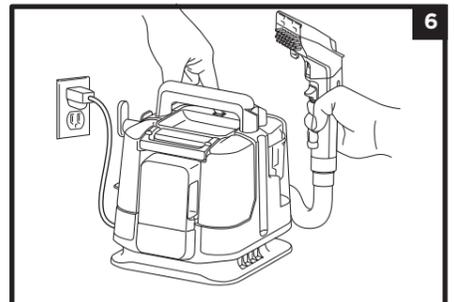

6. Attach hand tool of your choice to the crevice tool. Plug the power cord into an electrical outlet and unwrap the hose. Turn ON unit to begin cleaning. Combining both formulas will give you the best stain cleaning results.

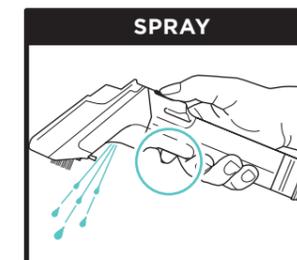

For Wet Stains, follow the Stain Guide located on the hand tool. Turn ON using the power button and vacuum up the liquid mess. Spray the stain area. Scrub stain with the bristles, then tilt hand tool forward and drag across stain area to extract liquid. Repeat if needed. To avoid longer dry times, do not over spray.

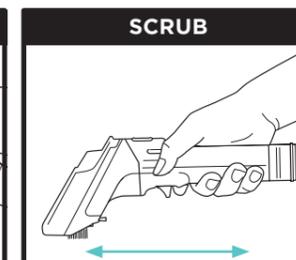

For Dry Stains, follow the Stain Guide located on the hand tool. Turn ON using the power button. Scrub stain with bristles, extract liquid and then spray the stain area. Scrub stain again, then tilt hand tool forward and drag across stain area to extract liquid. Repeat if needed. To avoid longer dry times, do not over spray.




Tips


- For cleaning softer fabrics and easy ability to clean hair and debris from bristles, use the rubber side of the Reversible Bristles.
- To rinse carpet or upholstery after cleaning, remove or empty the StainStriker tank and fill the CarpetXpert tank with water **ONLY** before spraying.

Tip: For smaller stains, use the 3.5" Hand Tool Attachment. For larger areas, use the 7" Attachment.


MAINTENANCE

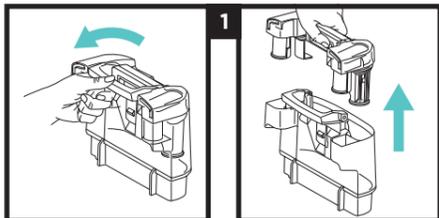


1. When the Dirty Water Tank is full, there will be a change in sound as the float valve closes. Switch off the unit and detach the tank, making sure to keep it upright to prevent spills. Pull the handle back, then lift off the lid. Pour out the contents into a sink or toilet.

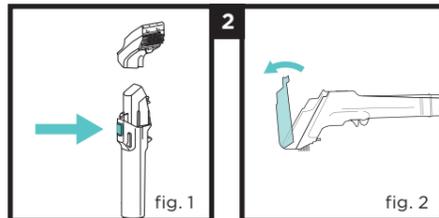


2. Remove the hand tool from the hose by pressing the Detach Button (fig. 1). To clean the airpath in the tool, open the cover (fig. 2). Aim the hand tool into a sink or toilet and press the spray trigger to release remaining pressure.

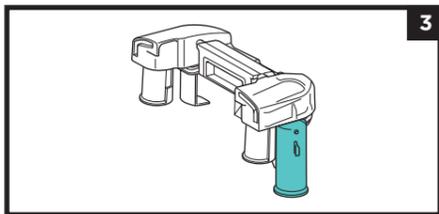

3. Clean the float valve by rinsing with water under a tap. Make sure it can move freely.

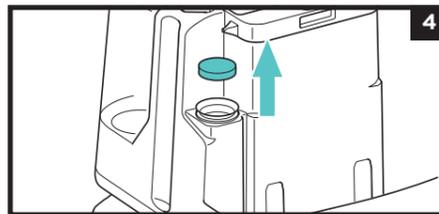

4. Remove the Dirty Water Tank. Clear off any debris from the foam filter by rinsing it under a faucet. Allow the filter to air-dry completely, then reinstall it.

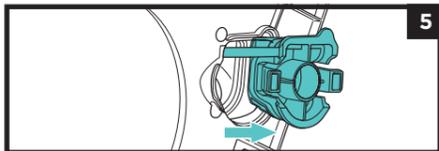


5. To clear any clogged debris at the end of the hose, open the hose clog door on the bottom of the unit. Clear all debris, then close the door.

NOTE: Clean unit after every use to avoid odors, bacteria, and mold.

CLEANING THE HOSE




1. Make the sure the unit is turned off and remove the CarpetXpert Tank. Fill tank with water up to the Water fill line. Tip: Add Deep Clean Pro to eliminate odor.

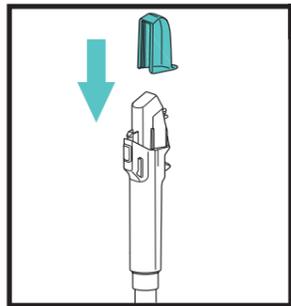


2. Securely attach the Hose-Cleaning Tool to the Crevice Tool and turn ON power. Pull the trigger and cleaning solution will be sucked into the hose to clean the interior.

STORAGE

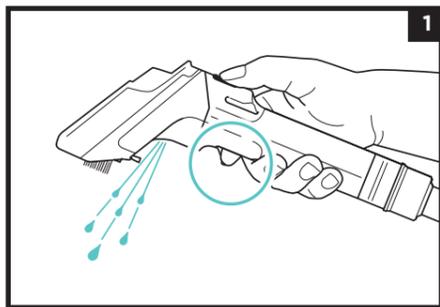


1. Before storing, follow Maintenance and Cleaning Instructions above. Be sure to release all pressure from the hand tool by placing it over a sink or toilet and pressing the spray trigger until all liquid has been released. Lay out all attachments to dry.

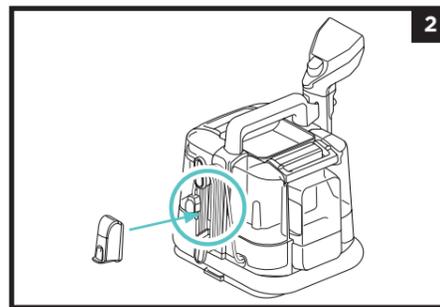


2. Once dry, reattach all tools. Wrap up the power cord, then store the hose-cleaning tool on the unit. Wrap the hose around the base of the unit and store the hand tool in its holder.


PET MESS TOOL

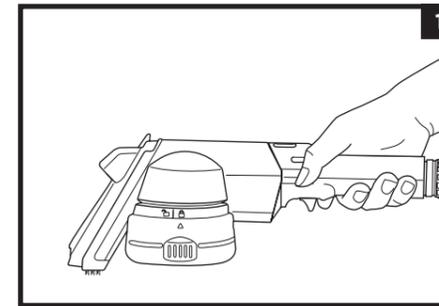

1. The Pet Mess Tool is designed to tackle pet messes while keeping debris and liquid out of the interior of the Spot Cleaner (Pet Mess Tool not included with some units. To order tools, visit sharkaccessories.com. To use the Pet Mess Tool, attach it to the Crevice Tool, then spray, scrub gently to prevent squashing in cup, and extract pet stains and messes. Keep the cup on the Pet Mess Tool upright to avoid spillage.

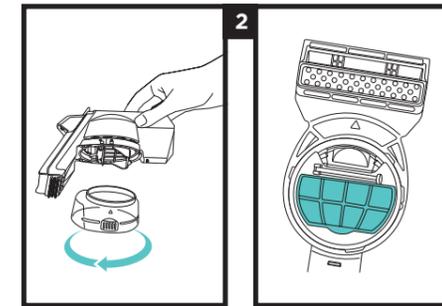

2. Empty the cup after every use or when debris in the cup reaches the MAX fill line. To empty, first turn off power, then rotate the cup clockwise and lift it off the tool. Empty the cup into sink or trash. Lift the mesh filter, remove left side first, then pull away to clean.

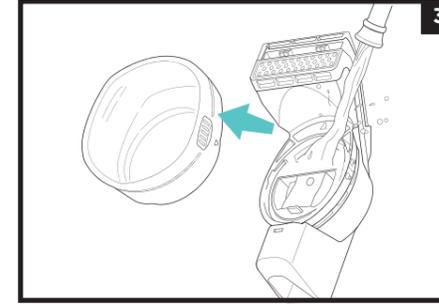

3. Be sure to rinse the Pet Mess Tool, cover, rubber bristles mesh filter, and cup with soap and water. Allow all parts to air-dry completely before reassembling. Make sure the filter clicks into place and to rotate the cup to the locked position before use.

Note: Pet Mess Tool MAX fill line holds 6oz, if overfilled, liquid mess will enter hose and into Spot Cleaner. Recommend to use Hose Cleaning Tool to eliminate odor.

Note: The Pet Mess Tool is not intended to clean pet hair.

Note: If your unit did not come with a Pet Mess Tool, use the 3.5" hand tool with the rubber bristles and follow Stain Guide.

TROUBLESHOOTING

Problem	Solution
Inconsistent spray or no spray	Ensure there is cleaning formula in the CarpetXpert tank. Make sure the CarpetXpert tank is installed correctly. Make sure the unit is plugged in and the power is on.
Low suction or no suction	Make sure the dirty water tank is not overfilled. Check the clog access door and clear any debris trapped inside at the end of the hose. If a cleaning tool is attached, make sure it is connected correctly. Remove any debris from the cleaning attachments. Make sure the dirty water tank is installed correctly.
Unit not turning on	Make sure the unit is plugged in completely. Try a different outlet. Make sure the On/Off switch is turned on.
Liquid leaking from unit	The dirty water tank may be overfilled. Make sure the dirty water tank and the formula tank are both installed correctly. Make sure the float valve in the dirty water tank is not stuck. Make sure the unit is on a stable, flat surface. Make sure the hose clog door is closed completely underneath the unit.
Solution tank leaking	Make sure the cap on the CarpetXpert tank is tightened fully. Make sure the CarpetXpert tank is installed correctly and that the valve is in the tank.
Leaking from hand tool	Ensure inside of Hand Tool or Pet Mess Tool is thoroughly clean.
Tanks not dispensing liquid	Ensure CarpetXpert tank and StainStriker tank are both installed correctly. Note: Tanks dispense at different rates. CarpetXpert tank will run out of solution before the StainStriker Tank.

THREE-YEAR LIMITED WARRANTY

The Three (3) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of three (3) years from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

- The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to three (3) years from the original purchase date.
- In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

- Normal wear and tear of wearable parts which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at sharkaccessories.com.
- Any unit that has been tampered with or used for commercial purposes.
- Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., not cleaning the filters or not removing debris from the hand tool or hose), or damage due to mishandling in transit.
- Consequential and incidental damages.
- Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
- Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit sharkclean.com/support for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-800-798-7398** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at registeryourshark.com and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$25.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call **1-800-798-7398** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at registeryourshark.com and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

CLEANING FORMULAS



Deep Clean Pro Formula

The best deep carpet cleaning formula for removing dirt & grime.



OXY Multiplier

The best tough stain-eliminating formula for those stubborn stains and odors.

TECHNICAL SPECIFICATIONS

PX200 Series: 120V, 60Hz, 3.3A

RECORD THIS INFORMATION

Model Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

© 2023 SharkNinja Operating LLC.
Needham, MA 02494/Ville St. Laurent, Québec H4S 1A7
1-800-798-7398
sharkclean.com

SHARK is a registered trademark of SharkNinja Operating LLC. STAINSTRIKER is a trademark of SharkNinja Operating LLC. This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

Illustrations may differ from actual product.



READ OWNER'S MANUAL

PX200Series_IB_MP_Mv20