 


Shark®

StainStriker™

PX200
SERIES

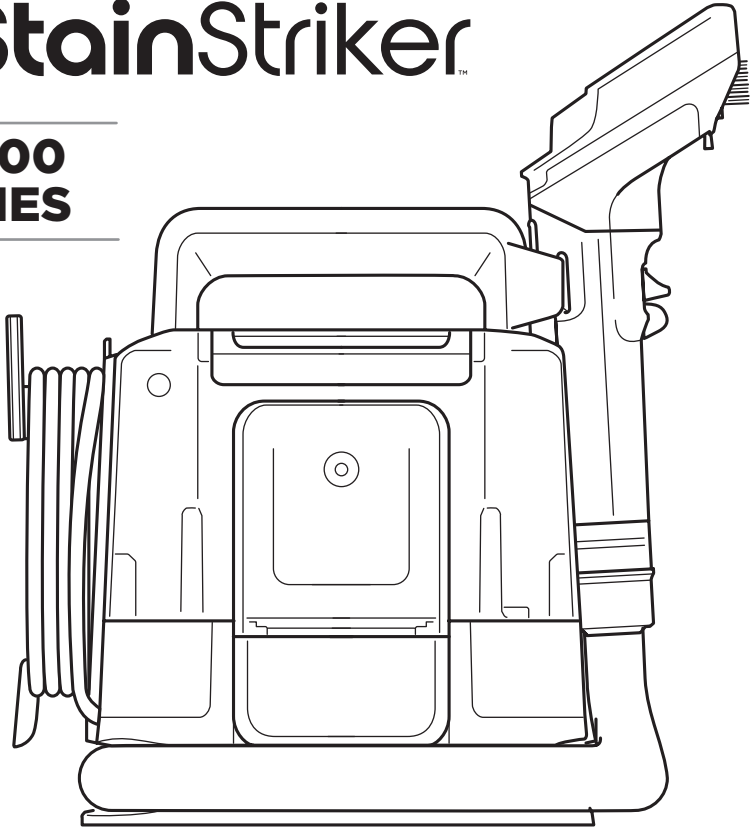

IMPORTANT SAFETY INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

 
⚠ WARNING

To reduce the risk of fire, electric shock, injury, or property damage:

1. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
2. **DO NOT** modify the plug provided with the appliance. If the grounded plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified electrician.
3. **DO NOT** force into outlet or try to modify it.
4. **DO NOT** pull, close door, or wrap around sharp edges or corners on the cord. To unplug, grasp the plug, not the cord. Keep cord away from heated surfaces.
5. To reduce the risk of fire or electric shock due to internal component damage, use **ONLY** Shark CarpetXpert/StainStriker formula in the correct tanks, as intended for use with this appliance. See Instructions below.
6. The areas around where you are cleaning may become wet, use care to avoid slipping and falling.
7. Use care when removing and reattaching the hand tool to the Spot Cleaner to avoid accidental activation of the cleaning solution.
8. **DO NOT** spray solution on your skin or in your eyes.
9. **DO NOT** fill solution tanks while installed on the appliance. Remove before filling.
10. **DO NOT** operate if there is any wetting of the exterior surfaces of the appliance. If the appliance is wet, dry with a cloth before use.
11. To reduce the risk of shock and unintended operation, turn off and unplug Spot Cleaner before any adjustment, cleaning, maintenance, or troubleshooting.
12. Before each use, carefully inspect each part for damage or wear. If a part is damaged or worn out, immediately discontinue use. **DO NOT** use if any part is damaged or if Spot Cleaner is not working as it should, has been dropped, left outdoors, or dropped into water.
13. **DO NOT** immerse or spray water on the body of the Spot Cleaner. To clean the surface, wipe with a dry cloth.
14. **DO NOT** allow to be used by children or as a toy. Close supervision is necessary when used near children.
15. **DO NOT** handle plug or Spot Cleaner with wet hands.
16. **DO NOT** use without the dirty water tank, clean solution tank, or filter in place.
17. Use only identical replacement parts. Only use Shark® branded filters and accessories.
18. If plugging unit into extension cord, ensure cord is no more than 50' to prevent damage to the motor.

19. **DO NOT** place Spot Cleaner on uneven surfaces.
20. **DO NOT** use to pick up:
 - a) Large objects
 - b) Hard or sharp objects (glass, nails, screws, or coins)
 - c) Large quantities of dust (e.g., drywall dust).
 - d) Smoking or burning objects (hot coals, cigarette butts, or matches)
 - e) Flammable or combustible materials (lighter fluid, gasoline, or kerosene)
 - f) Toxic materials (chlorine bleach, ammonia, or drain cleaner)
21. **DO NOT** use the following areas:
 - a) Poorly lit areas
 - b) Outdoor areas
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust).
22. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
23. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
24. Use extra care when cleaning on stairs.
25. **GROUNDING INSTRUCTIONS:** This appliance must be

grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance's cord has an equipment-grounding conductor and a grounding attachment plug. This appliance is for use on a nominal 120V circuit. Make sure that the appliance is connected to an outlet with the same configuration as the plug that is properly installed and grounded in accordance with all local codes and ordinances. No adapter should be used with this appliance.

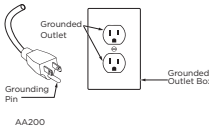


26. Do not store unit where temperatures reach freezing levels to avoid damaging internal parts.
27. First aid keep out reach of children. Causes skin and serious eye irritation. If in eyes, rinse continuously with water for minutes. Remove contact lenses if present and easy to do so. Continue rinsing. If on skin, wash with soap and water. If skin and eye irritation persists, seek medical attention.
28. Please recycle container. Dispose of contents/container with licensed waste disposal site in accordance with the requirements of the local waste disposal authority. Do not dispose in drains or watercourses in concentrate form.

SAVE THESE INSTRUCTIONS. READ ALL INSTRUCTIONS BEFORE USING THIS SPOT CLEANER.

PARTS

- | | | |
|----------------------------|---------------------------------------|------------------------|
| A CarpetXpert Tank | F Hose-Cleaning Tool | J Spray Trigger |
| B Dirty Water Tank | G Reversible Bristles | K Power Button |
| C StainStriker Tank | H 6 oz. Deep Clean Pro Formula | L Detach Button |
| D Crevice Tool | I 12 oz. OXY Multiplier | M 7" Hand Tool |
| E 3.5" Hand Tool | | N Pet Mess Tool |

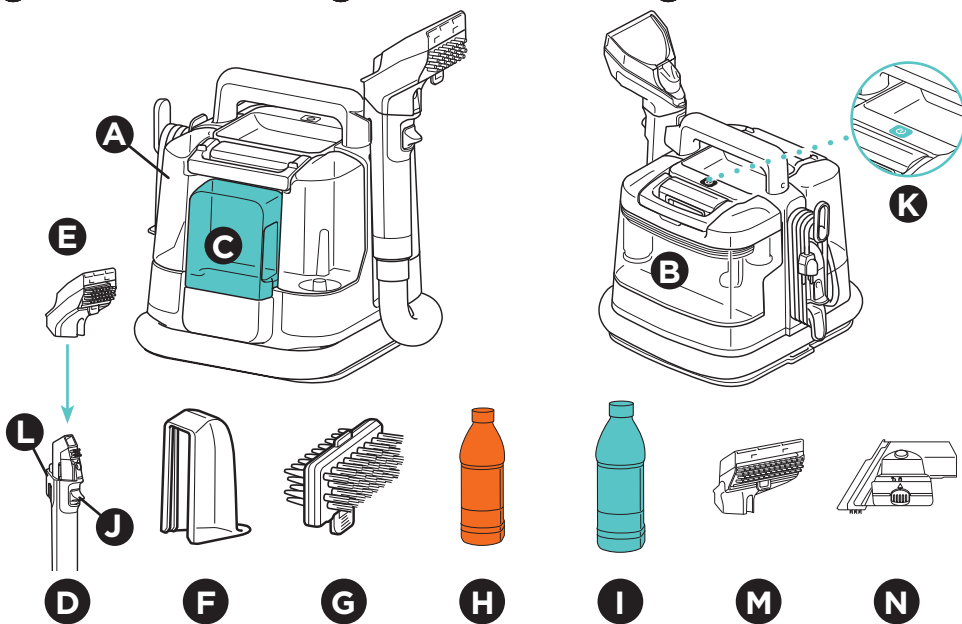 



Crevice Tool - Best for removing stains in tight spaces and spraying directly on the stain.
3.5" Hand Tool - Excellent for cleaning small stain areas on carpet and upholstery.
7" Hand Tool - Great for cleaning larger stain areas.
Pet Mess Tool - Collects pet messes and keeps them out of the interior of the unit.
NOTE: Not all accessories come with all units. Tools may vary by model. For additional accessories available, please visit sharkaccessories.com

GETTING STARTED WITH YOUR SPOT CLEANER

IMPORTANT: Vacuum with traditional vacuum cleaner first before using Spot Cleaner.

1. Lift CarpetXpert Tank by the handle to detach it, then remove the cap.
2. Add water to the CarpetXpert Tank up to the Water fill line. Then add Shark Deep Clean Pro Formula to the Concentrate fill line. Do not use water hotter than 140°F (60°C).
3. Reattach the cap, then reinstall the tank until it clicks into place.
4. Lift StainStriker Tank by its sides to remove it, and fill with Shark OXY Multiplier. Replace the cap and tighten it.

  Tip: For smaller stains, use the 3.5" Hand Tool Attachment. For larger areas, use the 7" Attachment.

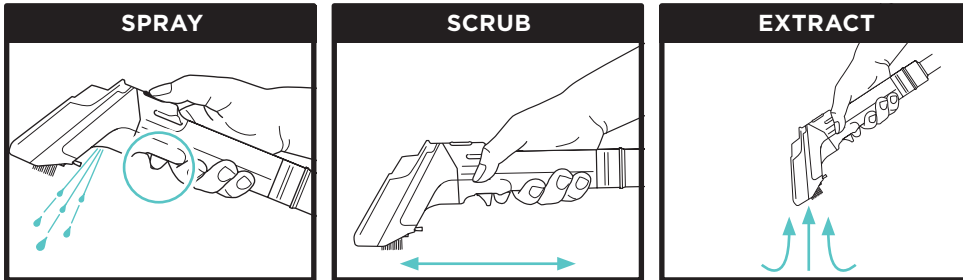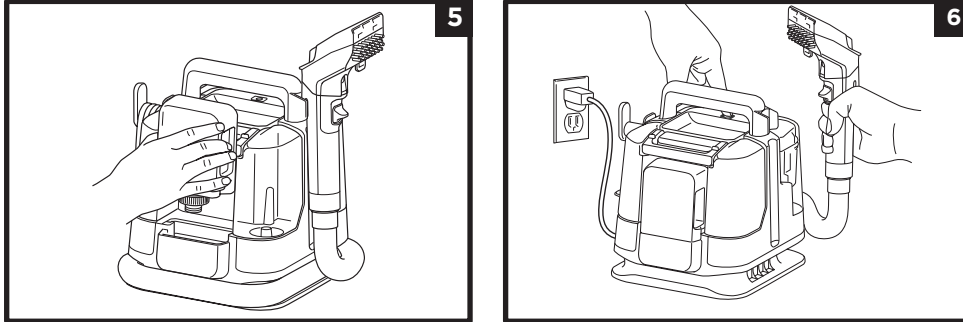

For Wet Stains, follow the Stain Guide located on the hand tool. Turn ON using the power button and vacuum up the liquid mess. Spray the stain area. Scrub stain with the bristles, then tilt hand tool forward and drag across stain area to extract liquid. Repeat if needed. To avoid longer dry times, do not over spray.

For Dry Stains, follow the Stain Guide located on the hand tool. Turn ON using the power button. Scrub stain with bristles, extract liquid and then spray the stain area. Scrub stain again, then tilt hand tool forward and drag across stain area to extract liquid. Repeat if needed. To avoid longer dry times, do not over spray.

Tips

1. For cleaning softer fabrics and easy ability to clean hair and debris from bristles, use the rubber side of the Reversible Bristles.
2. To rinse carpet or upholstery after cleaning, remove or empty the StainStriker tank and fill the CarpetXpert tank with water **ONLY** before spraying.

