

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## FOR HOUSEHOLD USE ONLY

**READ ALL INSTRUCTIONS BEFORE USING—SAVE THESE INSTRUCTIONS**

### **WARNINGS: KEEP AWAY FROM WATER**

#### **DANGER—**

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

#### **⚠️WARNING**

To reduce the risk of death by electric shock:

1. Always unplug the unit immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug the unit immediately. Do not reach into the water.

#### **⚠️WARNING**

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
5. Keep the cord away from heated surfaces.
6. Do not wrap the cord around the appliance.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

8. Never use while sleeping.
9. Never drop or insert any object into any opening.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use an extension cord with this appliance.
12. Do not direct hot air toward eyes or other heat-sensitive areas.
13. Attachments may be hot during use. Allow them to cool before handling.
14. Do not place appliance on any surface while it is operating.
15. While using the appliance, keep your hair away from the air inlets.
16. Do not operate with a voltage converter.
17. Only use the appliance with the voltage, frequency and power shown on the rating label on the product.
18. Do not use this appliance on hair extensions or wigs unless recommended by the hair extension or wig manufacturer.
19. If hair styling product is being used in conjunction with this appliance please read and follow all of the hair styling product safety warnings and instructions before use.

## SAVE THESE INSTRUCTIONS

For accessories and replacement parts, visit [sharkclean.com/accessories](https://sharkclean.com/accessories)



SCAN QR CODE FOR FULL INSTRUCTIONS, WARRANTY INFORMATION, AND HOW-TOS

© 2025 Shark Ninja Operating LLC. SHARK GLOSSI is a trademark of SharkNinja Operating LLC.  
HT300\_Series\_Warning\_Insert\_REV\_Mv2

## OPERATING INSTRUCTIONS

1. Turn the styler on and off by toggling the 3-position switch. Wet Mode for wet hair drying and styling is at the top of the toggle and Dry Mode for dry hair styling is in the middle of the toggle.
2. When in Wet Mode, the LED indicator light is blue. When in Dry Mode, the LED indicator light will flash yellow while the plates are heating up and will turn green when the styler is hot and ready to use.
3. Adjust the airflow. Pressing the button allows you to choose a low, medium, or high airflow.
4. Adjust the temperature. Pressing the button allows you to choose no heat, low, medium, or high temperature.

### Ceramic Plate Temperatures



<b>WET MODE</b>	<b>High</b> 120°C (248°F)	<b>Med</b> 110°C (230°F)	<b>Low</b> 100°C (212°F)
<b>DRY MODE</b>	<b>High</b> 220°C (428°F)	<b>Med</b> 200°C (392°F)	<b>Low</b> 180°C (356°F)

5. Hold the Styler Tip for better control while styling.
6. To remove the filter cover, slide it off the bottom of the unit. To attach the filter cover, slide it back on to the bottom of the unit until it clicks in place.
7. Press the ALCI button to reset the styler. See Troubleshooting & Error Codes for more information.
8. Rating label location.

For further operating instructions, scan the QR code on the cover of this booklet.

### Storage, Cord Safety, and Maintenance/Cleaning:

- Ensure the cord is not knotted, twisted or wrapped around any nearby objects when in use.
- Store unit in a dry location away from water and other heat sources. To help prevent bristle damage, store the unit so the bristles are not touching any surfaces. Ensure the heated ceramic plates have completely cooled before storing the unit.
- Clean the filter at the bottom of the unit monthly. To clean the filter, make sure the unit is off and unplugged, then use a new toothbrush to brush off any dust or debris from the filter.
- To help maintain performance, remove any hair from the brush after every use.
- Clean the heated ceramic plates regularly to avoid product buildup.

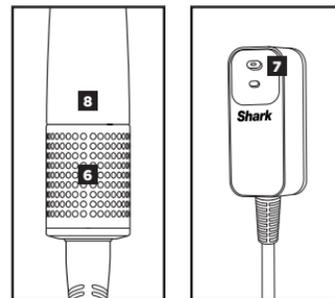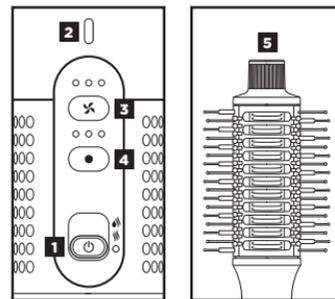

# TROUBLESHOOTING & ERROR CODES

## MAINTENANCE/CLEANING


Before cleaning any part of your hair care device, turn off the device and unplug it.

### Reduction in Airflow.

Make sure you are not covering the filter cover with your hand when operating the unit. This will block the air inlet, which could cause a reduction in airflow. A change in airflow or air power, airflow blockages, and/or visible buildup on the inlet at the bottom of the unit could also indicate your unit needs to be cleaned. To maintain performance, clean the filter at the bottom of the unit every month using a new toothbrush.

### Removing the Filter.

1. Turn off the device and unplug it. Slide the filter cover off the bottom of the unit.

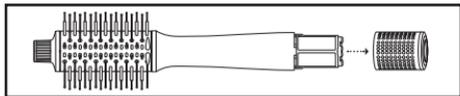

### Cleaning the Filter.

1. Wipe down the filter with a dry microfibre cloth or a new toothbrush to remove the debris.
2. To reinstall the filter cover, slide it back on to the bottom of the device until it clicks into place.

## ALCI OPERATION


### Electricity flickers or trips circuit breaker during use.

This unit is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that render it inoperable under abnormal conditions. Should the unit turn off in use, press the red Rest button on the plug and the unit should function normally. If the unit does not reset, please check your circuit breaker. If the issue persists, ensure there are no other appliances plugged in within the room where the unit is being used. Do not use the unit with a power strip.

## OVERHEATING

### Hair dryer is overheating or shuts off.

This unit is equipped with a temperature-protective thermostat. If for some reason your unit overheats, the thermostat will automatically turn the unit off. To prevent power down recurrence, unplug the unit and set it aside to cool. Overheating may result if the unit is being powered on for a long duration, or can indicate a blockage or dust buildup. To prevent overheating, clean the filter at the bottom of the unit every month using a new toothbrush. Make sure you are not covering the filter with your hand when operating the unit, as this could also cause overheating. If overheating continues to occur, contact Customer Service at **855-522-0912**.

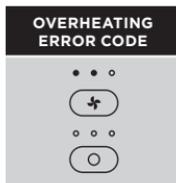

If you are experiencing a different error code, please scan the QR code for additional troubleshooting or contact Customer Service at **855-522-0912**.

# TWO (2) YEAR LIMITED WARRANTY

The Two (2) Year Limited Warranty applies to purchases made from authorized retailers of SharkNinja Operating LLC. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of two (2) years from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

**\*CALIFORNIA RESIDENTS ONLY:** The Two (2) Year Limited Warranty period begins on the original date of delivery or pick-up.

### What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

### What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as accessories), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at **sharkbeauty.com**.

2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

### How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **sharkbeauty.com** for product care and maintenance self-help. Our Customer Service Specialists are also available at **855-522-0912** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at **registryourshark.com** and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$20.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.



