


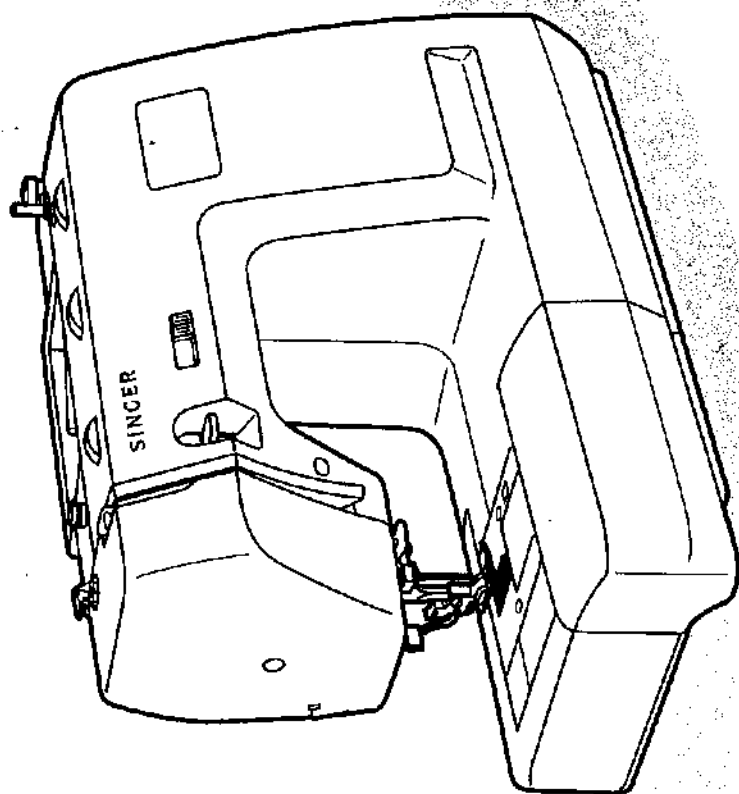

3860

SINGER[®]
Instruction Manual

Congratulations

As the owner of a new Singer sewing machine, you are about to begin an exciting adventure in creativity. From the moment you first use your machine, you will know you are sewing on one of the easiest to use sewing machines ever made.

May we recommend that, before you start to use your sewing machine, you discover the many advantages and the ease of operation by going through this instruction book, step by step, seated at your machine.

To ensure that you are always provided with the most modern sewing capabilities, the manufacturer reserves the right to change the appearance, design or accessories of this sewing machine when considered necessary.

SINGER IS A REGISTERED TRADEMARK OF THE SINGER COMPANY LIMITED

Copyright © 2001

All rights reserved throughout the world.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety always be followed, including the following:

Read all instructions before using this sewing machine.

DANGER - To reduce the risk of electric shock:

1. An appliance should never be left unattended when plugged in.
2. Always unplug this appliance from the electric outlet immediately after using and before cleaning.
3. Always unplug before re-lamping. Replace bulb with same type rated 10 watts.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
2. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
4. Never operate the appliance with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from accumulation of lint, dust, and loose cloth.

5. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.

6. Always use the proper needle plate. The wrong plate can cause the needle to break.

7. Do not use bent needles.

8. Do not pull or push fabric while stitching. It may deflect the needle causing it to break.

9. Switch the sewing machine off ("O") when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, and the like.

10. Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.

11. Never drop or insert any object into any opening.

12. Do not use outdoors.

13. Do not operate where aerosol spray products are being used or where oxygen is being administered.

14. To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.

15. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

SAVE THESE INSTRUCTIONS


This sewing machine is intended for household use only.

☐ List of contents

Principal parts of the machine.....	2-3	Overlock stitches.....	32
Accessories.....	4	Sewing on buttons.....	33
Installing the snap-in sewing table.....	5	How to sew buttonholes (one-step buttonhole).....	34
Connecting machine to power source.....	6	left and right side balance for buttonhole.....	35
Changing the bulb.....	7	Zipper and piping.....	36
Two-step presser foot lifter/ Adjusting presser foot pressure.....	8	Sewing with the optional hemmer foot.....	37
Attaching the presser foot holder.....	9	Multi-stitch zig-zag.....	38
Winding the bobbin.....	10	Straight stretch stitch and Ric Rac stitch.....	39
Inserting the bobbin.....	11	Honeycomb stitch.....	40
Inserting and changing needles.....	12	Sewing with the optional cording foot.....	41
Threading the upper thread.....	13	Free motion darning.....	42
Automatic needle threader.....	14	Practical stitches.....	43
Thread tension.....	15	Darning.....	44
Raising the bobbin thread.....	16	Attaching lace.....	45
Reverse sewing/ Removing the work/ Cutting the thread.....	17	Applique.....	46
How to drop feed dog.....	18	Twin needle.....	47
Matching needle/ fabric/ thread.....	19	Monogramming and embroidering with embroidery hoop*.....	48
How to choose your pattern.....	20	Quilting.....	49
Electronic display.....	21	Gathering.....	50
General instructions of electronic display.....	22-28	Patch work.....	51
Straight stitching and needle position.....	29	The evenfeed foot optional accessory.....	52
Zigzag stitching.....	30	Maintenance.....	53
Blind hem/ lingerie stitch.....	31	Trouble shooting guide.....	54


☐ Principal parts of the machine

1. Horizontal spool pin
2. Tension dial
3. Presser foot pressure adjustment
4. Thread take-up lever
5. Face plate
6. Reverse lever
7. Thread cutting
8. Needle stop adjustment
9. Presser foot
10. Sewing table and accessory box
11. Handle
12. Bobbin winder
13. Stitch length dial
14. Stitch width dial
15. Electronic display
16. Speed limiting adjustment lever
17. One-step buttonhole lever
18. Automatic threader

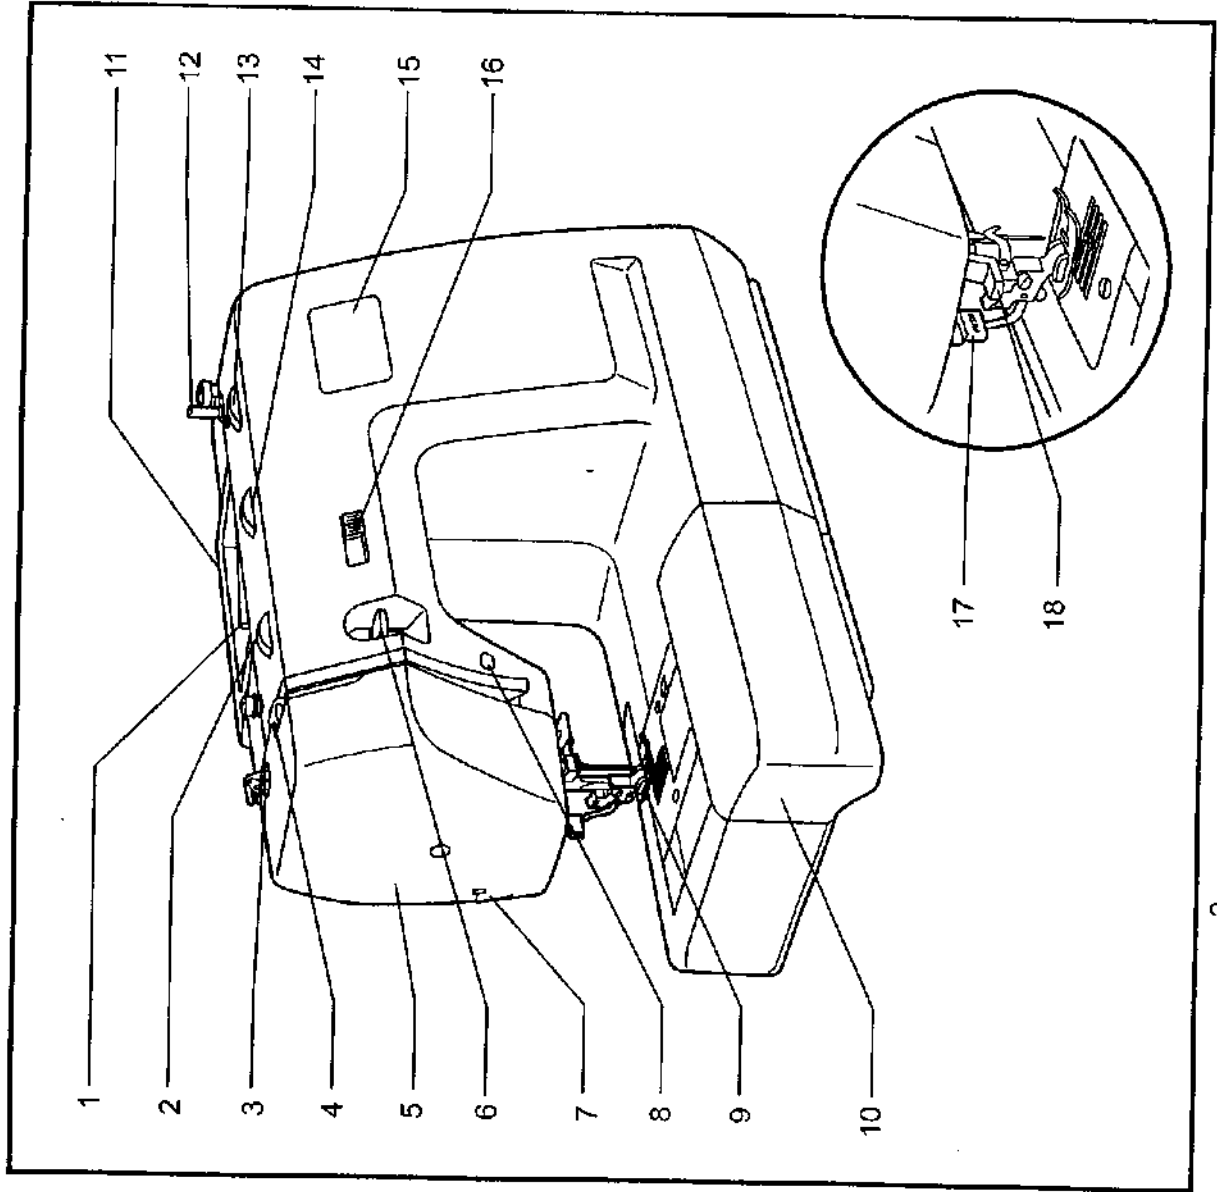

☐ **Principal parts of the machine**

- 19. Hole for second spool pin
- 20. Handwheel
- 21. Pattern selector dial
- 22. Power and light switch
- 23. Main plug socket
- 24. Bobbin thread guide
- 25. Upper thread guide
- 26. Presser foot lifter
- 27. Buttonhole stitch balance adjustment slot
- 28. Drop feed control

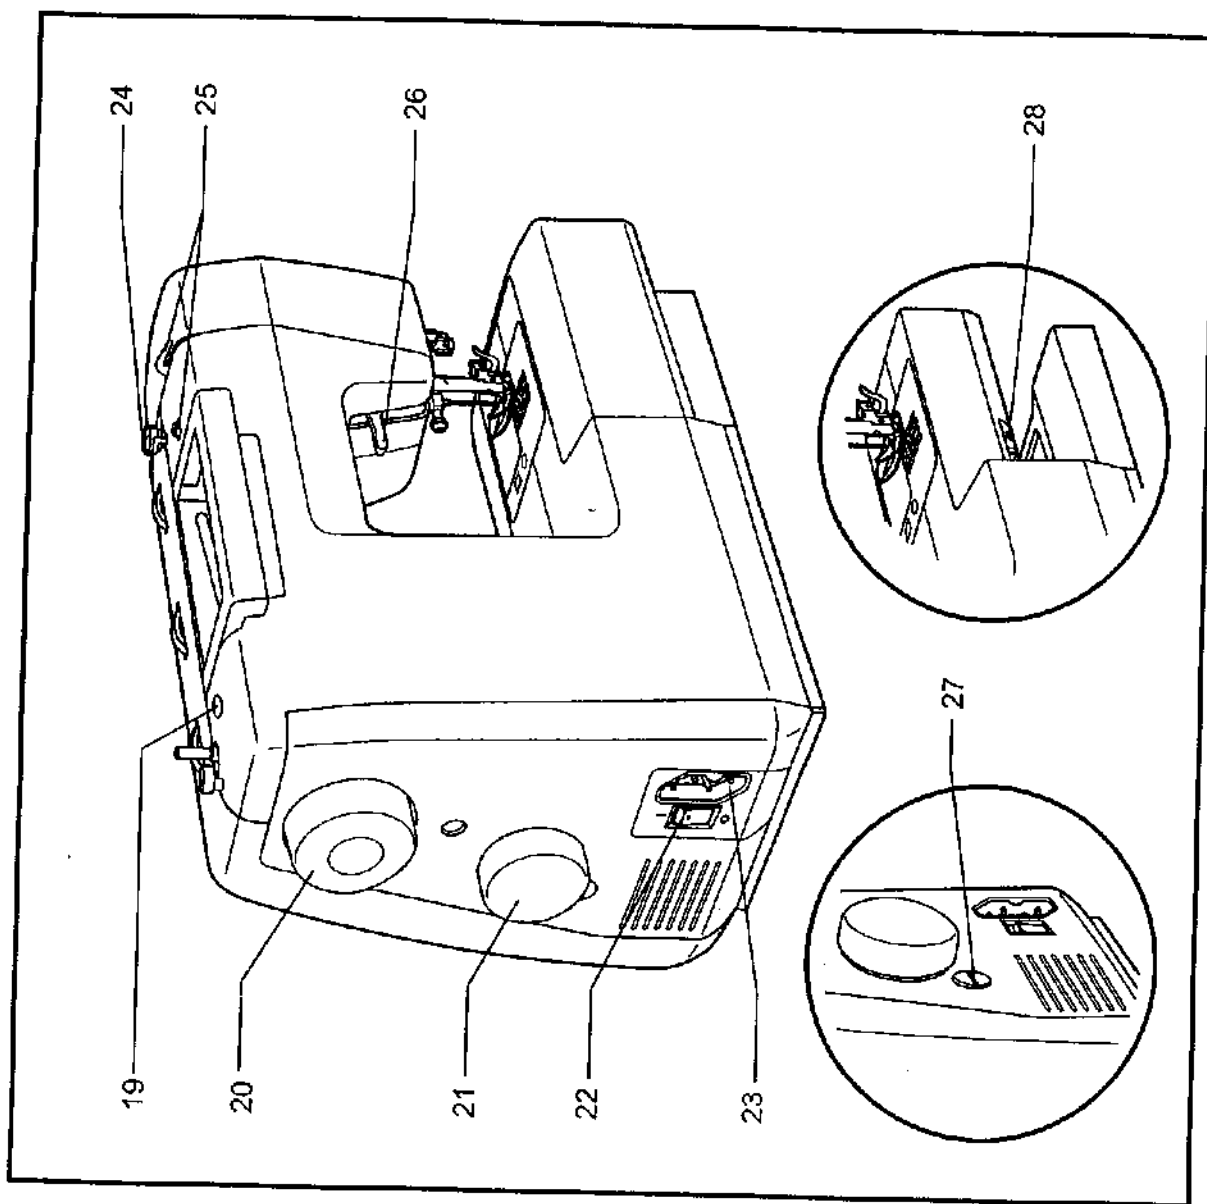

□ Accessories

Standard accessories


- a. All purpose foot **C**
- b. Zipper foot
- c. Buttonhole foot **D**
- d. Button sewing foot
- e. Overcasting foot **E**
- f. Blind hem foot **F**
- g. L-screwdriver
- h. Bobbin(3x)
- i. Seam ripper/ brush
- j. Pack of needles
- k. Spool holder
- l. Seam guide

*Feet **C**, **D**, **E**, **F** are shown on the electronic display.

Optional accessories

(These 9 accessories are not supplied with this machine; they are however available as special accessories from your local dealer.)

- m. Second spool pin
- n. Twin needle
- o. Satin stitch foot
- p. Hemmer foot
- q. Evenfeed foot
- r. Darning/ Embroidery foot
- s. Cording foot
- t. Gathering foot
- u. Quilting foot


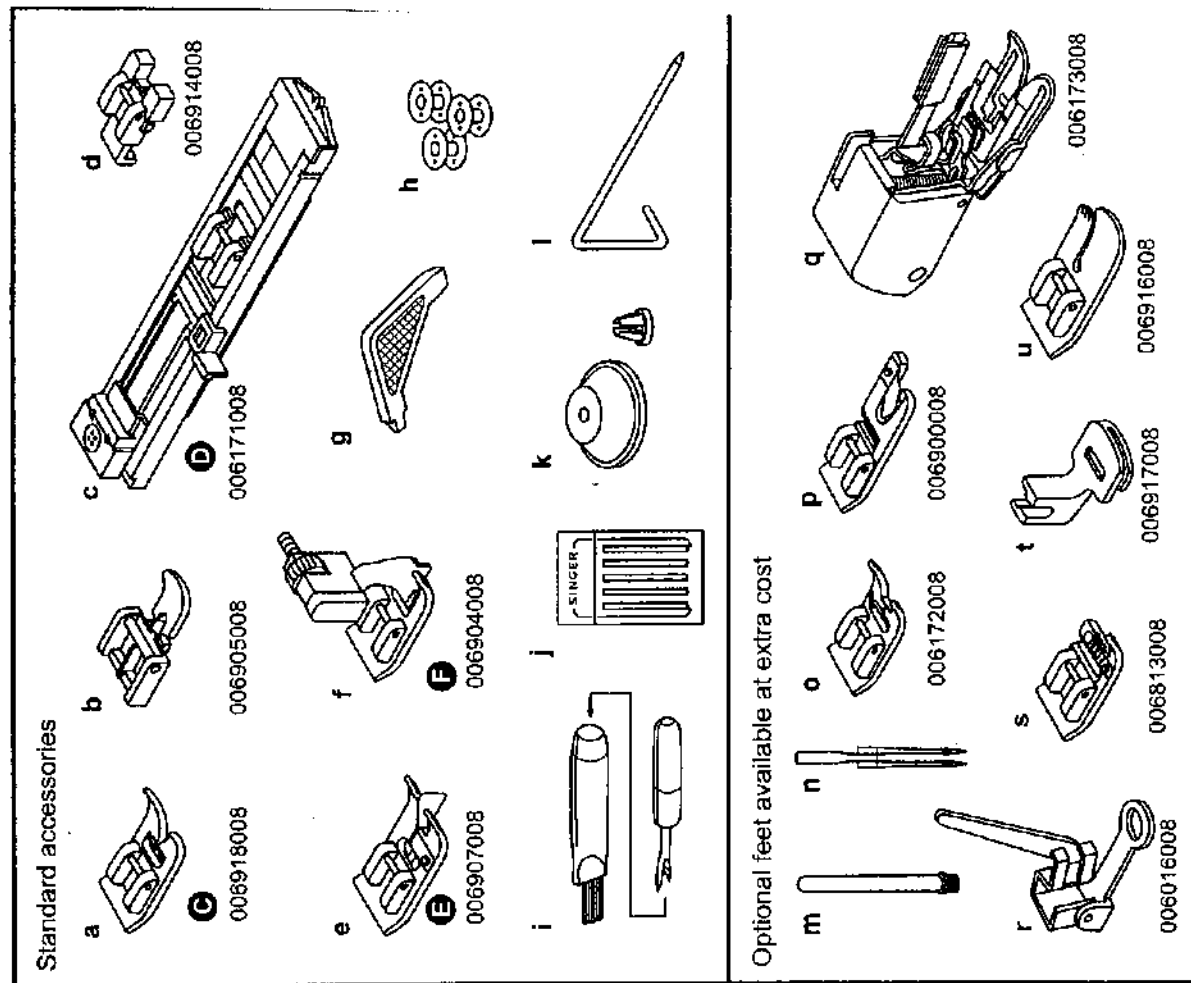


□ Installing the snap-in sewing table

Keep the snap-in sewing table horizontal, and push it in the direction of the arrow. (1)

The inside of the snap-in sewing table can be utilized as an accessory box.

To open, lift up at the point of the arrow. (2)

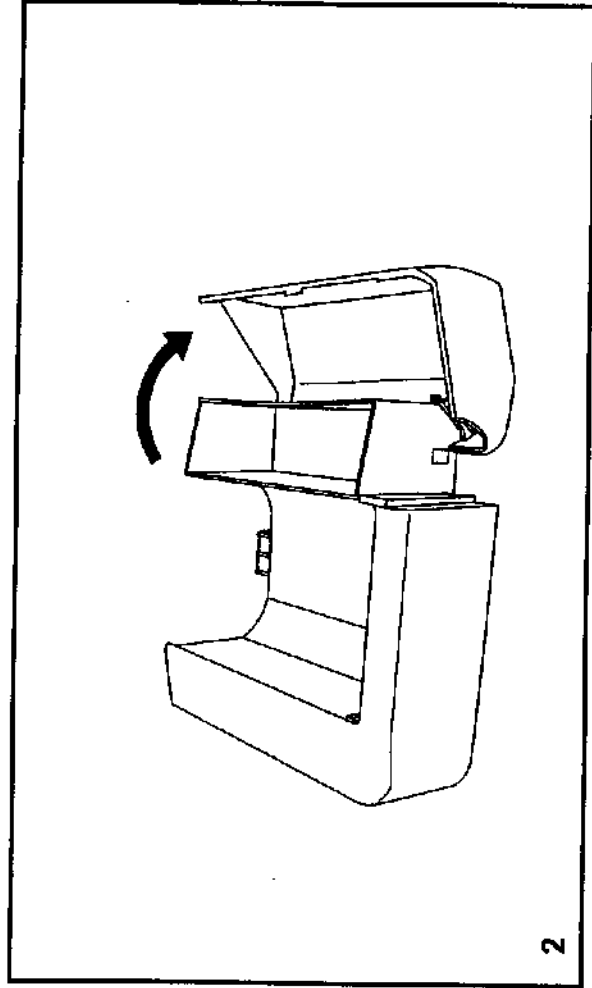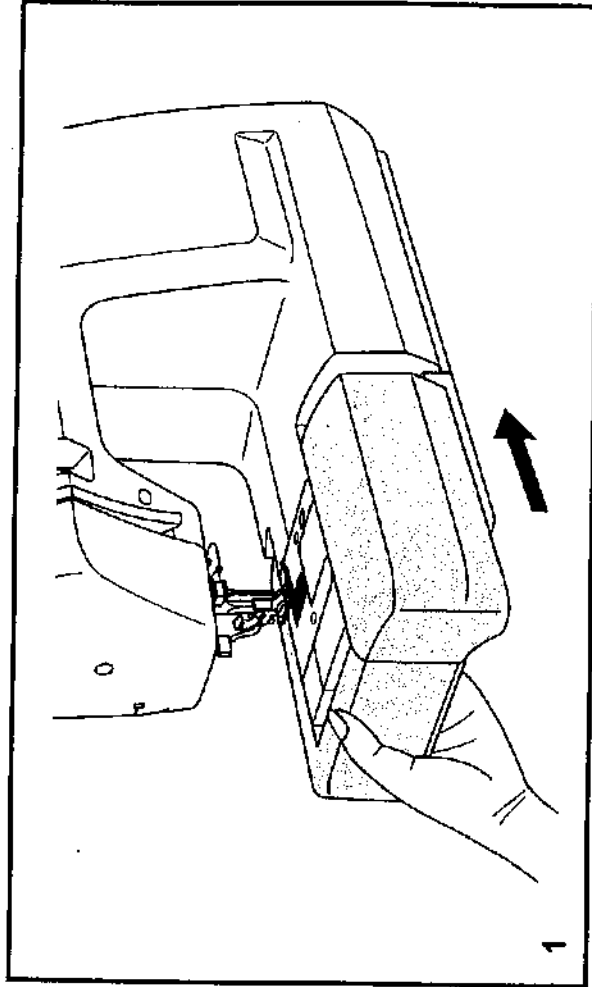

☐ Connecting machine to power source

Connect the machine to a power source as illustrated. (1)
This appliance is equipped with a polarized plug which must be used with the appropriate polarized outlet. (2)

Attention:

Unplug power cord when machine is not in use.

Foot control

Foot control regulates the sewing speed. (3)

Attention:


Consult a qualified electrician if in doubt as to connect machine to power source.
Unplug power cord when machine is not in use.
The appliance must be used with the foot controller 4C-337B (110-120V area) / 4C-337G (220-240V area) manufactured by MATSUSHITA ELECTRIC (TAIWAN) CO., LTD.

Sewing light


Press main switch (A) for power and light on "I".

IMPORTANT NOTICE


This appliance has a polarized plug (one blade is wider than the other).
To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

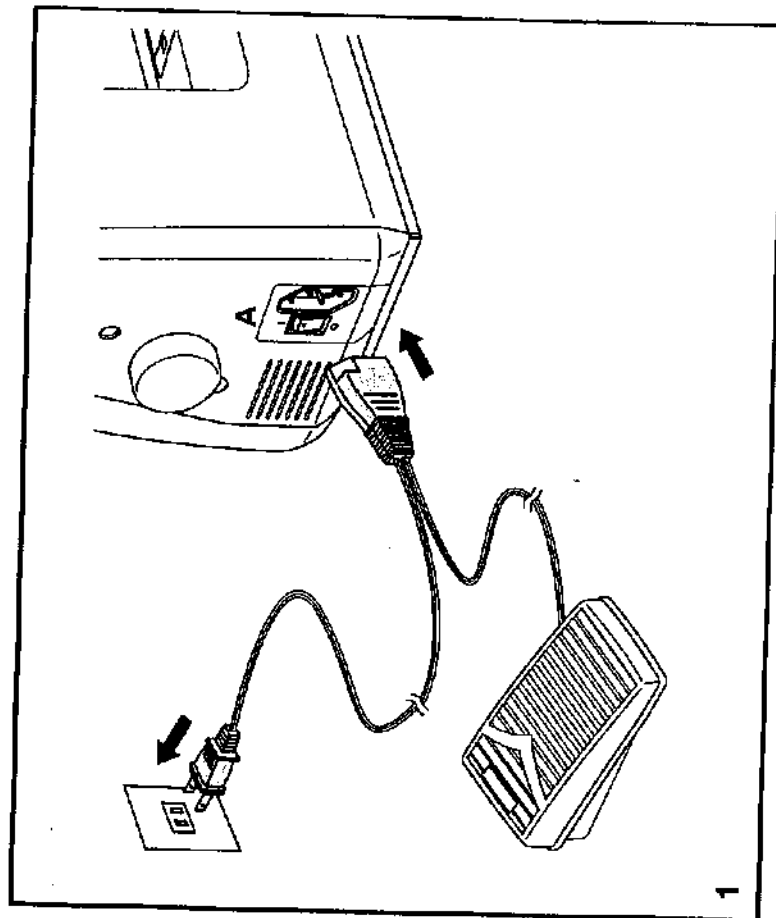

1

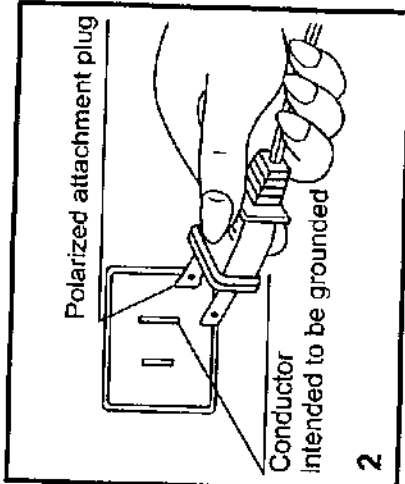

2

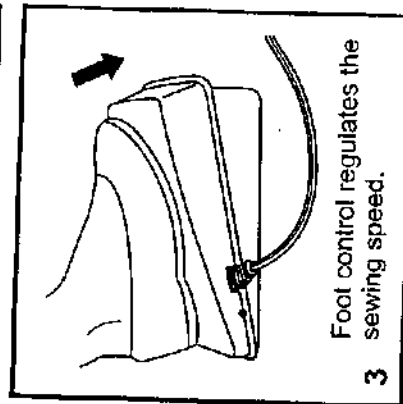



3

☐ Changing the bulb

Disconnect the machine from the power supply by removing the plug from the main socket!


- Loosen screw (A) as illustrated. (1)
- Remove the cover (B).
- Unscrew the bulb and fit new one (C). (2)
- Replace the cover and tighten screw.

Should there be any problem. Ask your local dealer for advice.

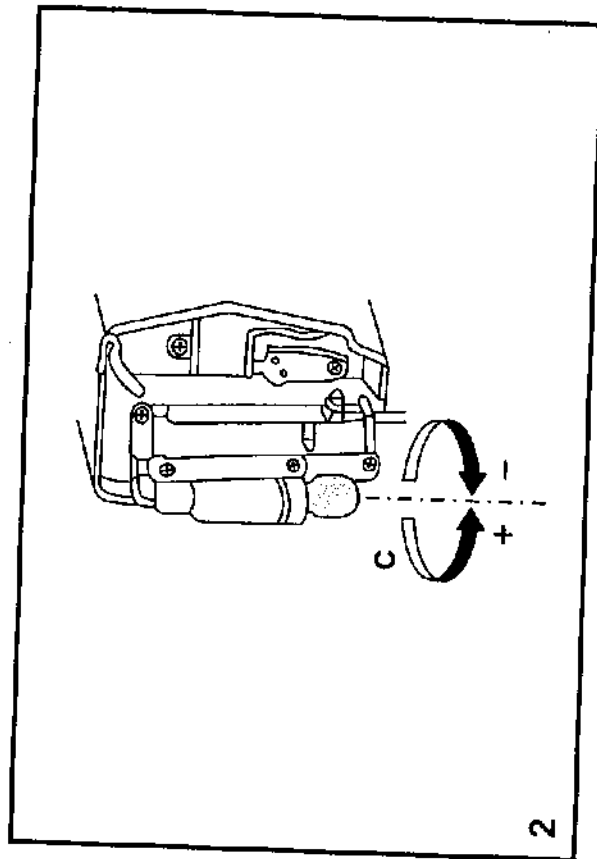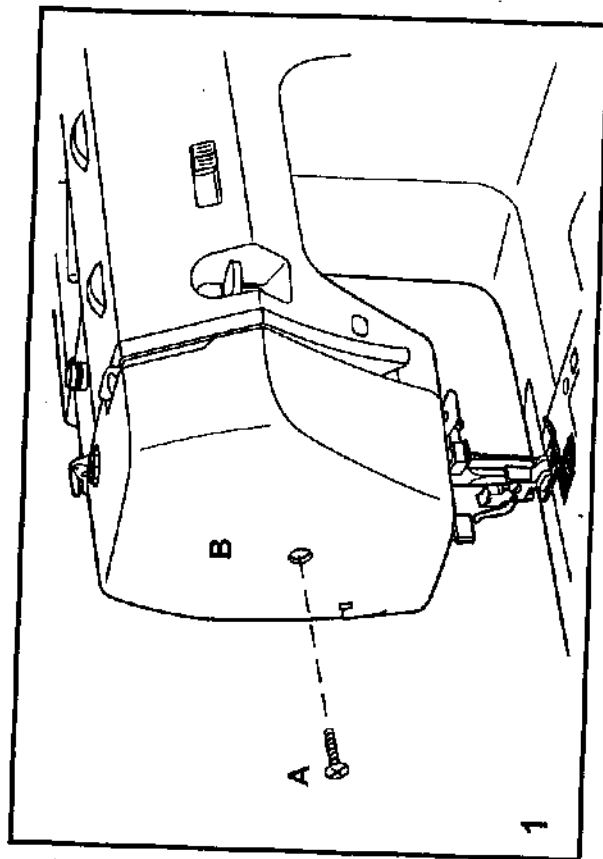

☐ **Two-step presser foot lifter**

When sewing several layers or thick fabrics, the presser foot can be raised a second stage for easy positioning of the work. (A)

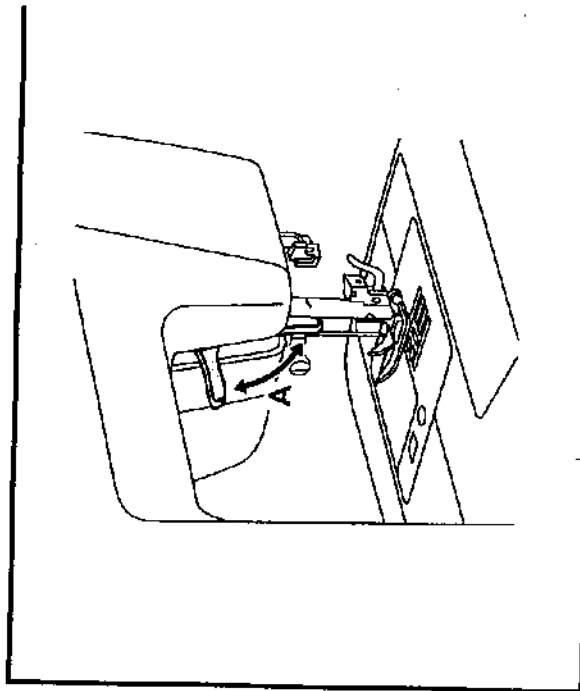


☐ **Adjusting presser foot pressure**

The presser foot pressure of the machine has been pre-set and requires no particular readjustment according to the type of fabric (light or heavy weight).

However, if you need to adjust the presser foot pressure, turn the presser adjusting screw with a coin.

For sewing very thin fabric, loosen the pressure by turning the screw counter clockwise, and for heavy fabric, tighten by turning it clockwise.

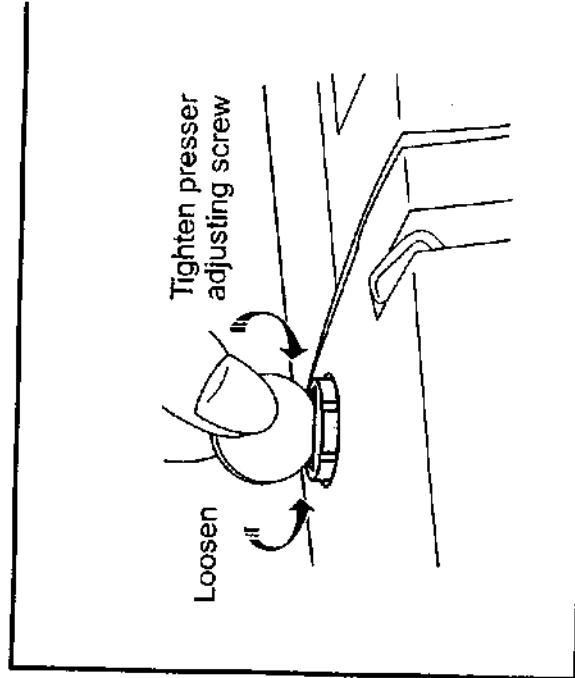

☐ Attaching the presser foot holder

Raise the presser foot clamp (a). (1) Attach the presser foot holder (b) as illustrated.

Attaching the presser foot

Lower the presser foot holder (b) until the cut-out (c) is directly above the pin (d). (2) Raise the lever (e).

Lower the presser foot holder (b) and the presser foot (f) will engage automatically.

Removing the presser foot

Raise the presser foot. (3)


Raise the lever (e) and the foot disengages.

Attaching the seam guide


Attach the seam guide (g) in the slot as illustrated. Adjust according to need for hems, pleats, etc. (4)

Attention:


Turn power switch to off ("O") when carrying out any of the above operations!

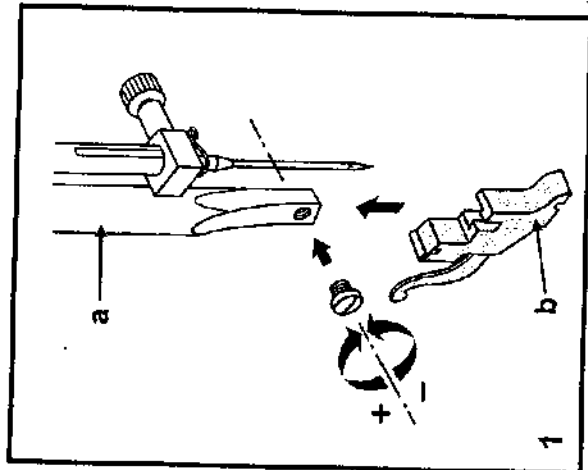


1

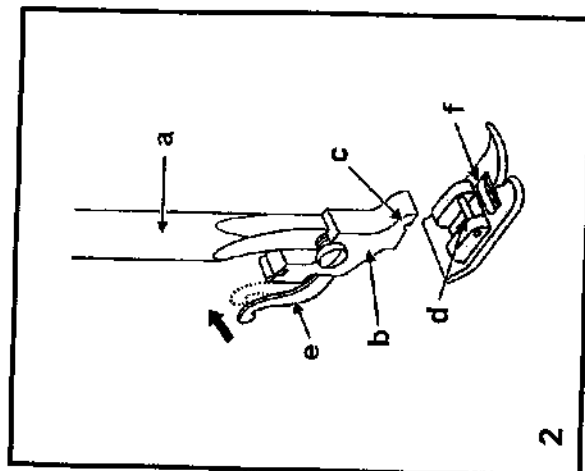

2

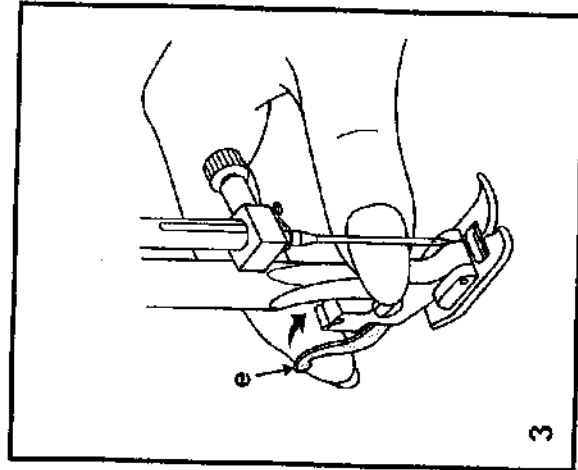

3

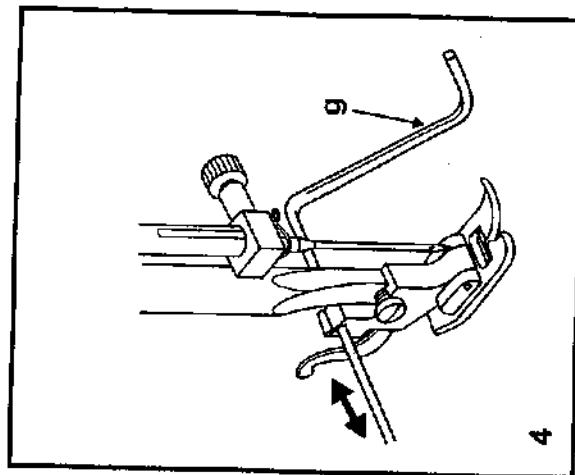


4

□ Winding the bobbin

- Place thread and spool holder onto spool pin (1). For smaller spools of thread place spool holder with small side next to spool (2).
- Snap thread into thread guide (3).
- Wind thread clockwise around bobbin winder tension discs (4).
- Thread bobbin as illustrated and place on spindle (5).
- Push bobbin to right (6).
- Hold thread end (7). Step on foot control pedal (8).
- Cut thread (9). Press bobbin to left (10) and remove.

Please Note:

When the bobbin winder spindle is in "bobbin winding" position, the machine will not sew and the hand wheel will not turn. To start sewing, push the bobbin winder spindle to the left (sewing position).

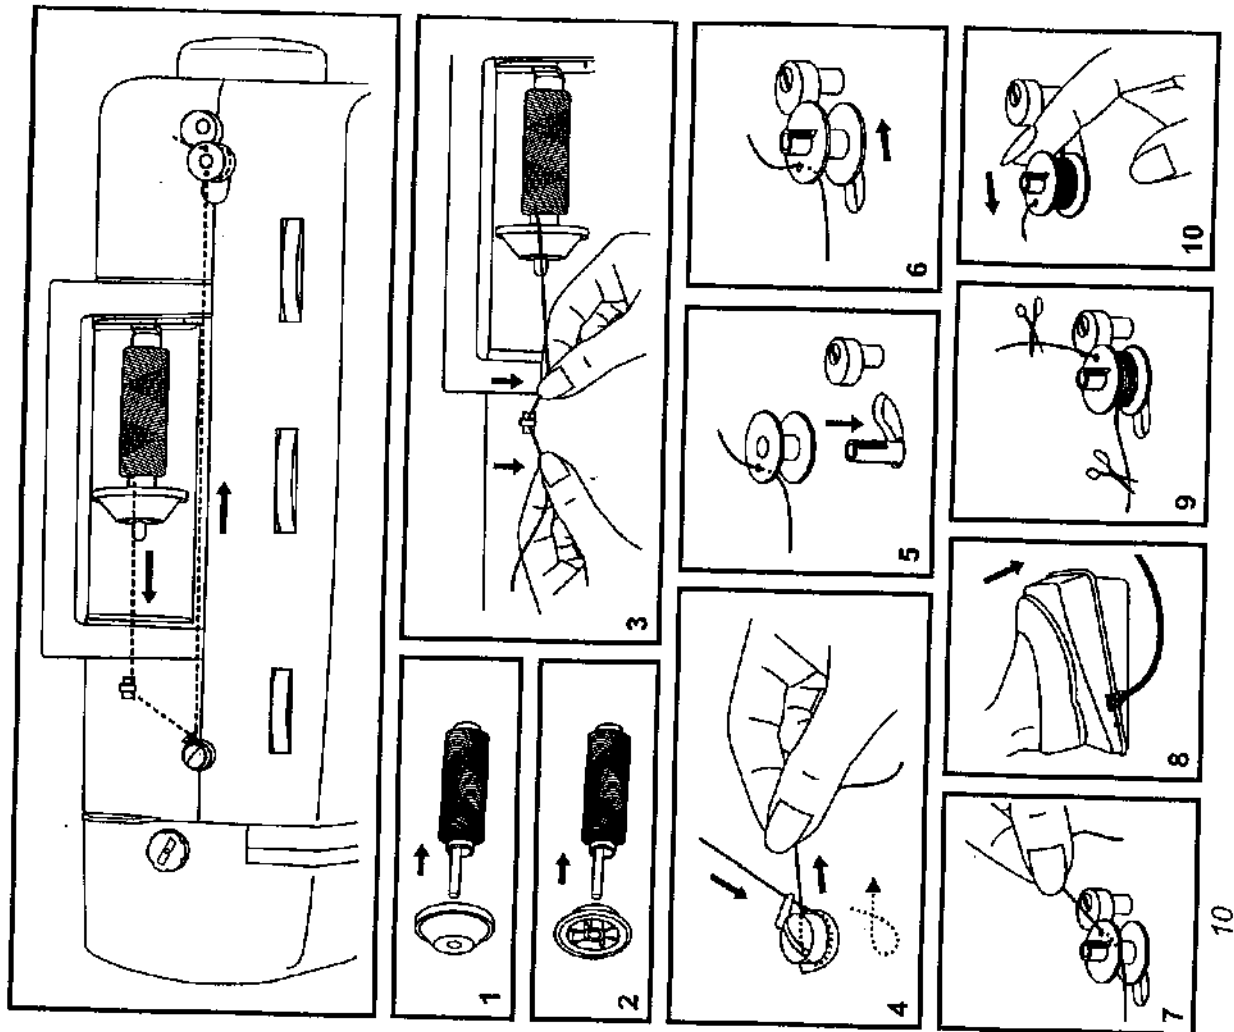





☐ Inserting the bobbin

When inserting or removing the bobbin, the needle must be fully raised.

1. Insert the bobbin in the bobbin case with the thread running counterclockwise direction (arrow).
2. Pull the thread through the slit (A).
3. Draw the thread clockwise until it slips into the notch (B).
4. Pull out about 15 cm (6 inches) of thread and attach the bobbin cover plate. (C)

Attention:

Turn power switch to off ("O") before inserting or removing the bobbin.

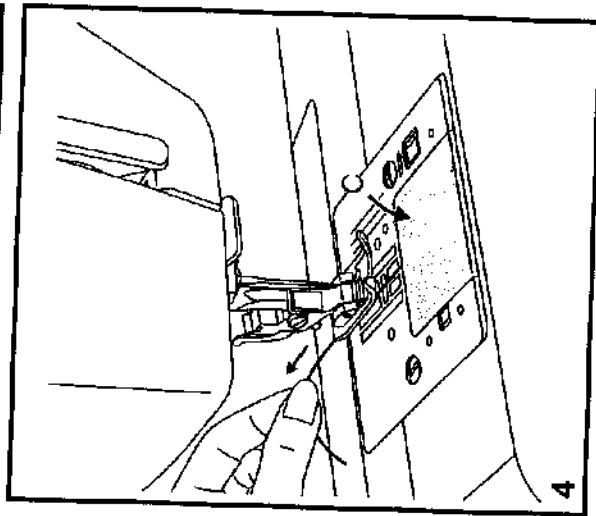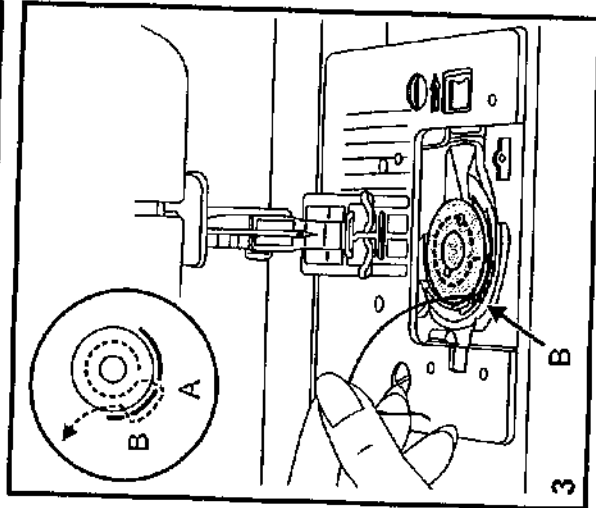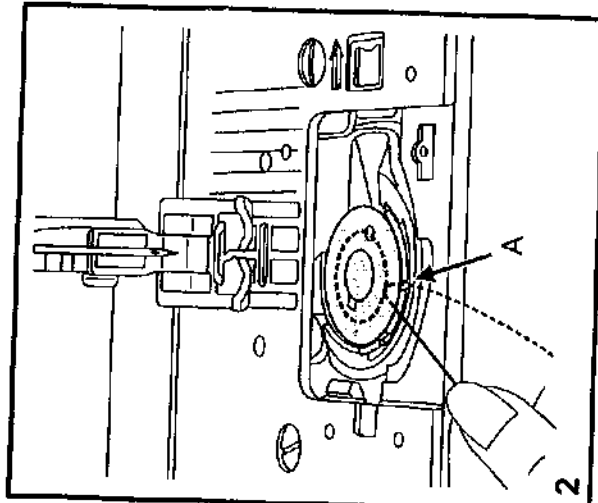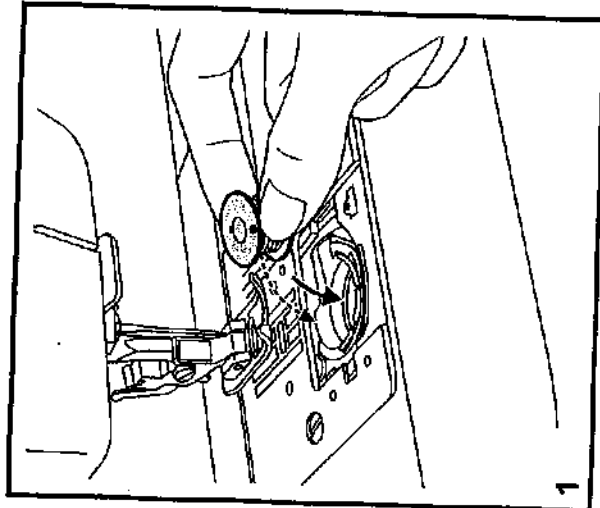

☐ Inserting and change needles

Change the needle regularly, especially if it is showing signs of wear and causing problems. For best sewing results always use SINGER Brand Needles.

Insert the needle following the illustrated instructions.

A. Loosen the needle clamp screw and tighten again after inserting the new needle. (1)

B. The flat side of the shaft should be towards the back.

C/D. Insert the needle as far up as it will go.



Attention:

Turn power switch to off ("O").

Needles must be in perfect condition. (2)

Problems can occur with:

- A. Bent needles
- B. Blunt needles
- C. Damaged points

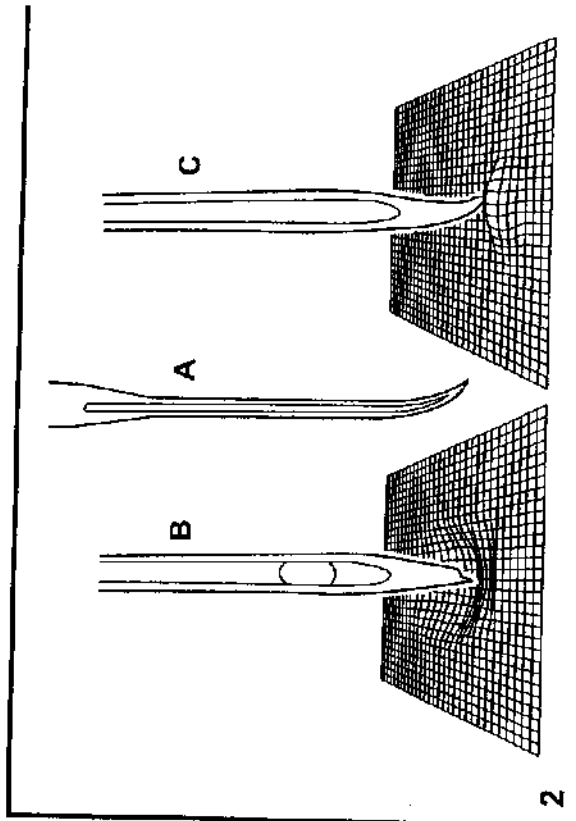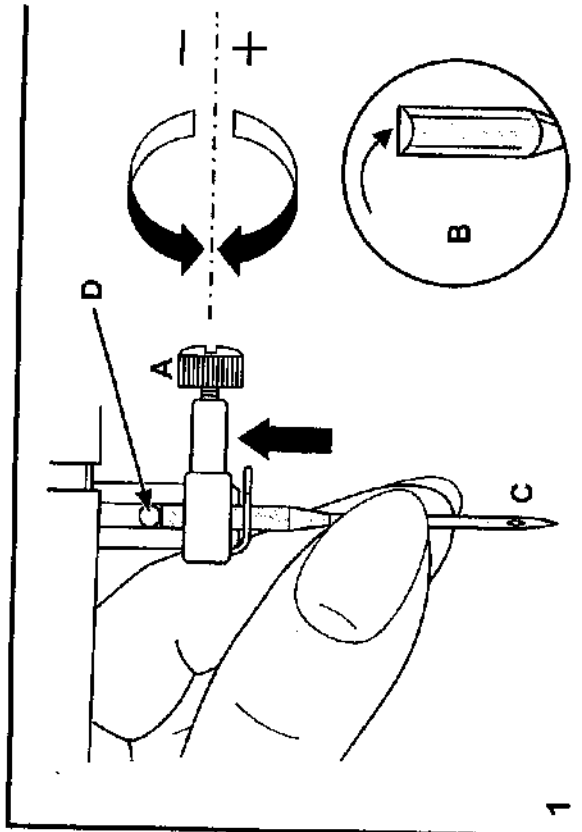


□ Threading the upper thread

This is a simple operation but it is important to carry out correctly as by not doing so several sewing problems could result.

- Start by raising the needle to its highest point (1), and also raise the presser foot to release the tension discs. (2)
Note: For safety, it is strongly suggested you turn off the power before threading.
- Lift up the spool pin. Place the spool of thread on the holder with the thread coming off the spool as shown. For small thread spools, place small side of spool holder next to spool. (3)
- Draw thread from spool through the upper thread guide. (4)
- Guide thread around thread guide (5) pulling thread through pre-tension spring as illustrated.
- Thread tension module by leading thread down right channel and up left channel (6). During this process it is helpful to hold the thread between the spool and thread guide (4).
- At the top of this movement pass thread from right to left through the slotted eye of the take-up lever and then downwards again. (7)
- Pass thread behind the flat, horizontal thread guide. (8)
- Now take thread behind the thin wire needle clamp guide and then down to the needle which should be threaded from front to back. Pull about 6-8 inches of thread to the rear beyond the needle eye. (9)

Note:

If your sewing machine is equipped with the factory installed optional automatic needle threader, instructions for use can be found on page 14.


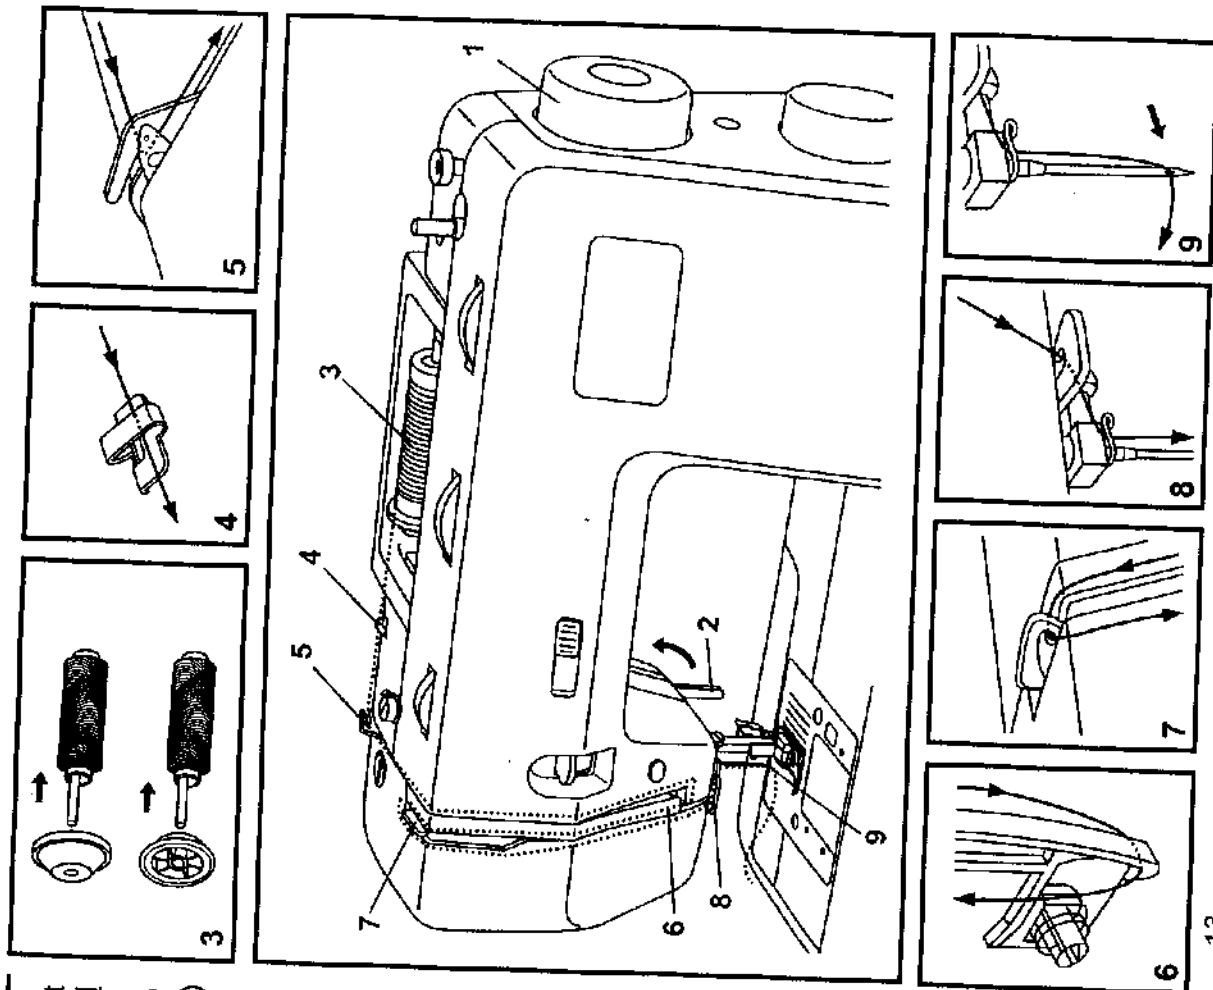


☐ Automatic needle threader

- Raise the needle to its highest position
- Press lever (A) right down
- The threader automatically swings to the threading position (B)
- Take the thread round the hook (C)
- Take the thread in front of the needle round the hook (D) from bottom to top
- Release lever (A)
- Pull the thread through the needle eye.

Attention:

Turn power switch to off ("O")!

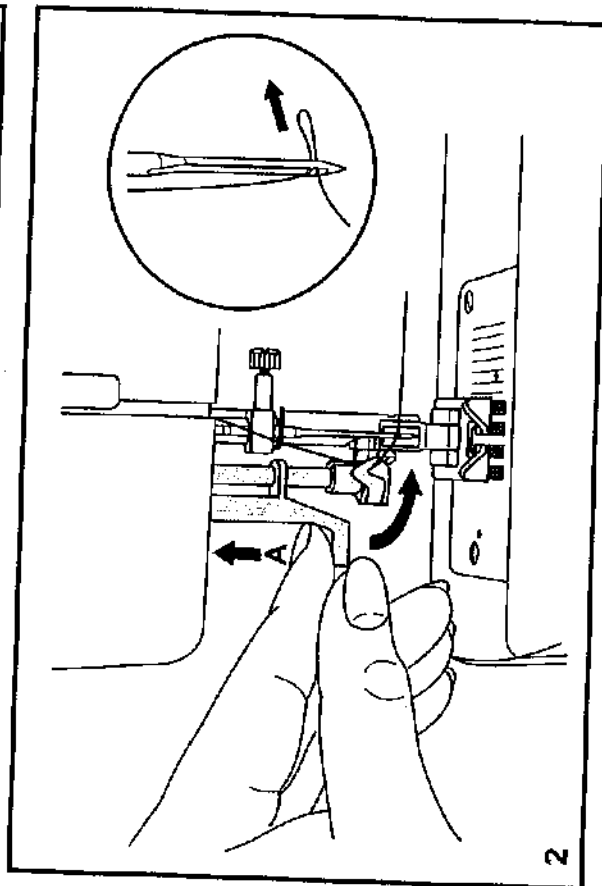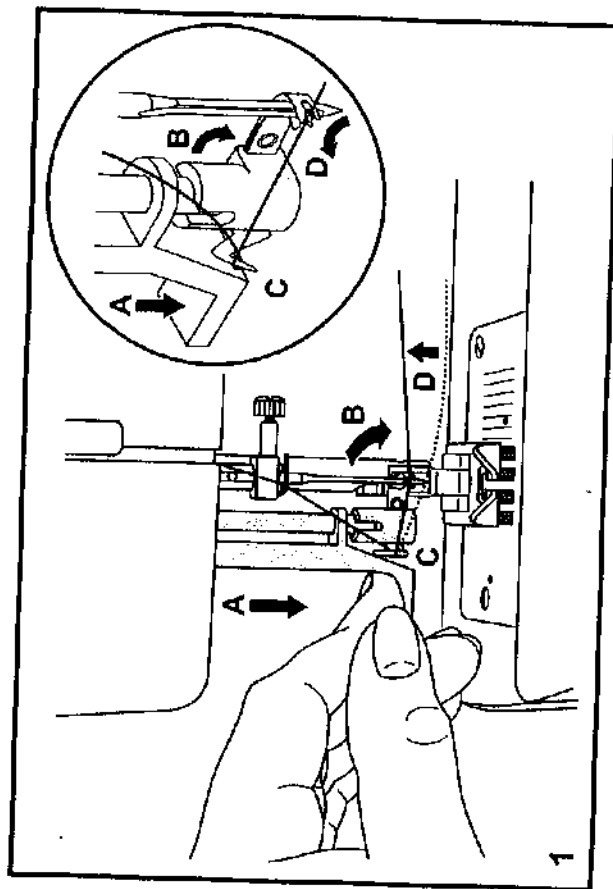

☐ Thread tension

Upper thread tension


Basic thread tension setting: "AUTO"

To increase the tension, turn the dial to the next number up.
To reduce the tension, turn the dial to the next number down.

- A. Normal thread tension for straight stitch sewing.
- B. Thread tension too loose for straight stitch sewing. Turn dial to higher number.
- C. Thread tension too tight for straight stitch sewing. Turn dial to lower number.
- D. Normal thread tension for zig zag and decorative sewing.

Please note:


- Proper setting of tension is important to good sewing.
- There is no single tension setting appropriate for all stitch functions, thread or fabric.
- A balanced tension (identical stitches both top and bottom) is usually only desirable for straight stitch construction sewing.
- 90% of all sewing will be between "3" and "5" ("AUTO" is basic setting).
- For zig zag and decorative sewing stitch functions, thread tension should generally be less than for straight stitch sewing.
- For all decorative sewing you will always obtain a nicer stitch and less fabric puckering when the upper thread appears on the bottom side of your fabric.

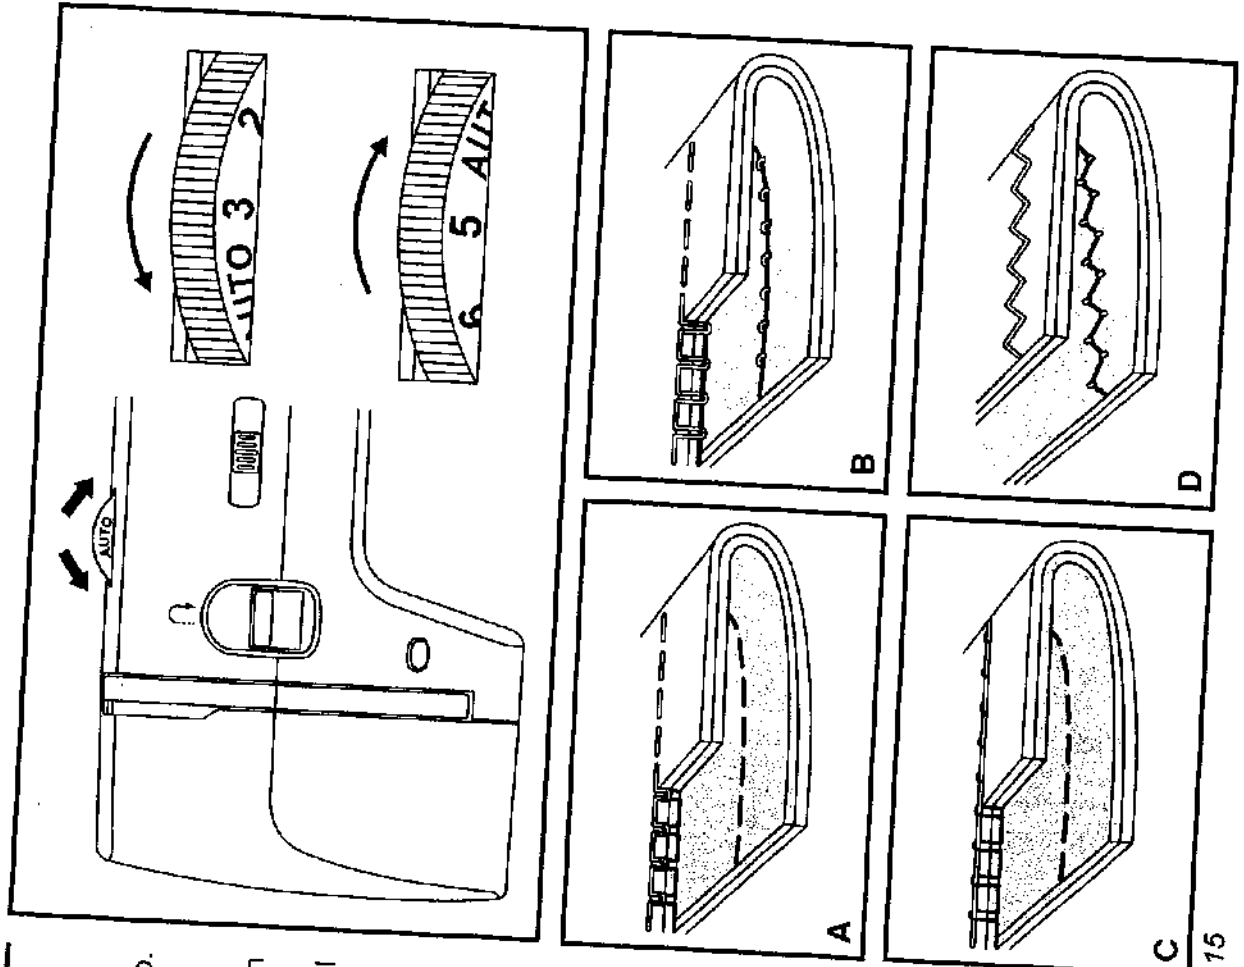


☐ **Raising up the lower thread**

Hold the upper thread with the left hand. Turn the handwheel (1) towards you (counterclockwise) lowering, then raising needle.


Gently pull on the upper thread to bring the bobbin thread up through the needle plate hole (2). Lay both threads to the back under the presser foot. (3)

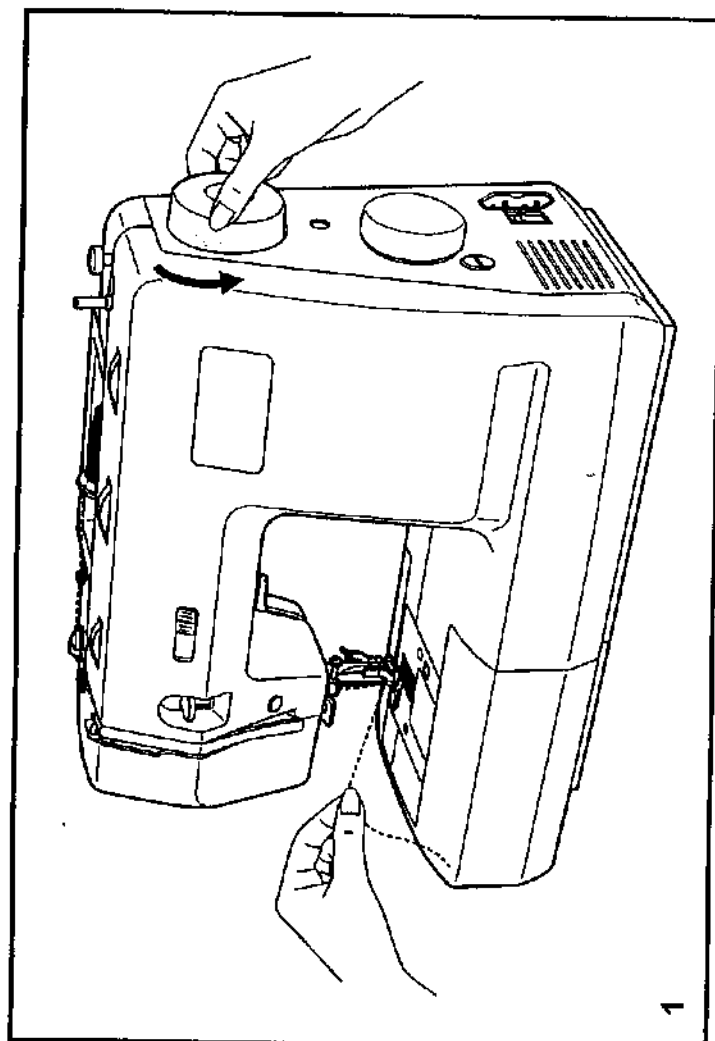

1

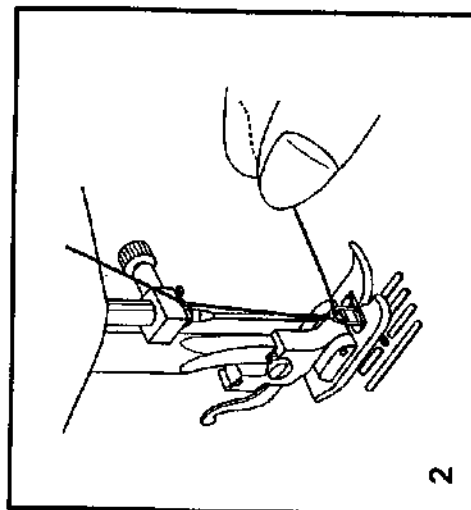



2

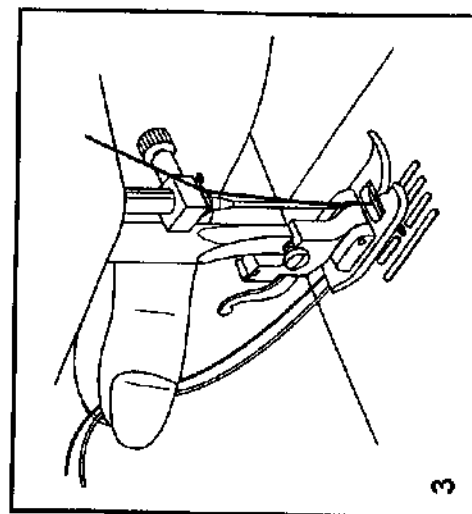

3


☐ Reverse sewing

To secure the beginning and end of seam, press down the reverse sewing lever (A). Sew a few reverse stitches. Release the lever and the machine will sew forwards again. (1)

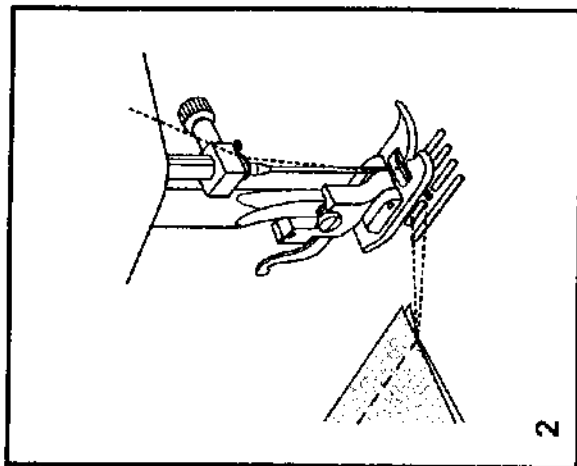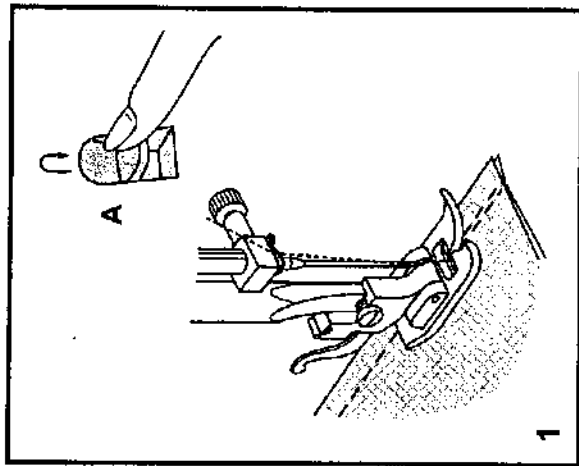

☐ Removing the work

Turn the handwheel counterclockwise to bring the thread take up lever to its highest position, raise the presser foot and remove work behind the presser foot and needle. (2)

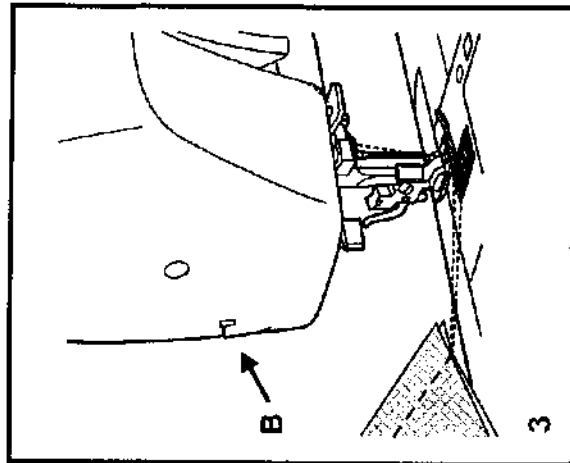



☐ Cutting the thread

Pull the threads behind the presser foot. Guide the threads to the side of the face plate and into thread cutter (B). Pull threads down to cut. (3)

☐ How to drop feed dog

For ordinary sewing, keep the feed dog up, for freehand embroidery, sewing on buttons and darning, drop the feed dog.

To raise (a) and lower (b) feed dog. (2)

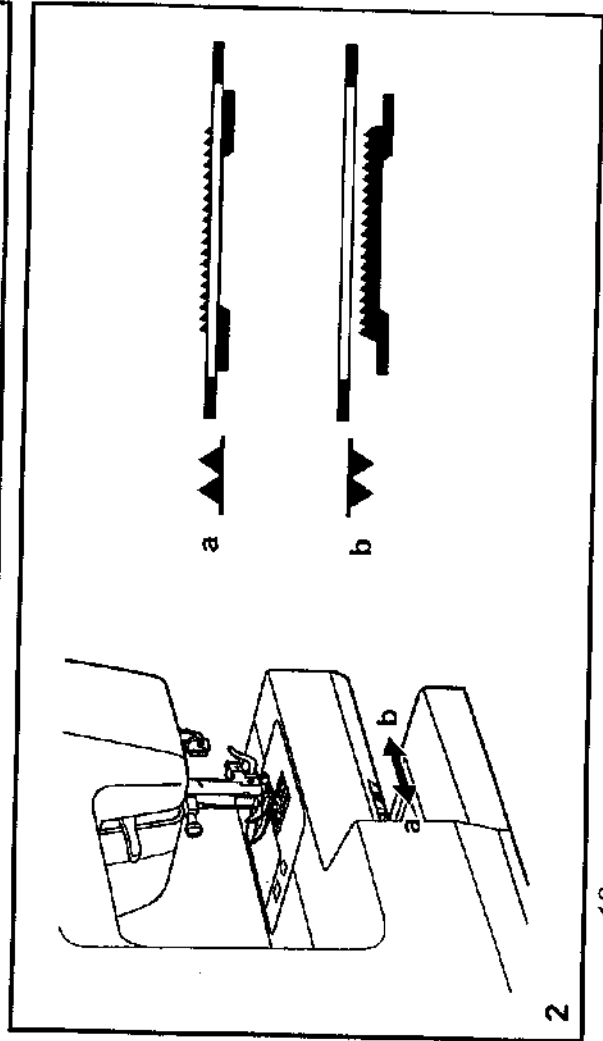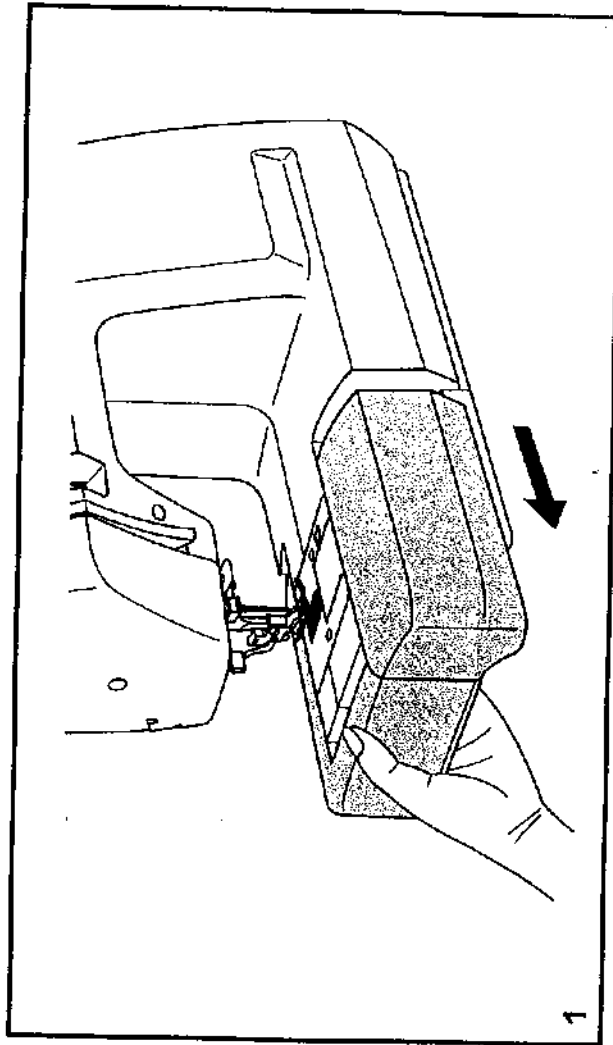

☐ Matching needle/ fabric/ thread

NEEDLE, FABRIC, THREAD SELECTION GUIDE

NEEDLE SIZE	FABRICS	THREAD
9-11 (70-80)	Lightweight fabrics-thin cottons, voile, serge, silk, muslin, Qiana, interlocks, cotton knits, tricolors, jerseys, crepes, woven polyester, shirt & blouse fabrics.	Light-duty thread in cotton, nylon ,polyester or cotton wrapped polyester.
11-14 (80-90)	Medium weight fabrics-cotton, satin, kettledote, sailcloth, double knits, lightweight woollens.	Most threads sold are medium size and suitable for these fabrics and needle sizes. Use polyester threads on synthetic materials and cotton on natural woven fabrics for best results. Always use the same thread on top and bottom.
14 (90)	Medium weight fabrics-cotton duck, woolen, heavier knits, terrycloth, denims.	
16 (100)	Heavyweight fabrics-canvas, woollens, outdoor tent and quilted fabrics, denims, upholstery material (light to medium).	
18 (110)	Heavy woollens, overcoat fabrics, upholstery fabrics, some leathers and vinyls.	Heavy duty thread, carpet thread. (Use heavy foot pressure-large numbers.)
IMPORTANT: Match needle size to thread size and weight of fabric		

NEEDLE, FABRIC SELECTION

NEEDLES	EXPLANATION	TYPE OF FABRIC
SINGER 2020	Standard sharp needles. Sizes range thin to large. 9 (70) to 18 (110)	Natural woven fabrics-wool, cotton, silk, etc. Qiana. Not recommended for double knits.
SINGER 2045	Semi-ball point needle, scarfed. 9 (70) to 18 (110)	Natural and synthetic woven fabrics, polyester blends. Knits-polyesters, interlocks, tricot, single and double knits.
SINGER 2025	Twin Needle	Woven fabrics and knits.
SINGER 2032	Leather needles. 11 (80) to 18 (110)	Leather, vinyl, upholstery. (Leaves smaller hole than standard large needle.)

Note twin needle:

1. Twin needles, can be purchased for utility and decorative work.
2. When sewing with twin needles, the stitch width dial should be set at less than "3.5".
3. For best sewing results always use genuine SINGER needles.
4. Replace needle often (approximately every other garment) and / or at first thread breakage or skipped stitches.

□ How to choose your pattern




To select a stitch, simply turn the Pattern selector dial, located on the right side of the machine. The Pattern selector dial may be turned in either direction. The following page shows the recommended range of stitch lengths and widths.

Adjust the stitch length with the stitch length dial. You may choose any needle position, by turning the stitch width dial.

Adjust the stitch length and stitch width according to the fabric being used.

To obtain any of the patterns shown on the stitch selection panel, select the letter above the stitch with the stitch selector dial. Adjust the stitch length and the stitch width with the control dials according to the result desired.


Turn the stitch length dial to "S" to obtain any of the patterns shown, select the pattern desired with pattern selector dial, and adjust the stitch width with the stitch width dial.

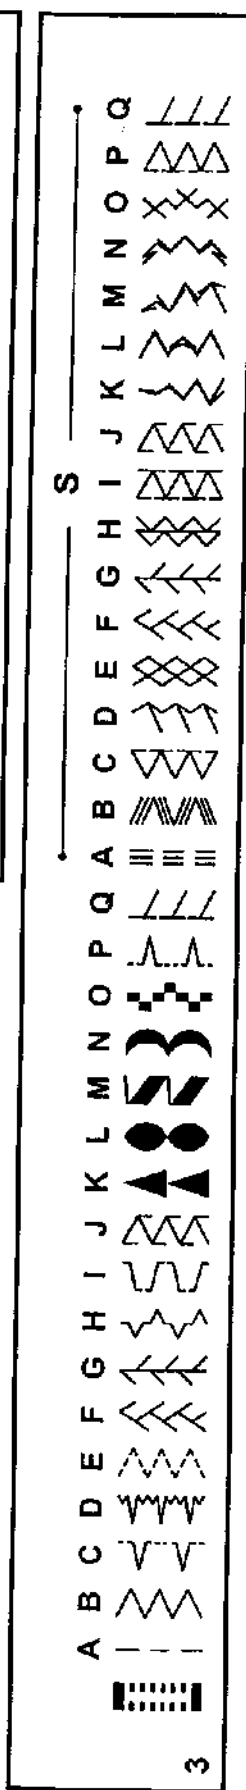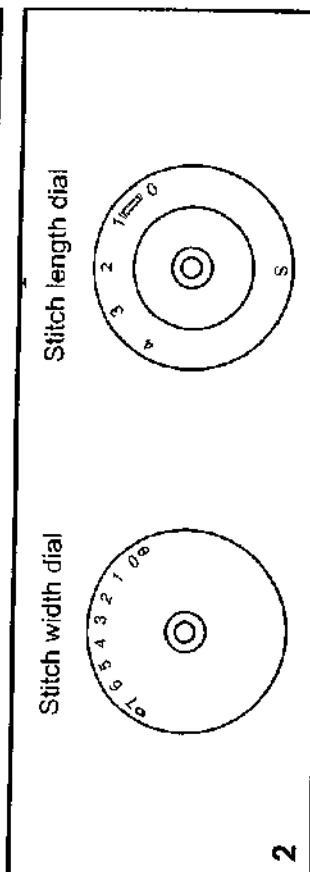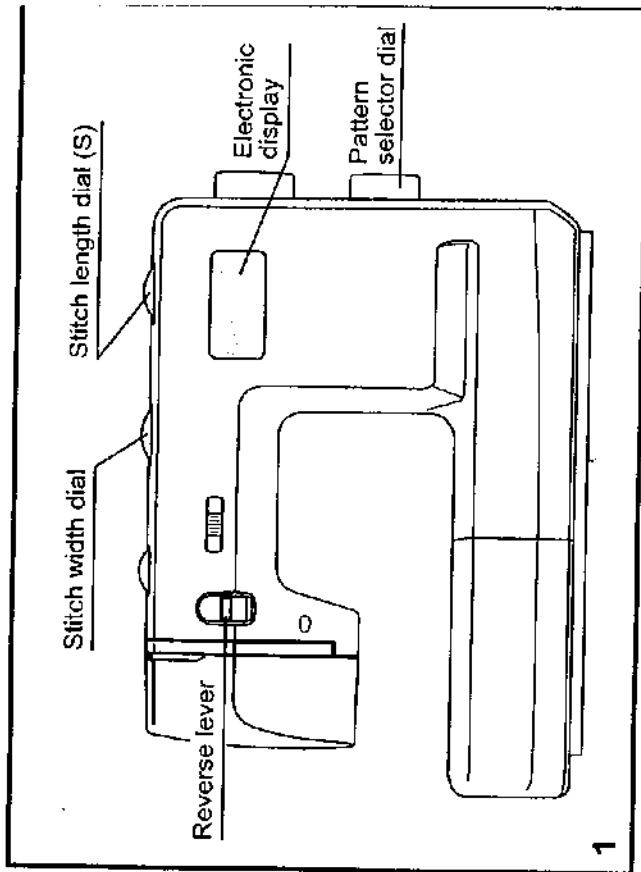

☐ Electronic display

Outline of LCD information (1)

- Stitch number
- Sewing pattern
- Presser foot
- Stitch length
- Stitch width

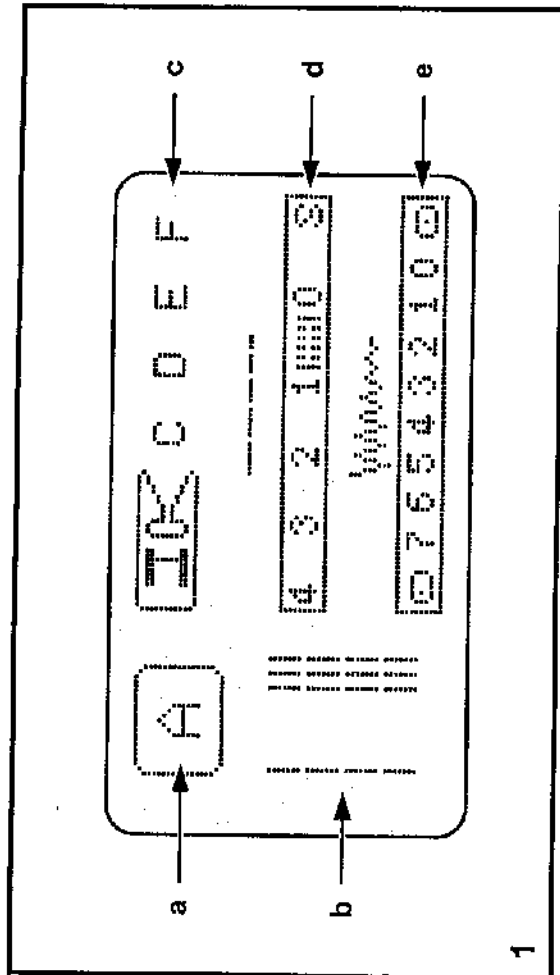


Example stitch number "A" (2)

A - Regular setting

- Pattern: straight stitch
- Recommended length: 1 ~ 4
- Recommended width: 0 or 7
- Recommended presser foot : C

B - S setting


- Pattern: triple stretch stitch
- Stitch length: S
- Recommended width: 0 or 7
- Recommended presser foot : C

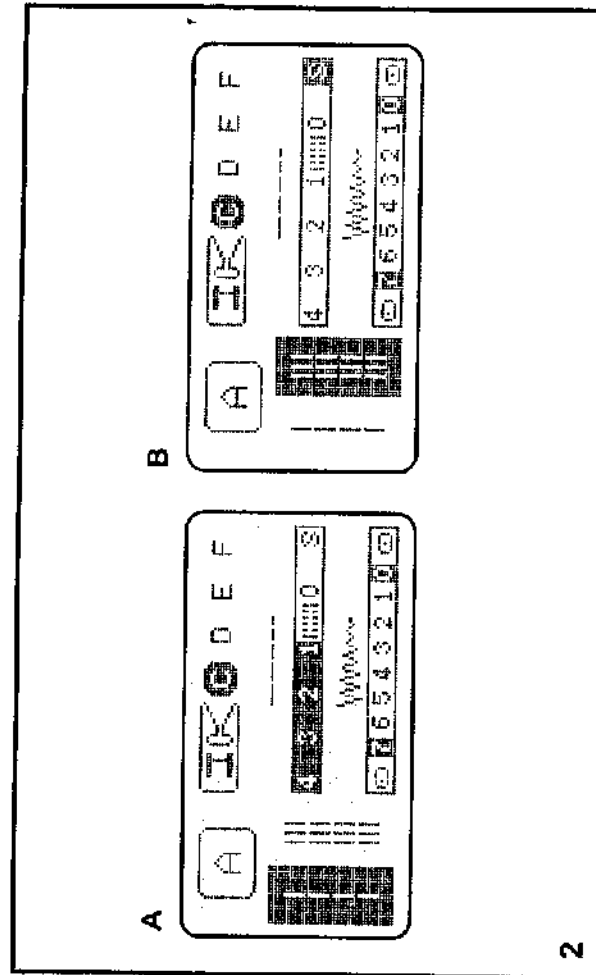

☐ General instructions of electronic display


Buttonhole

Regular setting


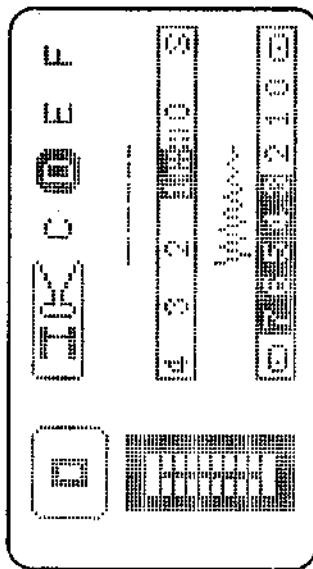


Practical Stitches

Regular setting

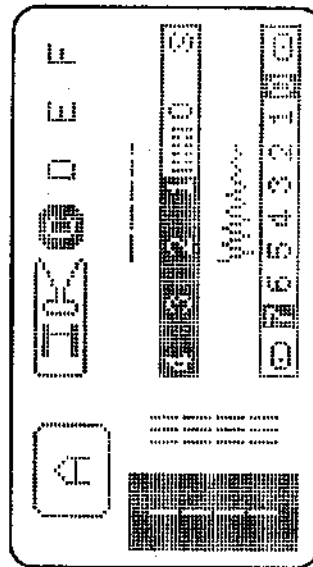




"S" setting

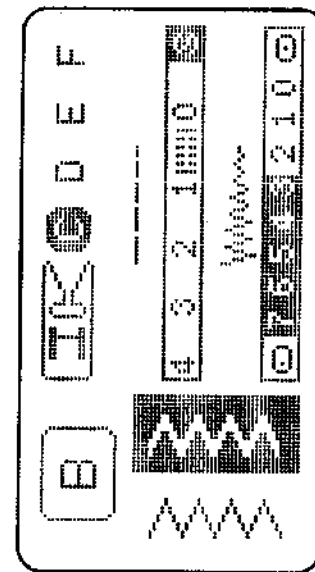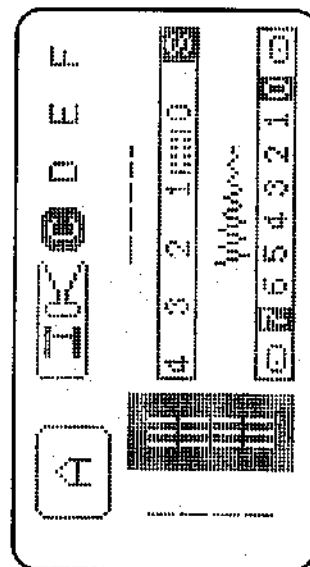




☐ General instructions of electronic display

Practical Stitches

Regular setting

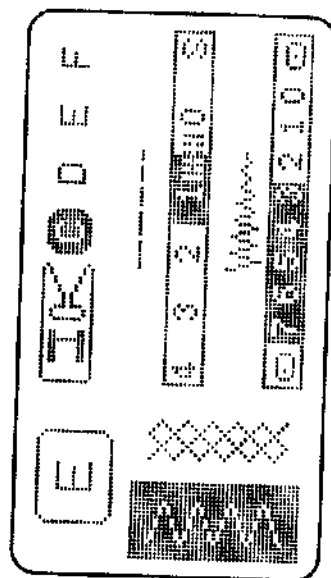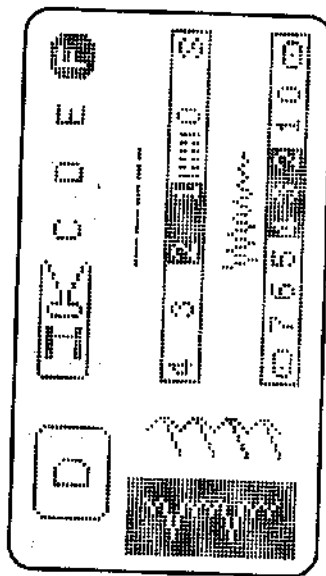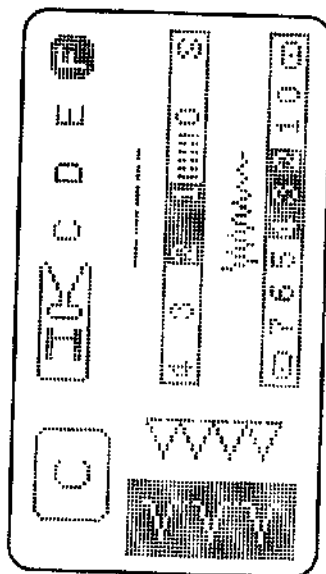


"S" setting

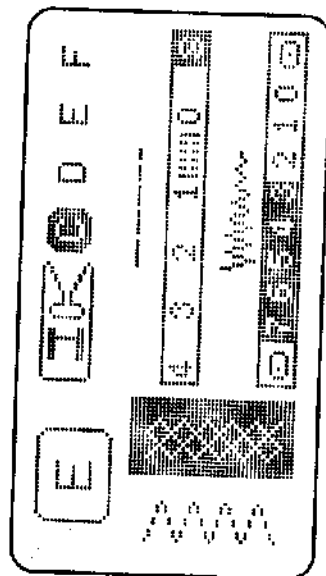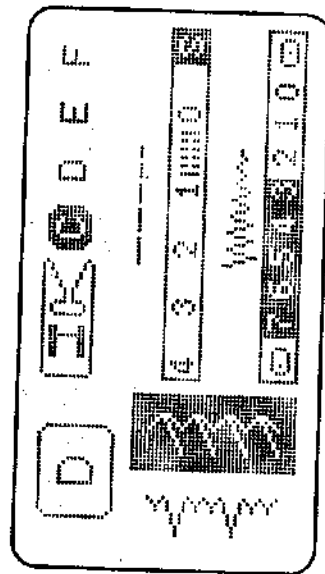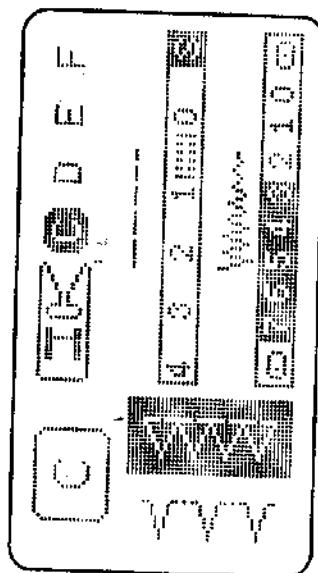


☐ General instructions of electronic display

Practical Stitches

Regular setting

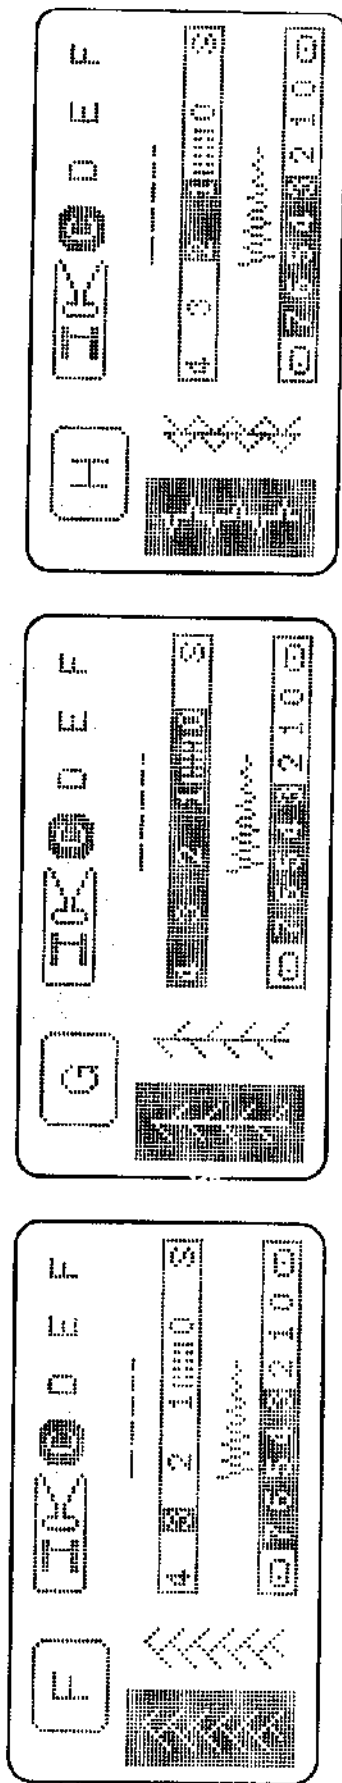


"S" setting

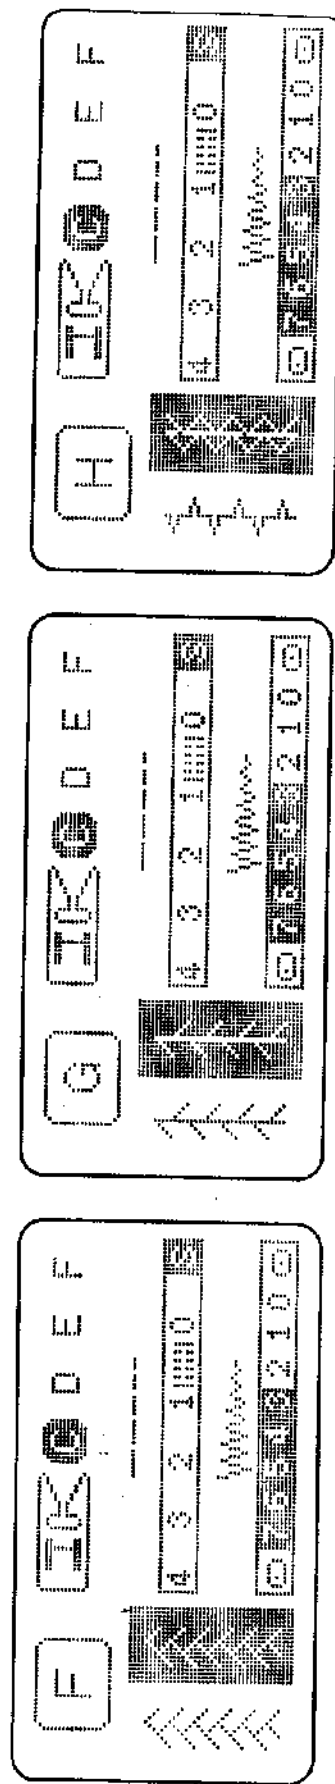


☐ General instructions of electronic display

Practical Stitches

Regular setting

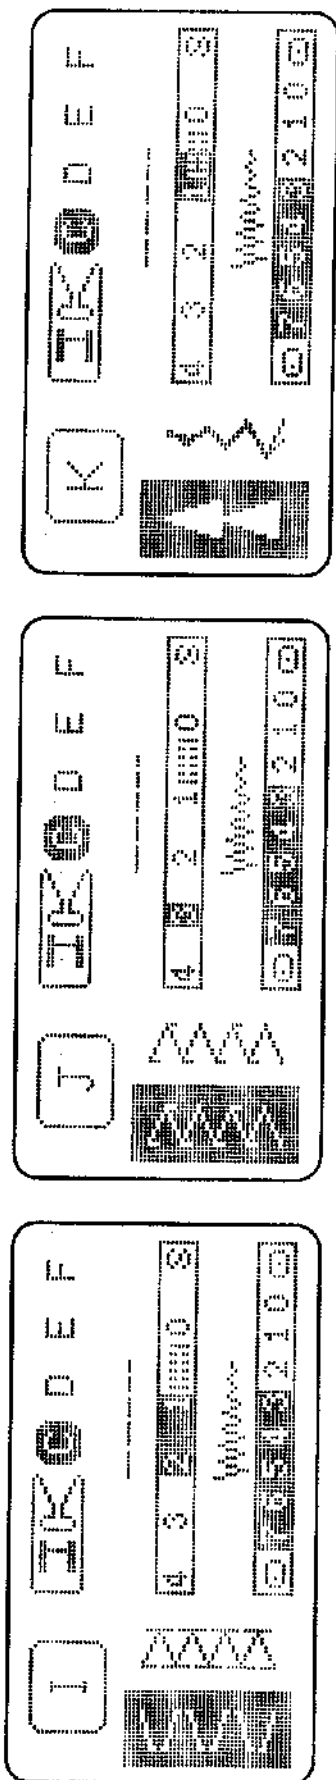


"S" setting

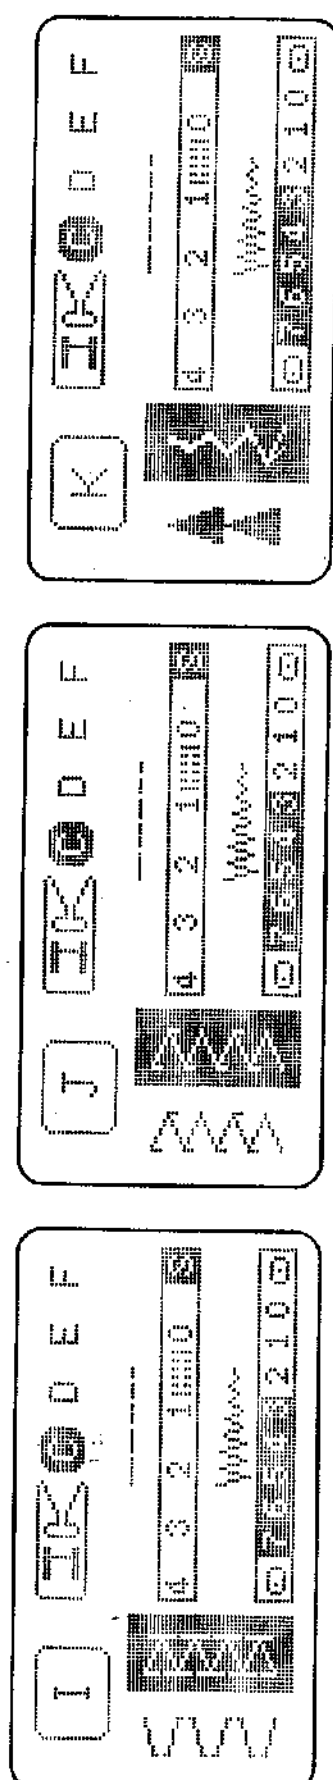


☐ General instructions of electronic display

Practical Stitches

Regular setting

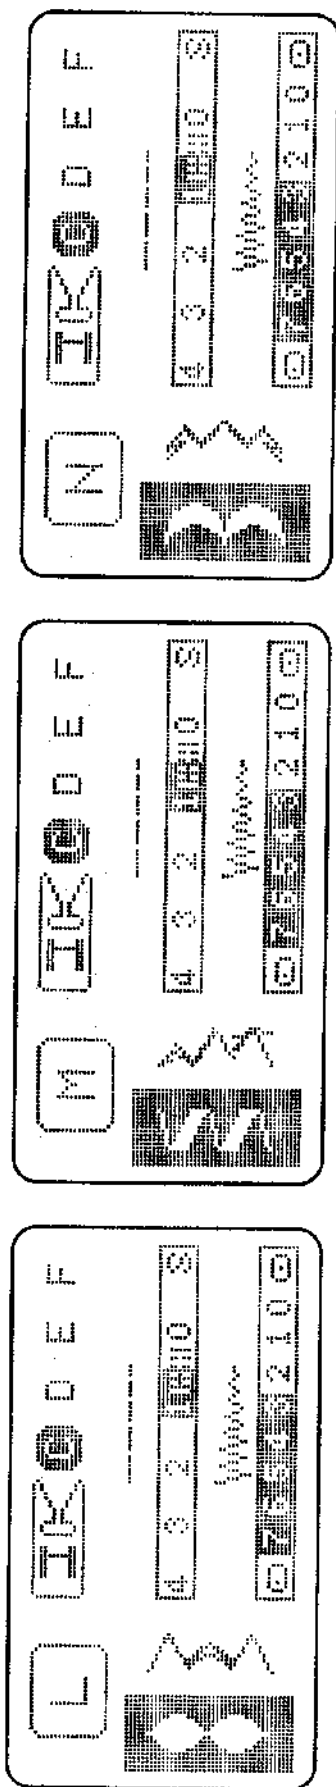


"S" setting

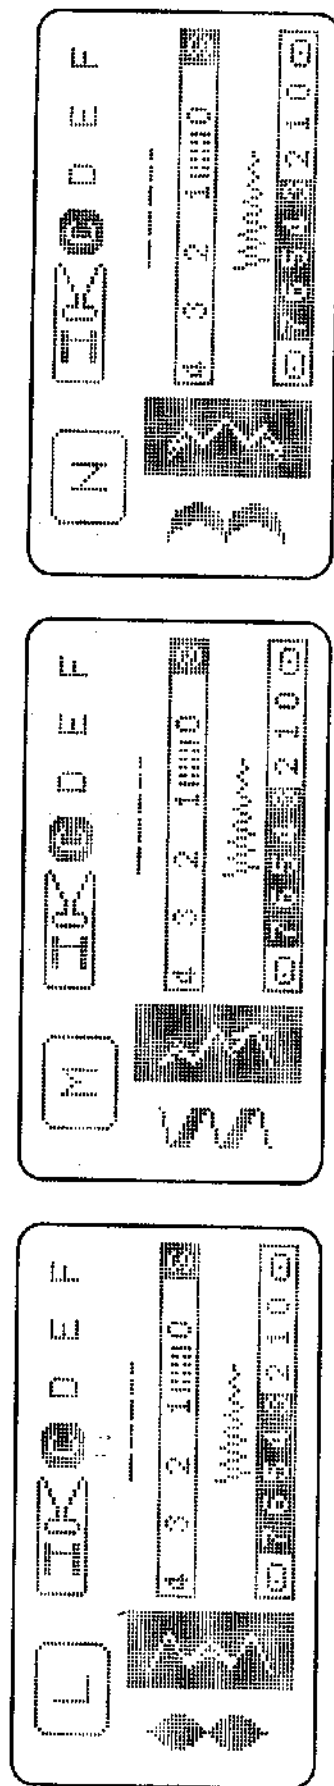


☐ General instructions of electronic display

Practical Stitches

Regular setting

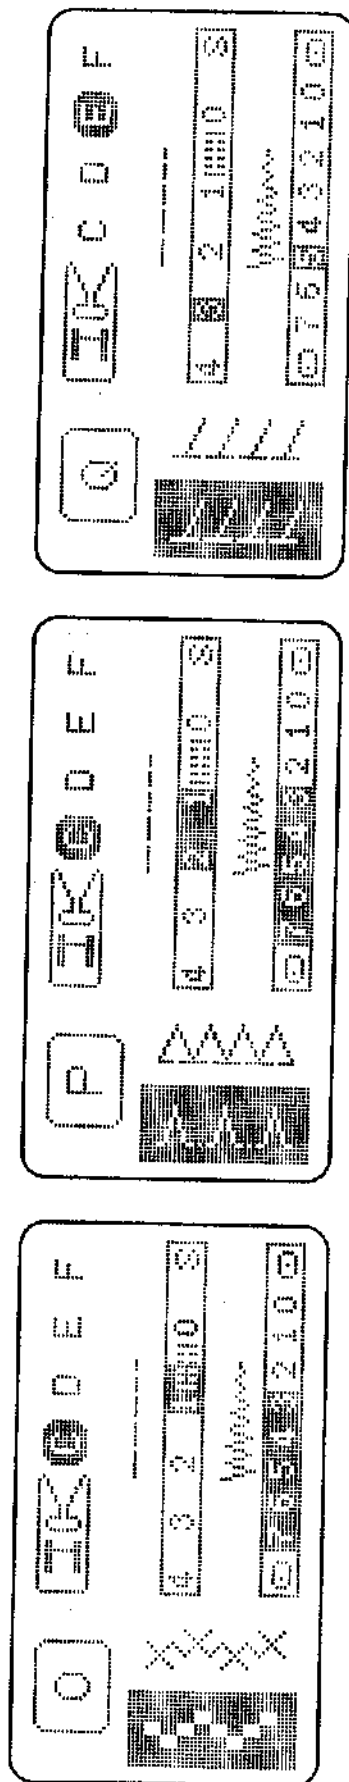

"S" setting

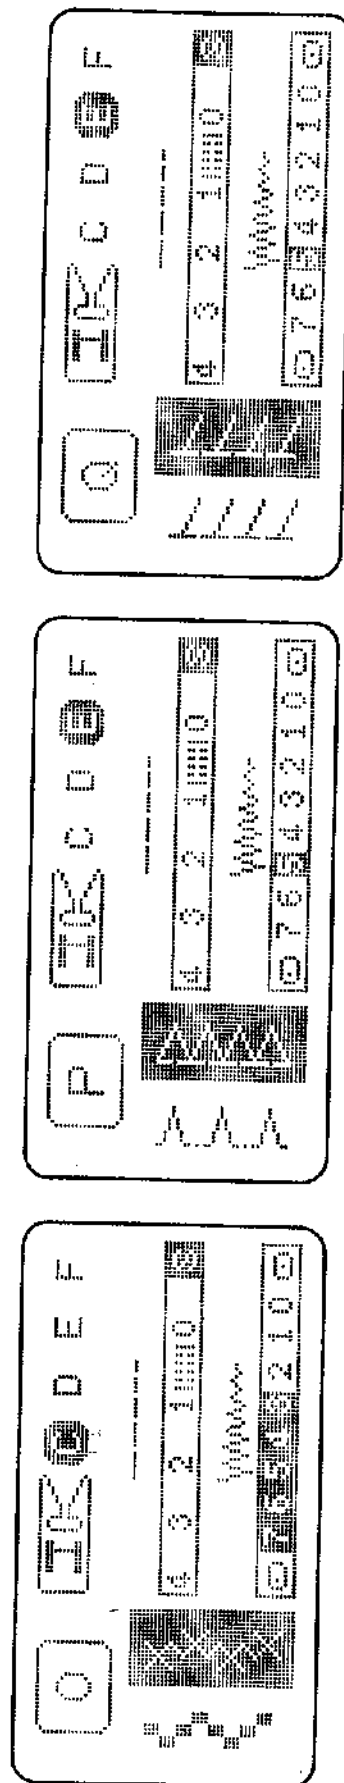

□ General instructions of electronic display

Warning functions

Warning Animation

- Lift the presser foot when winding bobbin.

When the bobbin winder spindle is in "Bobbin winding" position. Turn the switch on and step the foot controller: (1)



1. If presser foot has not been lifted: (a) flash, (b) warning animation of upper arrowhead for reminding user to lift the presser foot, (c) animation of winding bobbin.
 2. If presser foot has been lifted: (a), (b) motionless, (c) animation of winding bobbin.
- The presser foot should be down when sewing under normal situation.

When the bobbin winder spindle is in "Sewing" position. Turn the switch on and step the foot controller: Warning display (2) and normal sewing display will be interchanged and will not return to the normal sewing display until the presser foot is down.

Warning beep sound

- The power turn on, while you hear a short beep, it means the sewing machine is ready.
- Press the front cover's needle stop position and Reverse button. When you hear the short beep, it means the input indication is ready.
- While hearing the 3-short beeps and can't sew, it means the thread is twisting or the hand wheel axle can't move. Please find the solution on page 54. "Trouble shooting guide".
- When the sewing machine is in trouble and can't sew, it will sound 2 - short beeps to alert the input is ineffective. After the problem is solved, the sewing machine can continue to sew.

* If the problem is still not solved, please contact your local dealer.


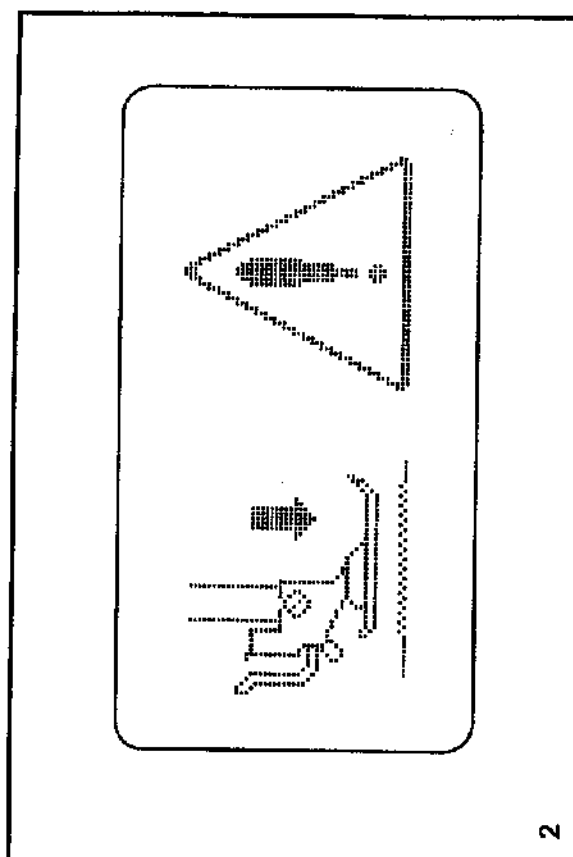
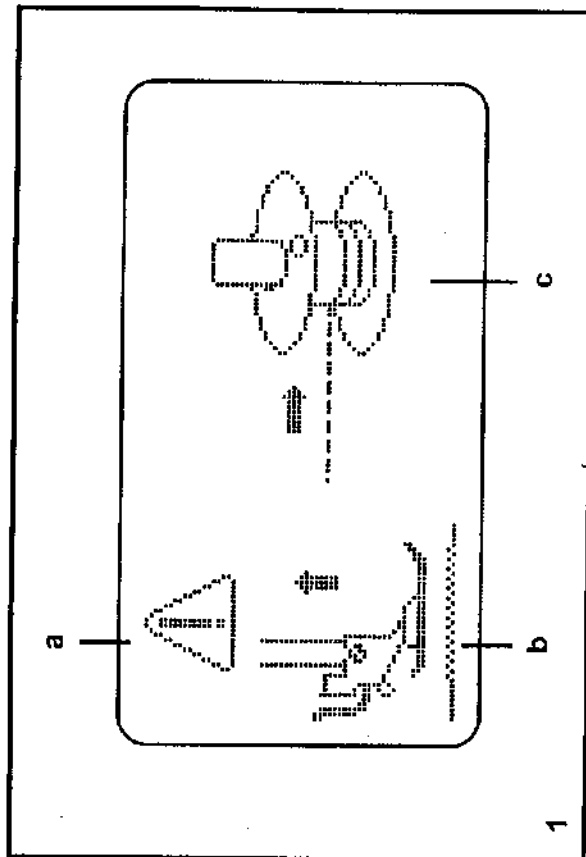


☐ Straight stitching and needle position

Turn the stitch selection dial so that the pointer is set to the straight stitch position "A".

Generally speaking, the thicker the fabric, thread and needle, the longer the stitch should be.

Choose your needle position, from center position to left needle position by changing the stitch width dial from "0" to "7".

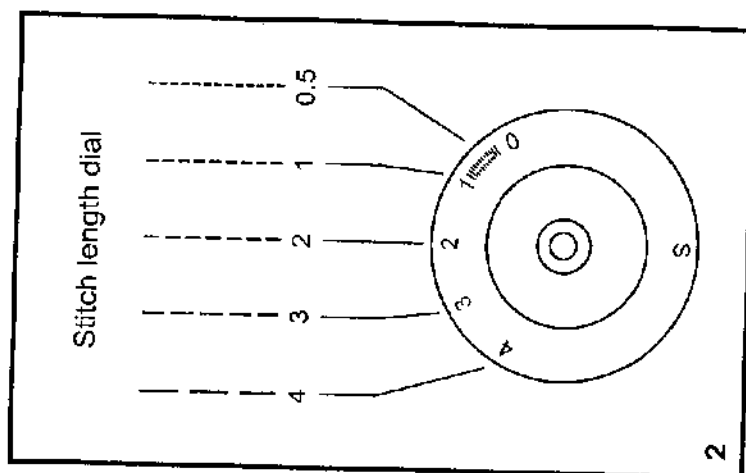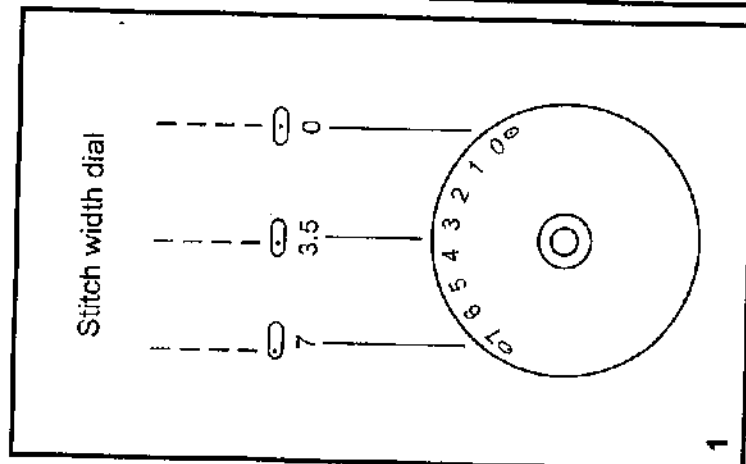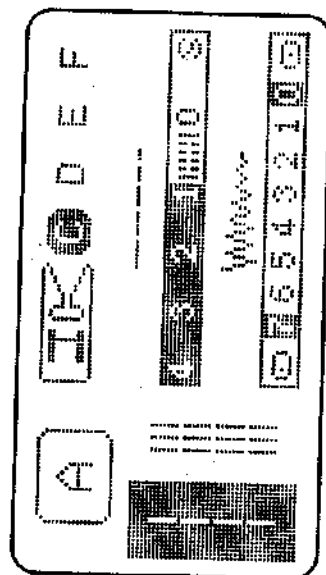

□ Zigzag stitching

Turn the stitch selection dial so that the pointer is set to the zigzag stitch position "B".

Function of zigzag dial



The maximum zigzag stitch width for zigzag stitching is "7"; however, the width can be reduced on any patterns. The width increases as you move zigzag dial from "0" - "7". For twin needle sewing, never set the width wider than "3.5". (1)

Function of stitch length dial while zigzagging

The density of zigzag stitches increase as the setting of stitch length dial approaches "0".

Neat zigzag stitches are usually achieved at "2.5" or below (2)

Closed up zigzag stitches (close together) are referred to as a satin stitch.

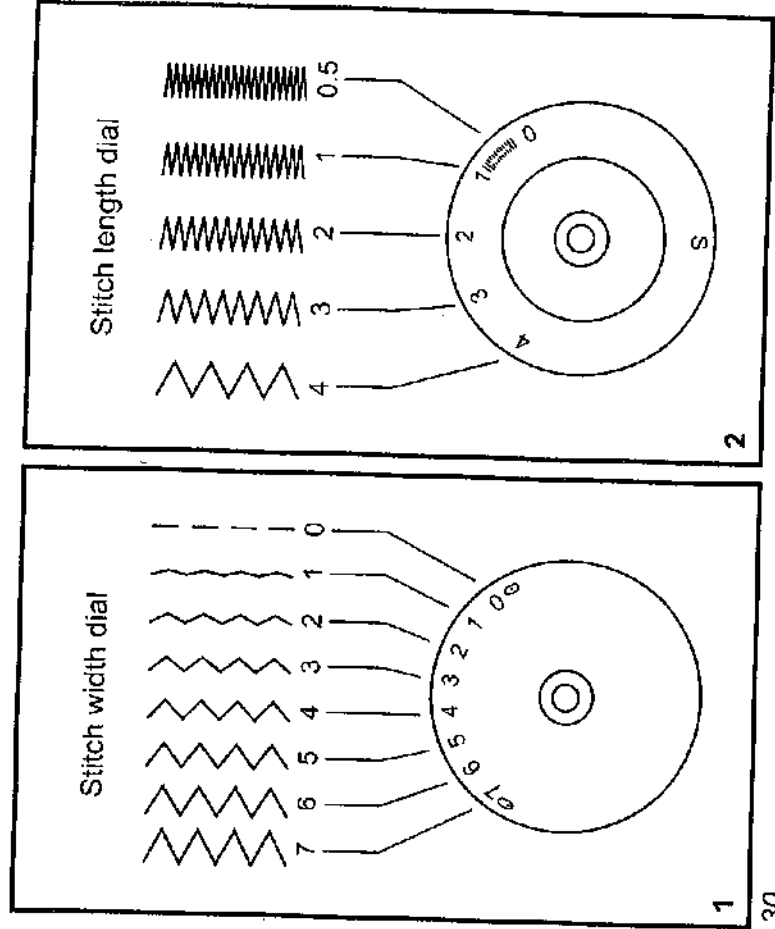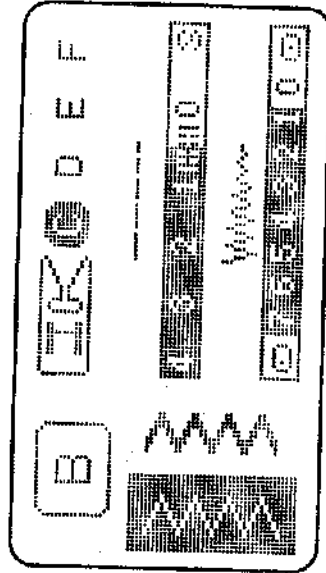

☐ Blind hem/ lingerie stitch

For hems, curtains, trousers, skirts, etc.

^...^ Blind hem/lingerie for firm fabrics, position on selection dial position "C" on selection dial.

^w^w Blind hem for stretch fabrics position "D" on selection dial.

Note:



It takes practice to sew blind hems. Always make a sewing test first.

Fold the fabric as illustrated with the wrong side uppermost. (1)

Place the fabric under the foot. Turn the handwheel forwards by hand until the needle swings fully to the left. It should just pierce the fold of the fabric. If it does not, adjust the stitch width accordingly. (2)

Adjust the guide (3) by turning the knob (4) so that the guide just rests against the fold.

Sew slowly, guiding the fabric carefully along the edge of the guide.

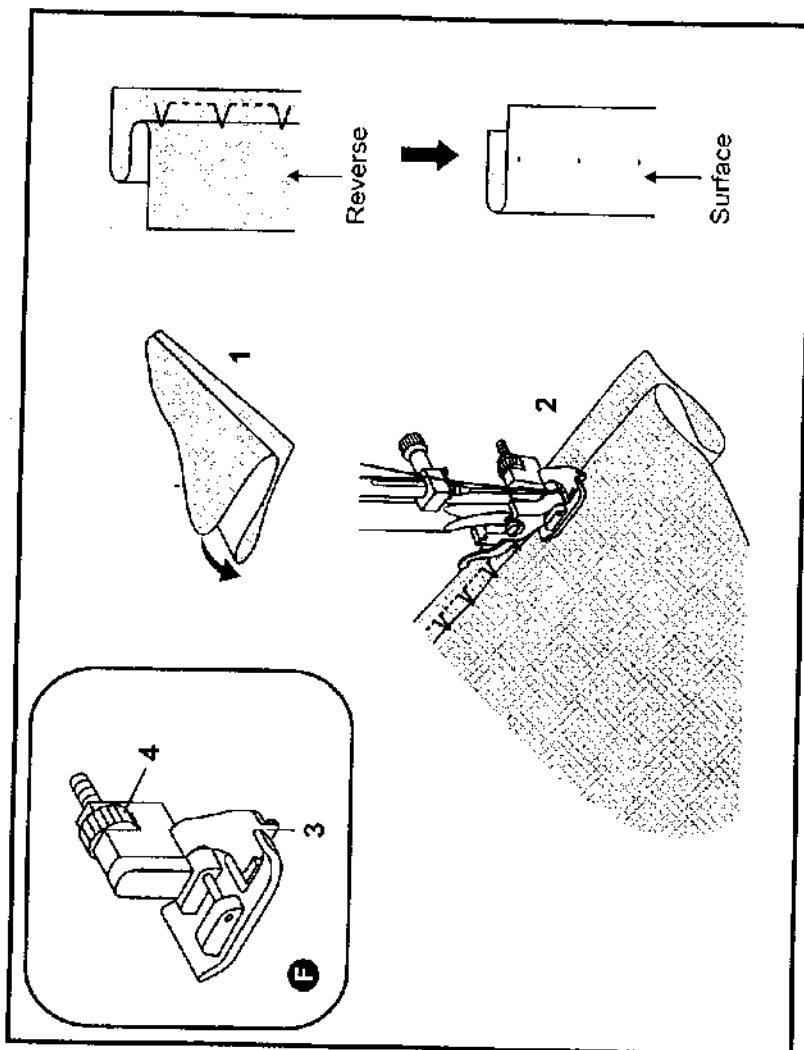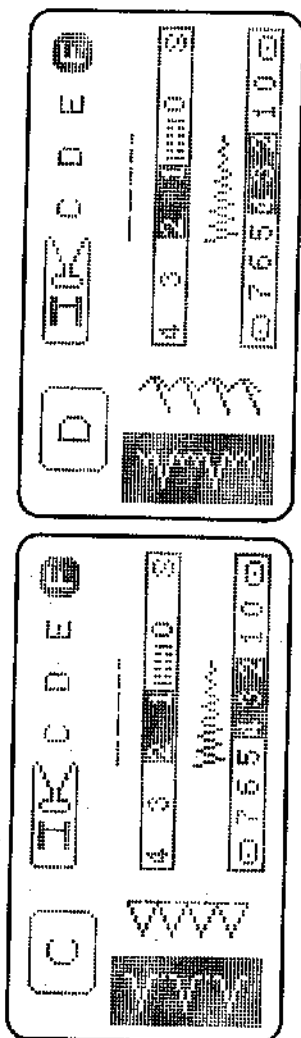

☐ Overlock stitches

Seams, neatening, visible hems.

Turn stitch length dial to "S". The stitch width can be adjusted to suit the fabric.

Standard overlock

Position "P" on selection dial.

For fine knits, jerseys, neck edges, ribbing. (A)

Double overlock stitch

Position "I" on selection dial.

For fine knits, handknits, seams. (B)

Stretch overlock





Position "Q" on selection dial.

For fine knits, jerseys, neck edges, ribbing. (C)

All overlock stitches are suitable for sewing and neatening edges and visible seams in one operation. When neatening, the needle should just go over the edge of the fabric.

Attention:

Use new needles or ball point needles or stretch needle!

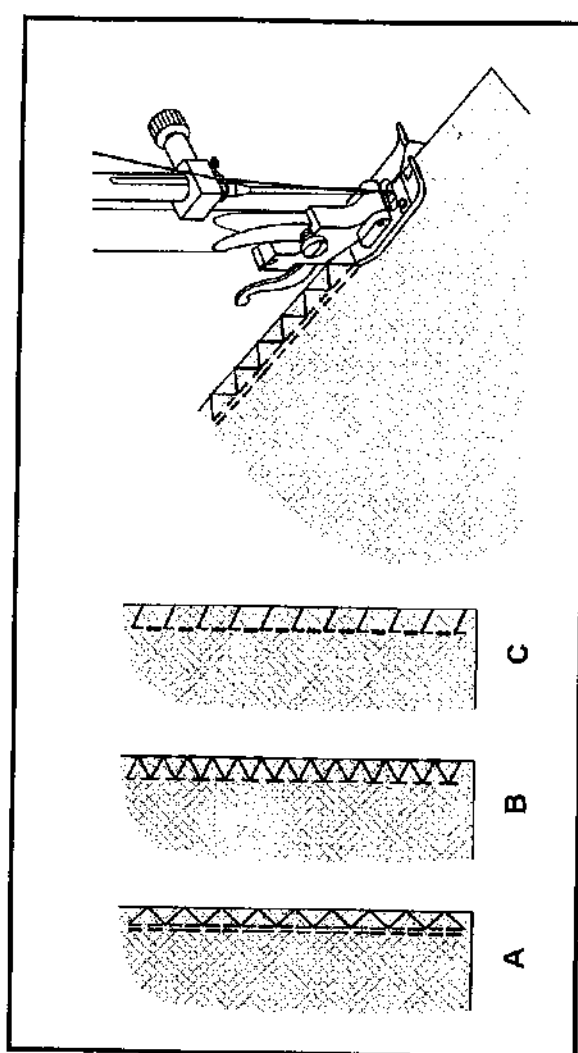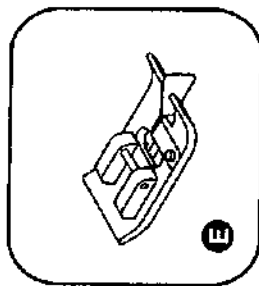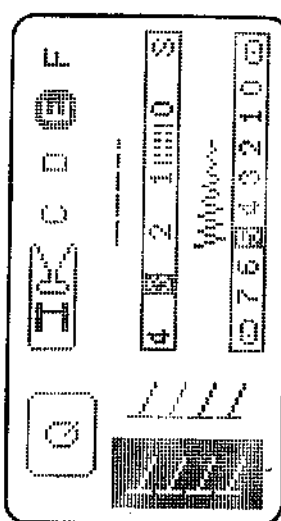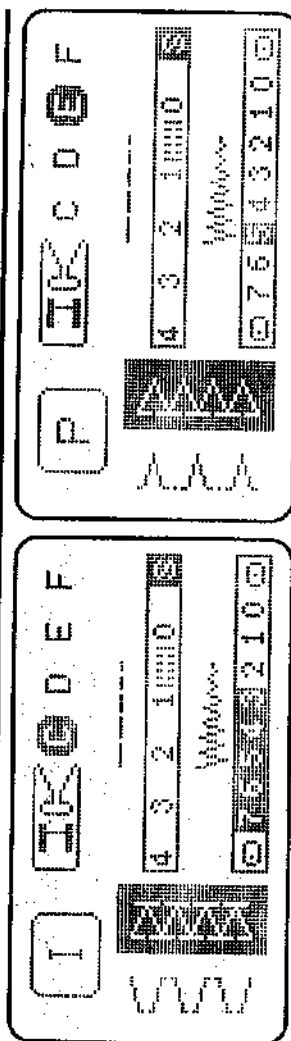






☐ Sewing on buttons

Move the drop feed control to right side to lower the feed dogs.

Change presser foot to button sewing foot (1). Select zig zag pattern "B".

Position the work under the foot. Place the button in the desired position, lower the foot, adjust stitch width to "0" and sew a few securing stitches. Adjust the stitch width to "3". Turn the handwheel to check that the needle goes cleanly into the left and right holes of the button (adjust the stitch width according to the button), and slowly sew on the button with about 10 stitches. Adjust the stitch width to "0" and sew a few securing stitches (2).

If a shank is required, place a darning needle on top of the button and sew (3). For buttons with 4 holes, sew through the front two holes first (2), push work forward and then sew through the back two holes (3).

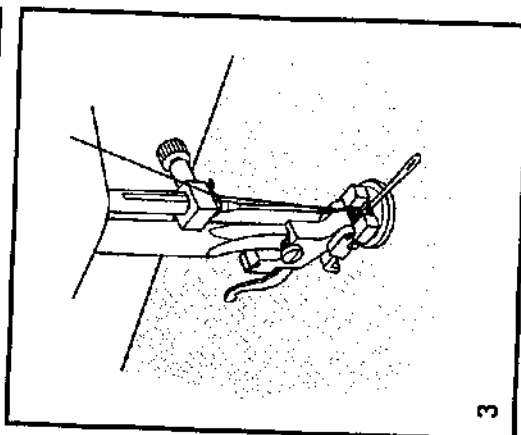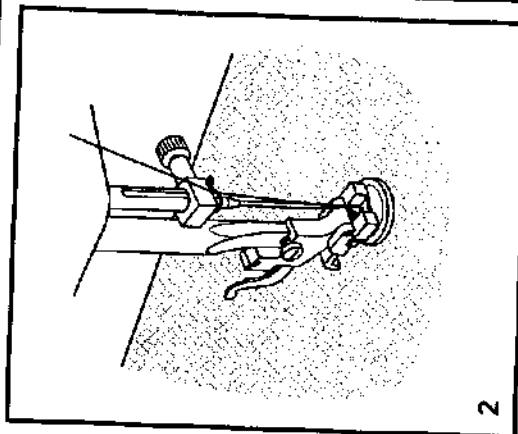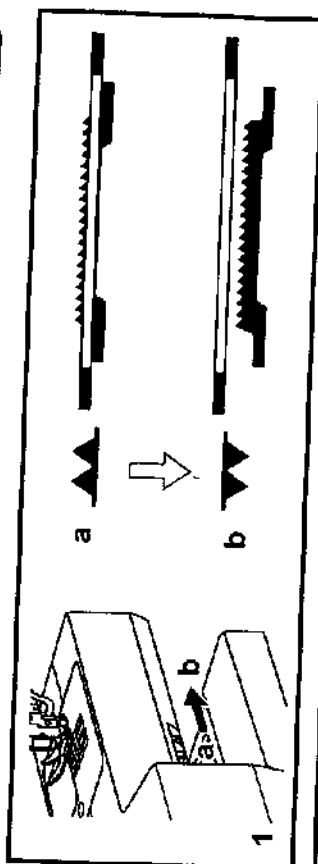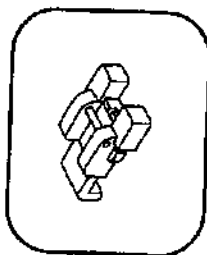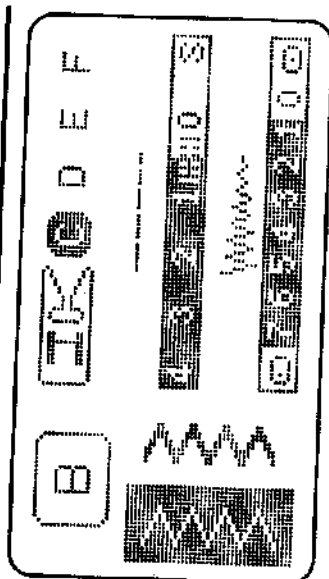

□ How to sew buttonholes (one-step buttonhole)

Buttonhole sewing is a simple process that provides reliable results. However, it is strongly suggested to always make a practice buttonhole on a sample of your fabric and interfacing.


Making a Buttonhole

1. Using tailor's chalk, mark the position of the buttonhole on the fabric.
2. Attach the buttonhole foot and set the pattern selector dial to "□". Set stitch length dial to "10/10". Adjust stitch width to desired width.
3. Lower the presser foot aligning the marks on foot with the marks on the fabric (A). (The front bar tack will be sewn first.) Align the mark on the fabric (a) with the mark on the foot (b).
4. Open the button plate and insert the button (B).
5. Lower the buttonhole lever and gently push it back (C).
6. While lightly holding the upper thread, start the machine.
7. Buttonhole stitching is done in the order (D).
8. Stop the machine when the buttonhole is sewn.

Making a Buttonhole on Stretch Fabrics (E)

When sewing buttonholes on stretch fabric, hook heavy thread or cord under the buttonhole foot. When the buttonhole is sewn the legs will overcast the cord.

1. Mark the position of the buttonhole on the fabric with the tailor's chalk, attach the buttonhole foot, and set the pattern selector dial to "□". Set stitch length dial to "10/10".
2. Hook the heavy thread onto the back end of the buttonhole foot, then bring the two heavy thread ends to the front of the foot, insert them into the grooves and temporarily tie them there.
3. Lower the presser foot and start sewing.
*Set the stitch width to match the diameter of the gimp thread.
4. Once sewing is completed, gently pull the heavy thread to remove any slack, then trim off the excess.

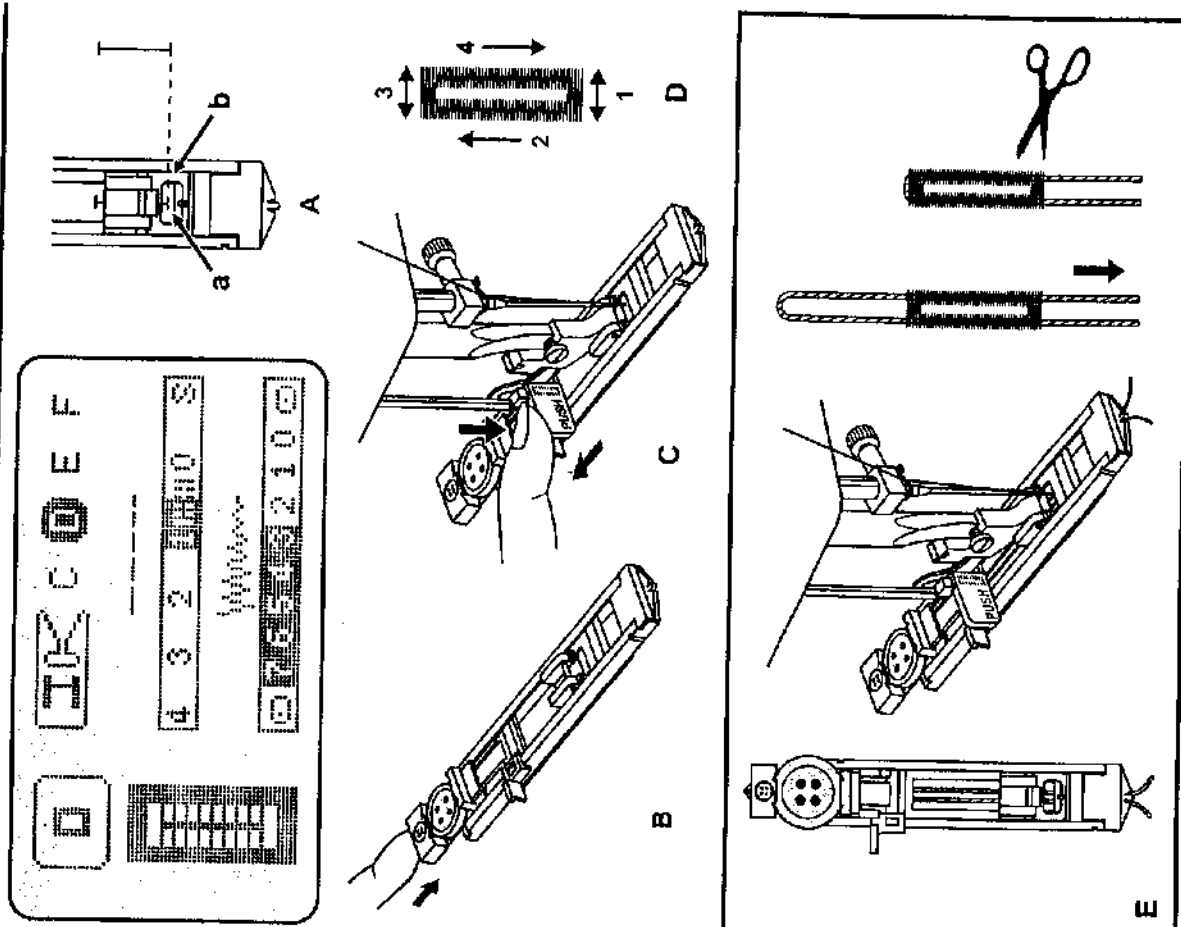

☐ **Left and right side balance for buttonhole**

Stitch density on right and left sides of buttonhole can be adjusted by buttonhole balance control dial.


This dial should usually be in a neutral position (between "+" and "-")

If the stitches on the left side of buttonhole are too close together, turn the dial to the left "+".

* Turning dial to the left opens left side.

If the stitches on the left side of the buttonhole are too open, turn the dial to the right "-".

* Turning dial to right closes left side.

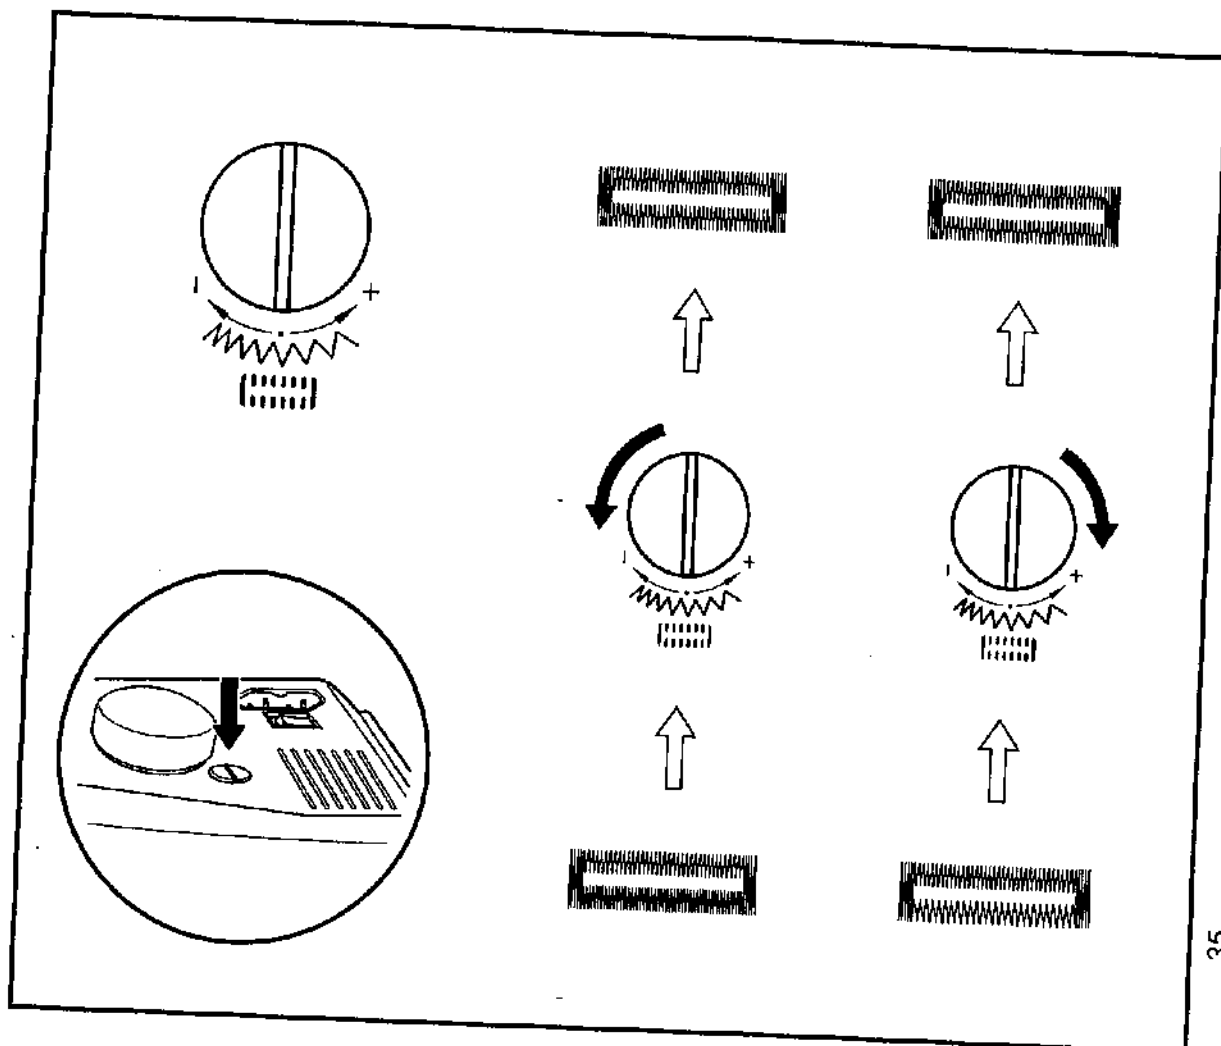



☐ Zippers and piping

Set the machine as illustrated. Dial selector on "A". Set stitch length control between "1" - "4" (according to thickness of fabric). Change to zipper foot. (1)


The zipper foot can be attached right or left, depending on which side of the foot you are going to sew. (2)

To sew past the zipper pull, lower the needle into the fabric, raise the presser foot and push the zipper pull behind the presser foot. Lower the foot and continue to sew.


It is also possible to sew in a length of cord, into a bias strip to form a "welt". (3)

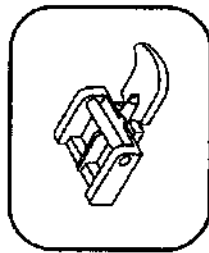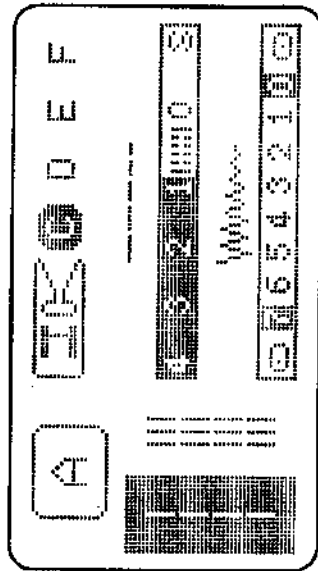

1

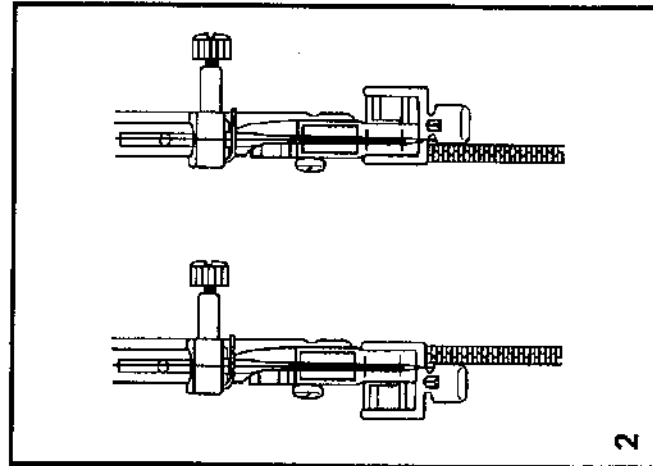

2

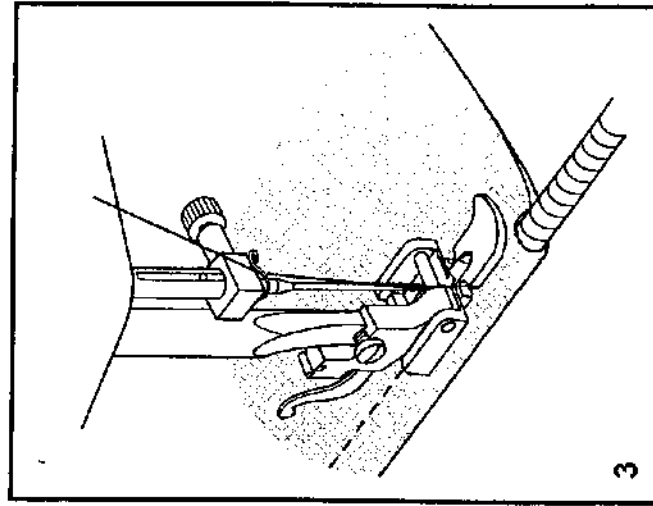

3

☐ **Sewing with the optional hemmer foot**



* The hemmer foot is an optional accessory not supplied with your machine.

For hems in fine or sheer fabrics.



Set the machine as illustrated. (1) Pattern selector on "A".

Neaten the edge of the fabric. At the beginning of the hem, turn under the edge twice by about 3 mm (1/8") and sew 4-5 stitches to secure. Pull the thread slightly towards the back. Insert the needle into the fabric, raise the presser foot and guide the fold into the scroll on the foot. (2)

Gently pull the fabric edge towards you and lower the presser foot. Begin sewing, guiding the fabric into the scroll by holding it upright and slightly to the left. (3)

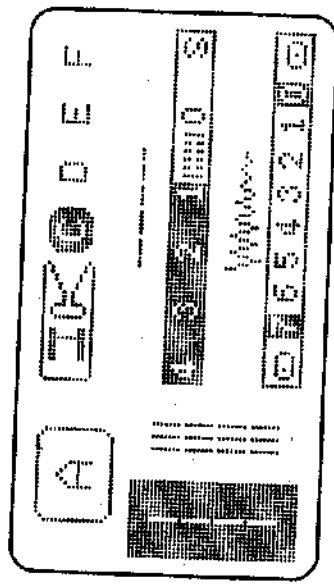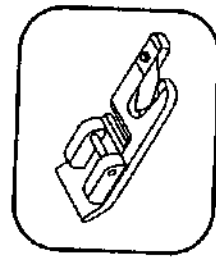

1

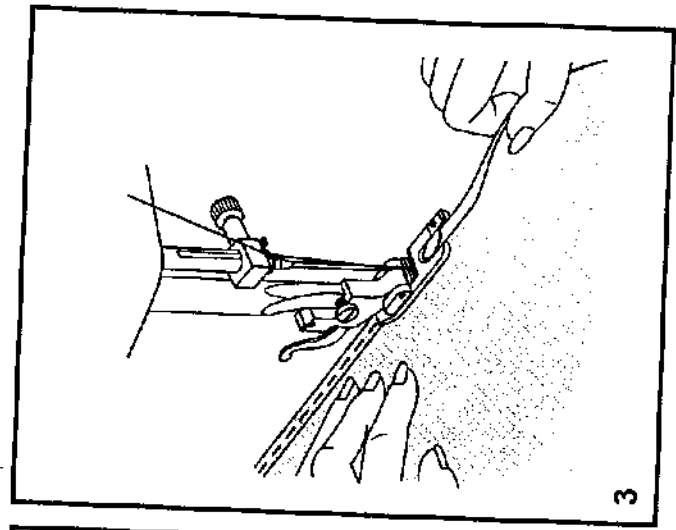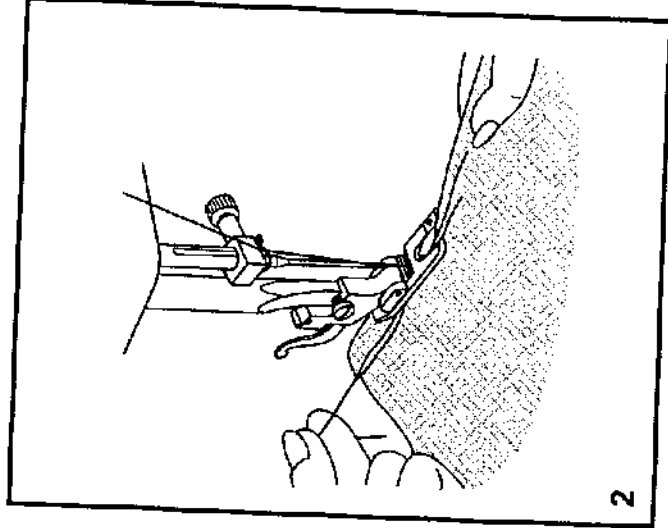



☐ Multi-stitch zig-zag

Sewing on lace and elastic, darning, mending, reinforcing edges bar tacks.


Set the machine as illustrated. (1) Pattern selector on "E".

Place patch in position. The stitch length can be shortened to produce very close stitches. (A)

When mending tears, it is advisable to use a piece of backing fabric to reinforce. The stitch density can be varied by adjusting the stitch length. First sew over the center and then overlap on both sides. Depending on the type of fabric and damage, sew between 3 and 5 rows. (B)

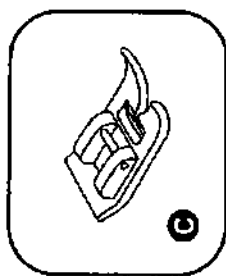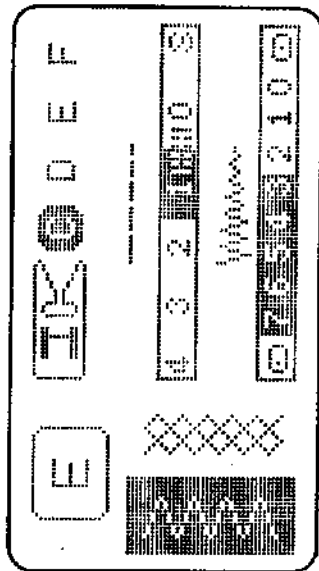

1

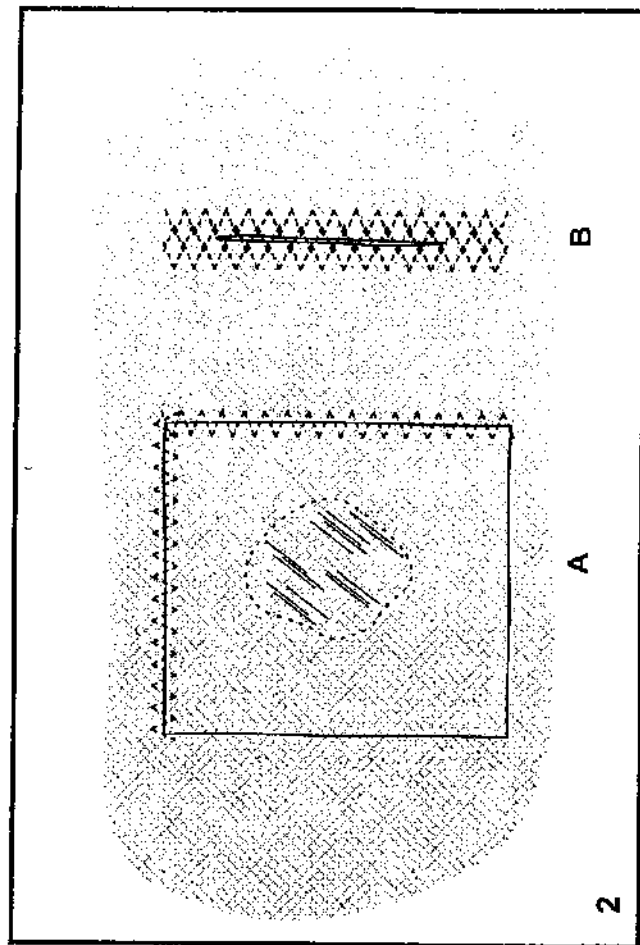

2

☐ Straight stretch stitch and Ric Rac stitch

Straight stretch stitch: (1/3)

Set the stitch pattern dial to "A".
Used to add triple reinforcement to stretch and hardwearing seams.

Set the stitch width dial to "0" or "7".

Set the stitch length dial to "S"

Ric Rac stitch: (2/4)


Set the stitch pattern dial to "B".

Used primarily as a decorative stitch.

Set the stitch length dial to "S".



Adjust the stitch width dial to between "3" and "7".

Ric Rac stitch is suitable for firm fabrics like denim, poplin, duck, etc.

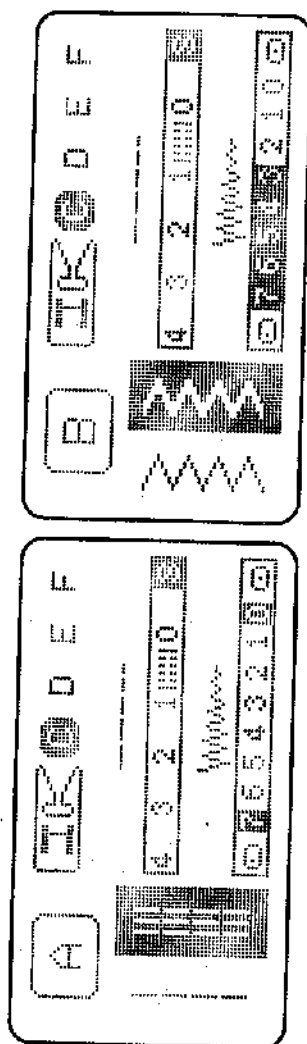

1

2

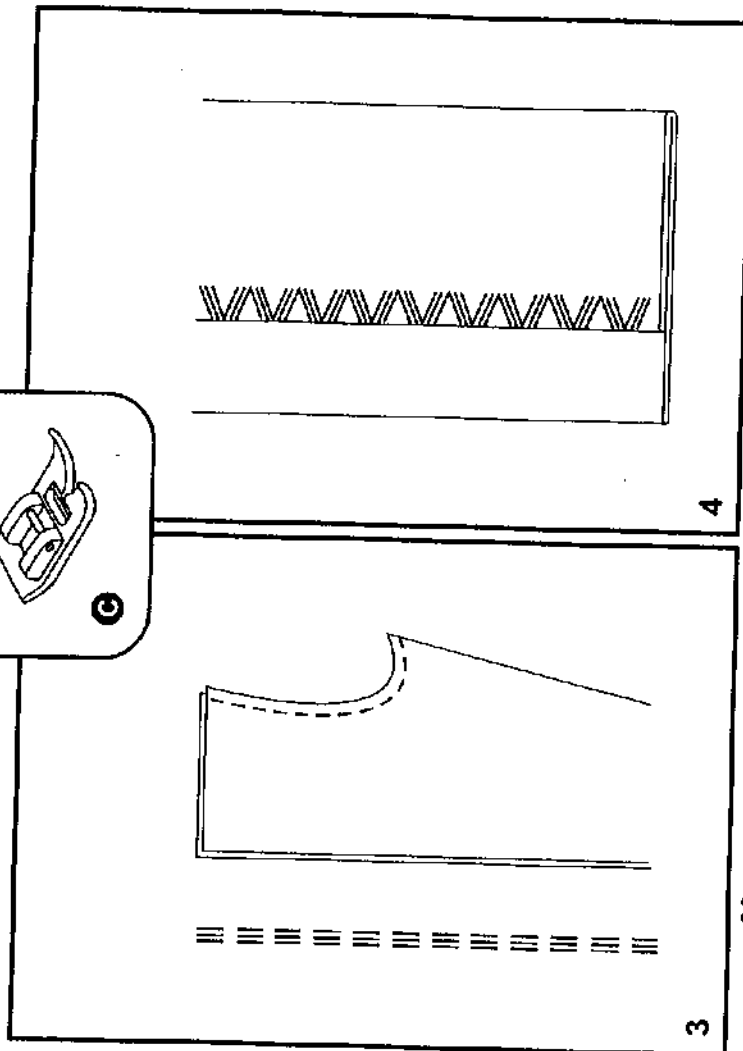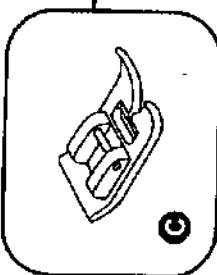

4

☐ Honeycomb stitch

Seams, hems, T-shirts, underwear, etc.

Set the machine as illustrated. (1)



Set stitch pattern selector on "E".

Set the stitch length dial to "S".


Set the stitch width dial to between "3" and "7".

This stitch can be used for all types of jersey as well as for woven fabrics. (2)


When using Honeycomb stitch pattern for hemming sew at 1 cm (1/4") from the fabric edge and trim the surplus fabric. (3)

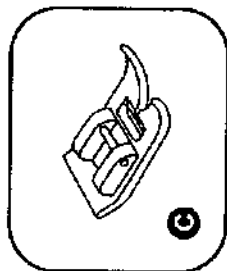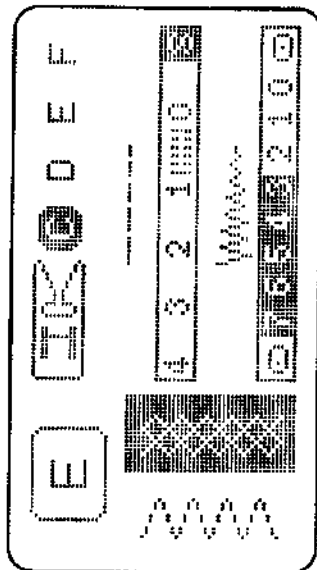

1

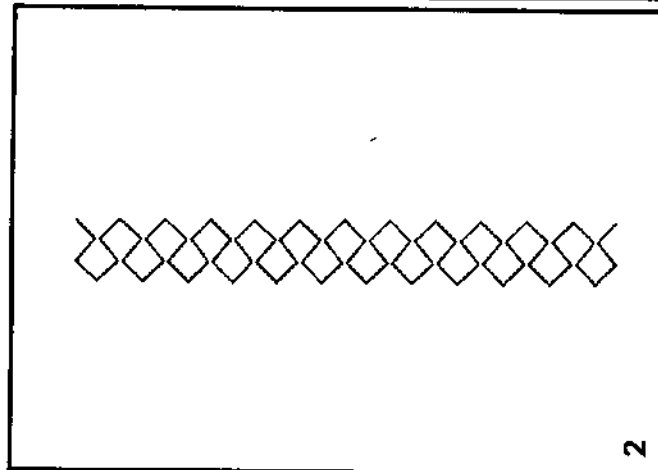

2

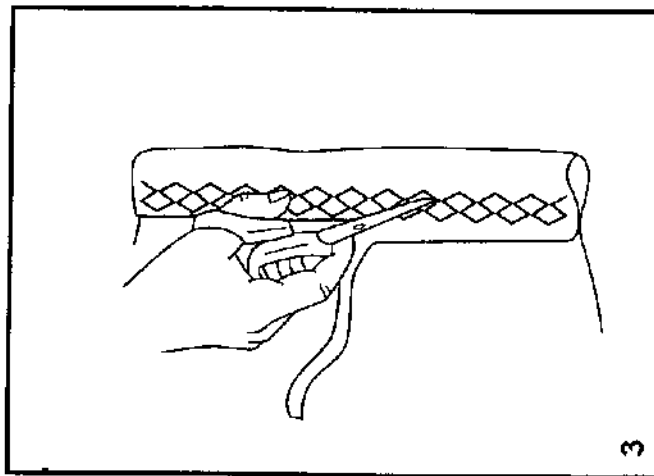

3

☐ **Sewing with the optional cording foot**



* The cording foot is an optional accessory not supplied with your machine.

Decorative effects, cushions, tablecloths, etc.


Set stitch selector to position "B".

In addition to zig zag, various other stitches are suitable for sewing on cord, e.g. blind hem, multi-stitch zig-zag, decorative stitches.


Insert the cord between the spring covering the cord groove and the foot (2). The cord should run in the groove. One, two or three cords can be sewn on. The stitch width is adjusted according to the number of cords and the stitch selected (3).

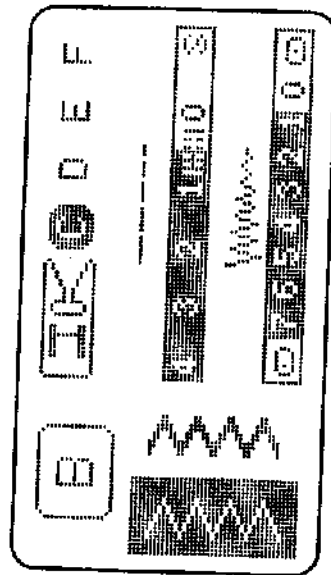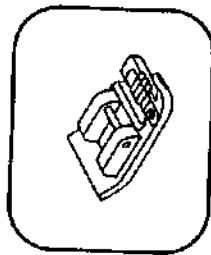

1

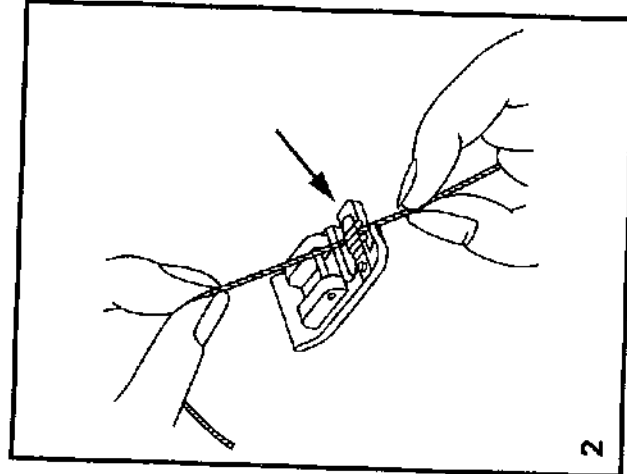

2

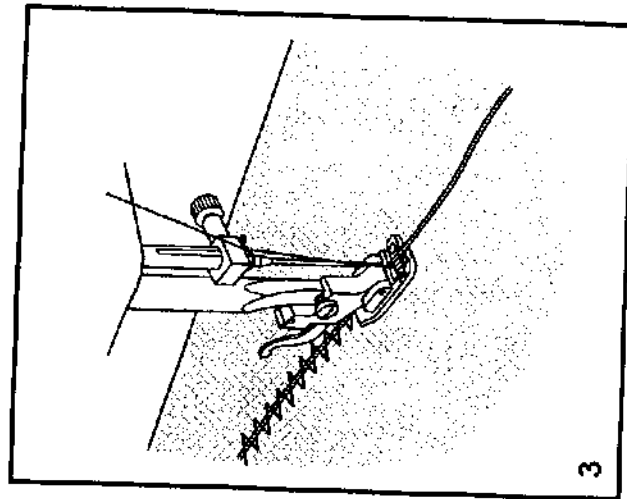

3

☐ **Free motion darning**

* The darning foot is an optional accessory not included with your machine.

Set the pattern selector dial to "A".

Move the drop feed control to right to lower the feed dogs. (2)

Remove the presser foot clamp (3).




Attach the darning foot to the presser foot holder. The lever (A) should be behind the needle clamp screw (B). Press the darning foot on firmly from behind with your index finger and tighten the screw (C). (4)

First sew around the edge of the hole (to secure the threads) (5). First row: Always work from left to right. Turn work by 1/4 and oversew.

A darning ring is recommended for easier sewing and better results.

Note:

Free motion darning is accomplished without the sewing machine internal feed system. Movement of the fabric is controlled by the operator. It is necessary to coordinate sewing speed and movement of fabric.

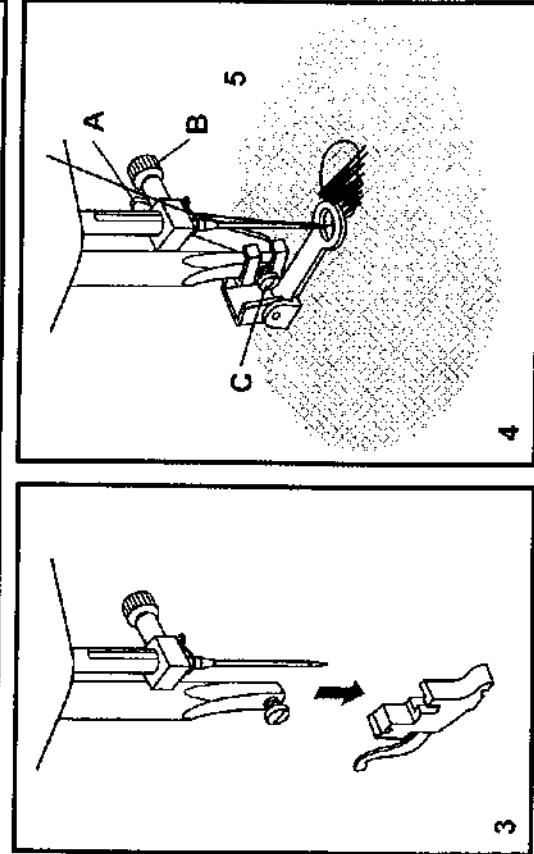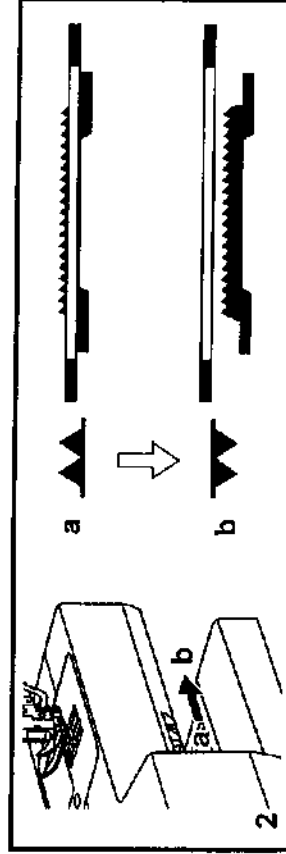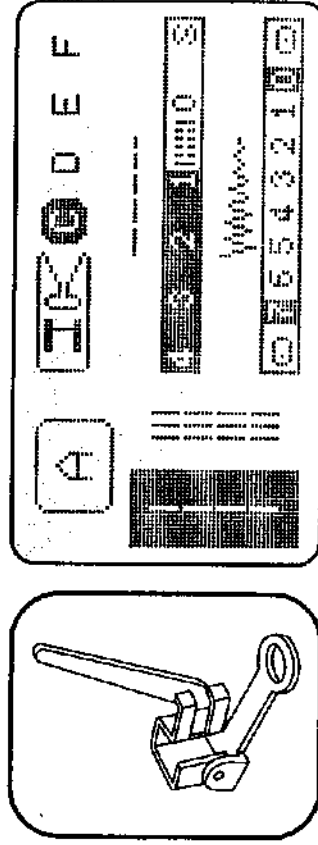

☐ Practical stitches

Set the machine as illustrated.

Turn the switch width dial and stitch length dial to suit the fabric and application.

Feather stitch (A)

For decorative joining seam for a fagoted effect.

Rampart (B)

Gathering with cord or shirring elastic. This stitch can be used for firm, thicker fabrics.


Crescent stitch (C)

For a delicate edge finish along the edge of fabric.

Shell stitch (D)



For decorative edges.

Suitable for edges on sheer, fine and stretch fabrics. The larger stitch should go just over the edge of the fabric to create the shell effect.

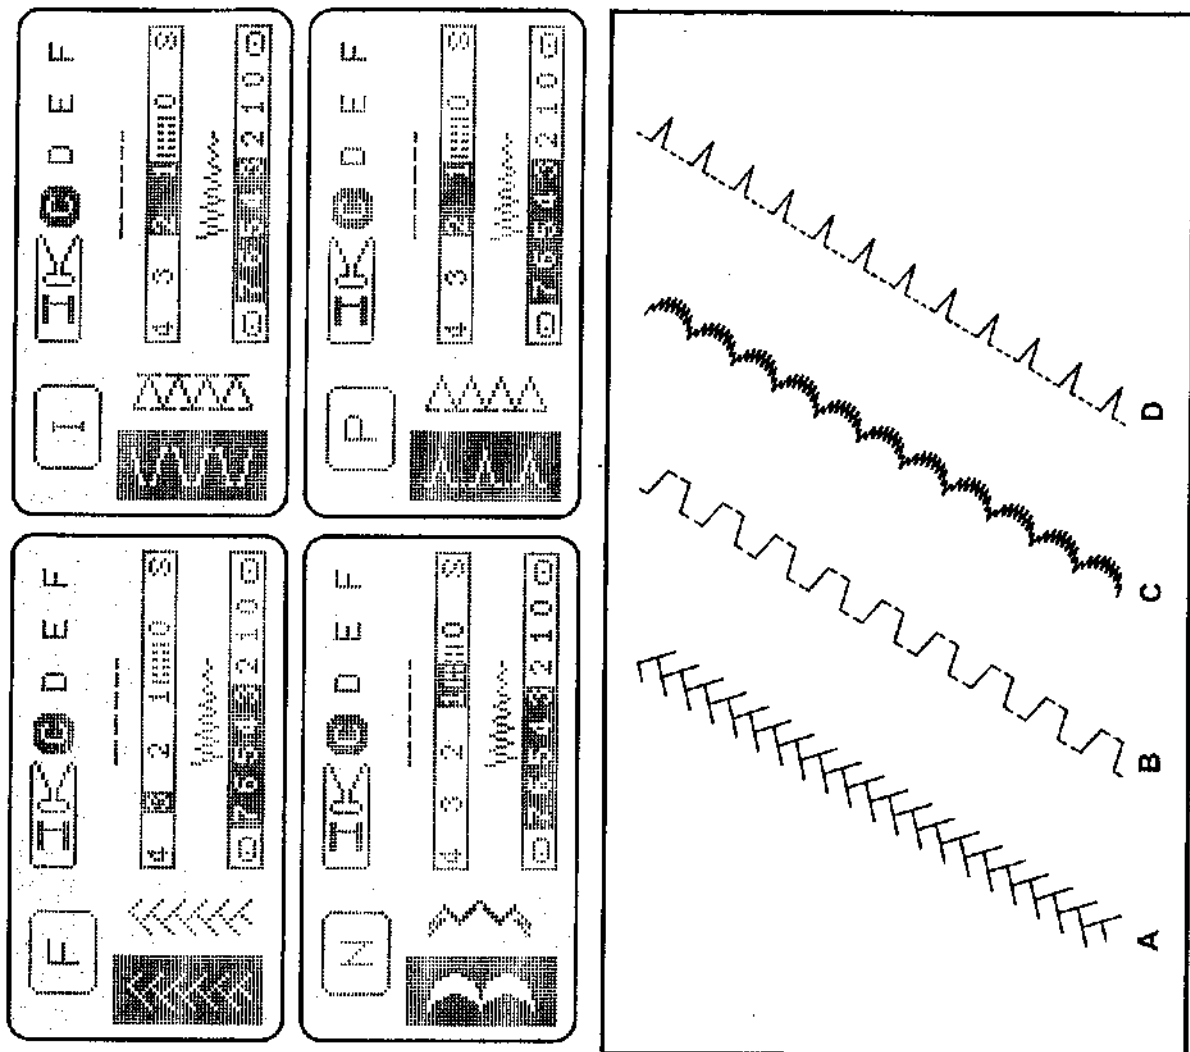


☐ Darning

- Turn stitch length dial to the desired length.
- Turn stitch selector to straight stitch, center needle position.
- Position the fabric to be darned under the presser foot together with the under laying fabric to be used.
- Lower the presser foot and alternately sew forward or reverse using the lever.
- Repeat this motion until the area to be darned is filled with rows of stitching.


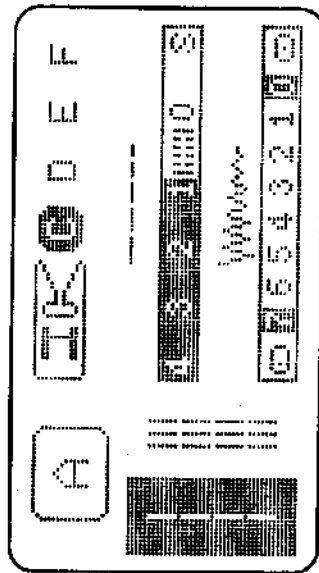
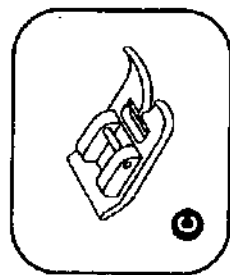


For reverse sewing instructions, see page 17.

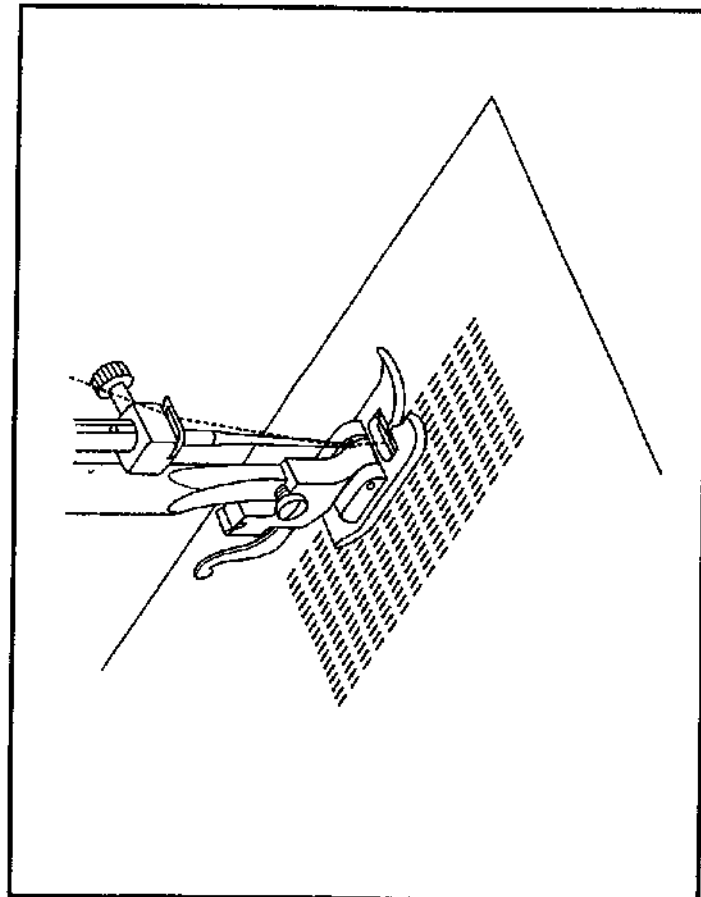





☐ Attaching lace

- Turn stitch length dial to the desired length.
- Turn the stitch selector to straight stitch, center needle position.
- Fold in the edge of the fabric (approximately 6 mm 1/4").
- Place the lace under the folded edge of the fabric allowing it to under lap the fabric slightly as required by the pattern of the lace.
- Sew on the edge of the fabric fold.
- You can add a decorative touch by using the satin stitch to sew the lace.

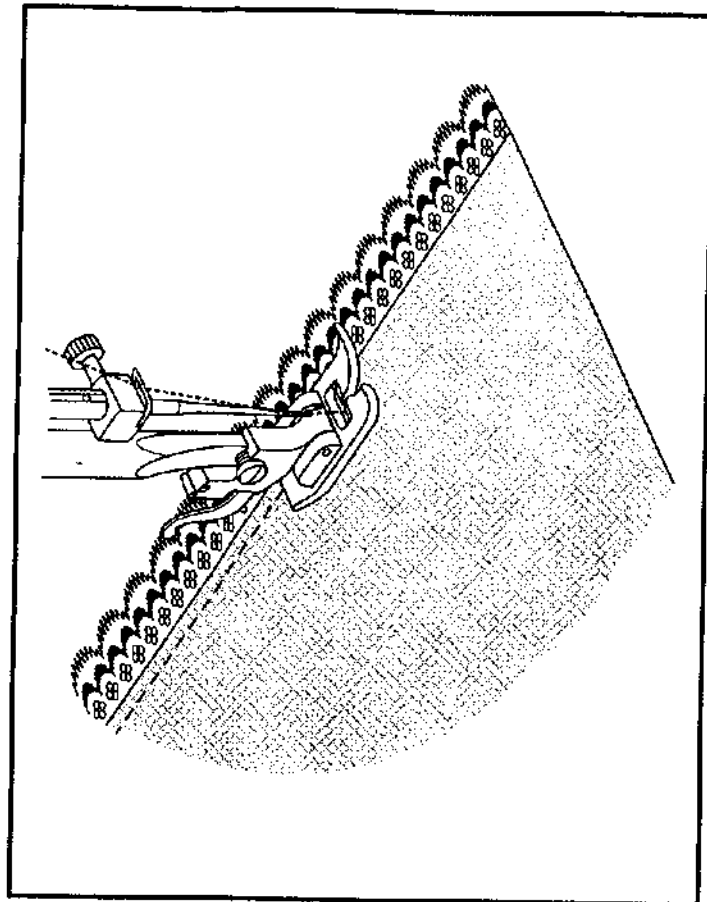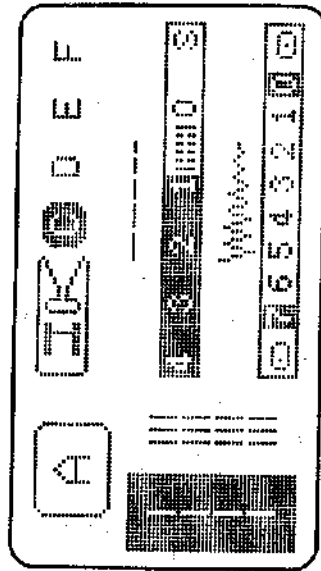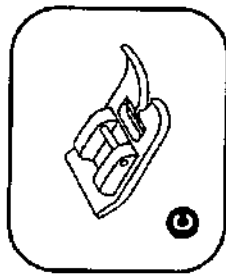

☐ Applique

- Turn stitch length dial to the desired length.
- Turn pattern selector dial to small zig zag width.
- Cut out the applique design and baste it to the fabric.
- Sew slowly around the edge of the design.
- Trim excess material outside the stitching. Make sure not to cut any stitches.
- Remove the basting thread.
- Tie top and bottom thread under the applique to avoid unraveling.

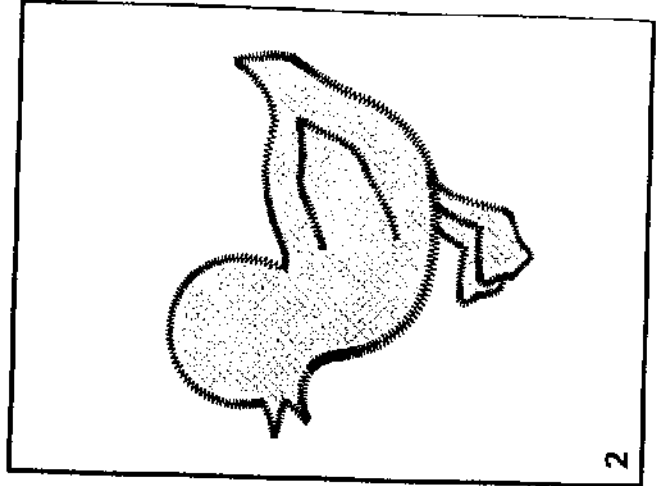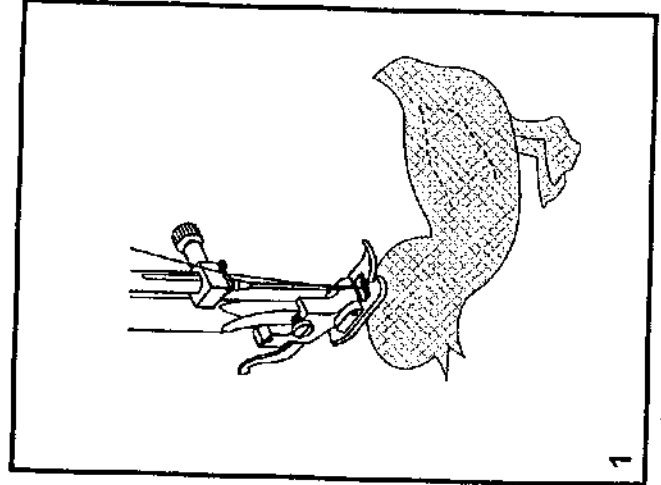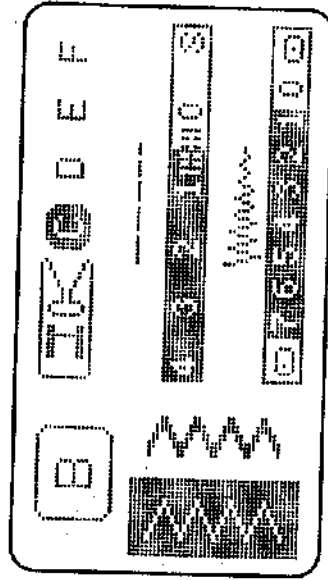
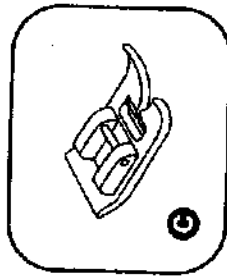


☐ **Twin needle**

- Turn stitch length dial to the desired stitch length.
- Turn stitch selector to straight stitch, center needle position, width setting "0".
- For twin needle sewing, insert the extra spool pin (included with the accessories) into the hole on top of the machine. See pages 3 and 4.
- Make sure that the two threads used to thread the twin needle are of the same weight. You can use one or two colors.
- Insert the twin needle in the same way as single needle. Flat side of needle should face away from you.
- Follow instructions for single needle threading (see page 14).
- Thread each needle separately.

Please Note:



When sewing with twin needle, always proceed slowly, and make sure to maintain a low speed to insure quality stitching. When using twin needle on zig-zag (position "B") make sure the stitch width dial is set between "1" and "3.5". Do not use twin needle at setting above "3.5".

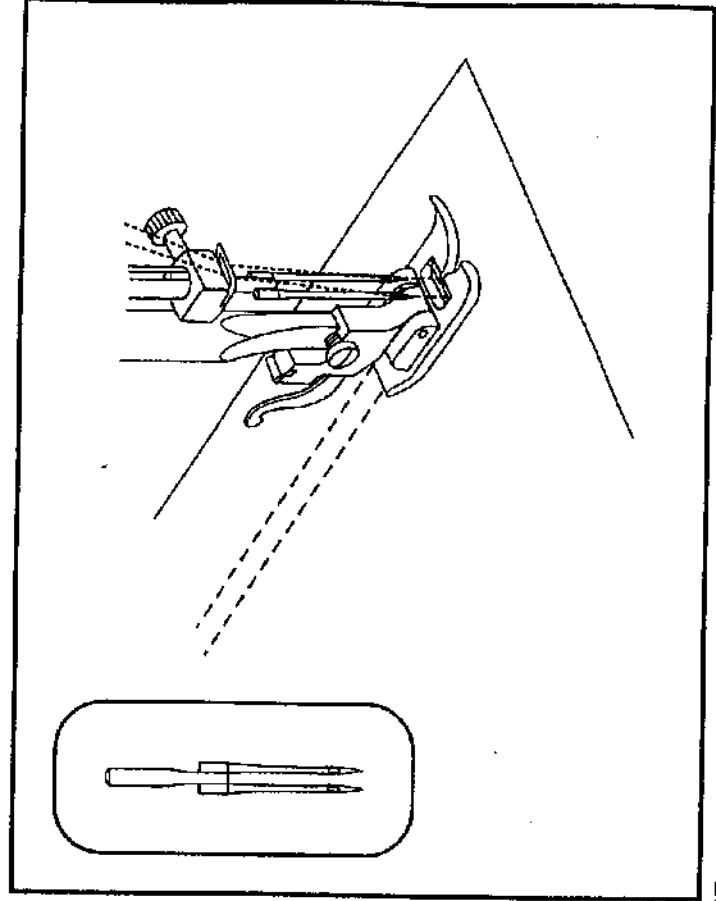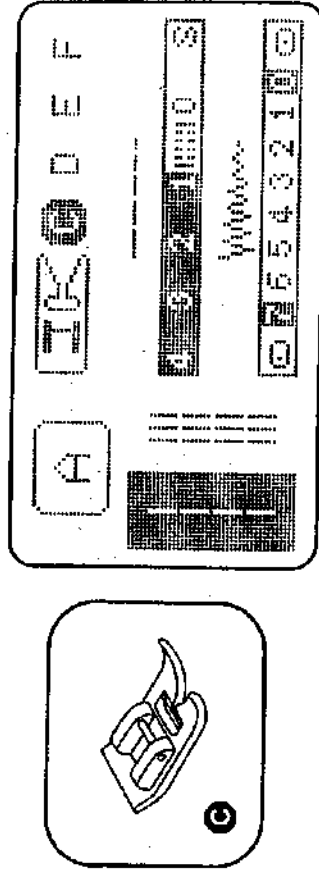

☐ Monogramming and embroidering with embroidery hoop*


Drop the feed dogs. (Note: Stitch length cannot be controlled with dial)

- Set the machine as illustrated above.
- Remove the presser foot and the presser foot holder.
- Lower presser foot lever before starting to sew.
- Adjust the stitch width according to the size of lettering or design.

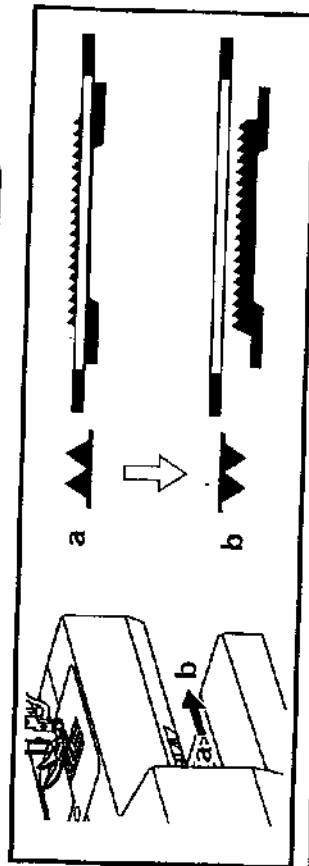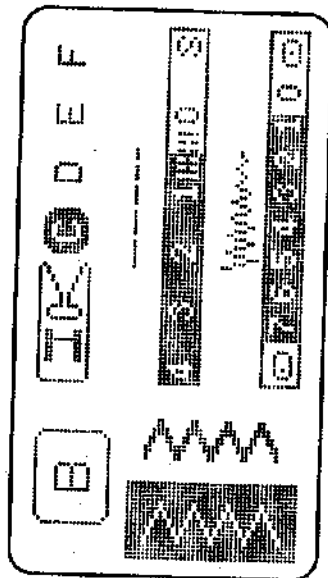

Preparation for Monogramming and Embroidering*

- Draw the desired lettering or design on the right side of the fabric.
- Stretch the fabric between embroidery hoop as firmly as possible.
- Place the fabric under the needle. Make sure the presser foot bar is down in its lowest position.
- Turn the balance wheel towards you to bring up the lower thread through the fabric. Sew a few securing stitches at the starting point.
- Hold the hoop with thumb and forefingers of both hands.
- Coordinate sewing speed and movement of hoop.

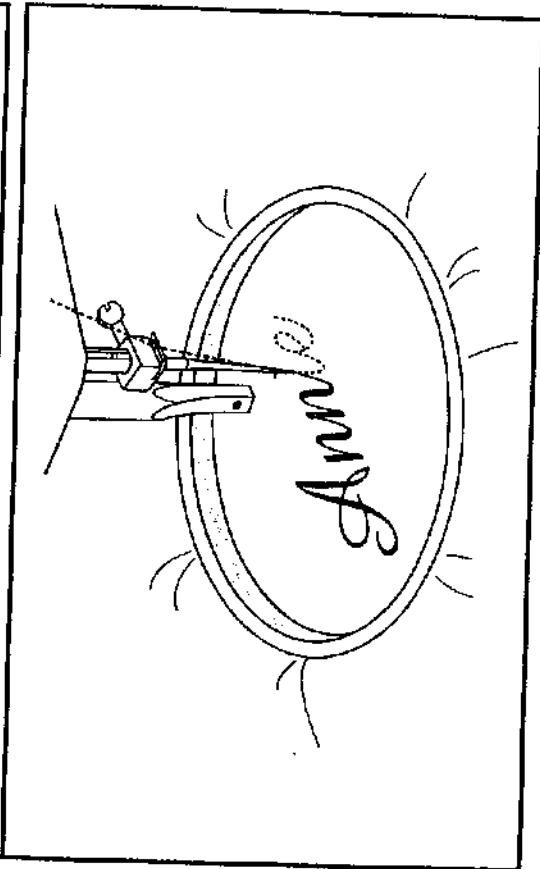

*Embroidery hoop not included with machine.

☐ Gathering




* The gathering foot is an optional accessory not supplied with this machine.

Set the pattern selector as illustrated.

1. Attach the gathering foot.
2. Sew a single row or multiple rows of straight stitches.
3. If more gathering is required, loosen the upper thread tension to below "2" so that the lower thread lies on the under side of the material.
4. Pull the lower thread to gather more of the material.

Note:

Presser foot shown is the optional gathering foot which does not come with your machine. If you have not purchased this foot substitute the all purpose foot and gather fabric by hand by lowering the tension setting to below "2" and pulling the lower thread to gather the material.

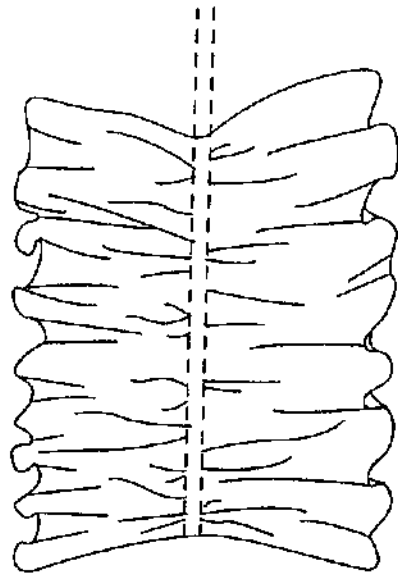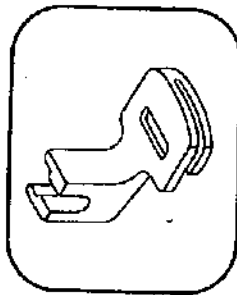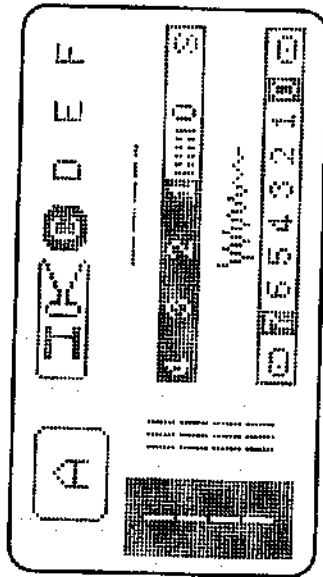




☐ Patch work

These stitches are used to join two pieces of fabric while leaving a space between their edges.

1. Fold over the edges of the two pieces of fabric for the hem and baste the edges to a thin piece of paper leaving a small space between them.
2. Set the Pattern selector on "1". Turn the stitch length dial to "5".
3. Stitch along the edge, pulling both threads slightly when beginning to sew.

* Use thicker than normal threads for sewing.

4. After sewing, remove the basting and the paper. Finish by tying knots on the reverse side at the beginning and the end of the seams.

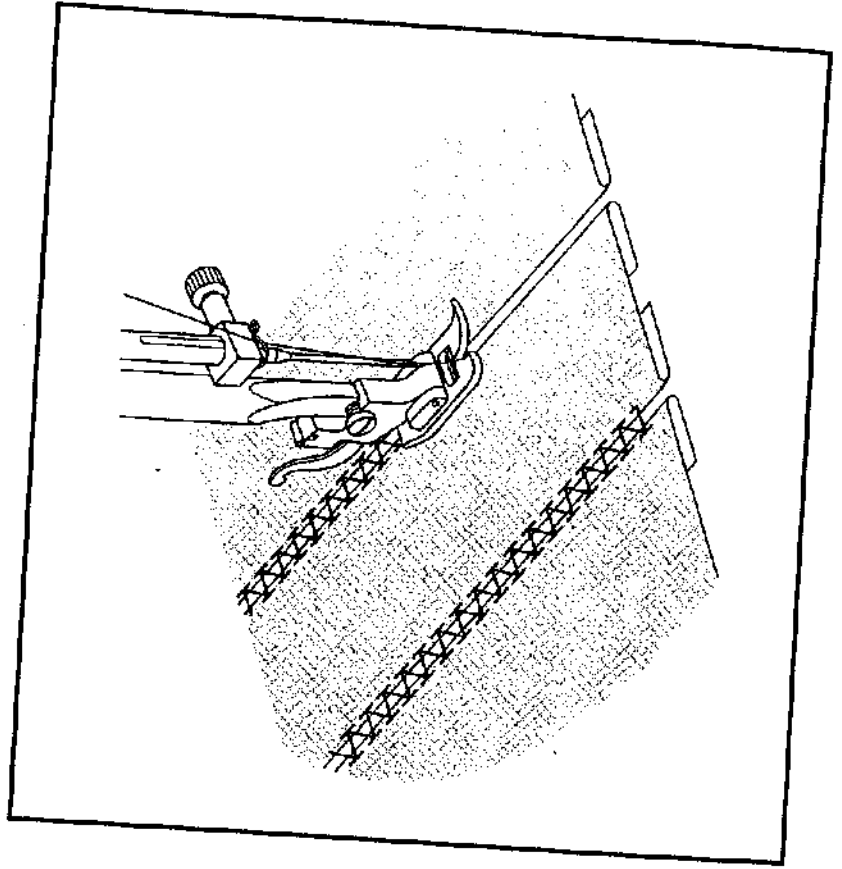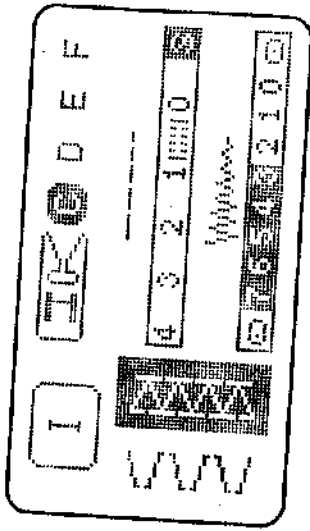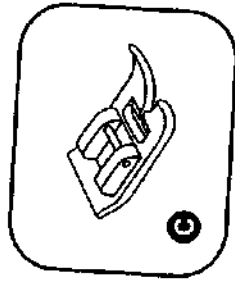

☐ The evenfeed foot optional accessory



* The evenfeed foot accessory is optional. It is not included with this machine.

Always try to sew first without the evenfeed foot accessory which should be used only when necessary.

It is easier to guide the fabric and you have a better view of the seam when using the standard, regular foot on your machine. Your sewing machine offers excellent stitch quality on a wide range of fabrics from delicate chiffons to multiple layers of denim.

The Evenfeed Foot accessory equalizes the feeding of the upper and lower layers of fabric and improves the matching of plaids, stripes and patterns. It also helps to prevent uneven feeding of very difficult fabrics.

1. Lift the presser foot lifter to raise the presser foot bar (1).
2. Remove the presser foot holder by unscrewing (counterclockwise) the presser bar attaching screw (2).
3. Attach the Evenfeed foot to the machine as follows:
 - i) The arm (3) should fit into above the needle screw and clamp (4).
 - ii) Slide the plastic attaching head (5) from your left to right, so that it is fitted into the presser foot bar.
 - iii) Lower the presser foot bar (1).
 - iv) Replace and tighten (clockwise) the presser bar attaching screw (2).
4. Make sure both the needle screw (4) and the presser bar attaching screw (2) are tightly secured.
5. Draw the bobbin thread up and place both the bobbin thread and the needle thread behind the walking foot attachment.

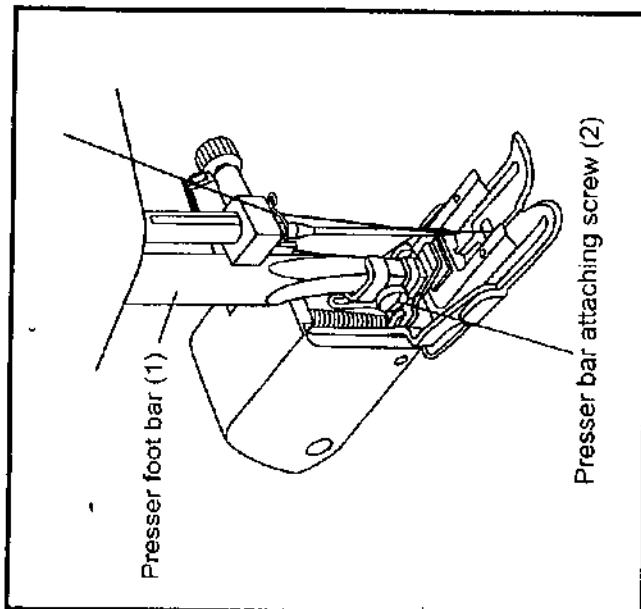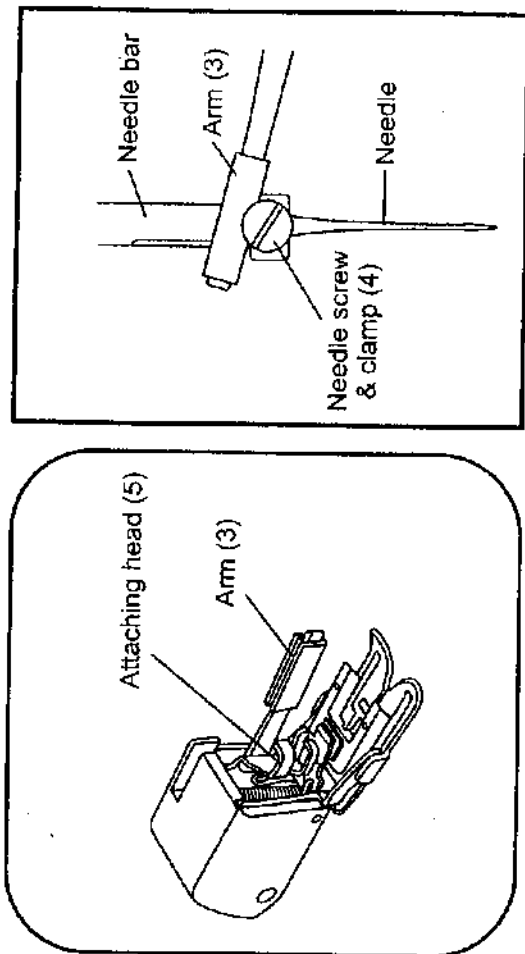

□ Maintenance

Attention:

Disconnect the machine from the wall outlet before carrying out any maintenance or changing the sewing light bulb.

Cleaning


If lint and bits of thread accumulate in the hook, this will interfere with the smooth operation of the machine. Check regularly and clean the stitching mechanism when necessary.

A. Bobbin holder


1. Remove the bobbin cover plate and bobbin.
2. Clean the bobbin holder with a brush.

B. Hook race and feed dog


1. Remove the needle, presser foot and holder.
Remove the bobbin cover plate and bobbin.
Remove the screw holding the needle plate and remove the needle plate.
2. Lift up bobbin case and remove it.
3. Clean the hook race, feed dog and bobbin case with a brush. Also clean them, using a soft, dry cloth.
4. Replace the bobbin case into the hook race so that the tip (a) fits to the stopper (b) as shown.

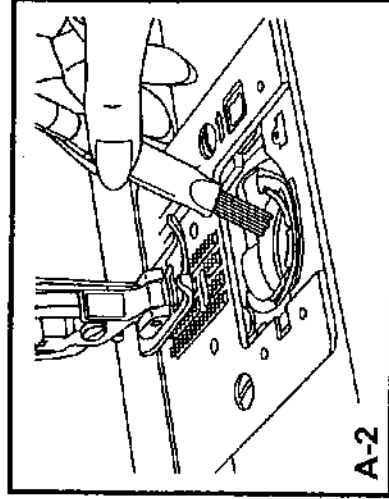


A-2

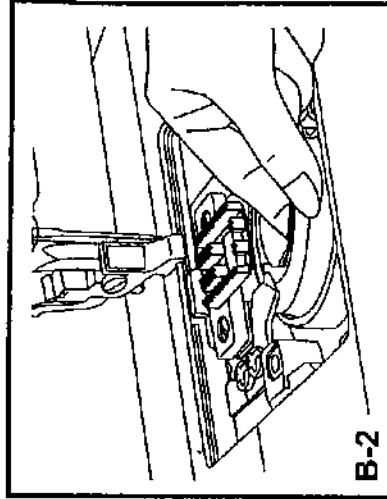


B-2

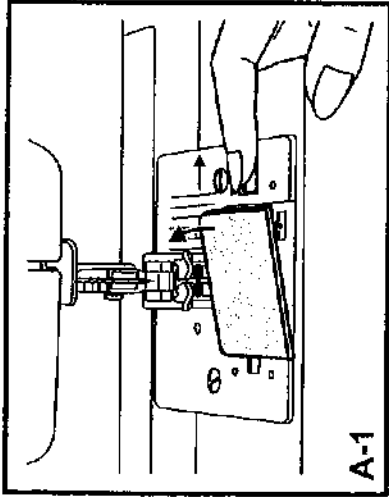


A-1

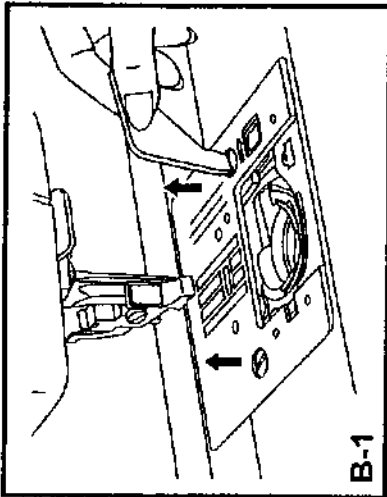

B-1

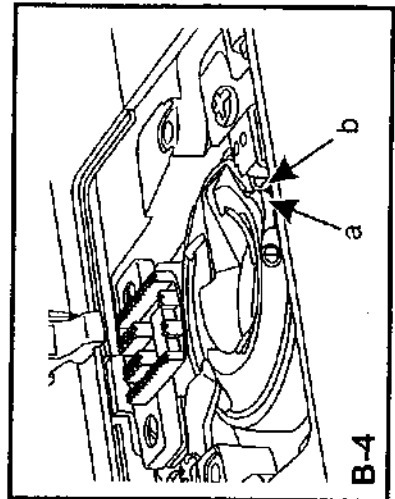

B-4

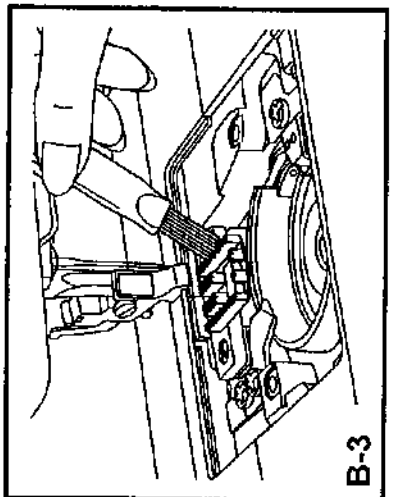

B-3

☐ Trouble shooting guide

Problem	Cause	Correction
Upper thread breaks	1.The machine is not threaded correctly 2.The thread tension is too tight 3.The thread is too thick for the needle 4.The needle is not inserted correctly 5.The thread is wound around the spool holder pin 6.The needle is damaged	1.Rethread the machine 2.Reduce the thread tension (lower number) 3.Select a larger needle 4.Remove and reinsert the needle (flat side towards the back) 5.Remove the reel and wind thread onto reel 6.Replace the needle
Lower thread breaks	1.The bobbin case is not inserted correctly 2.The bobbin case is threaded wrong 3.The lower thread tension is too tight	1.Remove and reinsert the bobbin case and pull on the thread. The thread should pull easily 2.Check both bobbin and bobbin case 3.Loosen lower thread tension as described
Skipped stitches	1.The needle is not inserted correctly 2.The needle is damaged 3.The wrong size needle has been used 4.The foot is not attached correctly	1.Remove and reinsert needle(flat side towards the back) 2.Insert a new needle 3.Choose a needle to suit the thread and fabric 4.Check and attach correctly
Needle breaks	1.The needle is damaged 2.The needle is not correctly inserted 3.Wrong needle size for the fabric 4.The wrong foot is attached	1.Insert a new needle 2.Insert the needle correctly (flat side towards the back) 3.Choose a needle to suit the thread and fabric 4.Select the correct foot
Loose stitches	1.The machine is not correctly threaded 2.The bobbin case is not correctly threaded 3.Needle/fabric/thread combination is wrong 4.Thread tension wrong	1.Check the threading 2.Thread the bobbin case as illustrated 3.The needle size must suit the fabric and thread 4.Correct the thread tension
Seams gather or pucker	1.The needle is too thick for the fabric 2.The stitch length is wrong adjusted 3.The thread tension is too tight	1.Select a finer needle 2.Readjust the stitch length 3.Loosen the thread tension
Uneven stitches, uneven feed	1.Poor quality thread 2.The bobbin case is wrong threaded 3.Fabric has been pulled	1.Select a better quality thread 2.Remove bobbin case, thread and insert correctly 3.Do not pull on the fabric while sewing, let it be taken up by the machine
The machine is noisy	1.Fluff or oil have collected on the hook or needle bar 2.Poor quality oil has been used 3.The needle is damaged	1.Clean the hook and feed dog as described 2.Only use good quality sewing machine oil 3.Replace the needle
The machine jams	Thread is caught in the hook	Remove the upper thread and bobbin case, turn the handwheel backwards and forwards by hand and remove the thread remains.

021EJD0101(英)Jul/01
SINGER 3860 (992DE)

