

USER MANUAL


GARMENT STEAMER


MODEL: SICS511E



SINGER[®]
TECHNOLOGIES
AT HOME WORLDWIDE

Operating instructions

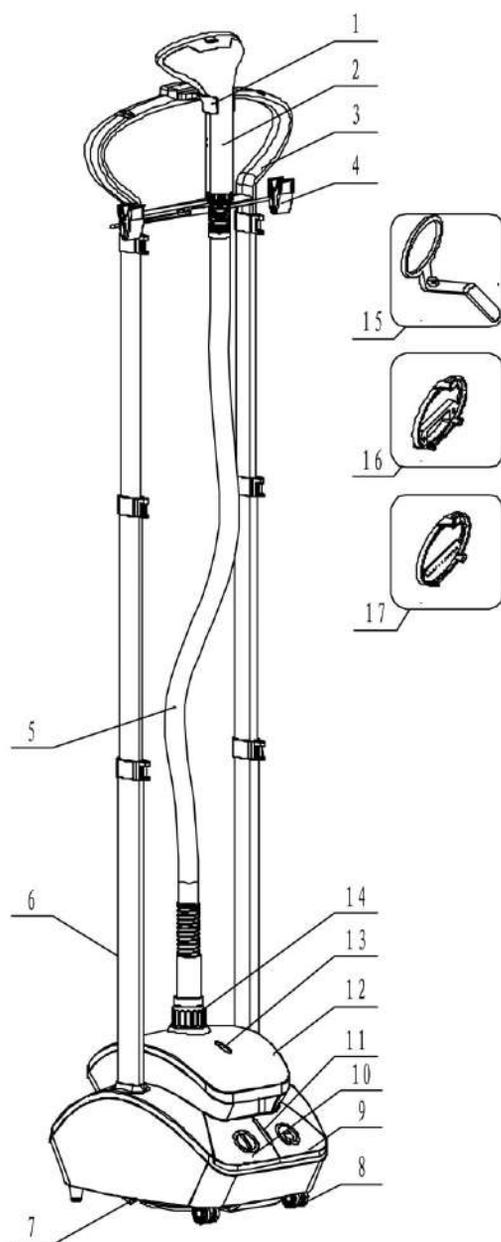

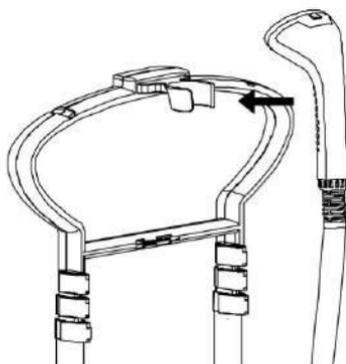

7. When you are finished with your steaming session, press the power switch to power off the appliance and remove the plug from the outlet.

Cleaning and Maintenance


1. Make sure the appliance is cooled down completely. Unplug the unit and remove the steam hose from main unit. Collapse the telescopic pole.
2. Fill the water tank with fresh water and attach it to the main unit again, allowing water to fill the boiler.
3. Remove the tank from main unit and empty the water from the boiler through the open hose connector into a sink. Scale and other residues will be rinsed out.
4. Repeat Step 2 and 3 several times until the scale has been removed.

Trouble shooting


PROBLEM	POSSIBLE CAUSES	SOLUTION
Steamer fails to heat	<ul style="list-style-type: none"> · Steamer not plugged in . · The “ refill water tank “icon on the display is light. 	<ul style="list-style-type: none"> · Plug in to electrical outlet. · Power off the appliance and refill the water tank.
No steam	<ul style="list-style-type: none"> · Water level is low 	<ul style="list-style-type: none"> · Power off the appliance and refill the water tank.
Steam is intermittent	<ul style="list-style-type: none"> · Sediment build-up in container 	<ul style="list-style-type: none"> · Clean the appliance
Water drips from nozzle	<ul style="list-style-type: none"> · Condensation in hose 	<ul style="list-style-type: none"> · Hold the hose vertically and allow water to drain back into tank
Nozzle gurgles	<ul style="list-style-type: none"> · Condensation in hose 	<ul style="list-style-type: none"> · Hold the hose vertically and allow water to drain back into tank

1. Remove the water tank from the unit by grasping the handle and turn upside down. Unscrew the cap from the bottom of the water tank. Hold the tank under cold running water and fill to the desired level. When you have finished filling the tank screw the cap back on and turn over. Place water tank back into unit and make sure it is sitting properly & securely in the cavity.


NOTE: Only fill the water tank with cold water. Do not use hot water. Do not add perfume, vinegar, starch, descaling agents, ironing aids or other cleaning agents.

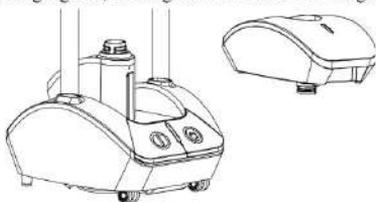

2. Plug the steamer cord into the electrical outlet.
3. Press the power switch. Steam will emit in 40-45 seconds

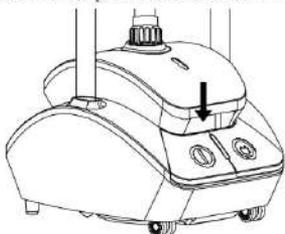

4. This unit can adjust the steam level, it has Min, Mid and Max steam level can adjust. you can press the power switch to adjust the steam level. the appliance will be cycled between MAX steam (lamp shows red), MID steam (lamp shows green), MIN steam (lamp shows blue), power off (lamp off)

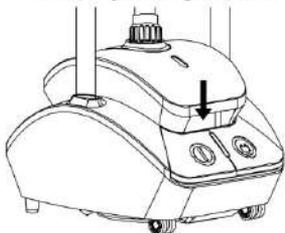

5. If the water level window shows green, it means the tank has enough water and if it shows red, it means the tank has little water and you need to refill the water. the lamp will flash if there is no water in the appliance. you can refill the water in about 3min to make the appliance working again. After 3min, the appliance will power off automatically.
6. when the steamhead hangs to the shelf, the system will switch to the ECO mode. steam will stop and lamp will be breathing shining. if the steamhead takes away from the shelf, system will switch to working mode and steam will restart within 5s. the power will be cut off automatically if ECO mode lasts 3min.

General discription

1. Handle Hook
2. Handle
3. Hanger
4. Trouser Clips
5. Hose
6. Telescopic Pole
7. Telescopic Pole Lock
8. Wheel
9. Power Cord Retractable Switch
10. Power and Steam Adjustment Switch
11. Power Light
12. Water Tank
13. Water Level Window
14. Hose Connector
15. Pleat Maker
16. Lint Pad
17. Brush

General safety instructions

- Before using for the first time, check if the voltage rating on the rating plate corresponds to the mains voltage in your home. This appliance must be connected to an earthed socket.
- If it is absolutely necessary to use an extension cable, make sure that it is suitable for 10 amp and has a socket with an earth connection.
- This appliance must only be used for the purposes it was designed. Any other use will be considered as improper and consequently dangerous. The manufacturer or its distributor will not be held responsible for any damage arising from misuse or improper use.
- The electrical plug must not be removed from the socket by pulling the power cable.
- Do not leave the appliance exposed to weather conditions such as direct sunlight or rain etc.
- Do not leave the appliance unattended while it is plugged in.
- Keep the appliance out of children's reach.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Remove the plug from the socket before filling the appliance with water or before pouring out the remaining water after use.
- Never immerse the appliance in water or any other fluid.
- The appliance must never be placed under the tap to fill with water.
- Do not put vinegar or other descaling agents into the water tank.
- Using distilled water or pure water is better
- Do not try to repair any part of the appliance on you own.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not aim the handle at other persons or towards yourself, while using the “steam” function.
- The appliance must be used and placed on a stable surface.
- The appliance should not to be used if it has been dropped, if there are visible signs of damage or if it is leaking water. It must be checked by an authorised Service Centre before it can be used again.
- **CAUTION:** The steam hose can get very hot when used!!

This appliance has been designed for domestic use.

Important!

- Read these instructions carefully before using the appliance and save them for future reference.
- This appliance complies with international safety standards
- Care must be taken when using the appliance as it emits steam. Steam is very hot and burns severely in an instant.

Introduction


Thank you for buying the professional garment steamer SICS511E. Please read these instructions very well. They contain valuable information about the unique features of this system and some hints to make the steaming easier.

This system produces non stop steam for an ideal steaming performance. We hope you enjoy using with this garment steamer

Assembly Instructions

1. Carefully remove all contents from packaging and inspect the product to make sure all components have been received.
2. Insert pole into top of unit and turn the pole fixed to the lock position at the bottom of the appliance
3. To attach the clothes rack, align tabs in clothes rack with grooves on pole and push down

4. Fully extend the telescopic pole. To do so open the 3 clips on the pole and pull the pole upwards. When fully extended close the clips. Make sure that the pole is securely locked into place and can not be pushed downward
5. Insert and turn on the hose connector until it is locked. You may hang the steamer handle on the Handle Hook
- NOTE: Do not hang the hose on the hanger attachment until after it has been connected on the base to prevent the hose from falling on you .

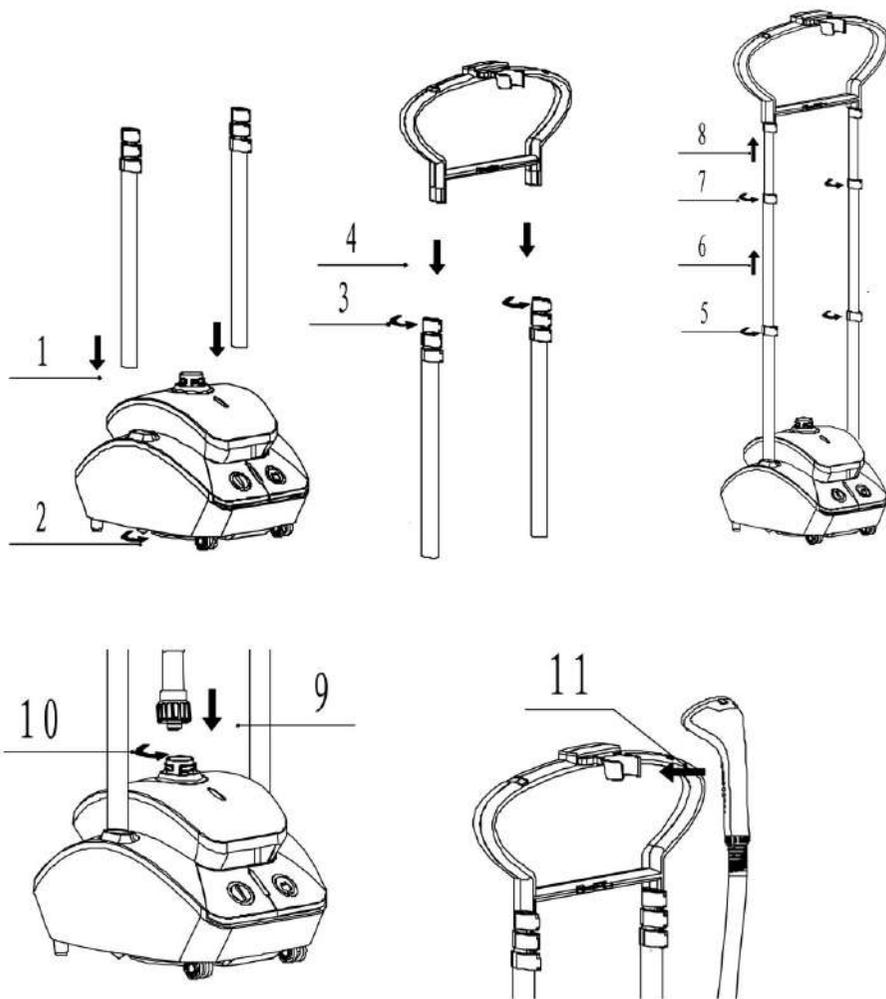

Instructions for use

**Distributed In Aus/NZ by:
BLESSINGTON PTY LTD
Unit 17, 167 Prospect Hwy, Seven Hills
NSW, 2147, Australia
Phone: +61 2 8811 1900**