



# **USER MANUAL**

**CORDLESS KETTLE**

**Model number - SIK706S**

**SINGER<sup>®</sup>**  
TECHNOLOGIES  
**AT HOME WORLDWIDE**


Model:SIK706S

Rated voltage: AC230V 50Hz

Rated Power :2200W

Maximum capacity: 1.7 liter of water

Minimum capacity: 1.0 liter of water

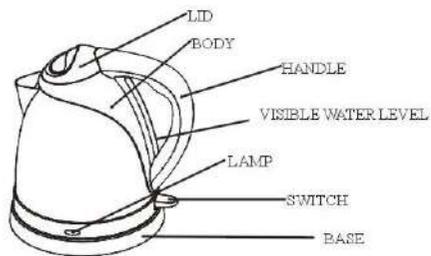

## Using the kettle

Before using for the first time, boil fresh water at least twice in the kettle and discard. Use only fresh water without any additives or ingredients.

- > Plug the provided base stand into a compatible mains socket
- > Open the lid of the kettle and fill it with water. Fill only up to the maximum mark (MAX). You can check the level on both sides of the appliance with water level display.
- > Close the lid.
- > Place the kettle flush on the base, making sure the base and the outside of the kettle are dry.
- > Switch on the kettle with the switch on the handle, the LED on the kettle lights up.
- > After boiling the kettle switches off automatically. Disconnect the kettle from the socket.
- > Keep the lid closed when pouring.

## Cleaning

- > Always unplug the kettle base before cleaning.
- > The kettle and base stand must not be immersed in water or any other liquid.
- > Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent.
- > Do not use abrasive scouring pads or powders as this will damage the finish.
- > Since this kettle has a concealed heating element, it is important to keep the bottom clean.
- > From time to time, dependent on the nature of your water supply, a lime-scale deposit may naturally form and can be found mostly adhered to the heating element and thus reduce the heating capacity. The amount of lime-scale deposited (and subsequently the need to clean or de-scale) largely depends on the water hardness in your area and the frequency with which the kettle is used. Lime-scale is not harmful to your health, but if poured into your beverage it can give a powdery taste to your drink. Therefore, the kettle should be de-scaled periodically as indicated in the following section.

## **De-scaling**

De-scale the kettle regularly. With normal use, at least twice a year is recommended.

- Fill the kettle up to the "MAX" with a mixture of one part vinegar and two parts water.
- Switch on and wait for the appliance to boil and switch off automatically.
- Let the mixture remain inside the kettle overnight.
- Throw the mixture away the next morning.
- Fill the kettle with clean water up to "MAX" and boil again.
- Throw away this boiled water to remove any remaining scale and vinegar.
- Fill again to the "MAX" indicator to boil again to ensure all vinegar is removed.
- Empty and rinse the inside of the kettle with clean water.

## **Safety precautions**

When using any electric appliance, basic safety precautions should always be observed, including the following.

- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Read all instructions carefully, even if you are familiar with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance.
- Do not leave any appliance unattended while it is operating.
- Before connecting the kettle, check that the voltage indicated on the appliance (underside of kettle and base unit) corresponds with the main voltage in your area.
- Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- Always unplug by grasping the plug, never pull on the power cord.
- Do not overfill as boiling water may be ejected. The maximum level is marked on the external water indicator.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not let the cord hang over the edge of a table or counter. Do not let the cord touch hot surfaces.
- Avoid touching hot kettle surfaces – use the handle and knobs. Never lift the kettle by its lid.
- To avoid possible steam damage, turn the spout away from walls or cabinets when operating the kettle.
- To avoid scalding, always ensure the lid is correctly positioned before operating.
- Be careful when in use, as scalding may occur if the lid is removed whilst heating.
- Open and close the lid carefully when hot.
- Always ensure that the lid is tightly closed when in use.
- Extreme caution must be used when moving the kettle containing hot water.
- Do not move the kettle while it is operating.
- Switch off the kettle before removing it from the base.
- Do not switch your kettle on if it is empty.
- To protect from electrical hazard, do not immerse this kettle, base, cord or plug in any liquid.
- Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
- The use of accessory attachments not recommended by the manufacturer may cause injuries.
- To protect against fire, do not operate in the presence of explosive and/or flammable fumes.
- Do not use the kettle for any purpose other than heating water. Other liquids or food will contaminate the interior.

- Do not use this appliance for anything other than its intended use. This appliance is for household use only. Do not use outdoors.
- Never operate the appliance directly next to or below a power outlet.
- Always use the appliance on a flat, level and stable surface – never use on an inclined plane.
- Use only fresh cold water when filling.
- To avoid a hazard, the water level must be between the MAX and MIN marks. Water may be ejected if it exceeds the maximum level line.
- The base and exterior of the kettle must not become wet, especially when plugged into a mains power outlet. Make sure both are dry before use.  
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Use the kettle only with the provided base; use with other bases/stands could lead to a fire hazard.

**Distributed In Aus/NZ by:  
BLESSINGTON PTY LTD  
Unit 17, 167 Prospect Hwy, Seven Hills  
NSW, 2147, Australia  
Phone: +61 2 8811 1900**