

SINGER[®]
PROFESSIONAL

1.7L Glass Kettle

Model: SPK3100



Instruction Booklet

Table of Contents:

- 3. Important Safeguards
- 6. Feature Diagram
- 7. First use / Initial cleaning
- 8. Operating Instructions
- 9. Cleaning & Maintenance
- 10. Friendly Environment Disposal

Important Safeguards

1. **Read all Instructions before using**
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your retailer and do not use the kettle.
3. The cord to this appliance should be plugged into a 240V AC, 50Hz electrical outlet.
4. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Do not operate the appliance without water in it to avoid damaging the heating element.
7. Ensure that the kettle is used on a firm, dry and flat surface out of reach of children.
8. To protect against a fire, electric shock or personal injury, do not immerse cord, plug or kettle in water or liquids.
9. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
10. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
11. Be careful when refilling when the kettle is hot.
12. The appliance is not intended for use by children or infirm without supervision.
13. Do not touch hot surfaces. Use the handle
14. The base cannot be used for any other use other than its intended use.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Extreme caution must be used when moving the appliance containing hot water.
17. Do not move the appliance whilst it is switched on.
18. The kettle is for household use only. Do not use outdoors.
19. The use of non-recommended accessories may result in damage, fire. Electric shock or personal injury.

20. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off part, and before cleaning the appliance.
21. Keep the appliance clear of walls, overhead storage cupboards, curtains, blinds and other heat or steam sensitive materials.
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. Do not use the appliance for other than intended use.
24. The kettle can only be used with the power base provided.
25. If the kettle is overfilled, boiling water may spill out.
26. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.

FOR HOUSEHOLD USE ONLY

DO NOT THROW AWAY INSTRUCTIONS

Important Safeguards

NOTES ON THE PLUG

This appliance has a grounded 3-prong plug. Connect to a properly grounded outlet only. Do not attempt to modify the plug in anyway.


NOTES ON THE CORD

The provided short power-supply cord (or detachable power-supply cord) should be used to reduce risk resulting from becoming entangled in or tripping over a longer cord. Do not use an extension cord with this product.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Features

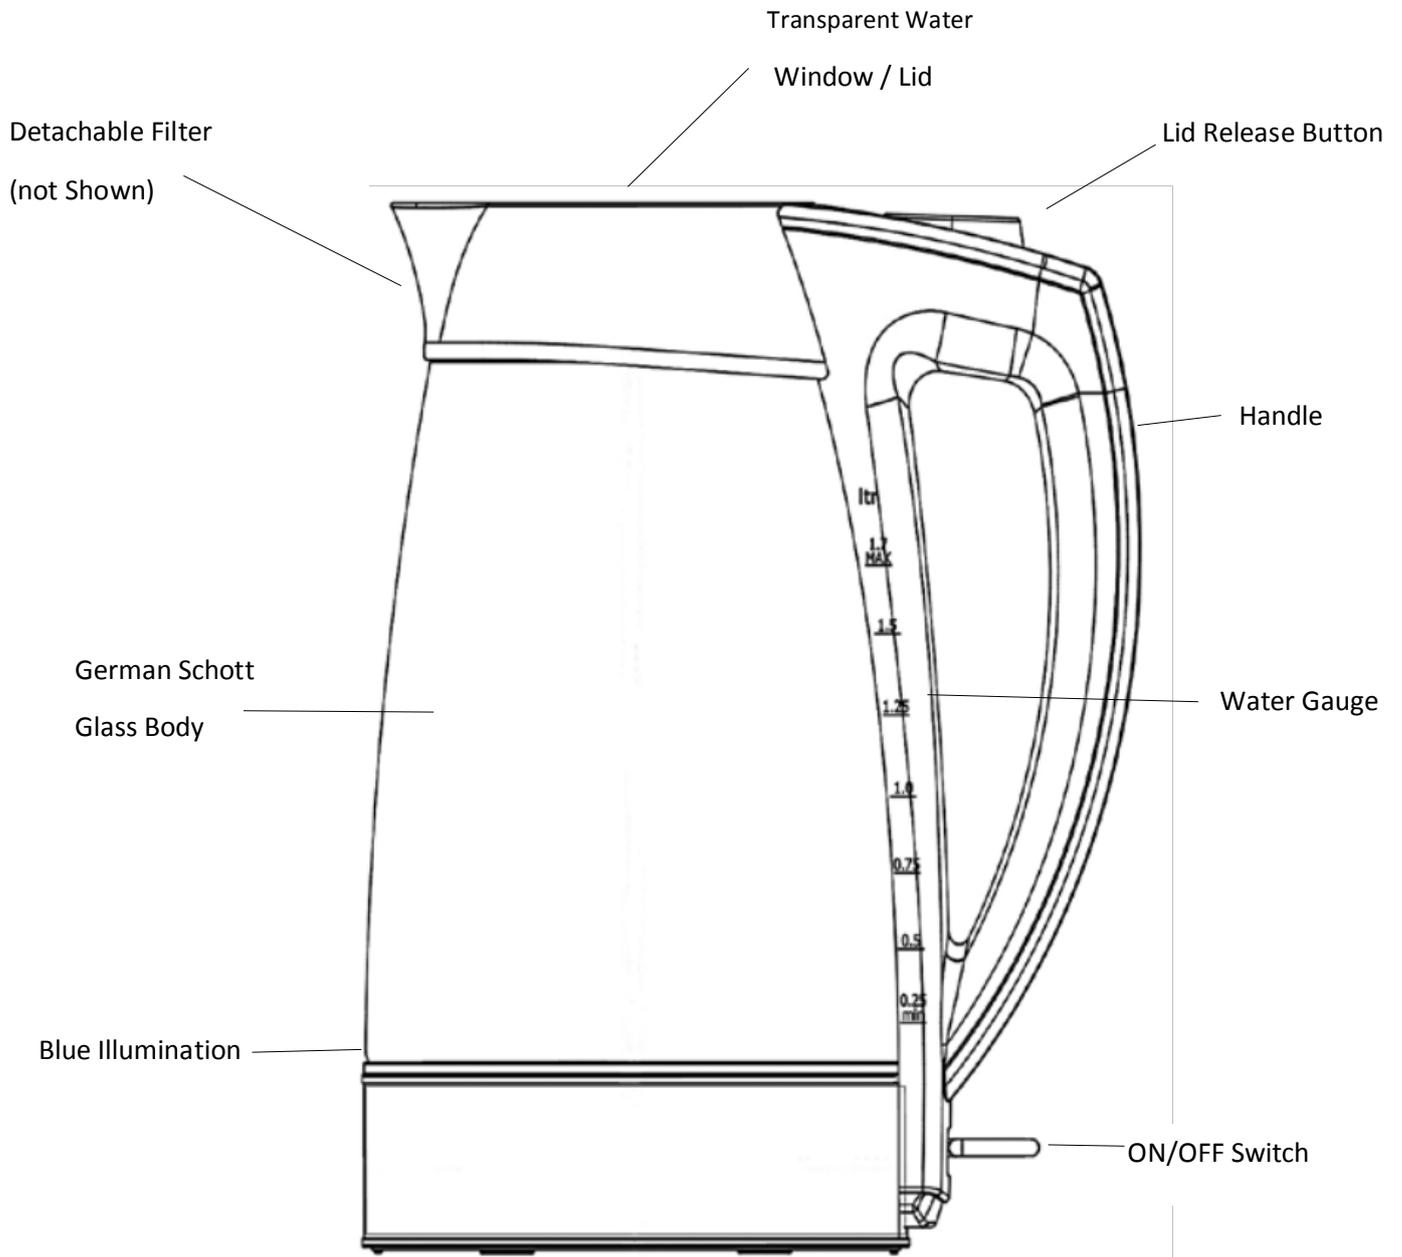

First Use / Initial Cleaning

If you are using the kettle for the first time, it is recommended that you should follow the following steps prior to use:

1. Before first use check that the appliance has not been damaged during transit.
2. Remove all protective packaging from the kettle, power base and plug.
3. Remove the lime scale filter and gently wash using a washing up brush, cloth or sponge under running water.
4. Fill the kettle to the maximum capacity (1.7 litres) and switch on to boil.
5. Discard the boiled water and rinse out with cold water.
6. Repeat this process twice to remove any manufacturing dust etc.
7. After the kettle has been rinsed out with cold water for the final time, replace the filter.

Operating Instructions

1. To fill the kettle, remove it from the power base and open the lid by pressing the lid opening button, fill with the required amount of water, and then close the lid. The water level should not exceed the 1.7L mark or fall below 0.5L level. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as hot water may spill out of the spout when boiling. Ensure that the lid is firmly in place before placing the kettle onto the power base.

2. Pull out the power cord from the base directly, the position the kettle on the power base.
3. Connect the plug to the power outlet. Press the ON/OFF switch to the ON position. The water gauge will light up. The kettle will switch OFF automatically once the water has boiled. You can shut the power off at any time during boiling by pressing the ON/OFF switch to the OFF position. If you want to continue to boil water, press the ON/OFF switch to the ON Position to restart.

NOTE: Ensure that the switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained.

4. Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scalding.

5. The kettle will not re-boil water until the switch is pressed again.

NOTE: When not in use, always disconnect the power supply and store the power cord in the base by turning the base cover in clockwise.

Boil Dry Protection

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, switch off at the power outlet and allow the kettle to cool before filling with cold water and re-boiling

Cleaning and Maintenance

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come in contact with these parts.
2. Wipe the appearance of the body with a damp cloth or cleaner, never use a poisonous cleaner.
3. Remember to clean the removable limescale filter at regular intervals. Remove the filter by opening the lid and lifting it up and out of the kettle. The filter can be cleaned under warm running water and by gently rubbing with a cleaning sponge or brush. Once clean, simply slide the filter down into the filter housing located behind the spout.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.


4. When not in use or during storage, the power cord may be wound back into the inside of the power base.

Removal of Mineral Deposits

Your kettle should be periodically descaled as the mineral deposits in tap water can form scale on the bottom of the kettle causing the appliance to operate less efficiently. You may use propriety kettle descaler available from a wide variety of retail outlets. Alternatively you may also follow the below instructions:

1. Fill the kettle with 3 cups of white vinegar diluted with 3 cups of tap water. Leave the solution in the kettle overnight. Rinse well before boiling again.
2. Discard the mixture in the kettle, then fill the kettle with clean water, boiling and then discard the water. Repeat several times until the odour of the vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

Friendly Environment Disposal

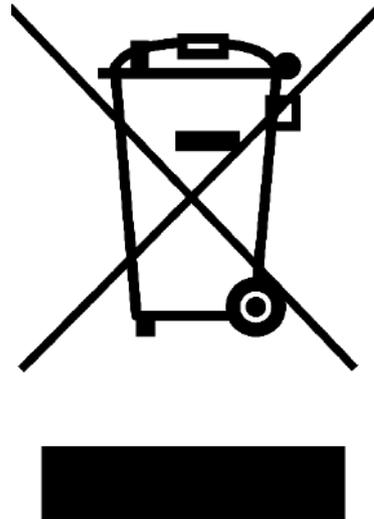

You can help Protect the environment!

Please remember to respect the local regulations:

Hand in the non-working electrical equipment to an appropriate waste disposal centre.

Notes:

Distributed In Aus/NZ by:

BLESSINGTON PTY LTD

Unit 17, 167 Prospect Hwy, Seven Hills

NSW, 2147, Australia

Phone: +61 2 8811 1900