

USER MANUAL

REVERSIBLE GRILL

Model NO:SIG608C



SINGER[®]
TECHNOLOGIES
AT HOME WORLDWIDE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Keep these instructions for future use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord assembly or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance and before moving the appliance.
6. Always attach the electric connector to the appliance first, before plugging into the wall outlet. To disconnect, turn the control to off and remove the plug from the wall outlet.
7. Do not leave the appliance unattended when in use.
8. Do not operate the appliance with a damaged plug or cord, if the appliance malfunctions or is dropped or damaged in any manner. Call our service number for advice
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Always use the appliance on a dry level surface.
13. Do not use appliance for other than intended use.
14. Use extreme caution when moving an appliance containing hot oil or other hot liquids.
15. Always unplug grill and then remove cord before attempting to move the grill.
16. Do not use without base in place. Clean after each use.
17. Fuel, such as charcoal briquettes, is not to be used with appliance.
18. Use only on properly grounded outlet.
19. When in operation, a fire may occur if the grill is touching or near flammable material, including curtains, draperies, walls, backsplashes, cabinets and the like.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS!

Consumer Safety Information

This appliance is intended for household use only.

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the grounding pin, part of the 3-prong plug.

This appliance has a short cord to reduce hazards of becoming entangled or tripping over a longer cord. A grounded-type 3 wire extension cord may be used if the electrical rating of the extension cord is equal to or greater than the rating of the electric grill. Use only an extension cord rated 10 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over. Do not leave this appliance unattended while in use.

WARNING: To reduce risk of fire to do not allow flammable materials such as curtains, draperies, walls, cabinets, backsplashes and the like to touch any part of the grill or grilling surface when the grill is in operation. Place grill well away from walls, appliances or any object which could be damaged by heat.

Know Your Grill


Before First Use: Wash the grill and base in hot, soapy water, Rinse and dry thoroughly. Do not immerse cord receptacle or power cord in water or other liquid.

Parts and Features

1. Reversible Grill
2. Electric Connector
3. Power Cord
4. Base



CAUTION: When removing the grill from base, do not touch the prongs in the cord receptacle. They may be hot.

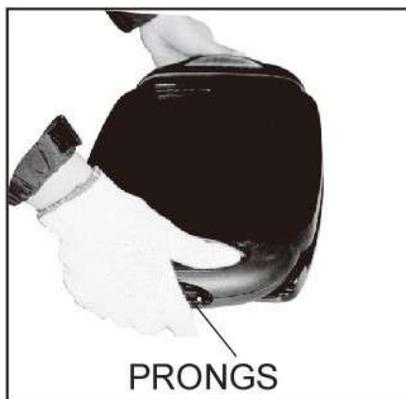

How to grill

1. Set base on countertop. Place grill on base correctly.
2. Plug power cord into cord receptacle, then plug into outlet. The indicator light on the power cord will glow.
3. Preheat 7 to 14 minutes before grilling.
4. When finished grilling, remove plug from outlet, then from cord receptacle.
5. Let grill cool completely. Carefully dispose of any grease. Clean grill.

Great Grilling Tips

1. Please remember that your grill is coated with a nonstick surface and that plastic utensils should always be used.
2. If grilling vegetables, fish, or lean meat, spray the grilling surface with a cooking spray. If you are grilling meat with any amount of fat, or if the food has been marinated, there is no need to treat grill.
3. For best results, preheat the grill for 7 to 14 minutes before grilling.
4. Skewers are available in most large supermarkets. If using the disposable, woodtype skewers, soak the skewers in water at least 12 minutes before threading on food. This prevents the skewer from scorching and makes a more attractive presentation.
5. If using a marinade with oil, place grill near an exhaust hood. Oil or fat will produce some smoke.

How to Clean

1. Let grill cool. Carefully dispose of any grease.
2. Wash the grill and base in hot, soapy water. Use a nylon or plastic scouring pad and a non-abrasive liquid cleanser. Do not use metal scouring pads.
3. Rinse and let dry.
4. The grill and base can also be washed in a dishwasher after cooling and disposing of any grease.
5. The power cord must never be immersed in water or placed in the dishwasher. To clean, wipe with a damp cloth.

NOTE: Do not leave the grill on to burn off any food or drippings remaining on the grill surface after cooking. In addition to causing unnecessary smoke this can reduce the life of the nonstick coating and may present a fire hazard.

**Distributed In Aus/NZ by:
BLESSINGTON PTY LTD
Unit 17, 167 Prospect Hwy, Seven Hills
NSW, 2147, Australia
Phone: +61 2 8811 1900**