



STEAM IRON STATION



INSTRUCTION MANUAL


Model No: SISS6203EP12A

Distributed In AUS/NZ by:
BLESSINGTON PTY LTD
PO Box 254, Seven Hills NSW 1730 Australia
Phone: +61 28811 1900

INTRODUCTION

The iron offers non-stop ironing and also has a detachable water tank that can be refilled at any moment.

The iron has a constant high steam output which is a unique feature for steam-ironing systems with unlimited autonomy. This gives you a constant and fast ironing result.

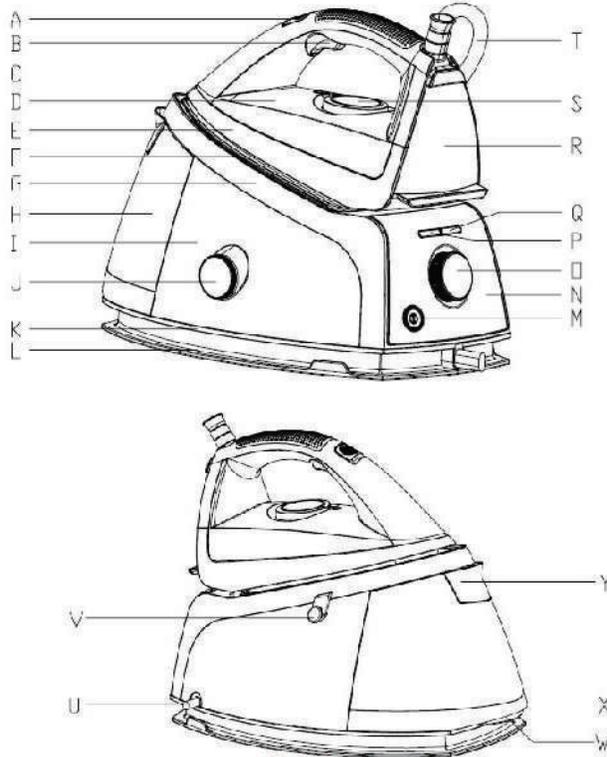

GENERAL DESCRIPTION

A Steam Button	N Panel
B Steam Trigger	O Steam Control Knob
C Handle Cover	P Lower Water Indicator Light
D Handle	Q Steam Indicator Light
E Skirt	R Rear Cover
F Soleplate	S Temperature Control Dial
G Station Skirt	T Cord Hose
H Water Tank	U Power Cord
I Upper Station	V Tie power cord with a hook
J Self-Clean Cover	W Water Tank Locker
K Bottom Station	X Water Tank Seat
L Foundation Support	Y Water Inlet Cover
M Switch Button	

Troubleshooting

Please check the followings before repair.

Problem	Possible cause (s)	Solution
The appliance does not become hot	There is connection problem.	Check the mains cord, the plug and the wall socket.
	The steam tank has not been switched on.	Set the power switch to ON.
	The temperature dial has been set to MIN.	Set the temperature dial to the required ironing temperature.
The iron does not produce any steam	There is not enough water in the detachable water tank.	Fill in the detachable water tank.
	The steam pilot light is still off.	Wait until the steam pilot light goes on.
	The selection ironing temperature is too low for steam ironing.	Set the temperature to •• or higher.
	The detachable water tank has not been properly attached to the steam tank. When the iron has been set to a very high temperature, the steam produced is dry and hardly visible. It will be even less visible when the ambient temperature is relatively high and it will be entirely invisible when the temperature has been set to MAX.	Attach the detachable water tank to the steam station properly. Set the iron to a lower temperature, e.g. to check if the iron is actually producing steam.
Water droplets come out of the soleplate.	The selected temperature is too low for steam ironing.	Set the temperature higher than ••
	When you start steam ironing and when you have stopped steam ironing for a while, the steam that was still present in the supply hose will have cooled down and condensed into water, which causes water droplets to come out of the soleplate.	This is perfectly normal. Hold the iron over an old cloth and press the steam activator when you start ironing (again). Wait until steam instead of water comes out of the soleplate.
Smoke comes out of my new iron when switch it on.	Some parts of the appliance have been lightly greased in the factory and may initially give off some smoke when heated.	This phenomenon is perfectly normal and will cease after a short while.
The appliance produces a pumping sound.	Water is being pumped into the steam tank.	This is normal.
The steam station makes a buzzing sound.	The detachable water tank is empty, and water is not enough.	Fill the detachable water tank with water.
	Position of the detachable water tank is wrong.	Shake the steam station, or force the detachable water tank into the steam station. Attach the water tank to the steam station properly.
Dirty water comes out of the soleplate.	Too much scale and minerals have accumulated inside the steam station.	Clean the steam station. See chapter "Cleaning and maintenance".


The scale that develops inside the boiler will not deposit onto the walls. Just calc-clean the boiler once or twice a month to keep your appliance in good condition.

1. Make sure that the steam tank has been unplugged for more than 2 hours and is not hot.
2. Remove the detachable water tank.
3. Hold the steam tank with both hands and shake well.
4. Turn the steam station on its side and remove the Calc-Clean rinsing cap & rinsing plug with a coin.
5. Empty the steam tank by pouring out the water into the cup or into the sink.
6. Fill the boiler with fresh water by means of the cup and shake again.
7. Empty the boiler by pouring out the water into the cup or into the sink.
Repeat steps 6 & 7 twice to obtain the best result.
8. Put the Calc-Clean rinsing plug back into the steam tank and tighten it with a coin.
9. Put the Calc-Clean rinsing cap back onto the boiler.
10. We recommend you complete a Calc-Clean once a week to ensure the sediment does not build up inside the boiler.
11. Only water should be placed into the tank.

Storage

Always let the iron cool down before storing it.

1. Switch the mains OFF and remove the plug. Allow your steam generator to completely cool down.
2. Empty any remaining water from the water tank. Then, open the cleaning bolt, empty the water inside the boiler. Reinstall the tank ready for the next use.
3. The power cord wound into a single unit, as shown.
4. Power cord bundled with a power cord tie, and hang in the power cord hook, as shown.

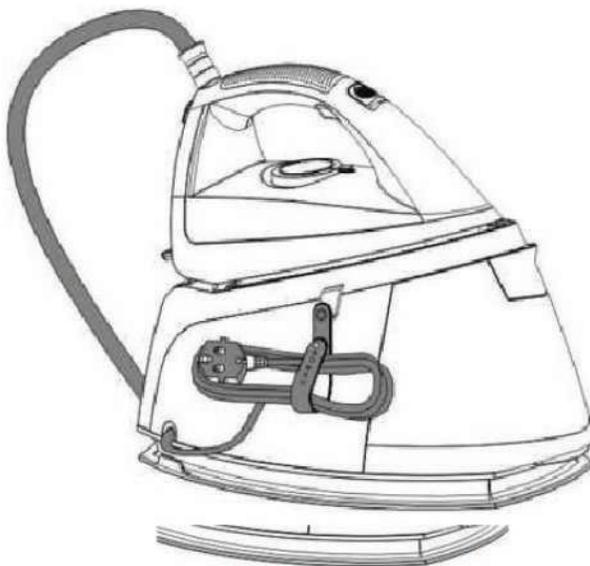

IMPORTANT SAFETY INSTRUCTIONS

Read this manual thoroughly before using the appliance. This will ensure optimum results and maximum safety. Save these instructions for future reference.

- Check that the main voltage stated on the rating plate corresponds to the local electricity supply.
- Always place the appliance on a stable, level and horizontal surface.
- Unwind and straighten the power cord and supply cord before use.
- The plug of the power cord must be removed from the electrical outlet before the water reservoir is filled with water.
- Do not allow children to touch the appliance when ironing.
- Do not leave the appliance unattended when it is connected to a main supply outlet.
- Do not use an extension power cord set unless it corresponds with your local manufacturing standards.
- Do not add perfume, vinegar or anything other than water into the water tank; this can seriously damage the appliance.
- Do not immerse the appliance in water or any other liquids.
- Do not use the appliance if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not touch the iron rest during or just after ironing. It is hot!
- Do not roll the power cord or supply cord around the iron unit or base for storage until it has cooled down completely.
- Do not attempt to open the water tank or dismantle any part of the appliance, there are no serviceable parts inside.
- Do not open the water inlet cover during use.
- Never place the appliance on or near sources of heat.
- Never point steam jets in the direction of people, animals or plants or towards appliances that contain electrical parts (e. g., oven interiors).
- This appliance is for household use only.
- When the appliance is not in use, always lock the steam dispensing button.
- The iron stand and the sole-plate of the iron can become extremely hot and may cause burns if touched. If you want to move the steam tank., do not touch the stand.
- Packaging elements must not be left in reach of children as they are potentially hazardous.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet.
- Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron and when the iron is not in use.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a STEAM IRON upside down - there might be hot water in the reservoir.

BEFORE FIRST USE

- The iron may give off some smoke when you use it for the first time. This is normal and will stop after a short while.
 - White particles may come out of the soleplate (F) when you use the iron for the first time. This is normal; the particles are harmless and will stop coming out of the iron after a short while.
 - When you switch the appliance on, the steam station may produce a pumping sound.
 - This is normal; the sound tells you that water is being pumped into the boiler.
- 1- Remove any sticker or protective foil from the soleplate (F) and clean the soleplate (F) with a soft cloth.
 - 2- Place the steam station on a stable and level surface, i.e. on the ironing board or on a table.

PREPARING FOR USE

Filling Water

- If the tap water in your area is very hard, we advise you to mix the tap water with an equal amount of demineralized water.
- Do not put perfume, vinegar starch, descaling agents, ironing aids, other chemicals or 100 percent distilled water in the detachable tank (H).
 - 1- Pull down the detachable water tank locker (W).
 - 2- Remove the detachable water tank (H) from the steam station.
 - 3- Fill the detachable water tank with water up to the MAX indication.
 - 4- Pull down the detachable water tank locker (W).
 - 5- Slide the detachable water tank (H) back into the steam station.
- The detachable water tank (H) can be refilled at any time during use.
- This appliance has a built-in water level sensor. When the minimum level in the detachable water tank (H) has been reached, the water tank lower water indicator light (P) will start flashing. Steam ironing will not be possible until water tank has been refilled.

Note: When you use the appliance for the first time or after Calc Clean, a lot of water will be pumped from the detachable water tank into the steam station. Refill the tank, if necessary.

Setting the temperature

1. Check the garment label for the required ironing temperature
 - Synthetic fabrics (e.g. acryl, viscose, polyamide) and silk
 - Wool
 - Cotton
 - MAX Linen
2. Set the temperature control dial (S) to the required ironing temperature by turning it to the appropriate temperature indication.
3. Insert the main plug (U) into an earthed wall socket and press the power indicator.

The steam station and the iron will now start heating up.

The iron takes approx. 1 minute to heat up to ●● and the steam station takes approx. 2 minutes to heat up.

As soon as the steam station has reached its maximum pressure level and is ready for steam ironing, the steam indicator light (Q) goes on.

Tips

- If the article consists of various kind of fibers, always select the temperature required by the most delicate fiber, i.e. the lowest temperature. If, for example, the fabric consists of 60% polyester and 40% cotton, it should be ironed at the temperature indicated for polyester (●●).
- If you do not know what kind of fabric the article is made of, determine the right ironing temperature by ironing a part that will not be visible when you wear or use the article.
- Iron Silk, woolen and synthetic materials on the reverse side of the fabric to prevent shiny patches.
- Fabrics that tend to acquire shiny patches should be ironed in one direction only (along with the nap) while applying very little pressure.
- Start ironing the articles that require the lowest ironing temperature, i.e. those made of synthetic materials.

To make the iron cool down faster, simply apply steam or iron a piece of cloth.

USING THE APPLIANCE

Steam ironing

- The cord hose (T) may become hot during a long ironing session.
- When initially plugged in, the power indicator light will start flashing, indicating the iron is in standby mode, press the power indicator button to start the appliance.
 - The system may occasionally produce a pumping sound during steam ironing. This is normal and tells you that water is being pumped into the steam tank.
 - 1- Make sure there is enough water in the water tank.
 - Steam ironing is only possible at higher ironing temperatures (higher than ●●).
 - When the minimum level in the detachable water tank (H) has been reached, the "water tank lower water indicator light (P) will flash as an alarm. It tells you to fill water into the detachable tank (H). The lower water light indicator will turn off when you fill.
 - 2- Press the steam button (A) to start steam ironing
 - 3- Pull up the steam trigger (B) to start continuous steam.
 - 4- Turn-on the steam control knob (O) for adjust steam.

During steam ironing, the steam indicator light goes on from time to time to indicate temperature and pressure.

The opening and closing of the steam valve in the steam station will cause a clicking sound.

Ironing without steam

- Start ironing without pressing the steam button.

After ironing

- Put the iron on the stand.
- Switch the appliance OFF.
- Remove the mains plug from the wall socket and let the iron cool down.

FEATURES

Vertical steaming

You can steam iron hanging curtains and clothes (jackets, suits, coats) by holding the iron in vertical position and pressing the steam activator.

CLEANING AND MAINTENANCE

After each use

- Never immerse the iron in water nor rinse it under the tap.
- Clean the iron with a damp cloth.
- Wipe scale and any other deposits off the soleplate with a damp cloth and a non-abrasive cleaning agent.
- Calc Clean**
Never remove the Calc-Clean rinsing cap or unscrew the Calc-Clean rinsing plug when the steam tank is hot.

VERY IMPORTANT: Rinse the boiler once a month or after every 10 times of use to prevent damage to your iron.