

USER MANUAL

2 SLICE TOASTER Model NO:SIT2002



TECHNOLOGIES
AT HOME WORLDWIDE

IMPORTANT SAFEGUARDS

Please read these instructions carefully before using the appliance.

- 1 .Check that your mains voltage corresponds to that stated on the appliance.
- 2 .Children should be supervised to ensure that they do not play with the appliance .
- 3 .From time to time check the cord for damages. Never use the appliance if cord or appliance show any signs of damage.
- 4 .Only use the appliance for domestic purposes and in the way indicated in these instructions.
- 5 .Never immerse the appliance in water or any other liquid for any reason whatsoever. Never Place it into the dishwasher..
- 6 .Never use the appliance near hot surfaces.
- 7 .If the supply cord is damaged, it must be replace by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8 .Before cleaning, always unplug the appliance from the power supply.
- 9 .All repairs should be made by a competent qualified electrician.
- 10.Never use the appliance outside and always place it in a dry environment.
- 11.Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- 12.Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- 13.Stand the appliance on a table or flat surface.
- 14.Make sure the appliance has cooled down before cleaning and storing it.
- 15.Make sure the cord never comes into contact with the hot parts of the appliance. Never touch the hot parts of the appliance.
- 16.The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- 17.The outer surface may get hot when the appliance is operating.
- 18.Do not use the appliance for defrosting food and only insert unbuttered slices of bread of which the thickness does not risk to prevent the bread from coming up. Be extremely strict about this as toasters are the cause of many fires when these elementary safety precautions are not observed. Such as bread may burn.

- 19.The temperature of accessible surfaces may be high when the appliance is operating.
- 20.When cleaning the appliance, do not use metallic scourers in order to avoid any future risk of electric short-circuit.
- 21.Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 22.The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 23.Keep the appliance and its cord out of reach of children less than 8 years.
- 24.This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- 25.Bread may burn, therefore do not use the toaster near or below combustible materials such as curtains.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

KNOWING YOUR TOASTER



1. CANCEL: For the anticipated stopping of the toasting procedure.
2. REHEAT: To warm bread already toasted.
3. DEFROST: To defrost and to complete the toasting of deep-frozen bread.

HOW TO OPERATION

1. Only connect the unit to a properly installed and earthed power socket
2. To set the toasting level turn the selector clockwise from the lightest level -1- to the darkest -7. If you are not sure, start with a lower level.
3. Insert one slice of bread per toasting slot and lower the slot with the lever until it snaps into place.
4. The unit starts to toast and switches off automatically at the end. The slide pops up automatically.
5. Allow the unit to cool down before you put it away.

CLEANING

- Pull the mains plug out of the mains socket before you clean the unit and allow the unit to cool down.
- Only use a slightly damp cloth to clean the outside of the unit.
- Do not use abrasive or aggressive cleaners.
- Pull the crumb tray out, remove any bits of bread and put the tray back in.

Distributed In Aus/NZ by:
BLESSINGTON PTY LTD
Unit 17, 167 Prospect Hwy, Seven Hills
NSW, 2147, Australia
Phone: +61 2 8811 1900