

# **USER MANUAL**

## **VACUUM CLEANER**

### **SIVC2400N**

**2400W max**

Distributed In Aus/NZ by:  
BLESSINGTON PTY LTD  
Unit 17,167 Prospect Hwy,Seven Hills  
NSW,2147,Australia  
Phone: +61 2 9620 5922



**SINGER®**  
TECHNOLOGIES  
AT HOME WORLDWIDE

**Read the instruction manual carefully before using this vacuum cleaner!**


## FEATURES



Warning: This appliance is a household vacuum cleaner. It is intended for use indoors and not recommended for outdoor use or in industrial areas.

- Streamline mold-making and original design, representing a modern fashionable life.
- 2400W max motor and strong suction power.
- Modern design with an upward air outlet.
- Multi-filter system.
- Vacuum comes with various nozzles for multi purposes.
- Pedal on/off buttons for easy operation.
- Suction speed control knob.
- Interchangeable cyclonic or dust bag system  
Complete with dust full indicator red light.

## DESCRIPTION OF THE PARTS

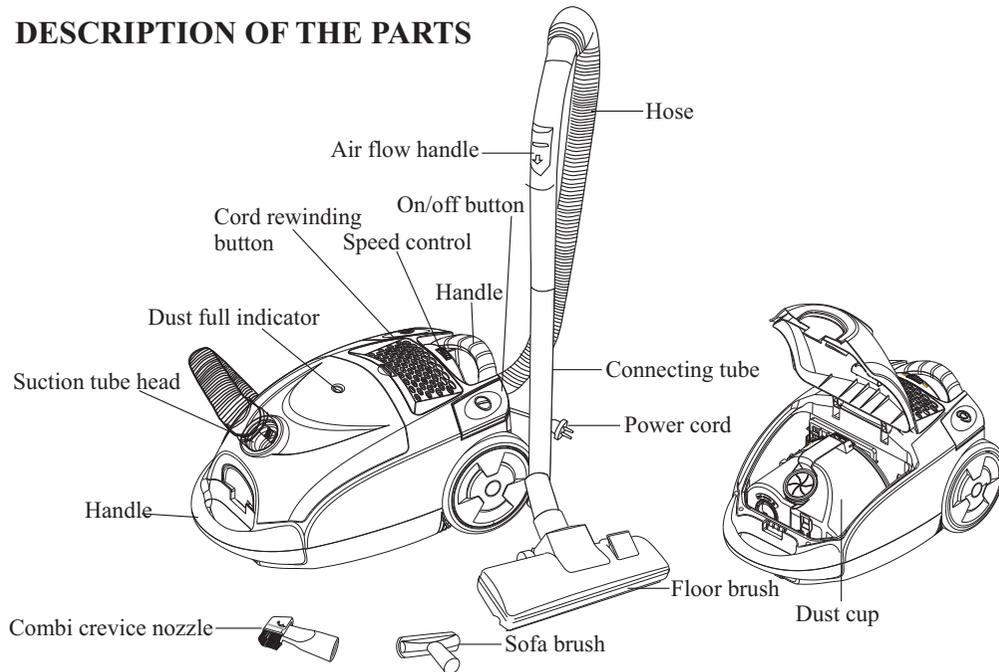

1

## SAFETY PRECAUTIONS

- Before using make sure that the voltage indicated on the rating label is 240V.
- Keep the appliance away from the stove or any other high temperature objects as this can influence it's operation by deforming the plastic parts.(fig.1)
- Do not bend, extrude or pull by the flexible hose, Stop using if the hose is broken or damaged. (fig.2)
- When you need to clean or repair your appliance or stop operation, unplug from the power outlet. When unplugging, be sure to hold the plug, but do not pull or carry by the power cord.(fig.3)
- Never use the appliance without the dust bag or cyclonic container. Make sure that the dust bag is not broken and is assembled and inserted correctly.(fig.4)
- While operating do not vacuum mud or sharp objects, as this could damage or block the cyclonic dust cup or tubes or even damage the motor. If this occurs immediately stop cleaning and clean out the dust bag or cyclonic cup.(fig.5)
- When in use do not vacuum large hair or paper rolls or plastic bags as these can block the system. If unit becomes blocked immediately stop operation by unpugging the unit from the electrical outlet and clean the system.(fig.6)
- When cleaning the appliance use a wet cloth and neutral detergent.(fig.7)
- When in use do not block or cover the rear outlet, otherwise it may damage the motor by overheating.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## HOW TO ASSEMBLE

- Press the button on top of the plastic suction tube head and then push it in the direction of air inlet hole till locked (fig.8)
- When removing the hose, press the button on top of the plastic suction tube head and then pull it back out towards you.(fig.9)



2

- How to use connecting tubes and curved wand?  
When connecting, insert the bigger end of the connecting tube into air flow handle and then swivel it to firm connection. (fig.10)
- Connection of the tubes. Refer to the above said.(fig.10)
- Connection of connecting tube with floor brush. For connection, insert the smaller end of connecting tube into the tube on the floor brush, and then swivel it to firm connection.(fig.11)
- Regarding the connection of connecting tubes with crevice nozzle, refer to the above said.(fig.10)

## USING INSTRUCTION

- Pull out the power cord but not exceed past the red marker. (fig.12)
- Power button  
After plugging into electrical power outlet, press the power button on the body cover to control start and stop. (fig.13)
- Regulation the suction power  
To control the input power and suction power by regulating the knobs. (fig.14)  
To control the suction power by the air flow regulator on the air flow handle.  
To push ahead, suction power will decrease; to push backwards, suction power will increase. (fig.15)
- For corners or crevice, you can use combi nozzle. (fig.16)
- For couch, curtain or decoration surfaces, the sofa brush should be used.  
The floor brush can be used for blankets and floors. (fig.17)

## Cleaning dust cup and replacing parts

- When the transparent tube on the surface of body shows red, please empty the dust cup, and clean the inlet filters.(fig.18)



1. Lift up by the front cover clamp to open the front cover. (fig.19)
2. Grasp the handle of dust cup, and take out the dust cup upwards at full tilt. (fig.20)
3. Overturn the dust cup, and press the button on the dust cup handle ,then the top cover of dust cup will open automatically to empty the dust. After that, please clean the dust cup. (fig.21)
4. Check if the HEPA had been blocked, if yes, please open the topcover of dustcup, take out the HEPA, and clean it before you fix it back. (fig.22)

5. Assemble the container dust container in the unit, and cover the front cover.

## Cleaning dust bag and replacing parts

- When the cleaner indicator on top of the body is filled with red indications,it means the dustbag is full of dust. You need to replace paper dustbag and clean the air filter when clogged. (fig.18)
- Replacing the dust bag
  - 1) Lift up by the front cover clamp to open the front cover (fig.19)
  - 2) To takeout the dustbag from dustbag holder.(fig.23)
  - 3) Press the clamp button on the dust bag holder, then the dust bag will drop down automatically.(fig.24)
  - 4) If the cloth bag gets full of dust, take out the clip and open the dust bag to empty dust then insert it back to its position for further use by sealing the bag well with the clip.(fig.24)
  - 5) Assembling the dust bag, you should press the clamp button on the bag holder, and insert the dust bag into the two slots, then release the button to clip the dust bag.(fig.25)
  - 6) If the dust bag is broken, replace it immediately.
  - 7) Replacing the front cover and turn the dust bag holder over to take out the filter for cleaning or replace a new one.(fig.26)
- Replacing the outlet filter  
Press the lock of outlet rear board, and dismantle the outlet rear board , then take out the outlet filter to clean or replace it.(fig.27)



- Wash the inlet filter and dust cup/dust bag.(fig.28-29)
  1. clean the filter and dust cup/dust bag in the water.
  2. Shake the filter dry.
  3. Do not leave the filter in the sun to dry as it may deform it.  
Warning: Neither wash the filter in a washing machine nor dry it with a hair dryer.
- Power cord rewinding  
When not in use, unplug from the electrical power outlet and then press the cord rewinding button to feed back the power cord.(fig.30)
- For storage  
Insert the plastic holder of the brush into the unit base or holder hook on the back unit. (fig.31)



## ***TROUBLE SHOOTING GUIDE***

Please check the following details before you have your appliance repaired in an authorized servicing department.

<b>Problem</b>	<b>Possible reason</b>	<b>Solution</b>
Motor not working	1.check if the plug is firmly inserted into the outlet. 2.Check if the power switch of the appliance is on.	Insert the plug back again into the outlet to secure it is switched on And then turn the power switch on.
Suction power becomes weak	1.Check if the floor brush, hose or the extension wand is clogged. 2.Check if the dust cup/dust bag filled with dust. 3.Check if the dust cup/dust bag is assembled well. 4.Check if the filters and the hepa are clogged.	Immediately remove the obstruction and empty the dustbin. Assemble the dust container in right way. Clean or replace the filters and hepa.
Cord cannot fully rewind	The power cord maybe twisted.	Pull out cord and rewind again.
Power cord rewinds itself	The inertia rewinding by the cord rewriter device may lead to it malfunctioning.	Pull the power cord in and out for 4-6 times. If it still rewind by itself, ask for an authorized servicing department for repair.
Front cover cannot be closed	Check if the pre-motor filters is not fitted, check if the front cover deformed or not.	fit the pre-motor filters properly, if the front cover still not be closed, please take the appliance to the authorized servicing department to repair.
Dust full indicator shows red always	Check if the floor brush, the hose or the long connecting tube is blocked. See if the dust cup/ dust bag is full and the air filters is clogged.	Immediately remove obstructions away. Clean or replace the dust cup/dust bag. Clean the air inlet filter.

## ***TECHNICAL SPECIFICATIONS***

Rating voltage	240VAC	Rating power	2400W max
Rating frequency	50Hz	Power cord length	5.0m

**If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

## **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



To protect environment please do not throw this unit away with your daily rubbish.