


Video Camera Recorder

Operating Instructions

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

εὐχίό,ό%οὐ,ό οό "ίòôîû±ú±^ëë

èÀ Å%ο ì±±íóí "íòôîû±ú±^ëë%±ìò,ó±òò± ±ú± ô òòëì
ìÉì±úÁì,ìòò ó^Áòú, ì±òúóñ^ÁÁ úíó,ó%οὐ,ó È óòú±,Éú,
À,ó%οíñ·ú%οú^Éì òò ±,óí.

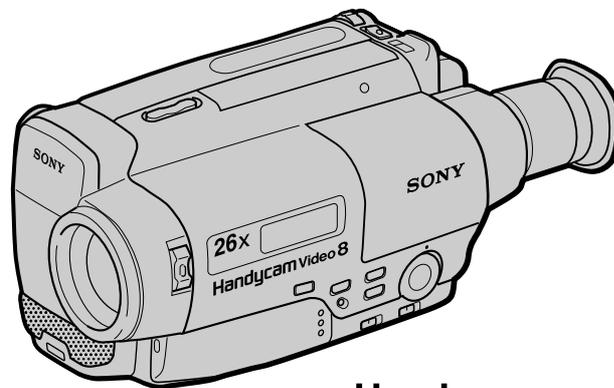

Handycam
CCD-TR402E

Video 8

CCD-TR401E/TR402E **8**

©1996 by Sony Corporation

Table of Contents

é, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ, ù, ú, û, ü, ý, ÿ

Before You Begin

Using This Manual 4

Checking Supplied Accessories 6

Getting Started

Charging and Installing the Battery Pack 7

Inserting a Cassette 11

Basic Operations

Camera Recording 12

 Using the Zoom Feature 16

Hints for Better Shooting 17

Checking the Recorded Picture 19

Connections for Playback 20

Playing Back a Tape 22

Advanced Operations

Using Alternative Power Sources 24

Recording with the Date or Time 27

Using the PROGRAM AE Function 28

Shooting with Backlighting 30

Selecting the START/STOP Mode 31

Superimposing a Title 32

Using the Wide Mode Function – CCD-TR402E only 33

Changing the Mode Settings 34

Editing onto Another Tape 35

Additional Information

Changing the Lithium Battery in the Camcorder 36

Resetting the Date and Time 38

Playback Modes 39

Tips for Using the Battery Pack 40

Maintenance Information and Precautions 45

Using Your Camcorder Abroad 50

Trouble Check 51

Specifications 57

Identifying the Parts 59

Warning Indicators 67

Index back cover

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ

à, á, â, ã, ä, å, æ, ç, è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 4

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 7

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 12

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 17

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 19

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 20

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 22

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 24

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 27

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 28

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 30

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 31

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 32

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 33

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 34

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 35

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 36

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 38

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 39

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 40

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 45

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 50

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 54

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 58

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 59

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 67

è, é, ê, ë, ì, í, î, ï, ð, ñ, ò, ó, ô, õ, ö, ù, ú, û, ü, ý, ÿ 67



Precautions on Camcorder Care

- Do not let the camcorder get wet. Keep the camcorder away from rain or sea water. It may cause a malfunction and sometimes the malfunction cannot be repaired. [a]
- Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or in a dusty place, protect it from the sand or dust. Sand or dust may cause the unit to malfunction, and sometimes this malfunction cannot be repaired. [b]
- Never leave the camcorder under temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight. [c]

ελληνικά

- Μην αφήνετε την κάμερα να βρέξει. Μην την αφήνετε να βρεχτεί από βροχή ή θάλασσα. Μπορεί να προκαλέσει βλάβη και μερικές φορές η βλάβη δεν μπορεί να διορθωθεί. [α]
- Μην αφήνετε άμμο να εισέλθει στην κάμερα. Όταν χρησιμοποιείτε την κάμερα σε αμμώδη παραλία ή σε χώμα, προστατέψτε την από άμμο ή σκόνη. Η άμμο ή η σκόνη μπορεί να προκαλέσει βλάβη και μερικές φορές η βλάβη δεν μπορεί να διορθωθεί. [β]
- Μην αφήνετε την κάμερα να μείνει σε θερμοκρασίες πάνω από 60°C (140°F), όπως σε ένα αυτοκίνητο που είναι παρκαρισμένο στον ήλιο ή σε άμεσο ηλιακό φως. [γ]

Before You Begin

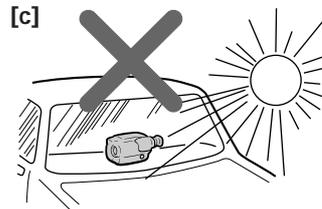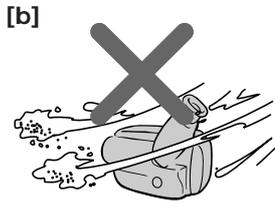

Charging and Installing the Battery Pack

á± fl%í± È ÙÒÚ±ÍÓ,í± ·±Ú± ÁÈÍÓ,,Ó ·ÍÓí±

Battery Life CCD-TR401E

Battery pack	Typical recording time**	Continuous recording time***
NP-33 (supplied)	50	90
NP-65/67	85	155
NP-66H/68	105	180
NP-77H/78	135	235
NP-90/90D/98	175	305

CCD-TR402E

Battery pack	Typical recording time**	Continuous recording time***
NP-33 (supplied)	45	85
NP-65/67	85	155
NP-66H/68	100	175
NP-77H/78	130	230
NP-90/90D/98	170	300

** Approximate minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

*** Approximate continuous recording time indoors.

Important!

Use the battery completely before re-charging!

Before you recharge the battery, make sure the battery has been used up (discharged) completely.

Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.

To use up the battery, remove the cassette and turn the POWER switch to CAMERA with the battery attached, and leave the camcorder until the  indicator and the red lamp flash rapidly in the viewfinder.

ë ÓÍ ÒÍÛÈ° ·±Ú± ÁÂÍ CCD-TR401E

Á±Ú± ÁÈÍÈ ·ÍÓí	Ç Áífl ÙÈÓÈÍÓÈ Á±ÒÈÓÈ**	Ç Áífl ÍÄÓ Á °,ÍÓÈ Á±ÒÈÓÈ***
NP-33 (Ó Èí±,±ÁÚÓfl)	50	90
NP-65/67	85	155
NP-66H/68	105	180
NP-77H/78	135	235
NP-90/90D/98	175	305

CCD-TR402E

Á±Ú± ÁÈÍÈ ·ÍÓí	Ç Áífl ÙÈÓÈÍÓÈ Á±ÒÈÓÈ**	Ç Áífl ÍÄÓ Á °,ÍÓÈ Á±ÒÈÓÈ***
NP-33 (Ó Èí±,±ÁÚÓfl)	45	85
NP-65/67	85	155
NP-66H/68	100	175
NP-77H/78	130	230
NP-90/90D/98	170	300

** è È.ÏÈÁÈÚÁÍ ífl Ò Ó%ÓÍÈÈÚÁÍ,ÍÓÓÚ, ÍÈÍÚÚ±Í Ó ÈÁ±ÒÈÓÈ,ÍÓ%±Ç ÓÓ,ÚÓ flÁÚÁí±ÍÍÓ/ÓÓÚ±ÍÓ,Á±ÒÈÓÈ, Ú,±ÍÓÚÓí±È È,ÍÍ ±ÁÚÁ/·ÍÍ ±ÁÚÁ,ÓÈÚ±ÍÈÁ. èÁí,íÈ Ò ÓÍ,ÓÍÛÈ° ·±Ú± ÁÈÍÓ,,Ó ·ÍÓí± ÍÓÈÁÚ ·Ú,ÍÓ ÓÁ.

*** è È.ÏÈÁÈÚÁÍ ÍÓÁ, Áífl ÍÄÓ Á °,ÍÓÈ Á±ÒÈÓÈ,ÓÓÍÁ·ÁíÈÈ.


Ç±ÈÍÓ!

áÓÓÓÍ ÁÚÈÚÁ Á± fl% ·±Ú± ÁÈÍÓ,Ó ·ÍÓí± ÓÓÍÍÓÓÚ,, Ó ÁÈ%Á,·ÁÍ Ó ÈÓÚÚÓÈÚ,Í ÁÓÁ± fl%ÁÍ! èÁ Á%Á± fl%ÍÓÈ ·±Ú± ÁÈÍÓ,Ó ·ÍÓí± Ú·Á%ÈÚÁÓ,·ÚÓÁ,ÓÁ± fl%ÓÓÍÍÓÓÚ,,ÈÓÓÓÍ ÁÓ,±Í (ÍÓÍ ±Á flÈÁÍ). èÓ,ÚÓ ífl Á± fl%í±,ÓÍÚ±Á,±ÓÚÈÍÓ ÓÓÚ±·ÈÈÓfl ÁÍÍÓÓÚÈ Ó È,Ó%ÈÚÍÓÍÈÈÁÍÈ, ÁÍÍÓÓÚÈ, è%í±ÍÓ ÓÁ Óí±±ÍÍ fl ÁÍÍÓÓÚ,·±Ú± ÁÈ ÍÓÈÁÚ ·Ú,ÓÓÓÚ±ÍÓ,ÍÁÍ±,ÁÓÍÈ Ç ÓÓÍÍÓÓÚ,ÈÓÓÓÍ ÁÚÁÚÁÁ± fl%·±Ú± ÁÈ ÈÓÍÓ±ÁÁÓÓÍÍÓÓÚ,Á± fl%ÈÚÁ. Nífl ±Á fl%ÍÈ·±Ú± ÁÈÓÍÈÈÚÁÍ±ÓÓÁÚÈÈ ÓÁ Á%ÈÍ ÚÁ ÓÁ ÁÍ,±ÚÁÍ, POWER,ÓÓÍÓÈÁÍÈÁCAMERAÓÈÓÓ%ÓÓÁ%ÈÍÁÍÓÈ ·±Ú± ÁÁÈÓÓÚ±,ÚÁÈ%ÁÓí±Á Ú,ÍÍ·ÁÍÍÓÈ,%Ó ÚÁÍ ÓÓ,ÓÓí±,È%ÓÈÓí±ÚÁÍÁ ÍÁ í±ÍÚÚ,ÓÚÓ ÍÈ,±Ú,ÈÍ%Èí±ÚÓ  È í±Óí±fl í±ÍÓÓí±.

To Remove the Battery Pack

Slide the battery pack in the direction of the arrow.

çîñúËÄ .±ú± ÄÈìÓ,Ó .ìóí±
 èÄ Å%Èì,ÚÄ .±ú± ÄÈìÈ .ìóí,
 ìòò ±,ìÄìËÈ ÒÙ ÄìËÈ.

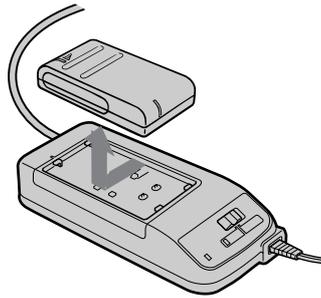

Notes on charging the battery pack

- The POWER lamp will remain lit for a while even if the battery pack is removed and the mains lead is unplugged after charging the battery pack. This is normal.
- If the POWER lamp does not light, set the selector to VTR (DC OUT) and disconnect the mains lead. After about one minute, reconnect the mains lead cord and set the selector to CHARGE again.
- You cannot operate the camcorder using the AC power adaptor while charging the battery pack.

- è ÈìÄ±ìËÈñ ÒÓ Ä± ñ%íÄ .±ú± ÄÈìÓ,Ó .ìóí±
- ã±ìòóí±POWERÛ%ÄÛÄìóóó ÒÄ Äññ ÒÄÛÈÛ Òñ,%±ÈÄ,ÄòìÈ.±ú± ÄÈìÈ .ìóí ÒññÈòÄÛÄ,òÈìÛ óúññÄìòóòìÄ Ä± ñ%ìÈ .±ú± ÄÈìÓ,Ó .ìóí±. ùóó ñ,ñÄÛòñ ìó ì±ì,ìí.
- òòìÈ±ìòóí±POWERÄÄ±,Ó ±ÄÛòñ, Ûòó±ìó,ÈÛÄòÄìÄÛòòòìòÈÄìÈÄVTRDC OUTÈÛòóÄ±ÈìÈÛÄ Ò,Ó% ïÄìÛ ÒòÈÛ±ìËÈ. è ÈìÄ ìóÄ ÄÄìÈìÛÛ ìó, Òò%òóÄ±ÈìÈÛÄ Ò,Ó% ïÄìÛ ÒòÈÛ±ìËÈÈòòñÛ, Ûòó±ìó,ÈÛÄ ÒÄìÄÛòòìòÈÄìÈÄCHARGE.
- Ç°ìÄìòÈÄÛÄÛò ±,ññÛ,È%Äòì±ìÄ ÒÈò Èòòòì,Áó,±ìÈÄì ÒÄÛÄ,Ó,Ó ±%±òÛÄ ± ÒÄ Äì.Ûòí±,Ó, Äññ Ä± ñ%ìÈ .±ú± ÄÈìÓ,Ó .ìóí±.

Getting Started e0%0,0ú0,ñ ìí±ñÛ ±òó°

Charging and Installing the Battery Pack


á± fl%Í± È ÙÒÚ±ìÓ,Í±
·±Ú± ÂÈìÓ,,Ó ·ìÓÍ±

Installing the Battery Pack

- (1) Insert the top of the battery pack into the top of the battery mounting surface.
- (2) Push the battery pack so that it attaches firmly. Make sure that you hear clicks twice.

ìÒÚ±ìÓ,Í± ·±Ú± ÂÈìÓ,,Ó ·ìÓÍ±


- (1) ÇÒÚ±, ÚÁ, Â ìÈÈ ÌÓÌÁ` ·±Ú± ÂÈìÓ,,Ó ·ìÓÍ±,,Á ìì,~±ÒÚ, ·±Ú± ÂÈìÓÈ ÙÒÚ±ìÓ,Ó·ìÓÈ ÒÓ,Â ìÒÓÚÈ.
- (2) Ç±ÈìÈÚÁ ·±Ú± ÂÈìÈ·ìÓÍ,Ú±Í,~ÚÓ.° òì ·ì±%ÂÈìÓÓ ÈÒÓÁ%ÈìÌì.ì.Á%ÈÚÁÒ,,~ÚÓÇ°%,,±È%° ÚÓÌ~±ìÈ~ÁìÓÍ.

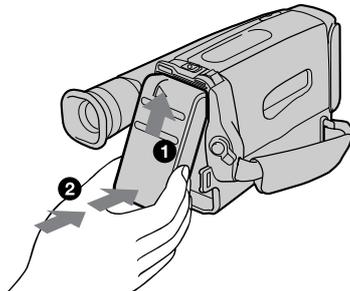

To Remove the Battery Pack

Slide BATT, and then pull the lower part of the battery pack.

èììÚÈÁ ·±Ú± ÂÈìÓ,,Ó ·ìÓÍ±
è%Èì,ÚÁ·BATT·±Ú±ÁÒÓÚìÈÚÁ±
ìÈÈì,~±ÒÚ, ·±Ú± ÂìÓ,,Ó ·ìÓÍ±.

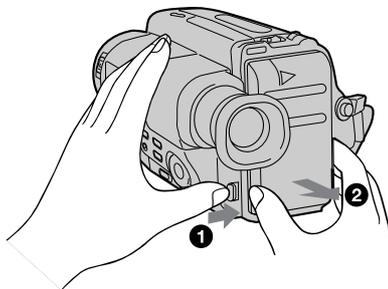

Inserting a Cassette


ÇÒÚ±,Í± Í±ÒÒÁÚ°

Make sure that a power source is installed.

- (1) While pressing the small blue button, slide EJECT in the direction of the arrow. The cassette compartment automatically opens.
- (2) Insert a cassette (not supplied) with the window facing out.
- (3) Press the PUSH mark on the cassette compartment to close it. The cassette compartment automatically closes.

Ï·Á%ÈÚÁÒ, ÒÓÈÒÓÓ·ÍÈÍÒÈÚ±ÈÈÚÒÓÚ±ÍÓ,ÍÁÌ.

- (1) Ç±ÈÈÍ±ÈÍ±ÍÁÌ,ÍÚ,ÒÈÌ,ÍÌÒÓÍÚ,Ò%ÈÌ,ÚÁÈJEC±Ò ±ÍÁÌÈÈÒÚ ÁÌÈÈ.ÓÚÒÁÍ Í±ÒÒÁÚ° ±.ÚÓÍ±ÚÈ·ÁÓÍÈÓÚÍ °,±ÁÚÒÈÈ.
- (2) ÇÒÚ±, ÚÁÍ±ÒÒÁÚÚ(ÍÁÒ ÈÍ±,±ÁÚÒÈÈ)ÓÍÒ·ÍÓÍ, Ó· ±·ÁÌ·Í Í± ÚÈÚ.
- (3) ±ÈÍÈÚÁÁÚÍÚPUSH±ÓÚÒÁÍÁ±ÒÒÁÚ°%ÍÈÁ,ÓÁ±Í °ÚÈÈ.ÈÚÒÁÍÍ±ÒÒÁÚ°±.ÚÓÍ±ÚÈ·ÁÓÍÈ Á±Í °,±ÁÚÒÈÈ.

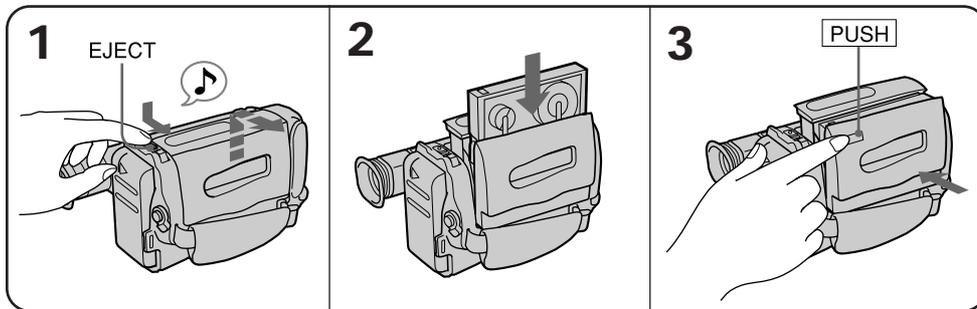

To Eject the Cassette

While pressing the small blue button, slide EJECT in the direction of the arrow.

To Prevent Accidental Erasure


Slide the tab on the cassette to expose the red mark. If you insert the cassette with the red mark exposed and close the cassette compartment, the beeps sound for a while. If you try to record with the red mark exposed, the and indicators flash in the viewfinder, and you cannot record. To re-record on this tape, slide the tab back out covering the red mark.

ÑÍÈÈ, °Ú±ÍÈÈ,±ÍÈÈ Í±ÒÒÁÚ°

Ç±ÈÈÍ±ÈÍ±ÍÁÌ,ÍÚ,ÒÈÌ,ÍÌÒÓÍÚ,Ò%ÈÌ,ÚÁÈJEC±Ò ±ÍÁÌÈÈÒÚ ÁÌÈÈ.

ÑÍÈÈ Ò·Á%ÓÓÚ, ±·ÁÌÈÈ ÒÍÚ·±ÈÍÓ,ÓÓÚÈ ±ÍÈÈ

ÈÁ Á%ÈÌ, ÚÁÍÁÒÁÒÓÓÍÍ±Í±ÒÒÁÚÁ, ÒÓ·ÓÓÈÈ,ÈÍ±Ò, Í ±ÒÍ±ÈÈ ÍÁÚÍ±.ÓÓÍÈÇ°·ÓÚ±,ÈÚÁÍ±ÒÒÁÚÚÒ È, °ÓÚ±,ÍÁÌÍÒÈÍ ±ÒÍÒÈÈÁÚÍÁÈÁ±Í ÓÁÚÁÓÓÚÒÁÍÍ±ÒÒÁÚ°·ÚÓÁ±Á,Ú·ÈÚÁÚÍÁ Ì·ÈÒÈÈ,Í±Í.ÓÓÍÈÇ°·ÓÓÓ·Ú±ÁÚÁÒ, Á±ÒÈÒ°±Ú, Ò È°·ÓÚ±,ÍÁÌÍÒÈÈ Í ±ÒÍÒÈÈ ÍÁÚÍÁ, ,È%ÒÈÒÍ±ÚÁÍÁ·Ú%ÓÓÚÍÈÈ,±Ú, ÈÈ%ÈÍ±ÚÓ° È±,ÈÇ°·ÍÁÒÍÒÈÈÁÚÁÒ ÓÈÁ,ÁÓÓÈÈ Á±ÒÈÒ°·ÑÍÈÈ ÓÁ ÁÁ±ÒÈÒÈÈ Í±%±ÍÍÚ, ÍÁÍÍÚÓÁ Á%ÈÌ, ÚÁÍÁÒÁÒÓÓÍÍ±Á±%, ÒÓ·° Á±Í °Ú, Í ±ÒÍÚ, ÍÁÚÍÚ.

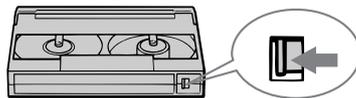

To Stop Recording Momentarily [a]



Press START/STOP again. The "REC" indicator in the viewfinder changes to the "STBY" indicator (Standby mode).

Νίηη , ΆίΆίίίόέ όóúúíó,ίέ Άúóέóέ [a]
 çúέίέúά όóηú, ίίόόίú START/STOP. Ç
 ,έ%οέέóíúÁíÁέί%οέίúó "REC"έÁíΆίέúóηíú
 έί%οέίúó "STBY"(Άέέί,úóó,íóóúέ).

To Finish Recording [b]

Press START/STOP. Turn STANDBY down, and set the POWER switch to OFF. Then, eject the cassette and remove the battery pack.

Νίηη όíóì~íέη Άúóέóέ [b]
 çúέίέúά ίίόόίú START/STOP. εό,Ά ίέúÁ
 όÁ Άίί ~úÁí, STANDBY ,ίέÁ έ úóúúíó,έúÁ
 , ίί ~úÁí, POWER , όóίόέÁίέÁ OFF.
 άúúÁí, úóίίέúÁ íúóóÁúúέ ú%óúέúÁ
 ~úú Άέί°έ ·ίόί.

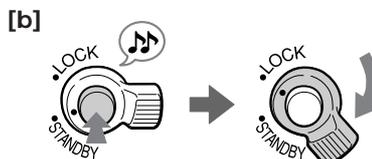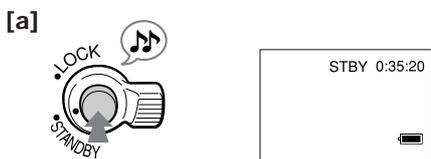

Note on Standby mode


If you leave the camcorder for 5 minutes or more with a cassette inserted in Standby mode, the camcorder goes off automatically. This prevents wearing down the battery and wearing out the tape. To resume Standby mode, turn STANDBY down once and turn it up again. To start recording, press START/STOP.

έ έíÁ~úέÁ ί Άέέίú „óóó,íóóúέ
 όóίέ Ç· óóúú,íηÁúÁ, έ%οÁóίúÁ ú íú 5 ίέúú
 έίέ ·óíÁÁ óó,óúú,íΆίίόέ ίúóóÁúóέ, ΆέέίÁ
 „óóó,íóóúέ, úó ,έ%οÁóίúÁ ú , ίί ~έúóη
 úúóúέέ·Áóίέ.úúóó Á%óó, úúÁú úÁ η%óíú
 ~úú Άέ έ έÁíóó ίÁíú°. Νίηη ,όÁó,íó,ίΆίέη
 Άέέίú,úóó,íóóúέέ%έί úÁóó,ΆίέúÁ
 όÁ Άίί ~úÁí, STANDBY ,ίέÁ έ όíó,ú
 óó,Ά ίέúÁ Á,ό „Á . Νίηη íú~úíú Άúóέóέ
 ίúέίέúÁ ίίόόίú START/STOP.

To Focus the Viewfinder Lens

If the viewfinder is not in focus at all or when you use the camcorder after someone else has used it, focus the viewfinder lens. Move the viewfinder lens adjustment ring so that the indicators in the viewfinder come into sharp focus.

Νίηη ùóíúóέέ ó,ίέ ó·Áíúέ,ú
 ,έ%οέέóíúÁíη
 όóίέ,έ%οέέóíúÁí, ,όó·Ά ίÁ úóóíúóέé ó,ú,
 έίέÁóίέÇ· έóóóί,ÁúÁúÁ,έ%οÁóίúÁ úóóóíÁ
 úó,ó, íúÁÁέóóóί,Áó,úíúó-úó%ú,óέ,úó
 úóúóúóέé úέúÁó· Áíúέ,έ%οέέóíúÁíη.
 εÁ ΆίÁóúέúÁ Á,úίέ ó,ó·íóÁíóί,ó
 ó·Áíúέ,ú ,έ%οέέóíúÁíη úúí, ~úó.
 έί%οέίúó° , ,έ%οέέóíúÁíÁ ·ίέ ~Áúíó
 úóúóúóέé ó,ú°.

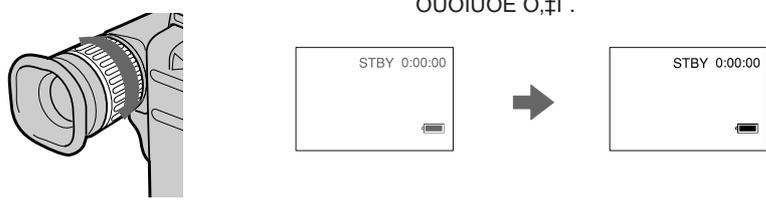

Camera Recording

Αντι-Γη Εξομαρτυρία

Note on the indicators in the viewfinder
The indicators appear in CAMERA mode only. They do not appear in PLAYER mode.


Recording with the START/STOP button depressed

You can also make recording while pressing down the START/STOP button. To make the START/STOP button work this way, set START/STOP MODE to $\frac{1}{2}$. [c]

Shooting scenery in several short takes

You can automatically make recording for about 5 seconds with the 5 SEC (p. 31). To make the START/STOP button work this way, set START/STOP MODE to 5 SEC. [d]

[c]

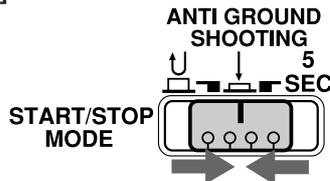

Note on recording
When you record from the beginning of the tape, run the tape for about 15 seconds before actual recording. This prevents the camcorder from missing any start-up scenes when you play back the tape.

Notes on recording mode


- This camcorder records and plays back in SP (standard play) mode and in LP (long play) mode. The playback quality in LP mode, however, will not be as good as that in SP mode.
- When a tape recorded on this camcorder in LP mode is played back on other types of 8mm camcorders or VCRs, the playback quality may not be as good as that on this camcorder.

Επισημάνσεις στο οπίσθιο όφθαλμό
Οι ενδείξεις εμφανίζονται μόνο στην κατάσταση CAMERA. Δεν εμφανίζονται στην κατάσταση PLAYER.

Αντι-Γη Εξομαρτυρία με Πιέσιμο του ΠΛΗΡΩΣ/ΑΡΧΗΤΗΣ ΚΑΤΑΣΤΑΣΗΣ
Μπορείτε να πραγματοποιήσετε εγγραφή πατώντας το πλήρωμα/αρχήτης κατάσταση. Για να λειτουργήσει το πλήρωμα/αρχήτης κατάσταση με αυτόν τον τρόπο, ορίστε τον τρόπο λειτουργίας ΠΛΗΡΩΣ/ΑΡΧΗΤΗΣ ΚΑΤΑΣΤΑΣΗΣ στο $\frac{1}{2}$. [c]

Επισημάνσεις στο οπίσθιο όφθαλμό
Μπορείτε να πραγματοποιήσετε εγγραφή για περίπου 5 δευτερόλεπτα με τη λειτουργία 5 SEC (σ. 31). Για να λειτουργήσει το πλήρωμα/αρχήτης κατάσταση με αυτόν τον τρόπο, ορίστε τον τρόπο λειτουργίας ΠΛΗΡΩΣ/ΑΡΧΗΤΗΣ ΚΑΤΑΣΤΑΣΗΣ στο 5 SEC. [d]

[d]

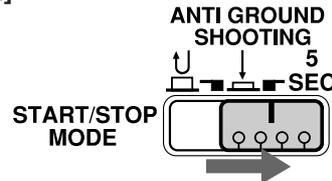

Επισημάνσεις στο οπίσθιο όφθαλμό
Μπορείτε να πραγματοποιήσετε εγγραφή για περίπου 15 δευτερόλεπτα πριν από την πραγματική εγγραφή. Αυτό αποτρέπει την απώλεια οποιωνδήποτε σκηνών εκκίνησης όταν παίζετε πίσω το ταινία.

Σημειώσεις για τον τρόπο λειτουργίας

- Αυτό το camcorder εγγραφίζει και παίζει πίσω στην κατάσταση SP (standard play) και στην κατάσταση LP (long play). Η ποιότητα αναπαραγωγής στην κατάσταση LP, ωστόσο, δεν θα είναι τόσο καλή όσο στην κατάσταση SP.
- Όταν μια ταινία εγγραφισμένη στην κατάσταση LP παίζει πίσω σε άλλους τύπους camcorder 8mm ή VCR, η ποιότητα αναπαραγωγής μπορεί να μην είναι τόσο καλή όσο στην κατάσταση LP.

Notes on the tape counter

- The tape counter indicates the recording time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press COUNTER RESET.
- If the tape is recorded in SP and LP modes mixed, the tape counter shows incorrect recording time. When you intend to edit the tape using the tape counter as a guide, record in same (SP or LP) mode.

Note on beep sound

As indicated with ♪ in the illustrations, a beep sounds when you turn the power on or when you start recording and two beeps sound when you stop recording, confirming the operation. Several beeps also sound as a warning of any unusual condition of the camcorder (p. 67). Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, set BEEP to "OFF" (p. 34).

Note on the AUTO DATE feature

The clock is set to London for the United Kingdom models and Paris for other European models at the factory. You can reset the clock (p. 38).

The AUTO DATE feature shows the date automatically once a day. However, the date may automatically appear more than once a day when:

- you reset the date and time.
- you eject and insert the tape again.
- you stop recording within 10 seconds.

When moving from indoors to outdoors (or vice versa)

Turn STANDBY up and point the camcorder at a white object for about 15 seconds so that the white balance is properly adjusted.

è ÈÌÄ~±ÌÈñ í Ò~ÄÚ~ÈÍÙ ÍÄÌÚ°

- ë~ÄÚ~ÈÍ ÍÄÌÚ° ÚÌÄ~±ÄÚ , Äñ Ä±ÖÈÖÈ. àÖÖÓÍ,ÄÚÈÚÄÄ,Ó,ÍÄ~ÄÖÚ,Ä ÚÍÓ,Ó%ÖÚ,±. ±Í .Ú%ÄÚ ÖÚÖÚ±,±ÈÄ ÖÓ , ÄÌÄÌÈ ÍÄ ÍÄÒÍÓÍ ÍÓ ÒÄÍÚ!%ÖÚ Ú±ÍÚÈ~ÄÖÍÓ,,Ó , ÄÌÄÌÈ. Ññ ÚÖÚ±ÍÓ,ÌÈ Ò~ÄÚ~ÈÍ± Í± ÍÚÍ, ±ÈÈÈÚÄ ÍÍÖÍÚ COUNTER RESET.
- ÖÖÍÈ ÍÄÌÚ± Ä±ÖÈÖ±± , Ó.ÖÈ: ÄÈÈÍ±, SP È LP, Ò~ÄÚ~ÈÍ ÍÄÌÚ° .Ú%ÄÚ ÖÖÍ±Ä°,±Ú, ÍÄÖ ±,ÈÍ,ÍÖÄ , Äñ. ÖÖÍÈ , ±ÍÄ Ä,±ÄÚÄÖ Ö ÖÈÄ,ÄÖÚÈÍÓÍÚ±È ÍÄÌÚ° Ò ÈÖÖÓÍ,ÄÓ,±ÈÄÌ Ò~ÄÚ~ÈÍ± ÍÄÌÚ° , ÍÄ~ÄÖÚ,Ä ÚÍÓ,Ó%ÖÚ,±,Ö ÖÈÄ,Ó%ÈÚÄÄ±ÖÈÖ , ÚÓÍ ÈÄ ÄÈÈÍÄ (SP ÈÈÈ LP).

è ÈÌÄ~±ÌÈÄ í ÄÚÌÄ ÍÖÍÚ Ä,ÚÍÓ,ÖÍÚ ÖÈ,,Í±ÍÚ

ä±Í ÚÌÄ±ÍÓ Ò ÖÖÍÓ° ♪ Í± ÈÖÚÍÍ±, Ó%ÈÍ ÄÚÌÄ ÍÈ ÖÈ,,Í±Í Ä,Ú~ÈÚ, ÍÓ,,%± Ç° ÍÄ~ÈÍ±ÄÚÄ Ä±ÖÈÖ, È %,,± ÄÚÌÄ Í° ÒÈ,,Í±Í Ä,Ú~±Ú, ÍÓ,,%± Ç° Ä±Í±È,±ÄÚÄ Ä±ÖÈÖ,, ÖÓ%Ú,Ä È%±ñ ÚÄÍ Ò±Í° ±.ÖÚÚ. çÄÖÍÓÍ,ÍÓ ÄÚÌÄ Í° ÒÈ,,Í±ÍÓ, Ú±ÈÄ Ä,Ú~ÈÚ , ÍÄ~ÄÖÚ,Ä Ò Ä%ÚÖ ÄÈ%ÄÌÈñÍ±ÍÓ,,Ó-ÌÈ-Ó ÍÄÌÚ Í±ÍÍÓ,,Ó ÖÖÖÚÓñÌÈñ,È%ÄÖÍ±ÍÄ ° (ÖÚ . 67). ä±ÍÄÚ ÚÄ, ~ÚÓ ÄÚÌÄ ÍÈ Ä,ÚÍÓ,ÓÈ ÖÈ,,Í±Í ÍÄ Ä±ÖÈÖ°,±ÄÚÖñ Í± ÍÄÌÚÚ. ÖÖÍÈ , ÌÄ ÍÖÚÈÚÄ ÖÍ~±Ú, ÄÚÌÄ ÍÈ ÖÈ,,Í±Í, ÚÓ ÚÖÚ±ÍÓ,ÈÚÄ "BEEP" ,ÖÖÍÓÈÄÌÈÄ "OFF" (ÖÚ . 34).

è ÈÌÄ~±ÌÈÄ í ÚÚÌÍÈÈ AUTO DATE

ó±Ö° ÚÖÚ±ÍÓ,ÍÄÌ° Ä±,Ó%ÖÍÈ-ÈÄ,ÖÚÓ,ÈÚÄÍÄÍ ÖÓÍÓÍ%ÖÍÓÍÓÍÚ , ÄÌÄÌÈ %ñ ÍÓ%ÄÍÄÈ èÖÄ%ÈÌÄÌÖ,,Ó äÖ ÖÍÄ,ÖÚ,±È ÖÖÖ± ÈÈÖÍÓÍÚ , ÄÌÄÌÈ %ññ% Ú,,È,Ä, ÖÖÄÈÖÍÈ,ÍÓ%ÄÍÄÈ. Ç° ÍÖÈÄÚÄ , ÖÖÍÈÚ, ÖÓ,ÚÓ ÍÚ, ÚÖÚ±ÍÓ,ÍÚ ~±ÖÓ,(ÖÚ .38).

ÍÚÌÍÈÈ AUTO DATE ±,ÚÓÍ±ÚÈ~ÄÖÍÈ ÖÖÍ±Ä°,±ÄÚ%±ÚÚ Ö%ÈÍ ±Ä, %ÄÌ, .é%±ÍÍÓ, %±Ú±ÍÖÈÄÚ ÖÖñ,ÈÚ, Öñ±,ÚÓÍ±ÚÈ~ÄÖÍÈ .ÓÍÄÄ Ö%ÖÍÓ,Ó ±Ä±, %ÄÌ, , ÄÖÍÈ:

- Ç° Ö. ÖÖÈÚÄ%±ÚÈÈ, Äñ.
- Ç° , ÚÓÍÌÄÚÄ Í±ÖÖÄÚÚ È , ÖÚ±,ÈÚÄ ÄÄ ÖÍÓ,±.
- Ç° ÖÖÚ±ÍÓ,ÈÚÄ Ä±ÖÈÖ°, Ò Ä%ÄÍ± 10 ÖÄÍÚ!%.

è È ,ÍÓ%Ä ÈÄ ÖÖÍÄ~ÄÌÈñ Í± ÚÍÈ~Ú (ÈÈÈ Í±Ö.Ó ÖÚ)


èÓ,Ä ÍÈÚÄ ÖÄ ÄÌ~±ÚÄÌ, STANDBY ,,Ä Í È Í±,Ä%ÈÚÄ ,È%ÄÖÍ±ÍÄ Ú Í± .ÄÍÈ Ö.ÄÍÚ Ö È.ÌÈÄÈÚÄÌ,ÍÓ Í± 15 ÖÄÍÚ!% Ú±Í, ~ÚÓ. ÄÍÈ .±Í±ÍÓ° .Í ÖÚ Ä,,ÚÍÈ Ö,± Ò ±,ÈÍ,ÍÓ.

Using the Zoom Feature

Zooming is a recording technique that lets you change the size of the subject in the scene. For more professional-looking recordings, use the zoom sparingly.


T side: for telephoto (subject appears closer)

W side: for wide-angle (subject appears farther away)

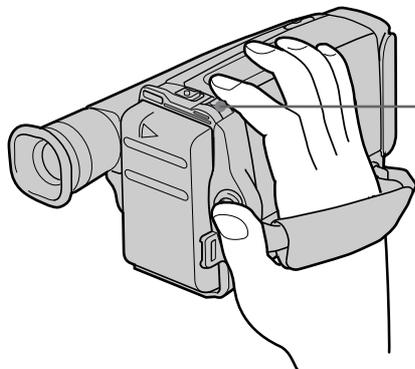

àöóóí.Áó,±iÉÄ Ùùíí~ÈÈ ì±ÁÁ%o±
,É%oÁóί±iÁ °

ç±ÁÁ%o ,É%oÁóί±iÁ ° η,íñÁÙÒñ ÙÁìÈ~ÁóíÈí
ò ÈÁíóíÁ±òÈòÈ,íóúó °È öóÁ,óíñÁÙ,±í
ÈÁíÁíñÚ, ±ÁíÁ Ò·ÁíÚ±, ì±%o Á. çÁ
Áíóúóóú Á·íñÈÚÁ ~ÚÈíò ÈÁíóí,ÁóíÈ,íóúÈÚÁ,
~Úó.° Ç±È Á±òÈòÈ °,íñ%oÁíÈ ·óíÁÁ
ò óúÁóóÈóí±í,ò.
ëúó óí±í: %oíñ ÙÁíÁÙóóó (ó·ÁíÚ
ò È·iÈÈ±ÁÙòñ)
ëúó óí±W: %oíñ È öíó,ó Ù,ì± ò·ÁíÈÈ
(ó·ÁíÚ Ù%o±íñÁÙòñ)

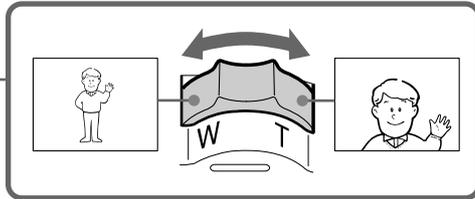

Zooming Speed

Turn the power zoom lever fully for a high-speed zoom. Turn it lightly for a relatively slow zoom.

When you shoot a subject using a telephoto zoom

If you cannot get a sharp focus while in extreme telephoto zoom, turn the power zoom lever towards the W side until the focus is sharp. You can shoot a subject that is at least about 80 cm (about 2 5/8 feet) away from the lens surface in the telephoto position, or about 1 cm (about 1/2 inch) in the wide-angle position.

ëíó óóú, ì±ÁÁ%o± ,É%oÁóί±iÁ °
èóííóóú, öó,Á íÈÚÁ °±, ò È,ó%oíó,ó
Ù ±íòùóí±úó ±%oíñ·óú ó,óì±ÁÁ%o±
,É%oÁóί±iÁ °, öó,Á íÈÚÁ Á,ó óíÁ,,ì± %oíñ
iÁ%oíÁííó,,ò ì±ÁÁ%o± ÙÁíÁí±iÁ °

äó,,%o±, ° òìÈí±ÁÚÁ ó·ÁíÚ, Èöóóí,ÁÙñ
ì±ÁÁ%o, ÁÈÈiÁ ÙÁíÁÙóóó
öóíÈ ° iÁ íöÈÁÚÁ öóíÚ·ÈÚ, ~ÁúíóÈ
úóíúóÈ ó,íÈ,ó, Áíñ í ±ÈiÁ,,ò ì±ÁÁ%o±,
ÁÈÈiÁ ÙÁíÁÙóóó, úó öó,ó ±È,±ÈÚÁ °±,
ò È,ó%oíó,óú ±íòùóí±úó ±,óúó óíÙW,%oó
ÙÁíóó, öóí±iÁ öóíÚ·ÈÚÁ ~ÁúíóÈ
úóíúóÈ ó,íÈ.
ç·íöÈÁÚÁ ò öÈÁ,ÁóúÈ ò Áííúò Á%oíÁÙ±,
íóúó °È öó íÁì, ~ÁÈ iÁ Á ì±ó%oÈÚòñ
ò È·iÈÁÈÚÁí,ò ì± ±òóóñíÈÈ 80 óíóú
óó,Á ñíóóúÈ ó·ÁíÚÈ,±, öóíöÈÁíÈÈ
ÙÁíÁÙóóó, ÈíÈ 1 óí, öóíóÈÁíÈÈ È öíó,,ó
Ù,,ì±.

Notes on Digital Zoom -CCD-TR402E only

You can select 13 x (optical) or 26 x (digital) of zooming.

- More than 13 x zoom is performed digitally, and the picture quality deteriorates as you go toward the T side. If you do not want to use the digital zoom set the ZOOM function to x13 (p. 34).
- The right side [a] in the power zoom indicator shows the digital zooming zone, and the left side [b] shows the optical zooming zone. If you set the ZOOM function to x13, the [a] zone disappears.

è ÈiÄ~tîÈñ Ò Ó ^ÈÙ Ó,ÓiÛ
 Ú tîÓÙÓtÚÓÚ
 – ÓÓi,ÍÓ %óññ ÌÓ%óÄiÈ CCD-TR402E
 Ç° ÍÓÉÁÚÁ ,° tÚ, Ú tîÓÙÓtÚ°È, 13i
 (ÓÓÚÈ^ÁÓiÛ,) ÈiÈ 26i (^ÈÙ Ó,Ú).
 • í tîÓÙÓtÚ°Èñ ·ÓiÁÁ, ^Ái 13i,
 Ò ÓÉÁ,Ó%ÈÚÓñ^ÈÙ Ó,ÍÓÓÓÓÓ·Ói,È
 tÚ^ÁÓÚ,ÓÉÁÓ· tÈÁiÈñÚiÚ% tÁÚÓñÓÓiÁ Á
 ÓÁ ÁiÁ^ÁiÈñ , ÓÚÓ ÓiÛ í. ÓÓiÈ Ç° iÁ
 íÓÚÈÚÁÈÓÓÓi,ÁÓ,tÚ, ^ÈÙ Ó,ÓÈ
 Ú tîÓÙÓtÚÓ ,ÚÓÚtíÓ,ÈÚÁ ÚÚií^È, ZOOM
 ,ÓÓiÓÈÁiÈÁ i13 (ÓÚ . 34)
 • è t,tñÓÚÓ Ót [a]Èi%ÈtÚÓ tÔ È,Ó%ò,Ó
 Ú tîÓÙÓtÚÓ tÓÓiÁ^, tÁÚÁÓiÛ ^ÈÙ Ó,ÓÈ
 Ú tîÓÙÓtÚ°ÈÈ, tîÁ,tñÓÚÓ Ót [b]
 ÓÓiÁ^, tÁÚÁÓiÛ ÓÓÚÈ^ÁÓiÓÈ
 Ú tîÓÙÓtÚ°ÈÈ. ÓÓiÈ Ç° ÚÓÚtíÓ,ÈÚÁ
 ÚÚií^È, ZOOM t t 13, ÚÓ ÁÓi t [a]
 ÈÓ^ÁiÁÚ.





Hints for Better Shooting

è Ó,ÁÚ° %óññ îÛ~^ÈÈ
 Ò^ÁiÈÈ

For hand-held shots, you'll get better results holding the camcorder according to the following suggestions:

Ññi t% Ó, Ò ÈÓÓ%óó^ÈiÁ ÚiÓÈÇ°
 ÓÓiÛ^ÈÚÁiÛ^ÈÁ ÁÁÚi,ÚtÚ°,Ú%óÁ ÈÈ,tñ
 ,È%óÁÓiÁiÁ Ú,ÓÓÓÚ,ÁÚÓÚ,ÈÈÓÓÓiÁ%Ú,ÈÈÈ
 ÚtÁtîÈñÈÈ.

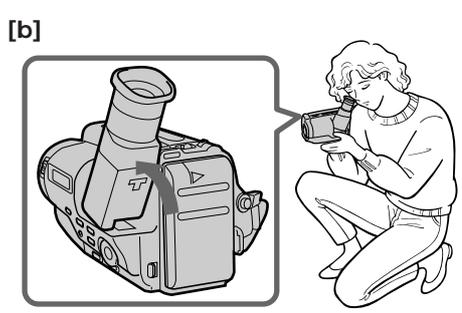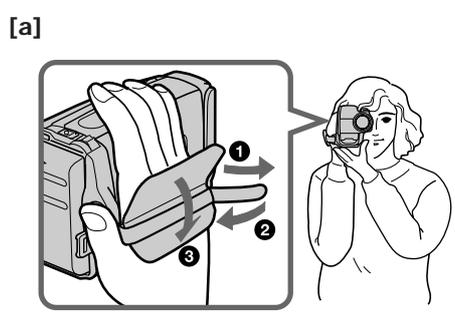

Hints for Better Shooting

ëÓ,ÂÚ° %óífl îÚ~ÂÈ Ò`ÂÏË

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb. [a] (p. 17)
- Place your right elbow against your side.
- Place your left hand under the camcorder to support it. Do not cover the microphone with your fingers.
- Place your eye firmly against the viewfinder eyecup.
- Use the viewfinder frame as a guide to determine the horizontal plane.
- You can also record in a low position to get an interesting recording angle. Turn the viewfinder up for recording from a low position. [b] (p. 17)

Place the camcorder on a flat surface or use a tripod

Try placing the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder.

When attaching a non-Sony tripod, make sure the tripod screw is shorter than 6.5 mm (9/32 in.). Otherwise, the screw may damage the inner parts of the camcorder.

Cautions on the viewfinder


- Do not pick up the camcorder by the viewfinder. [c]
- Do not place the camcorder so as to point the viewfinder toward the sun. The inside of the viewfinder may be damaged. Be careful when placing the camcorder under sunlight or by a window. [d]

- ç±%óÄËíó%óÄ ÈËÚÁ,È%óÄÓí±íÁ ÛË Ó`Á%óÓí ±íflÈÚÁ ÁÁ Ó`ÓÓÍÓ`... ÁíÀííÓ,,Ó Á±,±Ú± Û±í, ~ÚÓ Ç` ÓÍÓËÁÚÁ ÍÁ,,ÍÓ Í±ÍËÓÚË Ó,±Ú, Á,ÚíflÚÓ ±ÍË Ó`ÓÓÍÓ`.. Ç±-Á,,Ó -ÓÍ`-Ó`Ó Ó±í`±. [a] (ÓÚ . 17)
- è±ÓÓÓÍÓËËÚÁ Ç±-Ó`±, È`ÍÓÍÓÚ, ì±Ó ÓÚË, Ç±-Á,,Ó -Óí±.
- è±ÓÓÓÍÓËËÚÁ Ç±-Ú`ÍÁ,Ú, ÚíÚ ÓÓ%ó, È%óÄÓí±íÁ ÓË%óíflÁÁ ÓÓ%óÄ ÈÍË . ÇÁ Á±Í ÓËÚÁ ÌËÍ ÓÚÓÍ Ç±-ËÍË Ó±í, ±ÍË .
- è±ÓÓÓÍÓËËÚÁ Ç±, Í±Á ÚÓ`ÍÓ ì±Ó ÓÚË, ÓÍÚífl ±,È%óÓËÓí±ÚÁífl.
- àÓÓÓÍ,ÁÚËÚÁ,ÈÁË ÍÚ, ±ííÚ,È%óÓËÓí±ÚÁífl, Í±-ÁÓÚ,Á ÚÍÓ,Ó%óÓÚ,±%óífl ÓÓ`Á%óÁÍÁíËfl „Ó`ÈÁÓíÚ±í,ÍÓ,,Ó Óí±±.
- Ç` Ú±ÍËÁ ÍÓËÁÚÁ ÓÓÚ-ÁÓÚ,íflÚ, Á±ÓËÓ, ÈÁ ÍËËÍÁ,Ó ÓÓÍÓËÁíËfl %óífl ÓÓÍÚ-ÁíËfl ÈÍÚÁ ÁÓÍÓ,ÓÚ,Í±±ÓËÓËÈ,èÓÁ ÍËÚÁ,È%óÓËÓí±ÚÁí,„Á`Í%óífl Á±ÓËÓËÈ ÈÁ ÍËËÍÁ,,Ó ÓÓÍÓËÁíËfl. [b] (ÓÚ . 17)


è±ÓÓÓÍ±,±ËÚÁ,È%óÄÓí±íÁ Û ì± ÓÍÓÓÍÓË ÓÓ,Á ìíÓÓÚË ÈÍË ÈÓÓÓÍ,ÁÚËÚÁ Û ÁíÓËËÍ ÈÚ± ±ËÚÁÓ, ±ÓÓÍ±,±Ú, È%óÄÓí±íÁ Û ì± ÓÚÓÍÁËÍË%óÚ,ÓËÓÍÓÓÍÓËÈÓÓ,Á ìíÓÓÚË ÓÓ%óí%óífl`ÁË,`ÓÓÚ. ÓÓÍË Û Ç±ÓËÍÁÁÚÓífl Û ÁíÓËËÍí%óíflÚÓÓÚ±ÓÓ± ±Ú±, Ç` ÍÓËÁÚÁ ÈÓÓÓÍ,ÁÓ,±Ú, Á,Ó È`%óífl,È%óÄÓí±íÁ . è È`Ó ÈÍ`ÁÓíÁíËÍÍ Û ÁíÓËËÍÍÚ, ÓÚÍË`ÍÓÍÚ ÓÚ ÛË`Í` Sony Û-Á%óÈÚÁÓ, ~ÚÓ Í`ÁÓÁËÍ`È,ÈÍÚ Û ÁíÓËËÍ± ÍÓ`Ó`Á 6,5 íí. Ç` Ó`ÓÚË,ÍÓÍ ÓÍÚ-±Á,ÈÍÚ ÍÓËÁÚÁ ÓÓ, Á%óÈÚ, ìÚÚ ÁííËÁ %óÁÚ±ÍË,È%óÄÓí±íÁ .

- àÂ`Ó`Á%óÓÓÚÓ ÓËÍÓÓÚËÈ Ó`ÈÓ. ±`ÁíËË Ó,È%óÓËÓí±ÚÁíÁí
- ÇÁ ÓÓ%óíËí±ËÚÁ,È%óÄÓí±íÁ Û, %óÄ È±ÁÁÁ±,È%óÓËÓí±ÚÁí, [c]
- ÇÁ ±ÓÓÓÍ±,±ËÚÁ,È%óÄÓí±íÁ Û Ú±ÍËÍ Ó. ±ÁÓÍ, ~ÚÓ. È%óÓËÓí±ÚÁí, .Í ì±Ó ±,ÍÁí, ÓÚÓ ÓÍÚ ÓÓíí±, ùÚÓ ÍÓËÁÚ Ó È,ÁÓÚËÍ%óÁÚÓ ì±`ÈË, ìÚÚ ÁííËÍ, ±ÓÚÁË,È%óÓËÓí±ÚÁífl. ÁÚ%ó, ÚÁ ÓÓÓÚÓ ÓËÍ, ÓÓÚ±,íflfl,È%óÄÓí±íÁ Û ì± ÓÓíí-Á ÈÍË, ÓÁÍÁ Óíí±. [d]

[c]

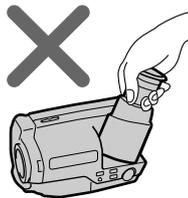

[d]

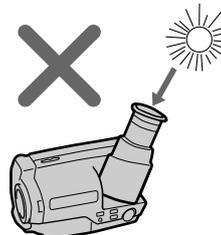


Checking the Recorded Picture

εὐχρηστικὸν ἰσχυρὸν ἔλεγχος εἰσαγγραφήματος

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder.

- (1) While pressing the small green button on the POWER switch, slide it to CAMERA.
- (2) Turn STANDBY up.
- (3) Press EDITSEARCH. Press the - (⊖) side momentarily, the last few seconds of the recorded portion plays back (Rec Review). Hold down the - side of EDITSEARCH until the camcorder goes back to the scene you want. The last recorded portion is played back. To go forward, hold down the + side (Edit Search).

- (1) Ἐπισημειώστε τὸ μικρὸν πράσινο κουμπί ἐπὶ τοῦ διακόπτη τῆς ΠΡΩΤΗΣ ΚΑΜΕΡΑΣ καὶ μετακινήστε τὸν εἰς τὴν ΚΑΜΕΡΑ.
- (2) Ἐπισημειώστε τὸν διακόπτη τῆς ΠΡΩΤΗΣ ΚΑΜΕΡΑΣ εἰς τὴν ΚΑΜΕΡΑ.
- (3) Πιέστε τὸν κουμπί EDITSEARCH. Πιέστε τὸν - (⊖) ἄρρηκτα ἕως ἄραυτος, ἡ τελευταία ἰσοκύματα τῆς εἰσαγγραφῆς ἀναπαύεται (Rec Review). Ἐπισημειώστε τὸν - (⊖) ἄρρηκτα ἕως ἄραυτος ἕως ἡμετέρας τῆς θέσης τοῦ θέματος ποῦ θέλετε. Ἡ τελευταία εἰσαγγραφή ἀναπαύεται. Ἐπισημειώστε τὸν + (⊕) ἄρρηκτα ἕως ἄραυτος ἕως ἡμετέρας τῆς θέσης τοῦ θέματος ποῦ θέλετε.

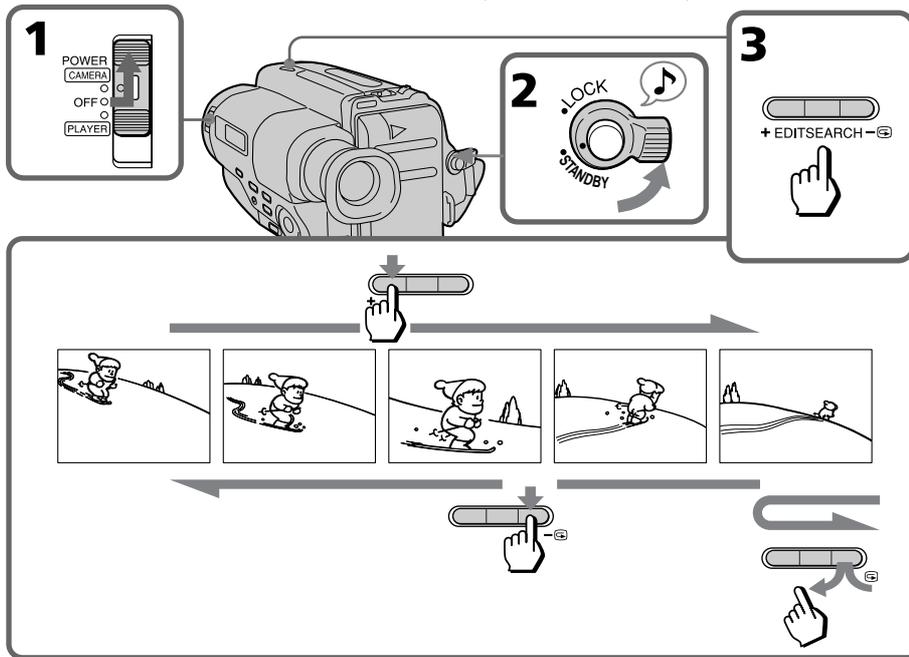

To Stop Playback
Release EDITSEARCH.

Ἐπισημειώστε τὸν κουμπί EDITSEARCH.

To Begin Re-recording
Press START/STOP. Re-recording begins from the point you released EDITSEARCH. Provided you do not eject the cassette, the transition between the last scene you recorded and the next scene you record will be smooth.

Ἐπισημειώστε τὸν κουμπί START/STOP. Ἡ ἀναπαύεσις ἀρχίζει ἀπὸ τοῦ θέματος ποῦ ἔχετε ἀναπαύσει τὸν κουμπί EDITSEARCH. Ἐπισημειώστε τὸν κουμπί START/STOP. Ἐπισημειώστε τὸν κουμπί START/STOP. Ἐπισημειώστε τὸν κουμπί START/STOP. Ἐπισημειώστε τὸν κουμπί START/STOP.

Basic Operations εὐχρηστικὸν ἰσχυρὸν ἔλεγχος

Connections for Playback

èÓ%oÍÎ ~ÀÌËfl %oÍfl
,ÓÒÔ ÓËÁ,Â%oÀÌËfl


Connect the camcorder to your VCR or TV to watch the playback picture on the TV screen. It is recommended to use the mains as the power source (p. 25).

If a VCR is connected to a TV

Open the jack cover and connect the camcorder to LINE IN on the VCR by using the supplied A/V connecting cable. Set the input selector on the VCR to LINE. Set the TV/VCR selector to VCR on the TV.

èÓ%oÓÓÂ%oËËÛÄ, È%oÂÓíîË Ü ÍÇ±-ÂÏÜ äÇá
ËËÛÄËÄ,ËÁÓ Û%oíîÓ ÓÓÏÓÜ ±
,ÓÒÔ ÓËÁ,Ó%oËÏÓ,ÓËÁÓ. ±ËÄËfl±
ÛÄËÄ,ËÄËÓíîÓÍ Í ±ËÄ. èÁÏÓÏÄÏ%oÛÄÛÒfl
ËÒÓÓÍ,ÁÓ,±Ü, ÍÁÏÜ È-ÂÓÏÜ, ÓÄÛ, ,
Í±-ÂÓÜ,ÂËÓÜÓ-ÏË±ÒËÛ±Ëfl (ÓÜ .25).


ÒÓÏË äÇá ÒÓ%oÓÓÂ%oËËÏÍÛÄËÄ,ËÁÓ Û
éÚÍ ÓËÛÄÍ Í-ÏÜ, ÌÄÁ%o± È ÓÓ%oÍÎ ÒËÛÄ
,È%oÂÓíîË Ü LINE IN Ì± KBM, ÈÒÓÓÍ,ÁÛfl
Ó ÈÏ±,±ÄÏ È ÓÓÂ%oËËÛÄËÄ ÏÈ Í±-ÄÏ, ±Ü%oËÓ/
,È%oÂÓ. ìÓÛ±ÏÓ,ËÛÄ, ò%oÏÓË ÓÄÏÄÏÜÓ Ì± Í, Ì
,ÓÓÏÓËÄËÄ LINE. ìÓÛ±ÏÓ,ËÛÄ ÓÄÏÄÏÜÓ TV/
VCR, ÓÓÏÓËÄËÄ VCR Ì± ÛÄËÄ,ËÁÓ Ä.

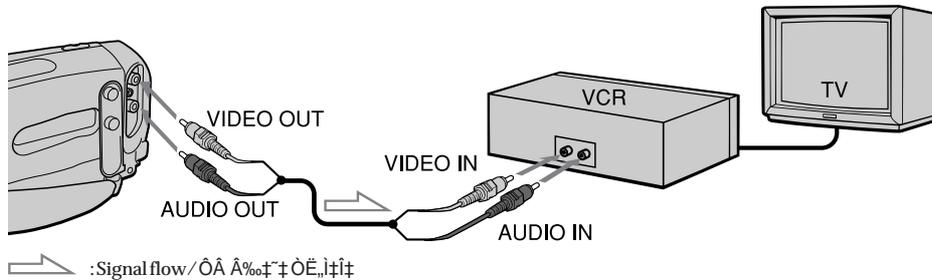

Connecting Directly to a TV


Open the jack cover and connect the camcorder to your TV by using the supplied A/V connecting cable. Set the TV/VCR selector to VCR on the TV.

èÓ%oÍÎ ~ÀÌËÄ ÌÄÓÓÒ Â%oÓÜ,ÄÏÏÓ Í
ÛÄËÄ,ËÁÓ Û
éÚÍ ÓËÛÄÍ Í-ÏÜ, ÌÄÁ%o± È ÓÓ%oÓÓÂ%oËËÛÄ
,È%oÂÓíîË Ü Í, ±-ÂÏÜ ÛÄËÄ,ËÁÓ Û,
ËÒÓÓÍ,ÁÛfl Ó ÈÏ±,±ÄÏ È ÓÓÂ%oËËÛÄËÄ ÏÈ
Í±-ÄÏ, ±Ü%oËÓ,È%oÂÓ. ìÓÛ±ÏÓ,ËÛÄ ÓÄÏÄÏÜÓ
TV/VCR, ÓÓÏÓËÄËÄ VCR Ì± ÛÄËÄ,ËÁÓ Ä.

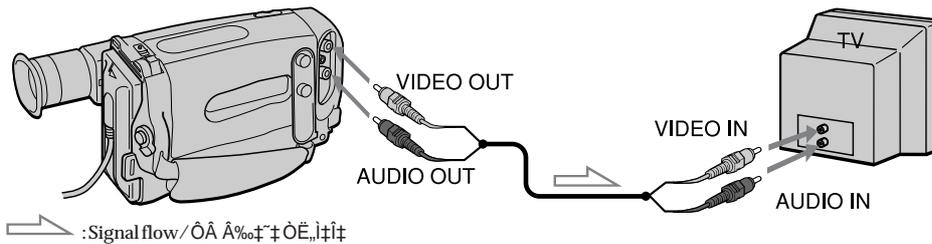

If Your TV/VCR has a 21-pin Connector (EUROCONNECTOR)
Use the supplied 21-pin adaptor.

ÖÖÏË Ç±- ÚÂÏÄ,ËÁÓ /äÇå ËÏÄÂÚ 21-
-Ú° ,ÍÓ,°È ÖÓÄ%ÈÏËÚÄÏ,
(EUROCONNECTOR)
àÖÖÓÏ,ÁÚËÚÄ Ò ËÏ±,±ÄÏ°È 21-Ú° ,ÍÓ,°È
±%±ÖÚÄ.

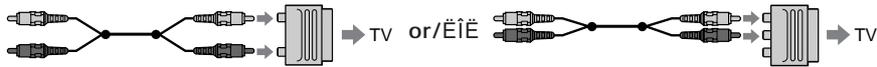

To connect a TV or a VCR without Video/Audio input jacks
Use an RFU adaptor (not supplied).

ÑÏÏ ÖÓ%ÏÏ~ÄÏËÏ í ÚÂÏÄ,ËÁÓ Û ËÏË äÇå
·ÄÄ ,ÍÓ%Ï°Ï/°Ï%Ï°Ï ,ÏÄÄ% ,Ë%ÄÓ/
±Ú%ËÖ
Ç°ÖÓÏËÚÄ ÖÓ%ÏÏ~ÄÏËÄ Ò ËÖÖÓÏ,ÁÓ,±ÏËÄÏ
±%±ÖÚÄ ±RFU (ÏÄÖ ËÏ±,±ÄÚÖÏ).

Playing Back a Tape

ÇÓÒÓ ÓÉÁ,Â%ÀÏÈÄ ÎÂÏÚ°

You can monitor the playback picture in the viewfinder. You can also monitor on the TV screen, after connecting the camcorder to the TV/VCR (p. 20).

You can control playback using the supplied Remote Commander.

- (1) While pressing the small green button on the POWER switch, slide it to PLAYER. The tape transport buttons light up.
- (2) Insert the recorded tape with the window facing out.
- (3) Press ►. Playback starts.


Ç° ÎÓÉÁÚÄ ,°ÓÓÏÈÜ. ÍÓÏÚ ÓÏÏ°È
Ó ÓÓÏÚÓ ,ÓÓÓ ÓÉÁ,Ó%ÈÏÓ,ÓÉÁÓ. †ÈÄÏÈñ,
,È%ÓÈÈÏ†ÚÄÏÄ. Ç° Ú†ÏÈÄ ÎÓÉÁÚÄ ,°ÓÓÏÈÜ,
Ó ÓÓÏÚÓ Ï† Î†ÄÚÄÏÄ,ÉÁÓ †ÓÓÏÄ
ÓÓ%ÏÏ,~ÄÏÈñ ,È%ÁÓÏ†ÏÄ° Î ÚÄÏÄ,ÉÁÓ Û/
äÇà(ÓÚ ,20).

Ç° ÎÓÉÁÚÄ ÍÓÏÚ ÓÏÈ Ó,†Ú
,ÓÓÓ ÓÉÁ,Â%ÀÏÈÄÓÈÓÓÏÏ,ÁÓ,†ÏÈÄÏ
Ó È†,†ÄÏÓ,ÓÓÚÏ,Ú†%ÈÓÚ†ÈÈÏÏÓ,ÓÓÚÓ †,
ÏÄÏÈñ.

(1) Ç†ÈÈÏ†ñ Î†ÏÄÏ,ÏÚ, ÁÄÏÄÏÚ, ÏÏÓÏÏÚ Ï†
,ÏÏ,†ÚÄÏÄ POWER, ÓÄ Á%,ÈÏ,ÚÄ Á,,Ó,
ÓÓÏÓÈÄÏÈÄ PLAYER.

ä†,,Ó †,ÚÓñ ÏÏÓÏÈÈ ÓÄ ÄÏÓÏÈÈ ÎÄÏÚ°.
(2) ÇÓÚ†,ÚÄ Á†ÓÈÈÓÏÏÚ, ÎÄÏÚÓ ÓÏÓ-ÏÏÏ,
Ó. †~ÄÏÏ° Ï† ÚÈÜ.

(3) Ç†ÈÈÈÚÄ ►. Ç†ÏÄÚÓñ,ÓÓÓ ÓÉÁ,Â%ÀÏÈÄ.

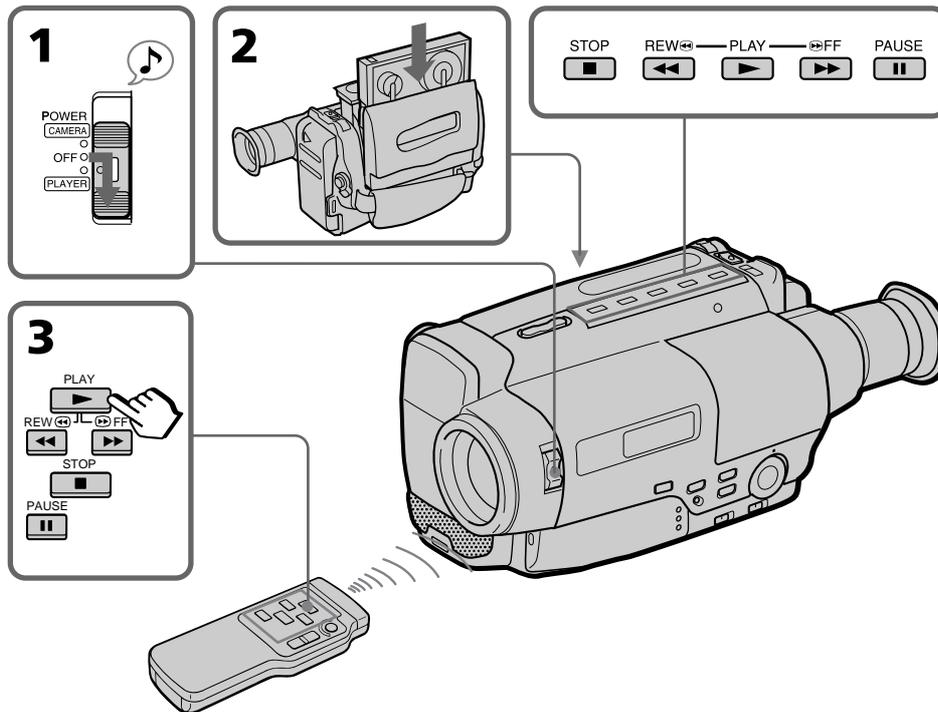

To stop playback, press ■.
To rewind the tape, press ◀◀.
To fast-forward the tape, press ▶▶.

Ñññ ÓÓÚ†ÏÓ,ÏÈ ,ÓÓÓ ÓÉÁ,Â%ÀÏÈñ Ï†ÈÈÈÚÄ
■.
Ñññ ÚÓÏÓ ÄÏÏÈÈ ÓÄ ÄÏÓÏÈÈ ÎÄÏÚ° Ï†Á†%
Ï†ÈÈÈÚÄ ◀◀.
Ñññ ÚÓÏÓ ÄÏÏÈÈ ÓÄ ÄÏÓÏÈÈ ÎÄÏÚ° ,ÓÄ Á%
Ï†ÈÈÈÚÄ ▶▶.

Advanced Operations

Using Alternative Power Sources

You can choose any of the following power sources for your camcorder: battery pack, the mains, alkaline battery, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	Mains	Supplied AC power adaptor
Outdoor	Battery pack	Battery pack NP-33 (supplied), NP-65/67, NP-66H/68, NP-77H/78, NP-90/90D, NP-98
	LR6 (size AA) Sony alkaline battery	Battery case
In the car	12 V or 24 V car battery	Sony DC pack DCP-77

Note on power sources

Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape. If this happens, restore the power supply again immediately.



This mark indicates that this product is a genuine accessory for Sony video products. When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

Using Alternative Power Sources

You can choose any of the following power sources for your camcorder: battery pack, the mains, alkaline battery, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	Mains	Supplied AC power adaptor
Outdoor	Battery pack	Battery pack NP-33 (supplied), NP-65/67, NP-66H/68, NP-77H/78, NP-90/90D, NP-98
	LR6 (size AA) Sony alkaline battery	Battery case
In the car	12 V or 24 V car battery	Sony DC pack DCP-77

Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape. If this happens, restore the power supply again immediately.




This mark indicates that this product is a genuine accessory for Sony video products. When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

Using the Mains

To use the supplied AC power adaptor:

- (1) Connect the mains lead to the mains. Insert the top of the connecting plate of the AC power adaptor into the top of the battery mounting surface. Push the connecting plate so that it attaches firmly. Make sure that you hear clicks twice.
- (2) Set the selector to VTR (DC OUT).

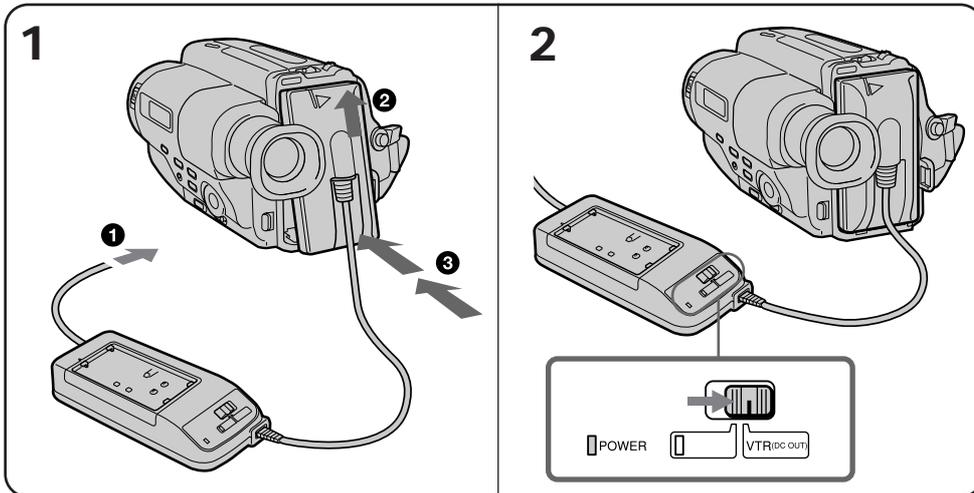

WARNING

Mains lead must only be changed at qualified service shop.

PRECAUTION

The set is not disconnected from the AC power source (mains) as long as it is connected to the mains, even if the set itself has been turned off.

Notes on the POWER lamp

- The POWER lamp will remain lit for a while even if the unit is unplugged after use. This is normal.
- If the POWER lamp does not light, disconnect the power cord. After about one minute, reconnect the mains lead.

To remove the adaptor

The adaptor is removed in the same way as the battery pack (p. 10).

à000Í,ÁÓ,±ìÈÀ ÍÁÍÚ È~Á0Í0È ÒÀÚÈ

Ñíñ È000Í, ÁÓ, ±ìÈñ Ò Èí±, ±ÁÍÓ,, Ò0ÁÚÁ, Ó, Ò ±%±0ÚÁ ±0Á Áí, Ú0Í±:

- (1) È0%00Á%ÈìÈÚÁ Ò, Ò%00 ÍÁÍÚ Ò0ÈÚ±ìÈñÍ ÍÁÍÚ È~Á0Í0È ÒÁÚÈ. Ç0Ú±, ÚÁ, Á íÈÈ Í0ÍÁ~00Á%ÈìÈÚÁÍ, Í0È Òí±0ÚÈÍ~0ÁÚÁ, Ó, Ò ±%±0ÚÁ ±0Á Áí, Ú0Í±, Á íì, ~±0Ú, ±Ú± ÁÈÍ0ÈÚ0Ú±Í0, ÒÍ0È00, Á Í00ÚÈ, Ç±ÈìÈÚÁ Í± 00Á%ÈìÈÚÁÍ, ÍÚ, Òí±0ÚÈÍÚ, Ú±í, Ú0~0Í± Ò È00Á%ÈìÈÍ±0, Í±%0ÁÈÍ0, í-Á%0ÈÚÁ0,, ~Ú0 Ç° %0, ±È%° Ú0Í± ±ìÈ ÁÍ~0Í.
- (2) Í0Ú±Í0, ÈÚ, ÒÁÍÁÍÚÓ, Ò0Í0ÈÁìÈÀ VTR (DC OUT).

Èè0Ñíèèì0ÜÑ0çà0 ÈÁÚÁ, 0È Ò Ò, Ò%00 ÒÍÁ%00ÚÁÚ Á±ÍÁíñÚ, Ú0Í, Í0, Í±0ÚÁ ÒÍ0È Í, ±ìÈÈÈ~È Ò, ±ìÍ0,, Ò Ò-0ÍÚÈÈ-±ìÈñ.

Èè0Ñíèèì0È0Ü0çà0 Ñ±íìÈ ±00± ±Ú ÍÁ Ú0Íí, ±ÁÚ0ñ ÒÚ È0Ú0~ÈìÈ±0ÈÚ±ìÈñ0Á Áí, Ú0Í±, Ò0Í±0Í 00Á%ÈìÁì Ò ÍÁÍÚ È~Á0Í0È ÒÁÚÈ,, %0±ÈÁ, Á0ÈÈ Ò±í ±00± ±Ú Ú0Íí, ~Áí.

È ÈÍÁ~±ìÈñ Í Í±Í00~ÍÁ POWER

- à±Í00~Í± POWER~Ú%0ÁÚ Ò0Ú±, ±Ú Òñ, Ò ñ~ÁÈ Í±Í0Á-Ú0, Áíñ, %00±ÈÁ, Á0ÈÈ ±00± ±Ú~Ú%ÁÚ0Ú00Á%ÈìÁì000ÍÁ È000Í, ÁÓ, ±ìÈñ. ùÚ0 ñ, ññÁÚ0ñ, Í0 Í±í, Íì.
- 00ÈÈ Í±Í00~Í± POWER ÍÁ Á±, Ò ±ÁÚ0ñ, 0Ú00Á%ÈìÈÚÁ0ÁÚÁ0È0 Ò0%0Á ÁÁ0%0dÚ ÍÈÍÚÚ0Í0, ±00%00Á%ÈìÈÚÁ0ÁÚÁ0È Ò00%0

Ñíñ ÒìñÚÈñÍ±%0±0ÚÁ ± Á%0±0ÚÁ, ÒìÈÍ±ÁÚ0ñ Ú±ìÈÈÈÁ Ò. ±Á0Í, Í±ìÈ ±Ú± ÁÈìÈ È-Í0Í (0Ú . 10).

Using Alternative Power Sources

àÒÒÓÍ, ÁÓ, ðÈÄ ðÛÁ ìÛ-
ÙÈ, ìÛ ÈÓÙÒÌÈÍÓ, ÒÈÙÛÈÏ

Using the Battery Case


Use the supplied battery case and six LR6 (size AA) Sony alkaline batteries (not supplied).

- (1) Remove the battery holder from the battery case.
- (2) Insert six new alkaline batteries into the battery holder, following the marking on the holder to be sure the batteries are installed in the correct direction.
- (3) Insert the battery holder with the alkaline batteries.
- (4) Insert the battery case with the alkaline batteries to the battery mounting surface of the camcorder in the same way as the battery pack.

àÒÒÓÍ, ÁÓ, ðÈÄ ðÛÁ ÆÈÍÓÈ ÌÛÌÁ

àÒÒÓÍ, ÁÓÈÙÁ Ò ÈÛ, ðÛÛ. ðÛÁ ÆÈÍÓÈ ÌÛÌÁ Û È ÆÓÙ ÆÈÍÓÈ ðÛÁ ÆÈÍÓÈ Sony LR6 (ðÛÁ ÒÍ ÁÁ) (ÌÁ Ò ÈÛ, ðÛÛ).

- (1) ÈÛÈÈÙÁ ðÛÁ ÆÈÍÓÈ È %Á ÈÛÁÛ, Ò ðÛÁ ÆÈÍÓÈ ÌÛÌÁ.
- (2) ÇÓÙ, ÛÁ ÆÓÙ, ÆÈÍÓÈ ðÛÁ ÆÈÍÓÈ È %Á ÈÛÁÛ, ÒÍÁ %ÙÏ ÒÓÍÁÛÛÛ ÌÛÁ ÈÛÁÛ, ÒÓ %ÙÁ È %ÙÛ, ðÛÁ ÆÈÍÓÈ ÛÓÙÛÍÓ, ÌÁÛ, Ò ðÛÈ, ÌÓÍ ÌÛÓ ðÛÌÁÈÈ.
- (3) ÌÓÙÛÍÓ, ÈÙÁ ðÛÁ ÆÈÍÓÈ È %Á ÈÛÁÛ, ÒÓ ÆÈÍÓÈ ðÛÁ ÆÈÍÓÈ.
- (4) ÌÓÙÛÍÓ, ÈÙÁ ðÛÁ ÆÈÍÓÈ ÌÛÌÁ Û ÒÓ ÆÈÍÓÈ ðÛÁ ÆÈÍÓÈ ÌÛ ðÛÁ ÆÈÍÓÈ ÛÓÙÛÍÓ, ÒÓ, Á ÌÓÓÙ, È %Á ÒÍÁÛ ÛÛÈÛ ÈÁ Ò ðÁÓÍ, ÌÛ È ðÛÁ ÆÈÍÓÈ ÌÓÍ.

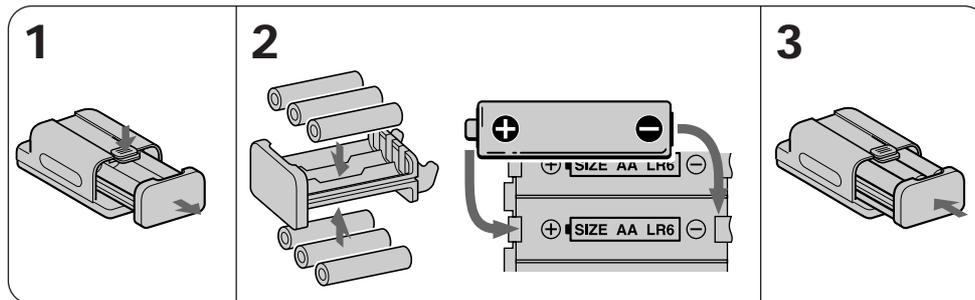

Battery Life

Using Sony alkaline batteries at 25 °C (77 °F)

Model	Typical recording time	Continuous recording time
CCD-TR401E	70 min.	130 min.
CCD-TR402E	70 min.	125 min.

Notes

- The above battery lives are estimates. The battery life may be shorter depending on the storage condition of the battery before being purchased and temperature.
- You may not use the battery case in cold environment.

To remove the battery case

The battery case is removed in the same way as the battery pack (p. 10).

When you replace the batteries, be sure to remove the battery case from the camcorder to prevent malfunction.

È ÓÍ ÒÍÙÈ. ðÛÁ ÆÈÍÓÈ

È ÈÒÒÓÍ, ÁÓ, ðÈÄ ðÛÁ ÆÈÍÓÈ Sony Ò È 25°è (77°F)

àÓ%ÁÛ,	Ç ÁÏÏÙÈÒÈ- ÍÓÈÁÛÒÈÒÈ	Ç ÁÏÏÌÁÒ Á- ÍÓÈ ÁÛÒÈÒÈ
CCD-TR401E	70 min.	130 min.
CCD-TR402E	70 min.	125 min.

È ÈÌÁ ðÛÈÏ

- Ç ÆÓ È, Á %ÁÛ Ò ÓÍÈ ÒÍÙÈ. ðÛÁ ÆÈÍÓÈ Ò ÆÈÍÓÈ Ò È ÆÈÁÈÙÁÛ, ÌÓ. È ÓÍ ÒÍÙÈ. ðÛÁ ÆÈÍÓÈ ÌÓÈÁÛ. Û, ÌÓ Ó ÆÈÍÓÈ ÌÓÈÁÛ, ÒÓ ÛÓÍÓ, ÈÈ, ðÛÈÏ ðÛÁ ÆÈÍÓÈ %ÓÓÍÓÍÈÈÈÓÙÁÛ ðÛÛ.
- Ç ÌÁ %ÓÍÈÈÈ ÈÒÒÓÍ, ÁÓ, ðÛ, ðÛÁ ÆÈÍÓÈ ÌÛÌÁ Û, ÌÓÍ %ÙÛ ÛÓÍÓ, ÈÏ.

ÑÏÏ ÒÏÏÙÈÏ ðÛÁ ÆÈÍÓÈ ÌÛÌÁ

ÁÛÁ ÆÈÍÓÈ ÌÛÌÁ ð ÒÈÛÁÛÓÏ ÛÛÈÛ ÈÁ Ò ðÁÓÍ, ÌÛ È ðÛÁ ÆÈÍÓÈ ÌÓÍ (ÓÙ . 10). È È ÁÛÌÁÛ ðÛÁ ÆÈÍÓÈ ÌÁ ÁÛÙ% ÛÁ, ÌÓÙ, ÈÁ È %Á ÒÍÁÛ. ðÛÁ ÆÈÍÓÈ ÌÛÌÁ Û %ÙÛ Ò Á%ÓÙ, ð ÆÈÏÛ Û ÆÈÈÈ, ð-ÓÙÁ.

Using a Car Battery

Use Sony DCP-77 DC pack (not supplied). Connect the cord of the DC pack to the cigarette lighter socket of the car (12 V or 24 V). Connect the DC pack to the battery mounting surface of the camcorder.

To remove the DC pack

The DC pack is removed in the same way as the battery pack (p. 10).

Using a Car Battery

Use Sony DCP-77 DC pack (not supplied). Connect the cord of the DC pack to the cigarette lighter socket of the car (12 V or 24 V). Connect the DC pack to the battery mounting surface of the camcorder.

The DC pack is removed in the same way as the battery pack (p. 10).



Recording with the Date or Time

Before you start recording or during recording, press DATE(+) or TIME(NEXT). You can record the date or time displayed in the viewfinder with the picture. You cannot record the date and time at the same time. Except for the date or time indicator, no indicator in the viewfinder is recorded.

The clock is set to London for the United Kingdom models and Paris for other European models at the factory.

Recording with the Date or Time

Before you start recording or during recording, press DATE(+) or TIME(NEXT). You can record the date or time displayed in the viewfinder with the picture. You cannot record the date and time at the same time. Except for the date or time indicator, no indicator in the viewfinder is recorded.

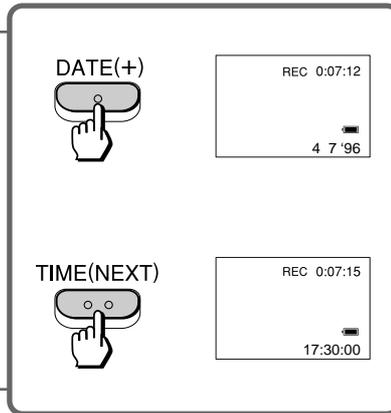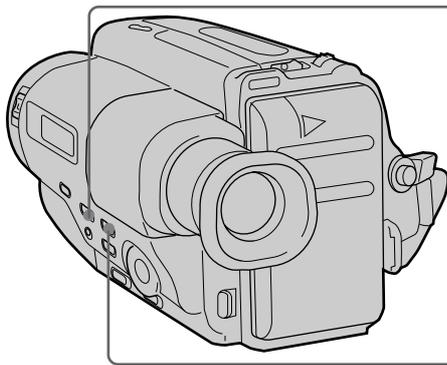

To Stop Recording with the Date or Time

Press DATE(+) or TIME(NEXT) again. Recording continues.

Note

You cannot superimpose a title during recording the date or time.

Press DATE(+) or TIME(NEXT) again. Recording continues.

You cannot superimpose a title during recording the date or time.

Using the PROGRAM AE Function

PROGRAM AE

You can select from three PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can capture high-speed action or night views.


PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can capture high-speed action or night views.

Selecting the Best Mode

PROGRAM AE

Select the best mode by using the following examples.

PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can capture high-speed action or night views.

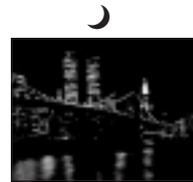

Sports mode

- Outdoor sports scenes such as football, tennis, golf or skiing
- A landscape in a moving car

PROGRAM AE

- Outdoor sports scenes such as football, tennis, golf or skiing
- A landscape in a moving car

High-speed shutter mode

- A golf swing or a tennis match in fine weather with the ball captured clearly
- Playing back certain scenes with high-speed movements in clear, sharp picture

PROGRAM AE

- A golf swing or a tennis match in fine weather with the ball captured clearly
- Playing back certain scenes with high-speed movements in clear, sharp picture

Twilight mode


- Recording night views, neon signs or fireworks

PROGRAM AE

- Recording night views, neon signs or fireworks


Using the PROGRAM AE Function

Set the mark of the desired mode to the ● mark above the PROGRAM AE dial.

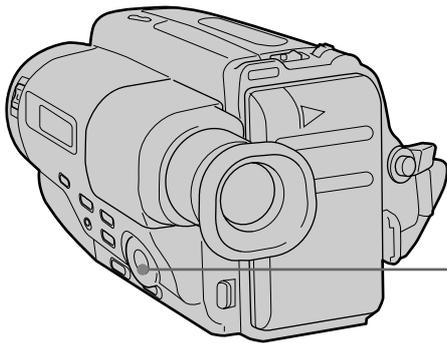

Using the PROGRAM AE Function

Set the mark of the desired mode to the ● mark above the PROGRAM AE dial.

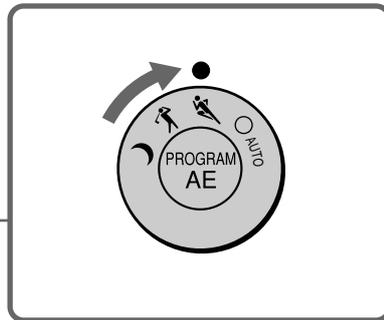

Note on shutter speed

The shutter speed in each PROGRAM AE mode is as follows:

- Sports mode – between 1/50 to 1/500
- High-speed shutter mode – 1/4000
- Twilight mode – 1/50
- AUTO mode – 1/50

The shutter speed in each PROGRAM AE mode is as follows:
 Sports mode – between 1/50 to 1/500
 High-speed shutter mode – 1/4000
 Twilight mode – 1/50
 AUTO mode – 1/50

Shooting with Backlighting



επιβάλλει το Αυτόματη Έκθεση

When you shoot a subject with the light source behind the subject or a subject with a light background, use BACK LIGHT.

Όταν φωτογραφίζετε ένα θέμα με το φως να βρίσκεται πίσω από το θέμα ή ένα θέμα με φωτεινό φόντο, χρησιμοποιήστε το BACK LIGHT.

Press BACK LIGHT. The  indicator appears inside the viewfinder.

Πατήστε το BACK LIGHT. Το  εμφανίζεται μέσα στο οπτικό πεδίο.

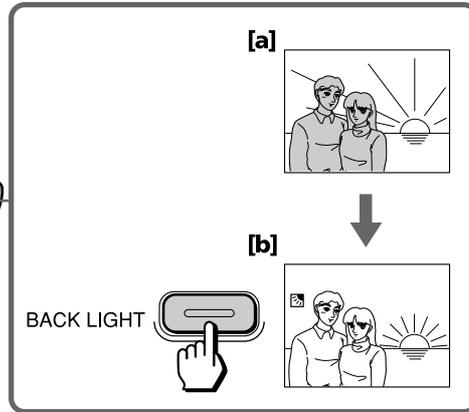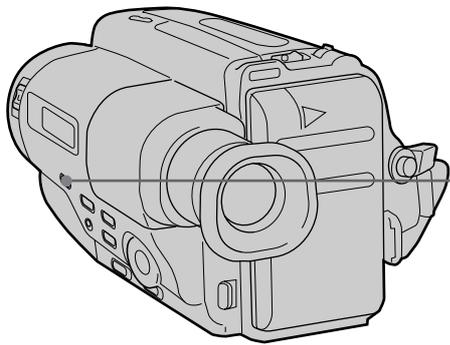

- [a] Subject is too dark because of backlight.
- [b] Subject becomes bright with backlight compensation.

- [a] Το θέμα είναι πολύ σκοτεινό λόγω του φωτισμού από πίσω.
- [b] Το θέμα γίνεται φωτεινό με την αποζημίωση για φωτισμό από πίσω.

After Shooting

Press BACK LIGHT again to let the  indicator go out under normal lighting condition. Otherwise, the picture will be too bright under normal lighting condition.

επιβάλλει το Αυτόματη Έκθεση
 Πατήστε ξανά το BACK LIGHT, το  θα σβήσει σε κανονικές συνθήκες φωτισμού. Διαφορετικά, η εικόνα θα είναι πολύ φωτεινή σε κανονικές συνθήκες φωτισμού.

This function is also effective under following conditions:

- On the snow e.g. at the ski resort
- At the beach under strong sunshine
- A subject with a light source nearby or a mirror reflecting light
- A white subject against a white background. Especially when you shoot a person wearing shiny clothes made of silk or synthetic fiber, his or her face tends to become dark if you do not use this function.

- Σε χιόνι π.χ. στα σκι
- Στην παραλία με έντονο ηλιακό φως
- Ένα θέμα με πηγή φωτός κοντά ή με καθρέφτη που αντανακλά το φως
- Ένα λευκό θέμα με λευκό φόντο. Ειδικά όταν φωτογραφίζετε ένα άτομο που φοράει λαμπερά ρούχα από μεταξοστόχο ή συνθετικό υλικό, το πρόσωπό του μπορεί να γίνει σκοτεινό αν δεν χρησιμοποιήσετε αυτή τη λειτουργία.

Selecting the START/STOP Mode


START/STOP

Your camcorder has two modes besides normal start/stop mode. These modes enable you to take a series of quick shots resulting in a lively video.

- (1) Set START/STOP MODE to the desired mode.
 - ANTI GROUND SHOOTING**: Recording starts when you press START/STOP, and stops when you press it again (normal mode). The camcorder records only while you press down START/STOP so that you can avoid recording unnecessary scenes.
 - 5 SEC**: When you press START/STOP, the camcorder records for about 5 seconds and then stops automatically.
- (2) Turn STANDBY up and press START/STOP. Recording starts.

If you selected 5 SEC, five dots appear in the viewfinder. The dots disappear at a rate of one per second as illustrated below. When about five seconds elapse and all the dots disappear, the camcorder switches to Standby mode automatically.

If you selected ANTI GROUND SHOOTING, the camcorder records as long as you hold down START/STOP.

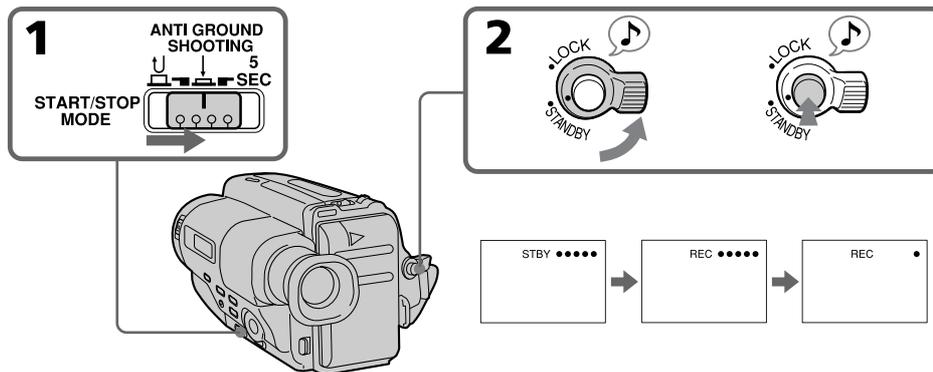

To Extend the Recording Time in 5 SEC Mode

Press START/STOP again before all the dots disappear. Recording continues for about 5 seconds from the moment you press START/STOP.

Recording starts when you press START/STOP, and stops when you press it again (normal mode). The camcorder records only while you press down START/STOP so that you can avoid recording unnecessary scenes.

When you press START/STOP, the camcorder records for about 5 seconds and then stops automatically.

If you selected 5 SEC, five dots appear in the viewfinder. The dots disappear at a rate of one per second as illustrated below. When about five seconds elapse and all the dots disappear, the camcorder switches to Standby mode automatically.

If you selected ANTI GROUND SHOOTING, the camcorder records as long as you hold down START/STOP.

Superimposing a Title

You can select from ten preset titles to superimpose it on the picture during recording. Each time you press TITLE, the preset titles appear one by one.

To Superimpose from the Beginning

- (1) Set the POWER switch to CAMERA.
- (2) Turn STANDBY up.
- (3) Press TITLE repeatedly until the desired title appears. The title flashes.
- (4) Press START/STOP to start recording.
- (5) Press TITLE when you want to turn off the title.



To Superimpose On the Way of Recording

- (1) Press TITLE repeatedly until the desired title appears. The title flashes.
- (2) When the title stops flashing, press TITLE. The title disappears.
- (3) Press START/STOP to start recording.
- (4) Press TITLE when you want to superimpose the title.
- (5) Press TITLE when you want to turn off the title.

Ç° İÖÊÄÜÄ, °È ±Ú, ÈÄ %ÄÒİÜË
 Ö Ä%,± ÈÜÄİ İÖ ÜÖÜ±İÖ,İÄİİ° İ±%ÖËÖÄË
 %İİ İ±İÖÊÄİËİ Èİ İ± ÈÄÖ. ±ÈÄİËÄ, Ó, Äİİ
 Ä±ÖËË. ä±È%È ±Ä, İÖ,,%± Ç° İ±ÈËİ±ÄÜÄ
 İİÖİÜ TITLE, Ö Ä%,± ÈÜÄİ, İÖ
 ÜÖÜ±İÖ,İÄİİ° Ä İ±%ÖËË ÖÖİ,İİ, İÜÖİ Ö%İ± Ä±
 %Ü,ÖË

- Ñİİ İ±İÖÊÄİËİ ÖÜ İ±~±İ±
- (1) èÄ Ä%,Èİ ÜÄ ÖÄ Äİİ,±ÜÄİ, POWER, ÖÖİÖÊÄİËÄ CAMERA.
 - (2) èÖ,Ä İËÜÄ STANDBY, Ä İ.
 - (3) ÇÄÖ%İÖİ ±ÜİÖ İ±ÈËİ±ÈÜÄ TITLE, ÖÖİ± İÄ ÖÖİ,ÈÜÖİÈÈÄİ±Äİ±İ±%ÖËË, Ç±%ÖËË, Ü%ÄÜİË,±Ü,.
 - (4) Ç±ÈİËÜÄ START/STOP %İİ İ±~±İ± Ä±ÖËËË.
 - (5) Ç±ÈİËÜÄ TITLE, İÖ,,%± Ç° Ä±İÖÜÈÜÄ, °İ,~ÈÜ, İ±%ÖËË,.

- Ñİİ İ±İÖÊÄİËİ, Ö Ö°ÄÖÖÄ Ä±ÖËËË
- (1) ÇÄÖ%İÖİ ±ÜİÖ İ±ÈËİ±ÈÜÄ TITLE, ÖÖİ± İÄ ÖÖİ,ÈÜÖİÈÈÄİ±Äİ±İ±%ÖËË, Ç±%ÖËË, Ü%ÄÜİË,±Ü,.
 - (2) äÖ,,%± İ±%ÖËË, ÖÄ ÄÖÜ±İÄÜİË,±Ü, İ±ÈİËÜÄ TITLE. Ç±%ÖËË, ÈÖ ÄÄİÄÜ.
 - (3) Ç±ÈİËÜÄ START/STOP %İİ İ±~±İ± Ä±ÖËËË.
 - (4) Ç±ÈİËÜÄ TITLE, İÖ,,%± Ç° ÖÖÊÄİ±ÄÜÄ İ±İÖËËÜ, İ±%ÖËË,.
 - (5) Ç±ÈİËÜÄ TITLE, İÖ,,%± Ç° Ä±İÖÜÈÜÄ, °İ,~ÈÜ, İ±%ÖËË,.

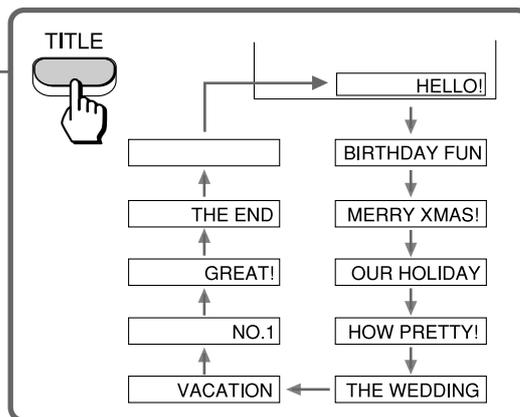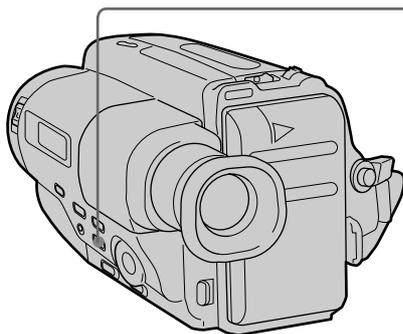

Note on selecting a title
 You cannot select a title during recording.

è ÈİÄ~±İËÄ İ, °Ö Ü İ±%ÖËËË
 Ç° İÄ İÖÊÄÜÄ, °È ±Ú, İ±%ÖËËË, Ó, Äİİ
 Ä±ÖËËË



Using the Wide Mode Function

- CCD-TR402E only

You can record a 16:9 wide picture to watch on the 16:9 wide-screen TV.

Using the Wide Mode Function

Set 16:9 WIDE to 16:9 WIDE.
The picture in the viewfinder [a] or on a normal TV [b] is horizontally compressed. You can watch the picture of normal images on a wide-screen TV [c].

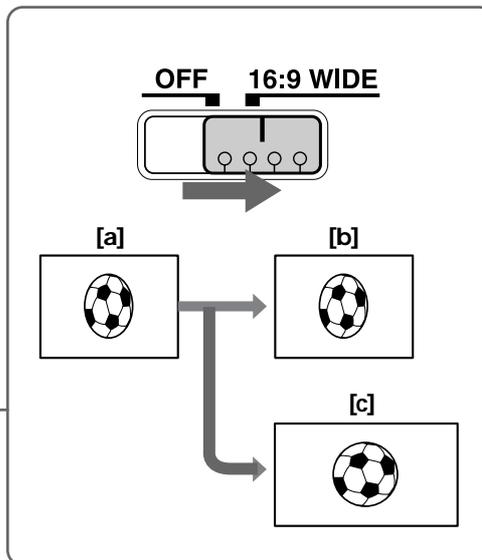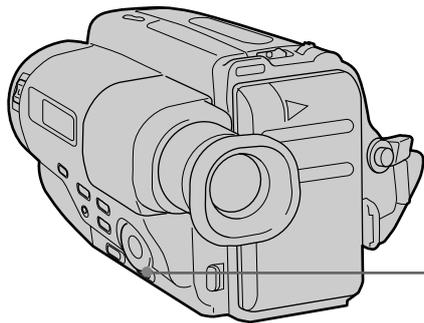

To Release the Wide Mode
Set 16:9 WIDE to OFF.

Notes on wide mode

- When you record in 16:9 WIDE mode, the date or time indicator will be widened on the wide-screen TV.
- If you dub a tape, the tape is copied in the same mode as the original recording.

Using the Wide Mode Function

- íÓÍ,ÍÓ CCD-TR402E

Ç° ÌÓÉÁÚÁ Á±ÔÈ° ±Ú, ÒÓÍÓÚÓ Ì±ÚÍÓÁ ÉÁÓ. ±ÉÁÌÉÁ 16:9%ííÓ ÓÓÍÓÚ ±± ÒÓÍÓÍ ±ìíÓÍ ÚÁÌÁ,ÉÁÓ Á 16:9.

Using the Wide Mode Function

ìÓÚ±ìÓ,ÉÚ, 16:9 WIDE , ÓÓÍÓÉÁÌÉÁ 16:9 WIDE.
àÁÓ. ±ÉÁÌÉÁ, É%ÓÈÓì±ÚÁÌÁ [a] ÈÌÈ Ì± Ó°~ìÓÍÚÁÌÁ,ÉÁÓ Á [b]. Ú%ÁÚ ÓÈ±ÚÓÓÓ, Ó ÉÁÓÍÚ±ÌÈ. Ç° ÌÓÉÁÚÁ Ó ÓÓÍ±Ú É, ±Ú, ÌÓ Ì± ÌÓÁ, ÉÁÓ. ±ÉÁÌÉÁ Ì± ÒÓÍÓÍ ±ìíÓÍ ÚÁÌÁ,ÉÁÓ Á [c].

Ñííí, °íí~ÁÌÈíí ÒÓÍÍÈÈ ÒÓÍÓÚÓ Ì±ÚÍÓ,,Ó ÁÈÈÌ± ìÓÚ±ìÓ,ÉÚ, 16:9 WIDE , ÓÓÍÓÉÁÌÉÁ OFF.

- ÈÌÁ~±ÌÈí í ÒÓÍÓÚÓ Ì±ÚÍÓÍÚ ÁÈÈÌÚ
- ÓÓÍÈÇ° Ó ÓÉÁ,Ó%ÉÚÁ Á±ÔÈ°, ÁÈÈÌÁ 16:9 WIDE, ÚÓ ÈÌ%ÈÌ±Èí ±Ú° ÈÌÈ, ÁÌÁÌÈ Ú%ÁÚ ±ÓÈ Áì± Ì± ÒÓÍÓÍ ±ìíÓÍ ÚÁÌÁ,ÉÁÓ Á.
- ÓÓÍÈÇ° ÓÁ ÁÁ±ÔÈÈ°, ±ÁÚÁÌÁÌÚÚ, ÚÓÍÓÓÈíí ÍÁÌÚ° Ú%ÁÚ, °ÓÓÍÁÌ±, Ú±ìÓÍ ÉÁ ÁÈÈÌÁ, Ì±ÌÈÈÓìÓ%ìííí Á±ÔÈÈ°.

Changing the Mode Settings



ÀÁÏÀÏÀÏËÄ ÅÊËÏ° Ì ÛÒÙ±ÌÓ,ÓÍ

You can change the mode settings to further enjoy the features and functions.

- (1) Slide the cover to the left. You will find the mode switches.
- (2) Set the mode switches to the desired mode.
- (3) Close the cover.

Ç° ÌÓËÄÛÄ ÈÁÏÀÏÙ, ÛÒÙ±ÌÓ,ÏË ÅÊËÏ°, %òíñ Ì±ÒÍ±Ë%òíñ %òòòòíËÛÄÏ,Ï°ÏË Ó,ÓËÓÙ,±ÏË È ÛÒÏí°ËíË.

- (1) èÄ Å%ò,ËÏ ÛÄ Ì°ÏÙ, ÏÄ,Ó. Ç° Û,Ë%ËÛÄ ÓÄ ÁÏ,±ÙÄÏË ÅÊËÏ°.
- (2) ìÒÙ±ÌÓ,ËÛÄ ÓÄ ÁÏ,±ÙÄÏË ÅÊËÏ°, Ì± ÈÁÏ±ÁÏ°Ë ÅÊËÏ.
- (3) áÍ ÓËÛÄ Ì°ÏÙ.

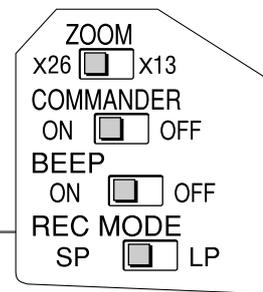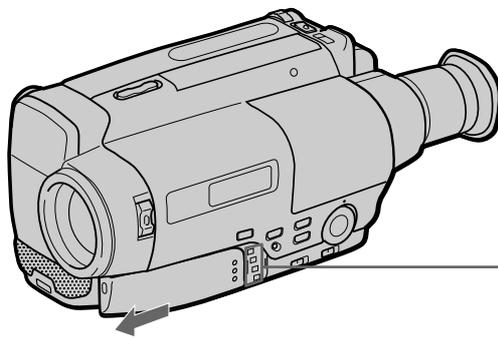

Selecting the Mode Setting of Each Item

ZOOM <x26/x13> (CCD-TR402E only)

- Set to x26 to activate digital zooming.
- Set to x13 otherwise. The zooming ability becomes x13.

COMMANDER <ON/OFF>

- Set to ON when using the supplied Remote Commander for the camcorder.
- Set to OFF when not using the Remote Commander for the camcorder.

BEEP <ON/OFF>

- Set to ON to turn the beep sound on.
- Set to OFF to turn the beep sound off.

REC MODE <SP/LP>

- Select SP to record a tape in SP (standard play) mode.
- Select LP to record a tape in LP (long play) mode.

Ç°Ó ÛÒÙ±ÌÓ,ÏË ÅÊËÏ± ÓÓ Ì±Ë%òíÛ ÒÛÏÏÛÛ

ZOOM <x26/x13> (ÛÓÍ,ÏÓ %òíñ ÌÓ%ÄÏË CCD-TR402E)

- ìÒÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ Ì26, ÒÙÓ° Ä±%ÄËÓÙ,Ó,±Ù, ÒËÛÓ,Û Û ÌÒÙÓÍ±°Ë.
- Ç° Û,Ë%ËÛÄ ÌÓÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ Ì13. ÇÓÁÏÓËÏÓÙ,Û ÌÒÙÓÍ±°ËË ÓÙ±ÌÓ,ËÛÓíñ13.

COMMANDER<ON/OFF>

- ìÒÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ ON Ó ÈËÓÓÓÍ,ÁÓ,±ËË Ó ÈÏ,±ÁÏÓ,ÓÓÛÍ,Û± %òËÓÙ±°ËÓíÏÓ,ÓÓÙÓ ±,ÏÄÏËñ %òíñ È%òÄÓÍ±Ä°.
- ìÒÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ OFF, ÁÓÏË ÓÛÍ,Û± %òËÓÙ±°ËÓíÏÓ,ÓÓÙÓ ±,ÏÄÏËñ ÏÄËÓÓÓÍ,ÁÛÄÛÓíñ %òíñ È%òÄÓÍ±Ä°.

BEEP<ON/OFF>

- ìÒÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ ON %òíñ ÏÏ°ÄÏËñ ÁÛÏÄ ÌÓ,Ó Á,ÛÍÓ,Ó,Ó ÒË,,Ì±Ï±.
- ìÒÙ±ÌÓ,ËÛÄ, ÓÓÍÓËÄÏËÄ OFF %òíñ ÏÏ°ÄÏËñ ÁÛÏÄ ÌÓ,Ó Á,ÛÍÓ,Ó,Ó ÒË,,Ì±Ï±.

REC MODE <SP/LP>

- Ç° ÄËÛÄ SP %òíñ Ä±ÓËËË ÏÄÏÛ°, ÅÊËÏÄ SP(ÓÙ±±%± ÛÍÓ,Ó,ÓÓÓ ÓËÄ,Å%ÄÏËñ).
- Ç° ÄËÛÄ LP %òíñ Ä±ÓËËË ÏÄÏÛ°, ÅÊËÏÄ LP(Û%òËËÄÏÏÓ,Ó,ÓÓÓ ÓËÄ,Å%ÄÏËñ).

Editing onto Another Tape

αΟΙΰ±Ê ì± %ο Û,,Û_ç
ÎÂΙΰΰ

You can create your own video programme by editing with any other 8 mm, Hi8 Hi8, VHS VHS, S-VHS S-VHS, VHS-C VHSC, S-VHS-C S-VHSC, Betamax VCR that has video/audio inputs.


After connecting the camcorder to the VCR,

- (1) Slide the POWER switch to PLAYER.
- (2) Insert a blank tape (or a tape you want to record over) into the recording VCR. Then insert your recorded tape into the camcorder.
- (3) Play back the recorded tape on the camcorder until you locate the point where you want to start editing. Then press **II** to set the camcorder to playback pause mode.
- (4) Set the recording VCR to recording pause mode.
- (5) Press **II** on the camcorder and then on the VCR to start editing.

Ç° İÖÊÁÛÂ ÖÓÁ%ο±Û Ç±Û ÖÓ·ÖÚ·ÂìÛ_ç
·Ê%ο·ÁÖÖ Ö,, ±ÛÛ ÖÛÛ·ÎΙΟΰ±Ê±Ê±%ο Û,ÖÊ
·Ç·à Ò 8-Û ÎÂΙΰÓÊ, Hi8 Hi8, ÎÂΙΰÓÊ VHS
VHS, S-VHS S-VHS, VHS-C VHSC, S-VHS-C
S-VHSC ÊÎÊ ÎÂΙΰÓÊ 8 Betamax, ΙΟΰÓ °Ê
ÊÎÁÛ, İÖ%ο °Ê%ο·ÁÖ±Û%ο·ÊÖ.

èÖÖÎÁ ÖÖ%ο·ÖÓ·ÊÎÂÎÊÏ, Ê%ο·ÁÖÎ±ÎÁ ° í·Ç·à.

- (1) ·è·Á·Á%ο·ÊÎ Û·Á Ö·Á·ÎÛ·±Û·ÁÎ, POWER, ÖÖİÖÊ·ÎÊ·Á·PLAYER.
- (2) ÇÖÛ±, Û·Á Î·Á±ÖÊÖ±ÛÛ Î·ÎÛÛ (ÊÎÊ Î·ÎÛÛ, ì±İΟÛÖ Û Ç° İÖÛÊÛ·Á Ö ÖÊ·Á·ÖÛÊ Á±ÖÊÖ), Á±ÖÊÖ°±ÊÊ·è·Ç·à, ·á±Û·Á ÒÛ±, Û·Á Ç±Û Á±ÖÊÖ±ÛÛ Î·ÎÛÛ, Ê%ο·ÁÖÎ±ÎÁ Û.
- (3) ÇÖÖ ÖÊ·Á·ÖÛ·ÊÛ·Á·Á±ÖÊÖ±ÛÛ Î·ÎÛÛ ì±Ê%ο·ÁÖÎ±ÎÁ·Á, ÖÖÎ±ÎÁ ÖÛ··ÁÛ·Î·Á ÖÛ, %ο·Á Ç° İÖÛÊÛ·Á ì±±Û, İΟÛÛÊ, ·á±Û·Á ì±ÊÊÛ·Á **II** %ο·ÏÏ Û ÖÛ±İÖ, İÊ Ê%ο·ÁÖÎ±ÎÁ °, ·ÁÊÏ Ö±Û·Á.
- (4) İÖÛ±İÖ·ÊÛ·Á·Á±ÖÊÖ°±ÊÊ·è·Ç·à, ·ÁÊÏ Ö±Û·Á·Á±ÖÊÖ.
- (5) Ç±ÊÎÛ·Á **II** ì± Ê%ο·ÁÖÎ±ÎÁ·Á, ±·Á±Û·Á ì±·Ç·à %ο·ÏÏ ì±±Û ÎΟÛÛÊ±.

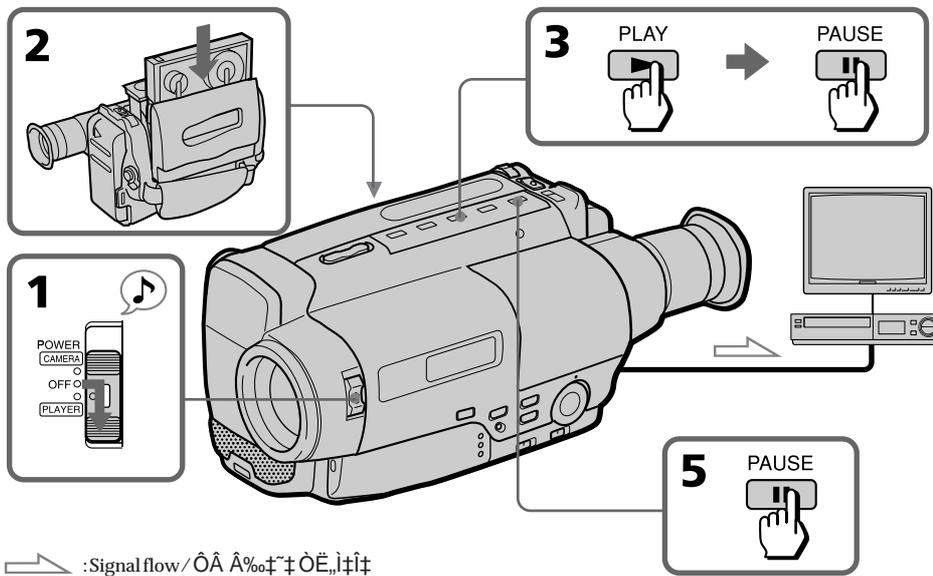

To Edit More Scenes

Repeat steps 3 to 5.

To Stop Editing

Press **II** on the camcorder and VCR.

ÑÏÏ ÎΟÛÛÊ±·ÖÎ···Á, Ö İΟÛÊ··Á ÖÛ, ±
Ö Ê·ÁÛÖ,
èÖ, ÛÖ ÊÛ·Á ÖÛÛÛ° Ö 3 Ö Ö 5.

ÑÏÏ Ö ÖÛÛ±İÖ, İÊ ÎΟÛÛÊ±Ê±
Ç±ÊÎÛ·Á ÎİÖİÛ **II** ì± Ê%ο·ÁÖÎ±ÎÁ·Á Ê·è·Ç·à.

Advanced Operations İÖ·Á··ÁÛÖ, Ç·Û··Á ÖÖ·Á·ÊÊ

Changing the Lithium Battery


When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date and time.

- (1) Slide the cover and align the mark of the cover to that of the body. Press down the cover.
- (2) Push the battery in once and pull it out from the holder.
- (3) Install the lithium battery with the positive (+) side facing out.
- (4) Align the mark of the cover to that of the body. Press the cover until it clicks and slide the cover.


á†ÏÄì† ÌÈÚÈÄ,ÓÈ †Ú† ÄÈÏÈ

è È Á†ÏÄì† ÌÈÚÈÄ,ÓÈ †Ú† ÄÈÏÈ%Ä ÈÈÚÄ †Ú† ÄÈÏÈ †ÍÍÈÈÈ%Ú,ÓÈ ÈÓÚÓ†ÈÏ ÓÈÚ†ÈÈÈ Ò ÈÓÓÄ%ÈÏÏ†. à†Ä Ç†Ï ÓÈ%ÄÚÓÈÓÄ ÁÚÓÚ††,ÌÈ,†Ú,%†ÚÚÈ,ÄÈÈ.

- (1) è%È,Èì,ÚÄ Ì†ÍÚ È ÓÓ,ÌÄÓÚÈÚÄ ÌÄÚÍÚ Ì†ÈÈ Ò ÌÄÚÍÓÈ ÌÓ ÓÚÓ†. Ç†È†Ú, Ì†ÍÚ †ÈÄ.
- (2) Ç†ÈÈÈÚÄ †Ú† ÄÈÍÚ Ó%Èì †Ä È,ì,ÚÄ ÄÄ ÈÄ%Ä È†ÚÄÈÈ.
- (3) ÌÓÚ†ÍÓ,ÈÚÄ ÌÈÚÈÄ,Ú. †Ú† ÄÈÍÚ ÓÓÍÓÈÈÚÄ,ÌÓÈ(+),ÓÚÓ ÓÍÓÈ† ÚÈÈ.
- (4) èÓ,ÌÄÓÚÈÚÄ ÌÄÚÍÚ Ì†ÈÈ Ò ÌÄÚÍÓÈ ÌÓ ÓÚÓ†. Ç†ÈÈÈÚÄ Ì†ÍÚ, ÓÓì† Óì† ÌÄ Ä†ÄÈÈÄÚÓÈÈ È Ó%È,Èì,ÚÄ Ì†ÍÚ.

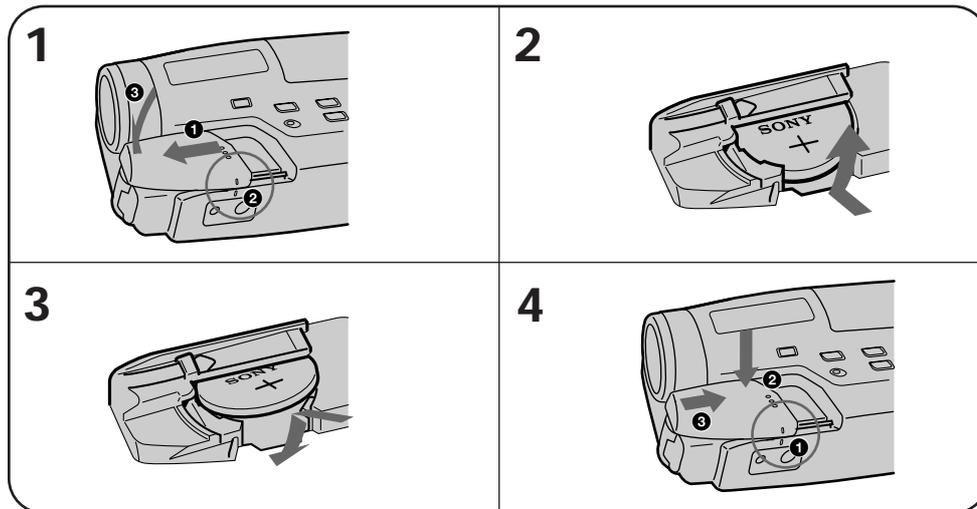


The year indicator changes as follows:

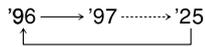

Note on the time indicator

The internal clock of the camcorder operates on a 24-hour cycle.

àì%òÉí±`Èñ „Ó%± ÈÁÌÀñÁÚÒñ
 ÓÌÁ%òÚ ÷ ÈÌ Ó· ±ÁÓÌ:

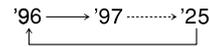

èÁÌÀñÁÚÒñ
 ÇÓÚ ÓÁÌ`Á ±ò° ,È%òÁÓí±ÌÁ ° ±·ÓÚ±Ú ,
 24~±òÓ,ÓÌ `ÈÌÁ.

Playback Modes ê Â Ê Ë Ì ° ,ÓÒÔ ÓËÁ,Â%òÂÌËñ

The playback mode is selected automatically according to the recording system (SP/LP mode) in which the tape was recorded.

Foreign 8 mm video

You cannot playback tapes recorded on a different TV colour system. Because the TV colour systems differ from country to country, you may not be able to playback foreign pre-recorded tapes. Refer to the list of "Using Your Camcorder Abroad" to check the TV colour system of foreign countries.

èÂÊËÌ.ÓÒÔ ÓËÁ,Â%òÂÌËñ ° È ±ÁÚÒñ
 ±·ÚÓí±ÚÈ`ÁÓÌÈÓÒ,±òÍÓÓÈÓÚÁÌÁ±òËÈÈ
 (ÂÊË SP/LP), , ÍÓÚÓ ÓÈ ·í± Á±ÓÈÓ±±
 ÍÁÌÚ±.

àÌÓÓÚ ±Ì`Á ,È%òÁÓÌÁÌÚ° 8 ÌÌ
 Ç`ÌÁÓÌÓÈÁÚÁ,ÓÒÔ ÓËÁ,Ó%òÈÚ ÍÁÌÚ°,
 Á±ÓÈÓ±Ì`Á , ±ÁÌ`Í ÓÈÓÚÁÌ±,`ÁÚÌÓ,Ó
 ÚÁÌÁ,È%òÂÌËñ. èÓÓÍÓÌ,ÍÚ ÓÈÓÚÁÌ`Á,ÁÚÌÓ,Ó
 ÚÁÌÁ,È%òÂÌËñÈÁÌÁñ.ÚÒñ,Á±ÈÓÈÍÓÓÚÈÓÚ
 ÓÚ ±ì°, Ç`ÍÓÈÁÚ ÍÁ ÓÌÓÈÁÚÁ
 ,ÓÒÔ ÓËÁ,Ó%òÈÚ ÈÍÓÓÚ ±Ì`Á
 Ó Á%ò,± ÈÚÁÌ ÍÓ Á±ÓÈÓ±Ì`Á ÍÁÌÚ°
 èÍÓÚ ÈÚÁÓÓÈÓÓÌ, ±Á%òÁÌÁ "òÓÓÍ,ÁÓ,±ÈÁ
 Ç±`ÁÈ,È%òÁÓÌ±ÌÁ `Á± Ú·ÁÈÓÌ" %òññ
 Ó Ó,Á ÍÈÓÈÓÚÁÌ`Á,ÁÚÌÓ,Ó ÚÁÌÁ,È%òÂÌËñ
 ÈÍÓÓÚ ±Ì`Í,ÓÓÚ%ò± ÓÚ,.

Tips for Using the Battery Pack

•••••

This section shows you how you can get the most out of your battery pack.

Preparing the Battery Pack

Always Carry Additional Batteries

Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned.

Battery Life is Shorter in Cold Environment

Battery efficiency is decreased and the battery will be used up more quickly if you are recording in a cold environment.

To Save Battery Power

Turn **STANDBY** down when not recording to save battery power.

A smooth transition between scenes can be made even if recording is stopped and started again. While positioning the subject, selecting an angle, or looking through the viewfinder lens, the lens moves automatically and the battery is used. The battery is also used when a cassette is inserted or removed.

•••••

•••••

•••••

•••••

•••••

When to Replace the Battery

While you are using your camcorder in **CAMERA** mode, the remaining battery indicator decreases gradually as battery power is used up.

•••••

•••••



When the remaining battery indicator reaches the lowest point, the  indicator appears and starts flashing in the viewfinder.

When the  indicator in the viewfinder disappears and the battery lamp flashes rapidly, turn the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain smooth transition between scenes after the battery pack has been replaced.

Note on the remaining battery indicator

The remaining battery indicator of the camcorder may indicate different remaining capacity from that of the battery pack with the remaining battery indicator (not supplied). The indicator of the battery pack is more accurate.

Notes on the Rechargeable Battery Pack

Caution

Never leave the battery pack in temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.

The Battery Heats Up

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern and is normal.

Battery Pack Care

- Remove the battery pack from the camcorder after using it, and keep it in a cool place. When the battery pack is installed to the camcorder, a small amount of current flows to the camcorder even if the POWER switch is set to OFF. This shortens battery life.
- The battery pack is always discharging even when it is not in use after charging. Therefore, you should charge the battery right before using the camcorder.

When the remaining battery indicator reaches the lowest point, the  indicator appears and starts flashing in the viewfinder. When the  indicator in the viewfinder disappears and the battery lamp flashes rapidly, turn the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain smooth transition between scenes after the battery pack has been replaced.

The remaining battery indicator of the camcorder may indicate different remaining capacity from that of the battery pack with the remaining battery indicator (not supplied). The indicator of the battery pack is more accurate.

Notes on the Rechargeable Battery Pack

Never leave the battery pack in temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern and is normal.

- Remove the battery pack from the camcorder after using it, and keep it in a cool place. When the battery pack is installed to the camcorder, a small amount of current flows to the camcorder even if the POWER switch is set to OFF. This shortens battery life.
- The battery pack is always discharging even when it is not in use after charging. Therefore, you should charge the battery right before using the camcorder.

Maintenance Information and Precautions

àìúó ì±`Èñ òó ùíó%ù Á±
±óó± ±úóíèó Á%óóúó óéíóúé

Video Head Cleaning

To ensure normal recording and clear pictures, clean the video heads. When the  indicator appears in the viewfinder in CAMERA mode or playback pictures are "noisy" or hardly visible, the video heads may be contaminated.

é~Èòúí± „óíó,óí

Ñíñí ó·ÀòóÁ~ÀìÈñ ìó ì±ì,ìóÈ Á±òÈòÈ È
~Áúíó,,óÈÁó· ±ÈÀìÈñ ò`È~±ÈÚÁ
,È%óó,óíó,ìÈ. ÒòìÈ Èì%Èì±úó  Òóñí,ìñÁúóñí
,,È%óóÈòì±úÁìÁ, ÁÈÈìÁ CAMERA, ÈìÈ
óóó óÈÁ,ó%ÈìóÁÈÁó. ±ÈÀìÈÁñ,ìñÁúóñí
"Á±~ùííÁì" ÈÈÈÈ ù ù%óó
ó óóì±ú È,±Áì"ì, úó,È%óó,óíó,ìÈ ìó,,úú
·ù, Á±,, ñìÁì°.



[a]  [b]

- [a] Slightly contaminated
- [b] Critically contaminated

- [a] çÁÀì±`ÈÚÁì ìóÁ Á±, ñìÁìÈÈÁ
- [b] ä ÈÚÈ~ÀòíóÁÁ±, ñìÁìÈÈÁ

If this happens, clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied). After checking the picture, if it is still "noisy", repeat the cleaning. (Do not repeat cleaning more than five times in one session.)

ÒòìÈ~úóó óÈÁóíó,óÈòúÈúÁ,È%óó,óíó,ìÈ
ò óóíó~. óÈòúÈúÁì,ìóÈ ì±òòÁú°
V8-25CLH Sony (ìÁ ò Èì±,±Áúóñí). èóóìÁ
ò ó,Á ìÈ ÈÁó. ±ÈÀìÈñ, ÁòìÈ òíó, òñì Á~ñí
"Á±~ùííÁì", Òó,úó ÈúÁóÈòúíú. (çÁ
óó,úó ñÈúÁóÈòúíú·óíÁÁòñíÈ ±Á±ó%èì
ò ÈÁì.)

Caution

Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.

è Á%óóúÁ ÁÈÁìÈÁ
çÁ Èòóóì,ÁúÈúÁ ÈìÁ,~ÈÁòñí,ò ó%±ÈÁ
óÈòúÈúÁì,ìÁ ì±òòÁú°, ì±Èìó,ó ùÈò±. ùúó
ìóÈÁúóó, Á%Èú,,È%óó,óíó,ìÈ.

Note

If the V8-25CLH cleaning cassette is not available in your area, consult your nearest Sony dealer.


è ÈìÁ~±ìÈÁ
òóìÈ óÈòúÈúÁì ìóÈ ì±òòÁú° V8-25CLH ìÁú,
ò ó%±ÈÁ, ç±ÁÈ ò ì±òúÈ, ó. ±úÈúÁò,,
ç±Á ìÈÈ±È~ÁÁ ±,,Áìóú,ó Sony.

Removing Dust from inside the Viewfinder

- (1) Remove the screw with a screwdriver (not supplied). Then, while sliding the RELEASE knob, turn the eyecup in the direction of the arrow and pull it out.
- (2) Clean the surface with a commercially available blower.

Εξάλειψη του φακού από το εσωτερικό του παρατηρητή


- (1) Αφαιρέστε το βίδιο με βιδωτή (που δεν παρέχεται). Στη συνέχεια, κινώντας το κουμπί RELEASE, στρέψτε το φακό προς την κατεύθυνση της βελόνας και τραβήξτε τον έξω.
- (2) Καθαρίστε την επιφάνεια με βLOWER που είναι εμπορεύματα.

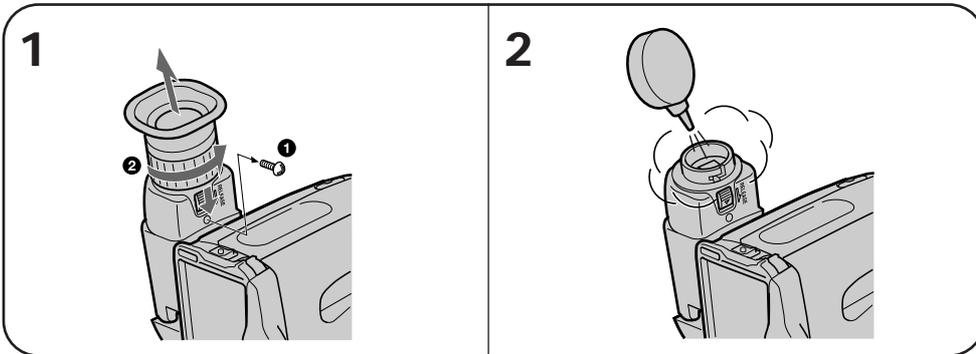

To Reattach the Eyecup

- (1) Align the groove on the eyecup with the mark on the barrel.
- (2) Turn the eyecup in the direction of the arrow. Then, replace the screw.

- (1) Συμμετρήστε το φακό με τη σήμανση στο κανάλι.
- (2) Περιστρέψτε το φακό προς την κατεύθυνση της βελόνας. Στη συνέχεια, αντικαταστήστε το βίδιο.

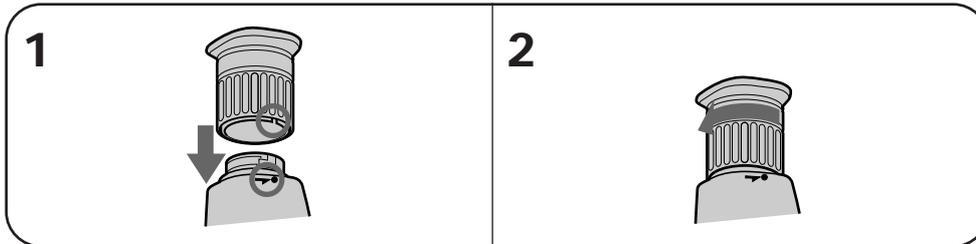

Caution
Do not remove any other screws. You may remove only the screw to remove the eyecup.

Μην αφαιρείτε άλλα βίδια. Μπορείτε να αφαιρέσετε μόνο το βίδιο για να αφαιρέσετε το φακό.

Additional Information Νο0011ΕΥΑ11Η ΕΙΥ0 ΙΤ-ΕΗ

Precautions

Camcorder Operation

- Operate the camcorder using 6.0V (battery pack), or 7.5V (AC power adaptor).
- For DC or AC operation, use only the recommended accessories.
- Should any solid object or liquid fall into the casing, unplug the camcorder and have it checked by your nearest Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF when not using the camera.
- Do not wrap up the camcorder and operate it since heat may build up internally.
- Keep the camcorder away from strong magnetic fields or mechanical vibration.

On Handling Tapes

Do not insert anything in the small holes on the rear of the cassette. These holes are used to sense the type of tape, thickness of tape and if the recording tabs is out or in.

Camcorder Care

- When the camcorder is not to be used for a long time, disconnect the power source and remove the cassette. Periodically turn on the power, operate the camera and player sections and play back a tape for about 3 minutes.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on the lens, remove them with a soft cloth.
- Clean the camcorder body with a soft dry cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

AC Power Adaptor

Charging

- Use only for the specified battery pack. This unit cannot be used to charge a lithium ion type battery.
- Attach the battery pack firmly.
- Place the battery pack on a flat surface without vibration during charging.

èÁ%ÓÓÙÓ ÒÈÌÓÙÈ

ê±.ÓÙ± Ò, È%ÁÓÌ±ÌÁ ÒÈ

- ùìÓÓÌÙ±ÙÈ ÛÈÙÁ, È%ÁÓÌ±ÌÁ ÛÈÓÓÓÌ ÁÙñ 6,0 Ç (-±Ù± ÁÈÌÈ, ÌÓÌ) ÈÌÈ 7,5 Ç (ÓÁÙÁ, ÒÈ ±%±ÓÙÁ ÒÁ ÀÌ ÛÓÌ±).
- ÑÌñ ±.ÓÙ± ÒÙÓÓÓÙ, ÈÌÈ ÒÁ ÀÌ ÛÓÌ± ÈÓÓÓÌ ÁÙÈÙÁ ÛÓÌ, ÌÓ ÀÌÓÌÁÌ%ÙÁÌ Á ÒÈ±%ÌÁÈÌÓÙÈ.
- Ç ÓÌÙ±ÌÁ ÒÓÓ±±%±ÌÈñ Ì±ÌÈ, ÌÈ.Ó ÛÁ %°ì ÒÁ%ÌÁÙÓ, ÈÌÈÈÈ%ÒÙÈ ÌÙÙ, ÌÓ ÓÙÓ± Ì±ÌÁ °, ÒÙÌ ÌÈÙ, È%ÁÓÌ±ÌÁ ÛÈ Ò Ó Á ÈÙ, ÁÁ, ÌÈÈ±È. ÀÌ ±, ÀÌÙÓÙ, Á Sony ÒÁ Á%±%±ÌÁ ÈÌÈ ÈÈ ÌÓÓÌÙ±Ù± ÈÁÈ.
- àÁ.Á, ±ÈÙÁ, Û.Ó.Ó.Ç. ±ÁÈÈ Ò È%ÁÓÌ±ÌÁ ÒÈÈÌÈÌÁ Ì±ÌÈ ÁÓÌÓ, Ó Û%± ÌÓ, Ó ÒÁ%ÁÈÓÙÈ, ÁÙ%±, ÛÁÓÓ.ÁÌÌÓÓÓÙÓ ÒÈÌ° Ò. Ò. ÁÌÙÈ, ÒÌ.
- ÑÁ ÈÈÙÁ, Ìì Ì±ÙÁÌ POWER, ÒÓÌÓÈÁÌÈÈÈ OFF, ÁÓÌÈ Ì±ÌÁ ± ÌÁ ÈÓÓÌ ÁÙÁÙÒÌ.
- çÁ Á±.Ó ± È, ±ÈÙÁ, È%ÁÓÌ±ÌÁ ÛÈÌÁ, ±.ÓÙ±ÈÙÁ Û±ÌÈÌ. ±ÁÓÌÓÌÁÈ, ÒÓÓÌÓÌ, ÌÙ ÌÙÙ È Ì±ÌÁ ° ÌÓÈÁÙ ÒÓ%Ìñ Û, Òñ ÛÁÌÓÁ ÌÙÙ±.
- ÑÁ ÈÈÙÁ, È%ÁÓÌ±ÌÁ Û, %±ÌÈ ÓÙ ÒÈÌ, Ì° Ì±, ÌÈÙÌ, Ì° ÒÓÌÁÈ ÈÌÈ ÌÁÌ±È ÁÓÌÈÌ, È. ± ÈÈ.

éÙÌÓÒÈÙÁÌ ÌÓ Ó. ±ÁÌÈñ Ò ÌÁÌÙ±ÌÈ çÁ, ÓÙ± ÌñÈÙÁ ÌÈÌÈÌÈ Ò Á%ÌÁÙÓ, Ì±ÌÁ ÌÈÁ ÓÙ, Á ÓÙÈñ Ì± Á±%±ÌÁÈ ÓÙÓ ÒÌÁ Ì±ÓÓÁÙ. ÛÈÈ ÓÙ, Á ÓÙÈñ ÈÓÓÓÌ ÁÙ ÛÓñ%ñ ÒÓ Á%ÁÌÁÈñ ÛÈÓ± ÌÁÌÙ°, ÛÓÌÈÌ ÌÁÌÙ° È Ì±ÌÈÈñ ÌÁÓÁÓÙ±.

ììÓ% Á±, È%ÁÓÌ±ÌÁ ÒÈ

- ÒÓÌÈ, È%ÁÓÌ±ÌÁ ±ÌÁ. Û%ÁÙ ÈÓÓÓÌ, ÁÓ, ±Ù, Òñ Ì%ÌÈÙÁÌ ÌÓÁ, ÀÌñ, ÒÙÌ ÌÈÙÁ ÈÓÙÓ ÌÈÌ ÒÈÙ±ÌÈñ È ÈÁ, ÌÁÌÈÙÁ Ì±ÓÓÁÙÙ. èÁ ÈÓ%È ÁÓÌÈ, Ìì ÌÈÙÁ ÒÈÙ±ÌÈÁ ÒÓÈÁÇ%ÈÙÁÓÓÁ±ÈÈÓ, È%ÁÓÌ±ÌÁ ÒÈÈÓÁÌÈÈÈÈÁÈÁ ±È, ÒÓÓ ÒÈÁÇ%ÈÙÁÌÁÌÙÓÓ Ì%±±ÌÈÌÙ.
- èÈ ÌÈÙÁ ÌÈÌÁÙ Ìñ, ÌÓÈ ÌÈÓÙÓ ÌÓÈ %ñ ÌÙ%±ÌÁÈñ Ò ÌÈ. ÒÓÌÈ Ì± ÓÓ Á ÌÓÓÙÈ ÌÈÌÁ ÈÌÁ ÛÓñ ÓÙÓÁ ±ÙÌÈ Ò±, Á Û%±ÌÈÙÁ È Ì ÒÓÌÓ, Ìñ, ÌÓÈ Û±ÌÈ.
- èÈ ÌÈÙÁ ÌÓ ÓÙÓ, È%ÁÓÌ±ÌÁ Ìñ, ÌÓÈ ÓÙÌÓÈ ÛÌ±, ÈÌÈ ÈÁ Ìñ, ÌÓÈ ÛÌ±, ÒÁ, Ì± ÒÌÓ ÁÌÌÓÈ, Ìñ, ÌÓÌ ÌÓÙ, Ó Á ÌÓ Á, Ó Ó Á%ÓÙ, ± çÁÈÓÓÓÌ ÁÙÈÙÁ ÌÈÌÈÌÈ, ±ÓÙ, Ó ÈÙÁÌÁÈ, ÒÓÓÌÓÌ, ÌÙ ÛÓ ÌÓÈÁÙÓÓ, Á%ÈÙ, ÓÙ%ÁÌÙ.

èÁÙÁ, ÒÈÈ±%±ÓÙÁ ÒÁ ÀÌ ÛÓÌ±

- àÓÓÓÌ ÁÙÈÙÁ ÛÓÌ ÌÓ ÛÌÁ±Ìì Á ±Ù± ÁÈÌÈ Á ÌÓÌÈ. ÑÌìÈ ±ÓÓ± ±Ù ÌÁÌ, Áñ ÈÓÓÓÌ ÁÓ, ±Ù %ñ Ìñ Á± Ì%ÌÈ ÌÈÙÈÁ, Ó, Ò ±Ù± ÁÈÌÓ, Ò ÌÓÌ±ÈÓÌÓ, Ó ÛÈÓ±.
- èÈÓÓÁ%ÈÌÈÙÁ Ì±%ÁÈÌÓ ±Ù± ÁÈÌÈÈ. ÌÓÌ.
- è±ÁÌÁ±ÈÙÁ ±Ù± ÁÈÌÈÈ. ÌÓÌ Ì± ÒÌÓÓÌÈÈ ÒÓ, Á ÌÓÓÙÈ. ÁÁ, È. ±ÈÈ, Ó, Áñ Á± Ì%ÌÈ.

Others

- Unplug the unit from the wall (mains) outlet when not in use for a long time. To disconnect the cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the AC power cord (mains lead) forcibly, or put a heavy object on it. This will damage the cord and may cause a fire or an electrical shock.
- Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.
- The unit becomes warm while in use. This is normal.
- Do not place the unit in locations that are:
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Vibrating

The battery charger for this camcorder is designed to charge Sony Ni-Cd batteries and should only be used for such purpose, or for the purpose of charging batteries that are compatible therewith and allow it to function safely. This battery charger should not be used with Ni-MH batteries as it may cause excessive rise in temperature of Ni-MH batteries. Sony does not warrant the compatibility or safety of this battery charger for use with batteries other than Sony Ni-Cd batteries. Before using this battery charger for charging batteries other than Sony Ni-Cd batteries, confirmations should be obtained from the battery manufacturer that such batteries are compatible with this charger and may be used safely therewith.

If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.

è Ó-ÀÀ

- éÚÓÓÁ%ÈËËÚÁ±ÔÓ±±ÚÓÚÚÀÏÏË ÓÁÁÚË (ÍÁÏÚ ÓÓÁË), ÁÓË ÓÏÁ. Ú%ÁÚ ÈÓÓÓÏ, ÁÓ±Ú, ÓÏ %ÁËÚÁÏ, ÏÁ, ÁÏÏ. ÑÏ ÓÚÓÓÁ%ÈËËËÏ ÌÚ ± (ÓÁÚÁ, Ó, ÓÓ, Ó, Ó±) ÓÓÏÏËÚÁÁ, ÓÁ± ÚÁÏÁ. ÇËÏ, %± ÏÁ ÚÏËËÚÁ Á± ÌÚ.
- ÇÁ ÌÓÏÏ±ÚË ÛËÚÁ±ÔÓ± ±Ú Ó ÓÓ, ÁË%ÁÏÏ ÌÚ ÓÏ ÈËË ÈÁ, ÁÓË ±ÓÓ± ±Ú. Ì Ú ÓÏÁÏ ÈËË ÓÓ, ÁË%ÁÏ.
- ÇÁ Ó, È ±ËÚÁ ÓÁÚÁ, ÓË ÌÚ ÓÁ ÁÏ ÚÓÏ± (ÓÁÚÁ, ÓË Ó, Ó, Ó%) ÈÏÁÏ±%ÈÚÁ ÚÏËÁÏ Á Ó Á%ÁÚ" Ì± ÏÁ, Ó. ùÚÓÏÓËÁÚ ÓÓ, Á%ÈÚ, ÓÁÚÁ, ÓË ÌÚ ÈÏÓËÁÚ Ó È, ÁÓËËÏ ÓÓË± ÚËË ÓÓ ±ËÁËË. ÍÁÏÚ È-ÁÓËËÏ ÚÓÏÏ.
- èÏÁ%ËÚÁ Á± ÚÁÏ, "ÚÓ." ÌËËËËÁ ÏÁÚ±ÏË-ÁÓËËÁ Ó Á%ÁÚ" ÏÁ Ó ÈÏÓ%ËËË, ÏÏÚ±ÏÚ Ó ÏÁÚ±ÏË-ÁÓËËË %ÁÚ±ÏËË ÓÓÁ%ÈËËÚÁÏ, ÏË ÓÏ±ÓËËÏ". ÓÏËË "ÚÓ Ó ËËÁÓË%ÁÚ, ÚÓÏËÁÚ, ÓÁËËÏÚÚ, ÏÓ ÓÚÏÓÁ Á±ÏËËÁ È ±ÓÓ± ±Ú ÏÓËÁÚ. "Ú, ÓÓ, ÁË%ÁÏ.
- ÇÓÁ, %±ÔÓ%±Á ÈË ±ËÚÁÏÁÚ±ÏË-ÁÓËËÁ ÏÏÚ±ÏÚ, "ËÓÚÓÚÁ.
- ÇÁ ±ÁÈ ±ËÚÁ±ÔÓ± ±Ú.
- ÇÁ ÓÓ%Á, ±ËÚÁ±ÔÓ± ±Ú ÏÁÏËË-ÁÓËËÏ Ú%± ÌËËÁ ÏÏËÚÁÁ, Ó.
- ÓÏËË±ÔÓ± ±Ú Ì%Ó%ÈÚÓÏ, ÌÓÏÏ±Ú±ÈË, ÓÓÓ-ÁÏÏ, ÁËËÏÁ Á± Ï%ÏË, Ì ±ËÚÁÁ, Ó, %±ÏË ÓÚ ±%ÈÓ ÈÁËËÏ, ÁÁÈ, È%ÁÓÓ-Ó Ú%Ó, ÏËËÏ, ÓÓÚÓÏÚ "ÚÓ ÏÏËÁÚ ÌÚ ÈÚË, Ó ÈÁÏ ÁÁ È ±ÓÚÚÈ%ÁÓÓÓ± ±ÚÚ.
- ÁÓÓ± ±Ú ÓÚ±Ï, ÈÚÓÏ ÚÁÓÏ, Ï, ÁÏÏ ÈÓÓÓÏ, ÁÓ, ÌËËÏ, ùÚÓ ÏÏËÁÚÓÏ ÏÓ Ì±ÏÏÏ.
- ÇÁ ±ÁÏÁ ±ËÚÁ±ÔÓ± ±Ú, ÏÁÓÚ±, ÏÓÚÓ Á:
 - Ï±ËËÁ, Ó ÏËÁ ÈËË ÏÏÏ%Á
 - ÓÏÏÁ ÈËË, ÏÁÏÁ
 - Ó-ÁÏ, Ï±ËËÁ
 - ÓÓ%Á, Á ÈÁÏ, È. ±ÈË

Á± Ï%ÁÚÁ ÚÓÚ ÓËÓÚ, Ó ±ÏÏÏÏÏÚÓ ÏÏÏ. ±Ú± ÁÁÏ %ÁÏ Ï%±ÏËË, È%ÁÓÏËÁ ± Ó Á%ÁÏ±ÁÏ±ÁÏ %ÁÏ Á± Ï%ÁË ÌËËÁÏ, Ì±%ÁËÁ, Ì. ±Ú± ÁÁÏ Ni-Cd ÚËË. Sony È %ÁËËËË. Ú, ÈÓÓÓÏ, ÁÓ, ÌÓ ÚÓÏÏ, ÚËË, ÁÏÏ, ÈËË, ÁÏÏ, Á± Ï%ÁË. ±Ú± ÁÁÏ, ÏÓÚÓ Á ÏÏÏ ÚÓÏ, ÓÓ, ÏÁÓËËËË Ó. ÚÓÏÏÏÚÚË È Ó-ÁÓÓÁÈ, ±Ú. ÁÁÓÓ±ÓÏÁ ÚÚÏËËËË Ó, ÌËËÏÚÓÚ ÓËÓÚ, Ì. ÏÏÏÁÁ± Ï%ÁË ÚÓÚ ÓËÓÚ, Ó ±ÏÏÏÏÏÚÓ ÏÏÏ. ±Ú± ÁÁÏ ÏÁ, ÓÏÁ%ÁÚÁÈÓÓÓÏ, ÁÓ, ±Ú, %ÁÏ Á± Ï%ÁË. ±Ú± ÁÁÏ Ni-MH, Ú±ÏÏ ÌÚ ÚÓ ÏÓËÁÚ Ó È, ÁÓËË Ì. ÁÁÏÁ ÏÏÏ, Ó, ÁËË, ÚÁÏÓÁ ±ÚÚ. ±Ú± ÁÁÏ Ni-àç. ÏË Ì± Sony ÏÁ, ± ÌÚË ÚÁÚ ÓÓ, ÏÁÓËËËËËË, ÈËË ÁÁÓÓ±ÓÏÓÚ, %±ÏÏ, ÓÁ± Ï%ÁË, ÓÚÓÚ ÓËÓÚ± ±ÏÏÏÏÏÚÓ ÏÏÏ. ±Ú± ÁÁÏ Ó È ÈÓÓÓÏ, ÁÓ, ÌËËÁ, Ó, Ó. ±Ú± ÁËËËË, ÓÚËËËËË ÓÚ ÌËËÁÏ, Ì±%ÁËÁ, Ì. ±Ú± ÁÁÏ Ni-Cd ÚËË. Sony. èÁ Á%ÈÓÓÓÏ, ÁÓ, ÌËËÁÏ, ÓÁ± Ï%ÁË, ÓÚÓÚ ÓËÓÚ± ±ÏÏÏÏÏÚÓ ÏÏÏ. ±Ú± ÁÁÏ %ÁÏ Á± Ï%ÁË %Ú, ÈÏ, ÓÚËËËËË ÓÚ ÌËËÁÏ, Ì±%ÁËÁ, Ì. ±Ú± ÁÁÏ Ni-Cd ÚËË. Sony, %ÁËËËËË. ÓÏÏÚ-ÁÏÓ ÓÓ%ÚÁ È%ÁËÁÓÚËÁ, ÓÚÓ, ÈÚÁÏÁË. ±Ú± ÁÁÏ, ÚÓ. ±Ú± ÁËËËË, ÏÏ, ÚÓÏ, ÓÓÏÁÓËËËË Ó %±ÏÏÏ Á± Ï%ÁË ÌÚÓÚ ÓËÓÚ, ÏËËËË, ÚÚ ÏËËË-ÁÁÓÓ±ÓÏ ÈÓÓÓÏ, ÁÓ, ±Ú, ÓÏÏ.

ÇÒÏÚ±ÁÚ Ú%ÁÚÓÓÚÁÈÓÚÓÓÁ%ÈËËÚÁ±ÔÓ± ±ÚË Ó. ±ËËÚÁÓ, Ç±Á. ÌËËËË-ÁÁ ±, ÁÏÚÓÚ, Ó Sony.

Using Your Camcorder Abroad

àÒÒÓÍ ÁÓ, †ÈÄ Ç†-ÄÈ
, È%ÁÓÍ†Ä ° Á† Û-ÄÈÓÍ

Each country or area has its own electricity and TV colour systems. Before using your camcorder abroad, check the following points:

Power Sources

You can use your camcorder in any country or area with the supplied AC power adaptor within 110 V to 240 V AC, 50 / 60 Hz.

Difference in Colour Systems

This camcorder is a PAL system-based camcorder. If you want to view the playback picture on a TV, it must be a PAL system-based TV or a SECAM system-based TV with PAL-SECAM transcoder. Check the following alphabetical list.

PAL system

Australia, Austria, Belgium, China, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system

Brazil

PAL-N system

Argentina, Paraguay, Uruguay

NTSC system

Bahamas Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

SECAM system

Bulgaria, Czech Republic, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Slovak Republic, Ukraine, etc.

ä†È%†fl ÒÚ †† ÈÈ Ó-††ÓÚ ÈÏÄÄÚ Ò, Ó
ÓÓ-ÓÚ, ÄÏÛ, ÒÈÓÚÄÏÛ †ÄÏÛ È-ÄÓÍÓÈ ÒÄÛÈÈ
ÒÈÓÚÄÏÛ-ÄÛÍÓ, ÓÚÄÏÄ, È%ÄÏÈfl. èÄ Ä%
ÈÒÓÓÍ ÁÓ, †ÈÄÏ Ç†-ÄÈ , È%ÁÓÍ†Ä ° Á†
Û-ÄÈÓÍ Ò Ó, Ä, ÚÄ ÓÍÄ%Ú, ÈÄ ÓÛÏÛ:

àÒÓÓÍ-ÈÈÈ ÒÈÛ†ÈÈfl

Ç-†ÓÈÄÚÄ ÈÒÓÓÍ ÁÓ, ††, Ç†-Û, È%ÁÓÍ†Ä Ó
, †-ÓÈ ÓÚ ††Ä ÈÈÈ Ó-††ÓÚÈ Ò Ó È††, †ÄÏ-†
ÒÄÛÄ, ††%†ÓÚÄ ÓÍÒÄ ÄÏ. ÚÓ††, Ó Ä%ÄÏ††
ÓÚ 110 Ç%Ó 240 Ç ÓÄ ÄÏ. ÚÓ††, 50/60 È.

è†ÄÏÈÈÈfl, ÒÈÈÓÚÄÏ††, ÄÛÍÓ, Ó ÚÄÏÄ, È%ÄÏÈÈfl

Ñ†Ï†fl, È%ÁÓÍ†Ä † ÓÒÍÓ, †† †† ÒÈÈÓÚÄÏÄ
PAL, ÓÓÍÈÇ, †ÓÚÈÛÄ, ÓÓÒ ÓÈÄ, Ó%ÈÛ,
ÈÄÓ. †ÈÄÏÈÄ †† ÚÄÏÄ, ÈÄÓ Ä, ÓÍ %ÓÍÈÄÏ . °Ú,
ÓÓÍÓ, †† †† ÒÈÈÓÚÄÏÄ PAL ÈÈÈ ÈÄ †† ÒÈÈÓÚÄÏÄ
SECAM ÓÚ ††ÓÍÓ%Ä Ó†PAL-SECAM.
è Ó, Ä, ÚÄ ÓÍÄ%Ú, ÈÈÈÓÈÓÓÍ,
ÓÓÓÚ†, †ÄÏÈÈ, ÈÈÈÓÈÓÍ ÓÓ fl%ÍÄ.

èÈÈÓÚÄÏ† PAL
Ä, ÓÚ †ÈÈfl, Ä, ÓÚ Èfl, ÄÄÏ, Èfl,
ÇÄÏÈÍÓ. ÈÛ†ÈÈfl, ÈÄ ††ÈÈfl, ÈÓÏ††%Èfl,
ÈÓÍÍÓÍ, Ñ†ÈÈfl, àÒÓ†ÈÈfl, àÚ†ÈÈfl, àÈÛ†ÈÈ,
àÛ, ÄÈÛ, à††ÈÈÄÈfl, çÓ, †fl áÄÏ†%Èfl,
çÓ, Ä, Èfl, èÓ ÚÚ, †ÈÈfl, èÈÏ, ††ÓÚ, ††È††%
†ÈÏ†fl%Èfl, ò, ÄÈÈfl, ó, ÄÈÈ† Èfl, È %.

èÈÈÓÚÄÏ† PAL-M Ä †ÄÈÈÈfl

èÈÈÓÚÄÏ† PAL-N Ä, ÄÏÛÈ††, è††, †ÈÈ, ì Ú, †ÈÈ

èÈÈÓÚÄÏ† NTSC
Ä†, ††ÓÍÈÄ ÓÓÚ Ó, †, ÄÓÍÈÈ, Èfl, ÇÄÏÄÒÚ††,
ä††%††, äÓÍÛÈÈfl, äÓ Äfl, äÄÍÓÈ††, èÄ Ú,
èÛ È†††, èòÄ, ††ÈÈ, ††, †ÈÈÈÓÈÈ†,
ñÄÏÛ ††, ††fl ÄÏÄ È††, óÈÈÈ, ù†, †%Ó,
Û†ÈÈ††, ùÓÓÍÈÈÈ È %.

èÈÈÓÚÄÏ† SECAM
ÄÓÍ, †ÈÈfl, ÇÄÏ, Èfl, È†ÈÈ†††, à ††, à ††,
äÓÍ††ÍÓ, èÓÍ, ††, èÓÓÓÈÈfl, èÍÓ, ††††fl
èÄÒÓÚ-ÈÈÈ††, ì††È††, ì††ÈÈfl, óÄ-ÓÍ††fl
èÄÒÓÚ-ÈÈÈ††ÈÈ%.

Trouble Check

If you run into any problem using the camcorder, use the following table to troubleshoot the problem. Should the difficulty persist, disconnect the power source and contact your Sony dealer or local authorized Sony service facility.

Camcorder

Power

Symptom	Cause and/or Corrective Actions
The power is not on.	<ul style="list-style-type: none"> • The battery pack is not attached or not attached firmly. → Attach the battery pack firmly by pushing the lower part of the battery pack. (p. 10) • The battery is dead. → Use a charged battery pack. (p. 7) • The AC power adaptor is not connected to the mains. → Connect the AC power adaptor to the mains. (p. 25)
The power goes off.	<ul style="list-style-type: none"> • While being operated in CAMERA mode, the camcorder has been in the Standby mode for more than 5 minutes. → Turn STANDBY down once and turn it up again. (p. 13) • The battery is dead. → Use a charged battery pack. (p. 7)
The battery pack is quickly discharged.	<ul style="list-style-type: none"> • The ambient temperature is too low. (p. 40) • The battery pack has not been charged fully. → Charge the battery pack again. (p. 7) • The battery pack is completely dead, and cannot be recharged. → Use another battery pack. (p. 24)

Operation

Symptom	Cause and/or Corrective Actions
START/STOP does not operate.	<ul style="list-style-type: none"> • The tape is stuck to the drum. → Eject the cassette. (p. 11) • The tape has run out. → Rewind the tape or use a new one. (p. 22) • The POWER switch is set to PLAYER. → Set to CAMERA. (p. 12) • The tab on the cassette is out (red). → Use a new cassette or slide the tab. (p. 11)
The cassette cannot be removed from the holder.	<ul style="list-style-type: none"> • The battery is dead. → Use a charged battery pack or the AC power adaptor. (p. 7, 25)
No function except for cassette ejection works.	<ul style="list-style-type: none"> • Moisture condensation has occurred. → Remove the cassette and leave the camcorder for at least an hour. (p. 45)
The tape does not move when a tape transport button is pressed.	<ul style="list-style-type: none"> • The POWER switch is set to CAMERA or OFF. → Set it to PLAYER. (p. 22) • The tape has run out. → Rewind the tape or use a new one. (p. 22)

(to be continued)

Trouble Check

Symptom	Cause and/or Corrective Actions
The date or time indicator is flashing.	<ul style="list-style-type: none"> You pressed DATE(+) and TIME(NEXT) together for more than 2 seconds. <ul style="list-style-type: none"> → The camcorder is not malfunctioning. You may start recording. Flashing will stop soon.
The date or time indicator disappears.	<ul style="list-style-type: none"> → Reset the date and time. (p. 38)
Recording stops in a few seconds.	<ul style="list-style-type: none"> START/STOP MODE is set to $\frac{1}{2}$ or 5 SEC. <ul style="list-style-type: none"> → Set it to $\frac{2}{3}$. (p. 31)

Picture

Symptom	Cause and/or Corrective Actions
The image on the viewfinder screen is not clear.	<ul style="list-style-type: none"> The viewfinder lens is not adjusted. <ul style="list-style-type: none"> → Adjust the viewfinder lens. (p. 13)
A vertical band appears when a subject such as lights or a candle flame is shot against a dark background.	<ul style="list-style-type: none"> The contrast between the subject and background is too high. <ul style="list-style-type: none"> → The camcorder is not malfunctioning. Change locations.
The picture is "noisy".	<ul style="list-style-type: none"> The video heads may be dirty. <ul style="list-style-type: none"> → Clean the heads using the Sony V8-25CLH cleaning cassette. (p. 46)

Others


Symptom	Cause and/or Corrective Actions
The supplied Remote Commander does not work.	<ul style="list-style-type: none"> COMMANDER is set to OFF. <ul style="list-style-type: none"> → Set it to ON. (p. 34) Something is blocking the infrared rays. <ul style="list-style-type: none"> → Remove the obstacle. The battery is not inserted with the correct polarity. <ul style="list-style-type: none"> → Insert the battery with the correct polarity. (p. 63) The batteries are dead. <ul style="list-style-type: none"> → Insert new ones. (p. 63)
There is dust in the viewfinder.	<ul style="list-style-type: none"> → Detach the eyecup and clean the viewfinder lens. (p. 47)

AC Power Adaptor

Symptom	Cause and/or Corrective Actions
The POWER lamp does not light.	→ Set the selector to VTR (DC OUT) and disconnect the mains lead. After about one minute, try again. (p. 9)
The CHARGE lamp flashes.	• See the following chart.

When the CHARGE Lamp Flashes

Check through the following chart.

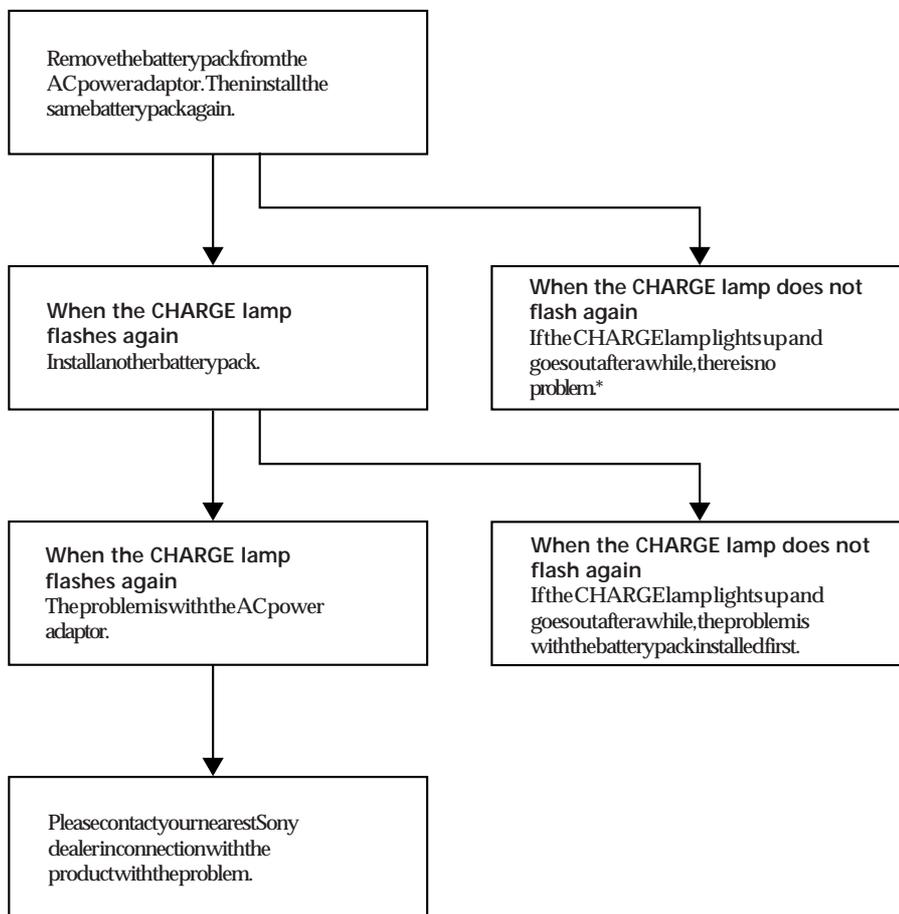

* If you use a battery pack which you have just bought or which has been left unused for a long time, the CHARGE lamp may flash at the first charging. This does not indicate a problem. Repeat again into charge with the same battery pack.

è ÈÀì±í	è ÈÈì± È /ÈÌÈ %ΑΕΘÚ,Èñ ÒÓ ÙÓÙ ±ÌÀÌÈ.
ãÈ,±ÁÚ Èì%Èí±Èñ %±Ú° ÈÌÈ, ÁÌÀÌÈ.	<ul style="list-style-type: none"> • Ç° ì±È±È ÌÓÓÌÈ DATE(+) È TIME(NEXT) ,ÌÀÒÚÁ -ÓÌÁÁ, ÁÌ ì± 2 ÒÁÌÚÌ%. → ÇÈ%ΑÓí±Á ±, ÈÒÓ ±,ÌÓÓÚÈ. Ç° ÌÓÈÁÚÁ ì±±Ú, Á±ÒÈÒ, ãÈ,±ÌÈÁ, ÒÍÓ Á Ò ÁÌ ±ÚÈÚÒñ.
àÕ^ΑΑ±ΑΥΕÌ%Èí±ÚÓ %±Ú° ÈÌÈ, ÁÌÀÌÈ.	→ èÌÓ,±ÚÓÙ±ÌÓ,ÈÚÁ%±ÚÚÈ, Áññ. (ÒÚρ. 38)
á±ÒÈÒ, ÒÓÙ±±,ÌÈ,±ΑΥÓñ ~Á ÁÁÌÁÒÍÓÌ,ÌÓ ÒÁÌÚÌ%.	<ul style="list-style-type: none"> • èÁ ÁÌí ~±ÚÁÌ, START/STOP MODE ìÚÓÙ±ÌÓ,ÌÁÌ, ÒÓÍÓÈÁÌÈÁ $\underline{\text{A}}$ ÈÌÈ 5 SEC. → ìÓÙ±ÌÓ,ÈÚÁÁ, Ò, ÒÓÍÓÈÁÌÈÁ $\underline{\text{B}}$. (ÒÚρ. 31)
àÁÓ. ±ÈÁÌÈÁ	
è ÈÀì±í	è ÈÈì± È /ÈÌÈ %ΑΕΘÚ,Èñ ÒÓ ÙÓÙ ±ÌÀÌÈ.
àÁÓ. ±ÈÁÌÈÁ ì± Ì±Á È%ÒÈÒÍ±ÚÁÌñ ÌÁ~ΑÚÍÓÁ.	<ul style="list-style-type: none"> • çÁ ÓÚ Á, ÙÌÈ Ò,±Ì Ò·ÁÌÚÈ, È%ÒÈÒÍ±ÚÁÌñ. → èÚ Á, ÙÌÈ ÙÈÚÁ Ò·ÁÌÚÈ, È%ÒÈÒÍ±ÚÁÌñ. (ÒÚρ. 13)
è Òñ, ÌñÁÚ Òñ, Á ÙÈÌ±, Ì±ñ ÒÓÍÓÓ±, ÁÒÌÈ Ù±ÌÈÁ Ò·ÁÌÚ°, Ì± Ò, ÁÚ ÈÌÈ Òí±ñ Ò, Á~È ÒÌÈ±, Ù Òñ ì± ÙÁÌÒÌ ÙÓÌÁ.	<ul style="list-style-type: none"> • èÌÈ ÌÓÌ·ÓÌ·ÒÈ ÌÓÌÚ ±ÓÚ ÌÁÈ%Ù Ò·ÁÌÚÓÌ È ÙÓÌÓÌ. → ÇÈ%ΑÓí±Á ± ±·ÓÚ±Á Ì Ì±,ÌÓ. àÁÌÁÌÈÚÁ ÒÓÁÈ~È, Ò·ÁÌÈ.
àÁÓ. ±ÈÁÌÈÁ “Á±~ÚÌÌÁÌÓ”.	<ul style="list-style-type: none"> • ÇÓÁÍÓÈÌÓ Á±, ñÁÌÁÌ°, È%ÁÓ, ÒÍÓ, ÌÈ. → è~ÈÓÚÈÚÁ, ÒÍÓ, ÌÈ, ÈÒÓÓÌ, ÁÚñ%ññ ÙÓ, Ò Ó~ÈÓÚÈÚÁÌ, ÌÚ Ì±ÒÒÁÚÚ V8-25CLH. (ÒÚρ. 46)
è Ó~ÁÁ	
è ÈÀì±í	è ÈÈì± È /ÈÌÈ %ΑΕΘÚ,Èñ ÒÓ ÙÓÙ ±ÌÀÌÈ.
è ÈÌ±, ±ÁÌÈ ÒÓÚÌ Ù %ÈÓÚ±ÌÈÒÌÒ, ÒÓÙ Ò, ÌÁÌÈñ ÌÁ ±·ÓÚ±ÁÚ.	<ul style="list-style-type: none"> • COMMANDER ÙÓÙ±ÌÓ,ÌÁÌ, ÒÓÍÓÈÁÌÈÁ OFF. → ìÓÙ±ÌÓ,ÈÚÁÁ, Ò, ÒÓÍÓÈÁÌÈÁ ON. (ÒÚρ. 34) • óÓÓ-ÓÓ Ò Á, ±È%±ÁÚ ÒÓÙ, ÈÌ Ì± ±ÒÌÌÌÚ~±Ì. → ÙÚ ±ÈÚÁ Ò Á, ±%Ó. • Á±Ú± ÁÈÌÈ, ÒÚ±,ÌÁÌ ò ÌÁ Ò ±,ÈÌ, ÌÓÈ ÒÓñ ÌÓÓÚ. → ÇÓÚ±, ÚÁ ±Ú± ÁÈÌÈ, ÒÓ·Ì%±ñ Ò ±,ÈÌ, ÌÚ, ÒÓñ ÌÓÓÚ. (ÒÚρ. 63) • á± ñ%±Ú± ÁÁÌÈÁ ±ÒÌ%Ó,±Ì. → ÇÓÚ±, ÚÁ ÌÓ, Á·±Ú± ÁÈÌÈ. (ÒÚρ. 63)
á±ÒÌÈÌÒñ, È%ÒÈÒÍ±ÚÁÌ,	→ èÚÒÓÁ%ÈÌÈÚÁ ÒÍÓÌñ È Ó~ÈÓÚÈÚÁ Ò·ÁÌÚÈ, È%ÒÈÒÍ±ÚÁÌñ. (ÒÚρ. 47)


(Ò Ó%ÓÌÈÁÌÈÁ ÒÍÁ%ÚÁÚ)

è Ó,Á ì±ìÀÈÒÒ ±,ìÓÒÚÀÈ

èÁÚÀ,ÓÈ±%±ÔÚÀ ÒÀ ÁìÀìÒ,ÓÚÓì±

è ÈÁì±í	è È~Èì± /ÈÌÈ %ÀÈÒÚ,Èñ ÒÓ ÒÓÚ ±ìÀÌÈ
à±ìÒÓ~í± POWER ìÀ,,Ó ÈÚ.	→ÒÓÚ±ìÓ,ÈÚÀÒÀìÀìÚÓ ,ÒÓìÓÈÀÌÈÀ VTRÈÓÚÓÒÁ%ÈÌÈÚÀ ÒÓ,Ó% ÌÁìÚ ÒÒÈÚ±Èñ.ÒÀ ÁÁÓ%ìÚÌÈìÚÚÓÒÓÒ Ó.ÚÈÚÀ òìÓ,±. (ÒÚp. 9)
àÈ,,±ÁÚ Ì±ìÒÓ~í± CHARGE.	• èìÓÚ ÈÚÀ ÒìÀ%Ú~Ú ÒÚ.ÌÈ~Ú.

àÓ,,%± ÌÈ,,±ÁÚ Ì±ìÒÓ~í± CHARGE
 è Ó,Á ,ÚÀ ÒÓ ÒìÀ%Ú~ÀÈ ÒÚ.ÌÈ~À.

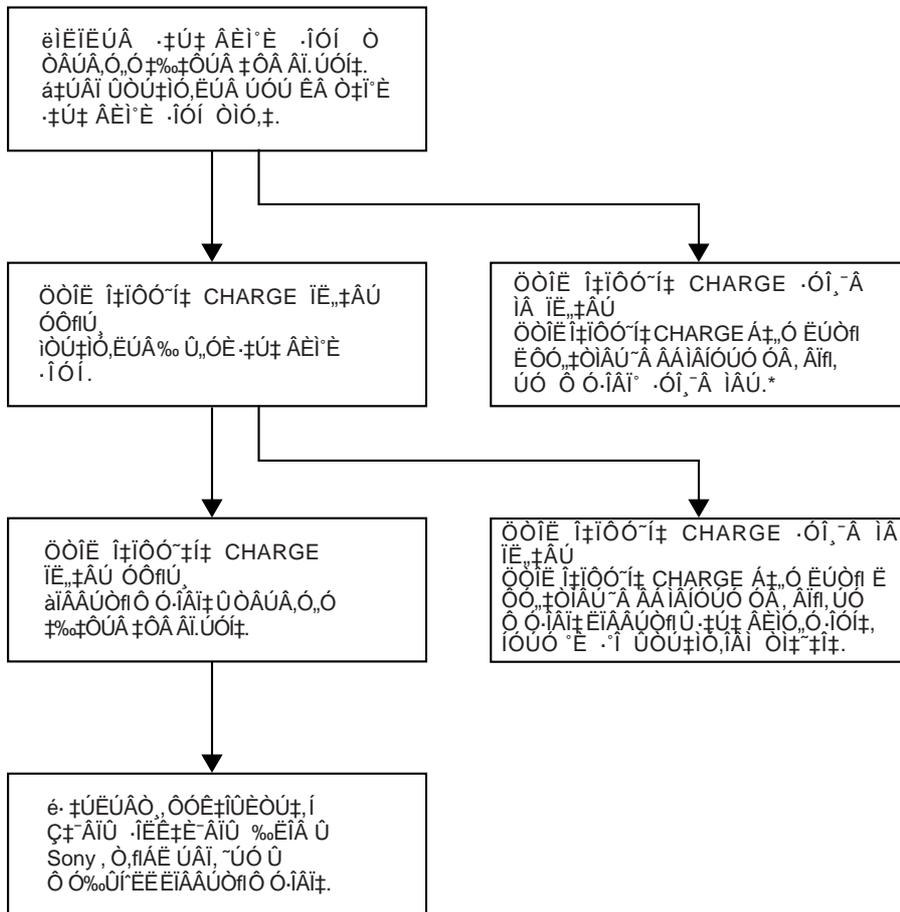

* ÒÒìÈ Ç° ÈÒÒìÓì,ÁÚÁÚÀ .±Ú± ÀÈì°È .ìÓì, ÌÓÚÓ °È Ç° ÒÓì,ìÓ ~ÚÓ ÌÙÒÈÌÈ, ÈÌÈ ÌÓÚÓ °È .ì ÒÓÚ±,ÌÁì Ì± %ìÈÚÁì ÌÓÀ , Áñ ÒÓ Ì±ìÒÓ~í± CHARGE ÌÓÈÁÚ ÌÈ,,±Ú, Ò È ÒÀ ,ÒÈ Á± ñ%ìÁ. ÇÓ ~ÚÓìÁñ,ñÁÁÚÒñ Ò Ó.ÌÁìÓÈ. èÓ,ÚÓ ÈÚÀ òìÓ,± Ò Ó~À%Ú ÒÚ Ì± ñ%ìÈ ÒÓÚÁìÈÀ Ò±ì~í .±Ú± ÀÈì°È .ìÓì.

English

Specifications

Video Camera Recorder System

Video recording system

Two rotary heads, Helical scanning, FM system

Audio recording system

Rotary heads, FM system

Video signal

PAL colour, CCIR standards

Usable cassette

8 mm video format cassette (standard 8 mm)

Recording/Playback time

SP mode: 1 hour and 30

minutes (P5-90)

LP mode: 3 hours (P5-90)

Fastforward/rewind time

Approx. 5 min. (P5-90)

Image device

CCD (Charge Coupled Device)

Viewfinder

Electronic viewfinder (Black and white)

Lens

CCD-TR401E: 13x, combined

power zoom lens, F1.8 – 2.8

CCD-TR402E: 13x (optical), 26x

(digital), combined power

zoom lens, F1.8 – 2.8

Focal distance

$f = 5.3 - 68.9 \text{ mm}$ ($7/32 - 2 3/4$

inches), 38 – 494 mm

($1 1/2 - 19 1/2$ inches) when

converted to a 35 mm still

camera

Colour temperature

Auto

Minimum illumination

0.5 lux at F 1.8

Illumination range

0.5 to 100,000 lux

Recommended illumination

More than 100 lux

Input and Output connectors

Video output

Phono jack, 1 Vp-p, 75 ohm, unbalanced

Audio output

Phono jack, 327 mV, (at load impedance 47 kilohm), impedance less than 2.2 kilohm

RFU DC OUT

Special minijack, DC 5 V

LANC jack

Stereo-mini-mini-jack (\varnothing 2.5 mm)

MIC jack

Minijack, 0.388 mV, low impedance with 2.5 to 3 V DC, output impedance 6.8 kilohm (\varnothing 3.5 mm)

General

Power requirements

On battery mounting surface

6.0 V (battery pack), 7.5 V (AC

power adaptor)

Average power consumption

CCD-TR401E: 3.6 W

CCD-TR402E: 3.7 W

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to +60°C (-4°F to +140°F)

Dimensions

Approx. 115 x 103 x 207 mm

($4 5/8 \times 4 1/8 \times 8 1/4$ inches) (w/h/d)

Mass

Excluding the battery pack,

lithium battery, cassette and

shoulder strap

CCD-TR401E:

Approx. 720 g (1 lb 9 oz)

CCD-TR402E:

Approx. 730 g (1 lb 9 oz)

Including the battery pack NP-

33, lithium battery CR2025,

cassette P5-90 and shoulder

strap

CCD-TR401E:

Approx. 940 g (2 lb 1 oz)

CCD-TR402E:

Approx. 950 g (2 lb 1 oz)

Microphone

Electret condenser microphone

Monaural type

Supplied accessories

See page 6.

AC power adaptor

Power requirements

110 – 240 V AC, 50/60Hz

Power consumption

AC-V16: 20 W

AC-V16A: 22 W

Output voltage

DC OUT in operation mode

7.5 V, 1.8 A

Battery charge terminal

10 V, 1.1 A in charge mode

Application

Sony battery pack

Ni-Cd type (6V):

NP-33 (800 mAh) (supplied),

NP-65/67 (1500 mAh),

NP-66H/68 (1800 mAh),

NP-77H/78 (2400 mAh),

NP-90/90D/98 (3000 mAh)

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to +60°C (-4°F to

+140°F)

Dimensions

Approx. 166 x 43 x 75 mm

($6 5/8 \times 1 11/16 \times 3$ inches)

(w/h/d)

including projecting parts and

controls

Mass

AC-V16: Approx. 420 g (15 oz)

AC-V16A: Approx. 450 g (16

oz)

Design and specifications are


subject to change without

notice.

Additional Information NOOOIEUAIJH EIUOI'F'EI

Identifying the Parts

Αναγνωρίζοντας τα μέρη

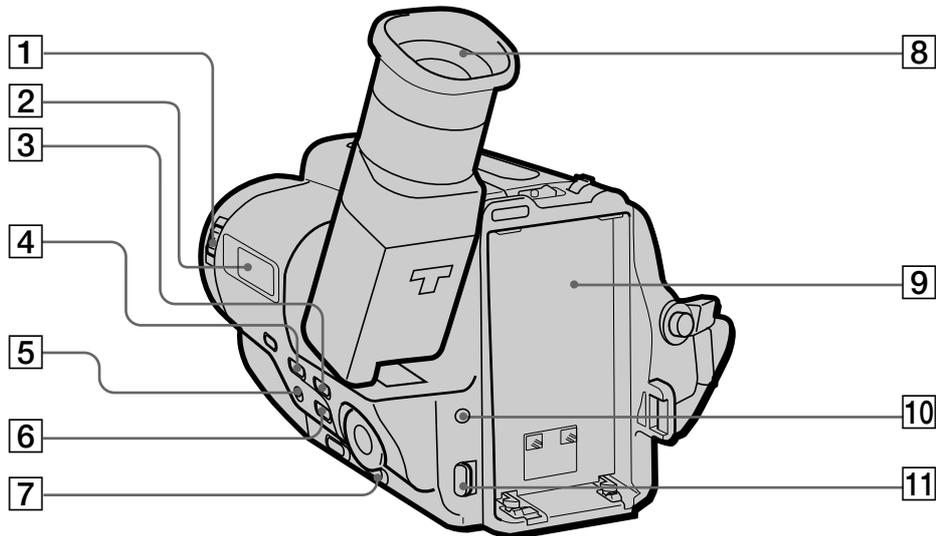


- 1 POWER switch (p. 12, 22)
- 2 Display window (p. 66)
- 3 TIME(NEXT) button (p. 27, 38)
- 4 DATE(+) button (p. 27, 38)
- 5 COUNTER RESET button (p. 15)
- 6 TITLE button (p. 32)
- 7 16:9 WIDE mode switch (CCD-TR402E only) (p. 33)
- 8 Eyecup (p. 17, 47)
- 9 Battery mounting surface (p. 10)
- 10 LANC  control jack
Connect the LANC  connecting cable to a wired remote control unit such as an editing controller. In this case, set the COMMANDER mode to OFF (p. 34).  stands for Local Application Control Bus system. The  control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the connectors indicated as CONTROL L or REMOTE.
- 11 BATT (battery) release knob (p. 10)

- 1 Ç°íí, ~±ÚÂî, POWER (ÒÚ . 12, 22)
- 2 εíÓ-íÓ %̂ÖÖíÄñ (ÒÚ . 66)
- 3 äìÓÓí± TIME (NEXT) (ÒÚ . 27, 38)
- 4 äìÓÓí± DATE (+) (ÒÚ . 27, 38)
- 5 äìÓÓí± COUNTER RESET (ÒÚ . 15)
- 6 äìÓÓí± TITLE (ÒÚ . 32)
- 7 Ç°íí, ~±ÚÂî, ~È ÓíÓÚÓ í±ÚìÓ,,Ó ÄÈÈí± 16:9 WIDE (íÓí,íÓ %̂ñ íÓ%̂Äñ CCD-TR402E)(ÒÚ . 33)
- 8 εíÚñ (ÒÚ . 17, 47)
- 9 Ä±Ú± ÄÈí±ñ ÙÓÚ±ìÓ,Ó-í±ñ ÓÓ,Ä ìíÓÓÚ, (ÒÚ . 10)
- 10 ÈíÄÁ%Ó ÙÓ ±,íÄíñ LANC  èÓ%íí ~ÈÚÄ í±.Äí, LANC  í ÓÚí ÙÚ Ó Ó,Ó%íÓ,,Ó%ÈÓÚ±~ÈÓííÓ,,Ó ÙÓ ±,íÄíñ, ÈÓÓÓí ÄÚÄíÓ,,Ó í±~ÄÓÚ,Ä %̂ÓÓÓíÈÚÄí,íÓ,,Ó ±í± ÙÓ ±,íÄíñ. Ç ~ÚÓíÓí~±Ä ÙÓÚ±ìÓ ÈÚÄ ÄÈÈí COMMANDER. ÓÓíÓÈÄíÈÄ OFF (ÒÚ . 34).  ÓÄí±~±ÄÚ ÓÈÓÚÄíÚ í±í±íÄÓÚí,,Ó ÙÓ ±,íÄíñ. ÈíÄÁ%Ó ÙÓ ±,íÄíñ  ÈÓÓÓí ÄÚÄÚÓñ%̂ñíÓíÚ ÓñÄ± ÓÄ ÄíÄ~ÄíÈÄí íÄíÚ*, È%̂ÄÓÓ.Ó Ù%̂Ó,±íÈñ ÈÓÄ ÈÚÄ ÈÈí~ÚÓÚ ÓÈÓÚ,, ÓÓ%íí ~Äíí* í íÄíÚ. Ñ±ííÓÄ „íÄÁ%Ó ÈíÄÁÚ Ù±íÚ, ÈÄ ÙÚíí~È, í±í È ±Ä~Äí°, Ó.ÓÄí±~Äíí~Ä í±í CONTROL L ÈíÈ REMOTE.
- 11 äìÓÓí± ÓÓ,Ó.ÓÈÈ%̂Äíñ (-±Ú± ÄÈ) BATT (ÒÚ . 10)


Additional Information
ΝΟΘΩΙΕΥΑΙ,ΙΗΗ ΕΙΥΘ Ι±~Èñ

Identifying the Parts

Αναγνωρίζοντας τα μέρη

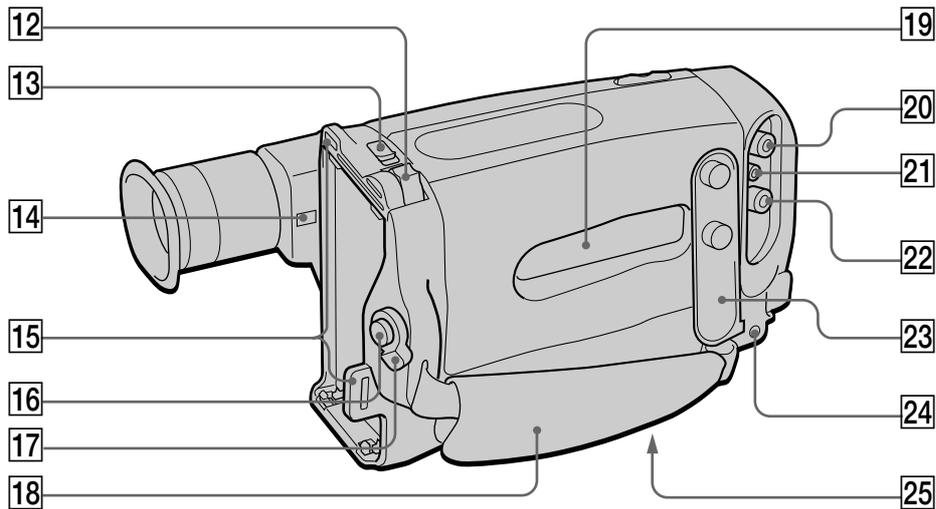

- | | |
|--|--|
| <p>12 Power zoom lever (p. 16)</p> <p>13 EJECT knob (p. 11)</p> <p>14 Eyecup release knob (p. 47)</p> <p>15 Hooks for shoulder strap (p. 62)</p> <p>16 START/STOP button (p. 12)</p> <p>17 STANDBY switch (p. 12)</p> <p>18 Grip strap (p. 17)</p> <p>19 Cassette compartment (p. 11)</p> <p>20 VIDEO OUT jack (p. 20)</p> <p>21 RFU DC OUT (RFU adaptor DC out) jack</p> <p>22 AUDIO OUT jack (p. 20)</p> <p>23 Jack cover</p> <p>24 MIC (microphone) jack
Connect an optional external microphone. This jack also accepts a “plug-in-power” microphone.</p> <p>25 Tripod receptacle (p. 18)
Attach a tripod (not supplied) here.</p> | <p>12 ε~†, Ò È,Ó%lÓ,,ÓÚ †ìòùóí†úó † (òú . 16)</p> <p>13 àìòí† EJECT (òú . 11)</p> <p>14 àìòí† ÒÒ,Ó-ÓÈ%ÀìÈ† ÒíÚ†† (òú . 47)</p> <p>15 ä ~†È %†† ÒÎ~À,Ó,,Ó À††† (òú . 62)</p> <p>16 àìòí† START/STOP (òú . 12)</p> <p>17 èÀ Á†† ~†ÚÁ†, STANDBY (òú . 12)</p> <p>18 èÁ†Á†, Á††,†Ú† (òú . 17)</p> <p>19 éúòÁ††òòÁú° (òú . 11)</p> <p>20 È†ÁÁ%ó VIDEOOUT (òú . 20)</p> <p>21 È†ÁÁ%ó RFU DC OUT (,†ò%†%†òúÁ † Òòú.úó†RFU)</p> <p>22 È†ÁÁ%ó AUDIOOUT (òú . 20)</p> <p>23 ä ~†† „†ÁÁ%†</p> <p>24 È†ÁÁ%ó MIC (†È† Òúò††)
èò%òòÁ%è†ÈúÁ %òòò†ÈúÁ†††È,†È,†ÈÈ
†È† Òúò†.úúó,†ÁÁ%óò††ÈÁòò%ò%èú
%ò†† Òò%ò†† ~††È†† †È† Òúò†† Ò
“,†† ~††ÈÁ†† ÒÈú††È††”.</p> <p>25 ÑÁ È†ÚÁ†, ú Á†òÈ†È†† (òú . 18)
è ÈòòÁ%è†ÈúÁú,Á†òÈ†È† (†Á
ò È††,†Áúò††)Á%Áó.</p> |
|--|--|

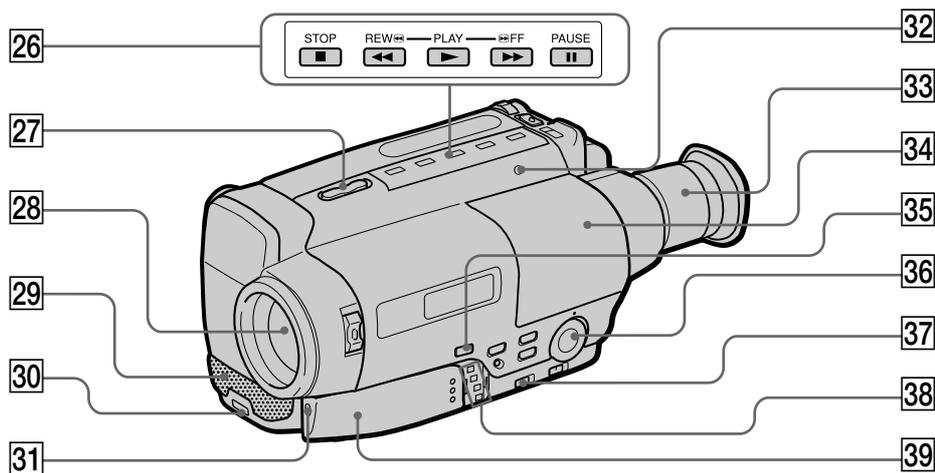

26 Tape transport buttons (p. 22, 23)

- STOP
- ◀◀ REW (rewind)
- ▶▶ PLAY (playback)
- ▶▶▶ FF (fast forward)
- || PAUSE

These buttons will function in PLAYER mode.

27 EDITSEARCH button (p. 19)

28 Lens cover

29 Built-in microphone

30 Remote sensor (p. 64)

31 Camera recording/battery lamp

32 DEW lamp (p. 45)

33 Viewfinder adjustment ring (p. 13)

34 Viewfinder (p. 13)

35 BACK LIGHT button (p. 30)

36 PROGRAM AE dial (p. 28)

37 START/STOP MODE switch (p. 12, 14, 31)

38 Mode switches (p. 34)

39 Lithium battery compartment (p. 37)

26 αΙΟΘΙΕ ΟΑ ΑΙΑ~ΑΙΕΗ ΙΑΙÚ° (ΟΥ . 22, 23)

- STOP (ΟΟΥ†ΙΟ,†)
- ◀◀ REW (ΟΑ ΑΙΟΥ††††%)
- ▶▶ PLAY (,ΟΟΟ ΟΕΑ,Α%ΑΙΕΑ)
- ▶▶▶ FF (ΟΑ ΑΙΟΥ†,ΟΑ Α%)
- || PAUSE (Ο†ÚÁ†)

ύÚΕ ΗΙΟΘΙΕ .Ú%ÚÚ ÚÚΗΈΕΟΙΕ Ο,†Ú, ,
ΑΕΕΙΑ PLAYER.

27 αΙΟΘ† EDITSEARCH (ΟΥ . 19)

28 ä °†† Ó·ΑΙÚÈ,†

29 ÇΟΥ ΟΑΗÈ ÈÍÍ ΟÚΟΙ

30 ΝΕΘÚ††ΕΘΗÈ %†ÚΈÍ (ΟΥ . 64)

31 ä†ΙΟ~†† Α†ΘÈΘÈ ,È%ΑΟΙ††Α /
†Ú† ΑÈΙΟ,,Ο †ΙΟ†

32 ä†ΙΟ~†† DEW (ΟΥ . 45)

33 äΟ†, ° Α,,ÚÍÈ Ó,ÍÈ ,È%ΟÈΟ†ÚΑ†Η
(ΟΥ.13)

34 ÇÈ%ΟÈΟ†ÚΑ†, (ΟΥ .13)

35 αΙΟΘ† BACK LIGHT (ΟΥ . 30)

36 ΝÈΟΙ PROGRAMAE (ΟΥ . 28)

37 èÁ ΑÍ,~†ÚΑ†, START/STOP MODE
(ΟΥ . 12, 14, 31)

38 èÁ ΑÍ,~†ÚΑ†È ΑÈÈΙΟ, (ΟΥ . 34)

39 εÚΟΑ††ÈÚÈΑ,ΟÈ .†Ú† ΑÈÍÈ (ΟΥ . 37)

Identifying the Parts


Αναγνωρίζοντας τα μέρη

Attaching the shoulder strap

Attach the supplied shoulder strap to the hooks for the shoulder strap (15 on page 60).

Επιβάλλεται να συνδέσετε το ελαστικό λουρί που παρέχεται με το κάμερα στα κλιπ για το λουρί (15 στην σελίδα 60).

Επιβάλλεται να συνδέσετε το ελαστικό λουρί που παρέχεται με το κάμερα στα κλιπ για το λουρί (15 στην σελίδα 60).

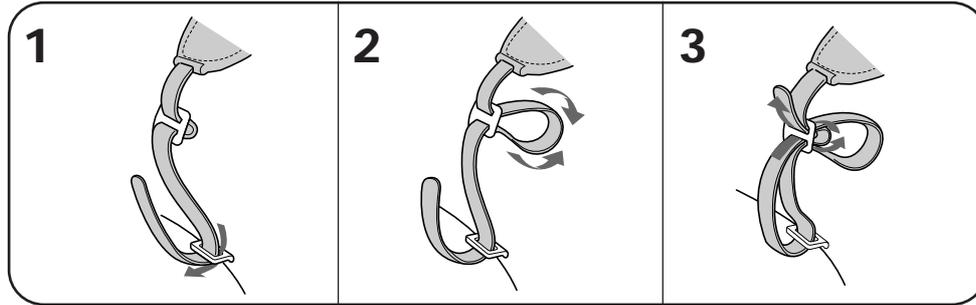


Remote Commander

Απομακρυσμένος Έλεγχος

The buttons that have the same name on the Remote Commander and on the camcorder function identically.

Οι κουμπιά που έχουν το ίδιο όνομα στο τηλεχειριστήριο και στο κάμερα λειτουργούν με τον ίδιο τρόπο.

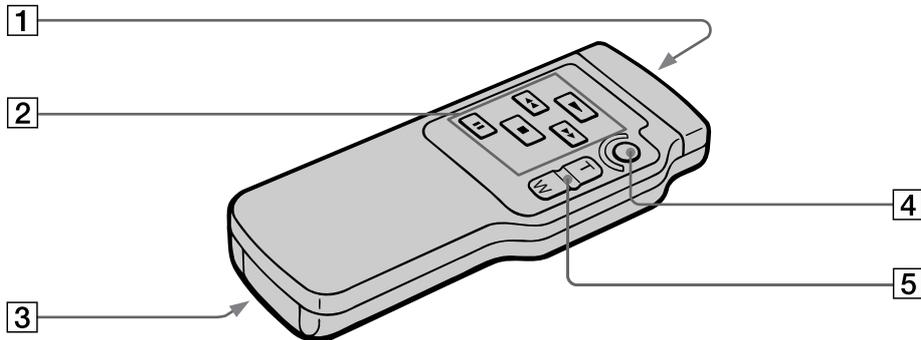


- 1 Transmitter
Point toward the remote sensor to control the camcorder after turning on the POWER switch on the camcorder.
- 2 Tape transport buttons (p. 22, 23)
- 3 R6 (size AA) battery holder (p. 63)
- 4 START/STOP button
- 5 Power zoom button
The zooming speed is unchangeable on the Remote Commander.

- 1 Ηλεκτρονική Αποστολή
Ποιεύστε το τηλεχειριστήριο προς τον αισθητήρα τηλεχειριστηρίου του κάμερα μετά από την ενεργοποίηση του διακόπτη POWER του κάμερα.
- 2 Κουμπιά μεταφοράς ταινίας (σ. 22, 23)
- 3 Κρατηστής μπαταρίας R6 (τύπου AA) (σ. 63)
- 4 Κουμπί START/STOP
- 5 Κουμπί ζουμ ισχύος
Η ταχύτητα ζουμ είναι αμετάβλητη στο τηλεχειριστήριο.

Preparing the Remote Commander

To use the Remote Commander, you must insert two R6 (size AA) batteries. Use the supplied R6 (size AA) batteries.

- (1) Remove the battery cover from the Remote Commander.
- (2) Insert both of the R6 (size AA) batteries with correct polarity.
- (3) Put the battery cover back onto the Remote Commander.

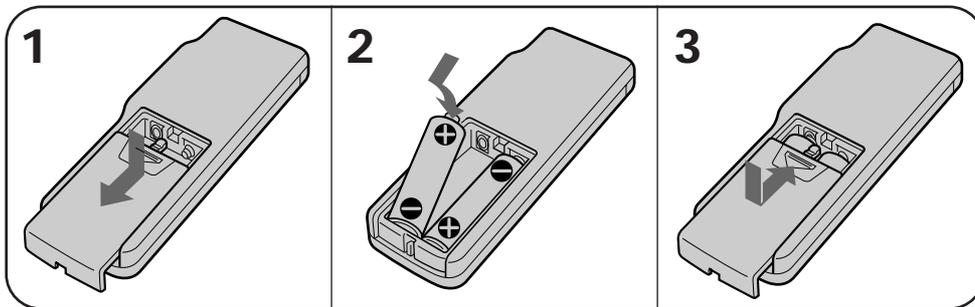

Note on battery life


The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

To avoid damage from possible battery leakage

Remove the batteries when you will not use the Remote Commander for a long time.

Using the Remote Commander

Make sure that the COMMANDER mode is set to ON (p. 34).

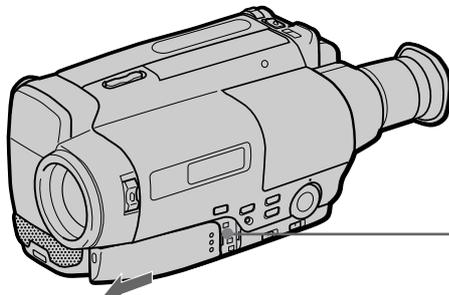


èÓ%, ÓÚÓ, í± ÒÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó
 ÛÓ ±, íÁíÉñ
 ÑñÉÓÓÍ, ÁÓ, ±íÉñ ÒÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó
 ÛÓ ±, íÁíÉñ Ç° %ÓíÉí` , ÓÚ±, ÉÚ, %,, Á
 ±Ú± ÁÉíÉ R6 (±ÁíÁ ÓíÁÁ).
 ÇÓÓÓÍ, ÁÚÉÚÁÓ, Ó Éí±,, ±Áí`É ±Ú± ÁÉí±íÉ
 R6 (±ÁíÁ ÓíÁÁ).
 (1) éíÉíÉÚÁ í`ÍÚ, ÓÚÓÁí±, ±Ú± ÁÁí Ó
 ÓÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó ÛÓ ±, íÁíÉñ.
 (2) ÇÓÚ±, ÚÁ Ó. Á. ±Ú± ÁÉíÉ R6 (±ÁíÁ ÓíÁÁ)
 Ó Ó ±, Éí, íÓÉ ÓÓñ íÓÓ.
 (3) íÓÚ±íÓ, ÉÚÁ í`ÍÚ í± ÒÚÍ, Ú
 %ÈÓÚ±í`ÉÓìÒ,, Ó ÛÓ ±, íÁíÉñ.

è ÉíÁ`±íÉÁ ÓÚíÓÓÉÚÁí, íÓ Ó Óí± ÓíÚÉ.°
 ±Ú± ÁÁí
 Á±Ú± ÁÁí%ñ ÒÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó
 ÛÓ ±, íÁíÉñ í, ±Ú±ÁÚ Ó ÉíÁ íÓ í± 6 íÁÓñ`Á,
 Ó ÉíÓ í±í, íÓÉ`íÓÓíÚ±Ú±`ÉÉ. ÓÓíÉÁ± ñ%
 ±Ú± ÁÁí ÓÚ±íÁÚ Óí±. íÉíÉÁ ±ÓíÓ%ÚÁÚÓñ
 ÓÓ, ÓÁí, ÓÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó ÛÓ ±, íÁíÉñ
 ÓÁ ÁÓÚ±íÁÚ ÚÚí`ÉÓíÉ Ó, ±Ú.

ÇÓ ÉÁ. ÁÉ±íÉÁ ÓÓ, ÁÉ%ÁíÉñ, ÓíÁ%ÓÚ, ÉÁ
 , ÓÁíÓÉíÓÉ ÚÚÁ`íÉ ÓÓ%Á ÉÉíÓ, Ó ±Ú± ÁÁí
 í%±íÉÚÁ ±Ú± ÁÉíÉ, ÁÓíÉ Ç° íÁ. Ú%ÁÚÁ
 ÉÓÓÓÍ, ÁÓ, ±Ú, ÓÚÍ, Ú± %ÈÓÚ±í`ÉÓìÒ,, Ó
 ÛÓ ±, íÁíÉñ %ÈÉÚÁí, íÓÁ , Áññ.

àÒÓÓÍ, ÁÓ, ±íÉÁ, ÓÚÍ, Ú±
 %ÈÓÚ±í`ÉÓìÒ,, Ó ÛÓ ±, íÁíÉñ
 í. Á%ÉÚÁÓ, `ÚÓ ÁÉÉí COMMANDER
 ÓÓÚ±íÓ, íÁí, ÓÓíÓÉÁíÉÁ ON (ÓÚ . 34).

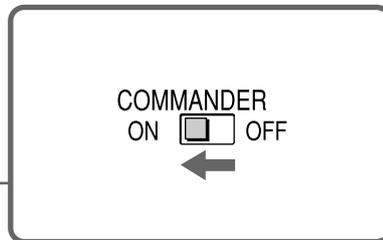

Identifying the Parts


ζετιΑΙΙΟ,τιΕΑ %ΑΥτιΑΕ

Remote Control Direction

Aim the Remote Commander to the remote sensor within the range as shown below.

ζετιΑΙΙΟ,τιΕΑ ΟΥΙ,τι %ΕΟΥτιΕΟΙΙ,Ο ΥΟ,τιΑΙΕτι

ζετιΑ, ΥΑ ΟΥΙ, Υ %ΕΟΥτιΕΟΙΙ, Ο ΥΟ, τιΑΙΕτι
τι %ΕΟΥτιΕΟΙΙ, Ε %τιΥΕΙ, Ο Α%Ατι
%ΕτιΟτιΑΟτι, ΟΟτιΑτιΙΟ, ΟΙΕΕΑ.

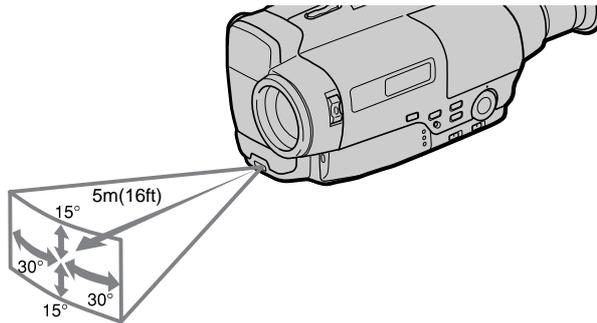

Notes on the Remote Commander

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.
- Be sure that there is no obstacle between the remote sensor on the camcorder and the Remote Commander.
- This camcorder works at commander mode VTR 2. The commander modes (1, 2, and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

εΕΙΑ-τιΕτι ΟΥΙΟΔΕΥΑΙ, ΙΟ ΟΥΙ, τι
%ΕΟΥτιΕΟΙΙ, Ο ΥΟ, τιΑΙΕτι

- ετιΟΟΟτι, τιΕΥΑ %ΕΟΥτιΕΟΙΙ, Ε %τιΥΕΙ
%τιΕ ΟΥ ΟΕΙ, ι, ΕΟΥΟ-τιΕΙΟ, Ο, ΑΥ, ΥτιΕΙ,
Ιτι Ο τιΟΕ ΟΟΙΙΑ-τιΕ Ο, ΑΥ ΕΙΕ
Ετι, ΙΕτι-Ετι. ζ Ο ΟΥΕ, ΙΟΙ ΟΙΥ-Α
%ΕΟΥτιΕΟΙΙΟΑ ΥΟ, τιΑΙΕΑ ΙΟΕΑΥ ΙΑ
Ο, τιΥ, τιΥ.
- ι-Α%ΕΥΑΟ, τιΥΟ ΙΑΕ%Υ %ΕΟΥτιΕΟΙΙ-τι
%τιΥΕΙΟΙ Ε ΟΥΙ, ΥΟΙ ΥΟ, τιΑΙΕτι ΙΑΥ
Ο ΑΟτιΟΥΕτι.
- ΝτιΙτι, Ε%ΑΟτιΑ τι, τιΟΥΑΥ, ΑΕΕΙΑ
ΟΥΙ, τιΥ ΟΥΟ, τιΑΙΕτι VTR 2 (αζα 2). εΑΕΕΙ-
ΟΥΙ, τιΥ ΟΥΟ, τιΑΙΕτι (1, 2 Ε 3) ΕΟΟΟΙ, ΑΥ, ΥΟΙ
%οιτι ΟΥΙΕ-Ετι %τιΙΟΕ, Ε%ΑΟτιΑ ° ΟΥ
%Υ, Ει, αζα ΥΕ Ι° Sony, τιΥΟ- ΕΑ-ΑΕτιΥ,
ΙΑΟ, τιΕΙ, ΙΟ, Ο Ο, τιΥ, τιΕτι Ο Ε
%ΕΟΥτιΕΟΙΙΟΙ ΥΟ, τιΑΙΕΕ. ΟΟΙΕ ζ°
ΕΟΟΟΙ, ΑΥΑΥΑ %Υ, ΕΑ αζα ΥΕ Ι° Sony,
ΑΕΕΙΑ ΟΥΙ, τιΥ ΟΥΟ, τιΑΙΕτι VTR 2 (αζα 2),
ΑΙΟΙΑι%ΟΥΑΟΥΟτι ΕΑΙΑΙΕΥ, ΑΕΕΙ τι ΟΥΙ, ΥΑ
ΟΥΟ, τιΑΙΕτι ΕΙΕ Ατι °Υ, %ΕΟΥτιΕΟΙΙ, Ε
%τιΥΕΙ αζα Α ΙΟΕ .Υτι, ΟΕ.

To Watch the Demonstration

You can watch a brief demonstration of pictures with titles.

If the demonstration appears when you turn on the camcorder for the first time, exit the Demo mode to use your camcorder.

To enter Demo mode

- (1) Eject the cassette and slide the POWER switch to OFF.
- (2) Turn STANDBY up.
- (3) While holding down **▶**, slide the POWER switch to CAMERA. Demonstration starts. The demonstration stops when you insert the cassette.

Note that once you enter Demo mode, this mode is retained as long as the lithium battery is in place. Therefore, demonstration starts automatically 10 minutes later every time you slide the POWER switch to CAMERA, or after you eject the cassette.

To exit Demo mode

- (1) Slide the POWER switch to OFF.
- (2) Turn STANDBY up.
- (3) While holding down **■**, slide the POWER switch to CAMERA.

Νίηφ ό όόίού †%οΑίόίού †Έέ
 Ç° ίοέάύά ό όόίού άύ, ίό όύίύ
 %οΑίόίού †Έ έάό. †έάίέέ ό †%οέέόηέ.
 όόίέ %οΑίόίού †Έη όόη,ήηάύόη, ίό, %ο† Ç°
 έόόόί, άύάύά, έ%οάόί†ιά ύ, όά, °έ †ά, ύό
 ύ ά·ύάύόη, °έύέέά %οΑίόίού †Έόίό, ό
 άέέ† %οίη έόόόί, άό, †ίέη, έ%οάόί†ιά °.

Νίηφ , ίό%ο† , %οΑίόίού †Έέόί·έ άέέί
 (1) Ç° ύόήέύά †όόάύύέέόό, ά ίέύά
 , ίί, †ύάί, POWER , όόίόέάίέά OFF.
 (2) έό, ά ίέύά STANDBY , ά ι.
 (3) Ç†έέί†† **▶**, όά ά%ο, έί, ύά , °ίί, †ύάί,
 POWER , όόίόέάίέά CAMERA.
 Νάίόίού †Έη †έ†άύόη. Νάίόίού †Έη
 ά†ί†ίέ, †άύόη, ίό, %ο† Ç° , όύ†, έύά
 †όόάύύ.
 έ· †ύέύά , †έ†ίέά, †ύό άόίέ Ç° , άίέ
 %οΑίόίού †Έέόί·έ άέέί, ύό †ύό άέέί
 όόί †ηηάύόη%οόύάίόό, όό†ύόύ†ίό, ίά†
 ίέύέά, †† †ύ† άέί†. ††ίέί ό· †άόί,
 %οΑίόίού †Έη †έ%ο°έ †ά†, ύό††ύέ·άόίέ
 †έ†άύόη·ά άά 10 ίέίύύόόόίά ύό, ό, ††
 Ç° όό, ά ίάύά , °ίί, †ύάί, POWER ,
 όόίόέάίέά CAMERA έίέέόόίά
 , ύ†ίέ, †ίέη †όόάύ·.

Νίηφ , ίό%ο† έά %οΑίόίού †Έέόίό, ό
 άέέί†
 (1) έά ά%ο, έί, ύά , °ίί, †ύάί, POWER ,
 όόίόέάίέά OFF.
 (2) έό, ά ίέύά STANDBY , ά ι.
 (3) Ç†έέί†† **■**, όά ά%ο, έί, ύά , °ίί, †ύάί,
 POWER , όόίόέάίέά CAMERA.

Identifying the Parts


Αναγνωρίζοντας τα μέρη

Operation Indicators

Συμβολισμοί οθόνης

The indicators in the display window appear in CAMERA mode only.

Οι πληροφορίες που εμφανίζονται στην οθόνη εμφανίζονται μόνο στην λειτουργία CAMERA.

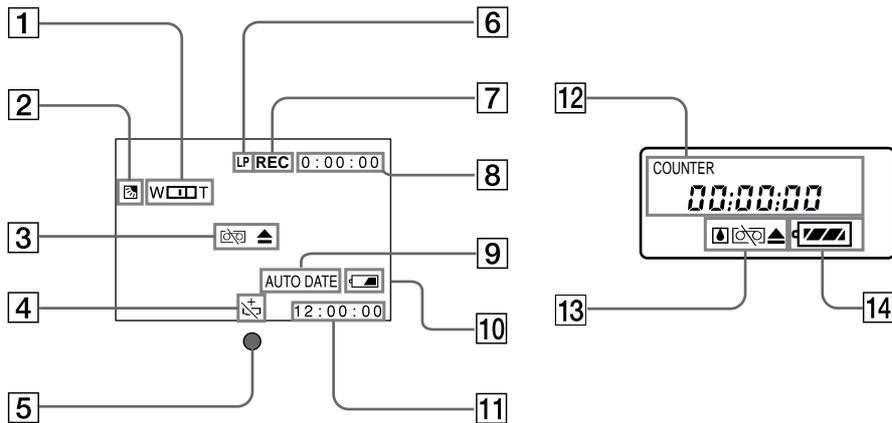

1 Power zoom indicator (p. 17)
CCD-TR402E only

2 Backlight indicator (p. 30)

3 Warning indicator (p. 67)

4 Lithium battery indicator (p. 36)

5 Recording lamp/battery lamp (p. 12)

6 Recording in LP mode (p. 12)

7 Tape transport mode (p. 12)

8 Tape counter (p. 15)

9 AUTO DATE indicator (p. 12)

10 Remaining battery indicator (p. 40)



11 Date, Time or Title (p. 27, 32)

12 Tape counter (p. 15)

Date or time indicator (p. 27)

13 Warning indicator (p. 67)

14 Remaining battery indicator (p. 40)



1 αλμείψυό ό έ,ό%ιό,όύ ψιούόψυό ψ (όύ.17)

ίόί,ίό %ίψιό ίό%άίε CCD-TR402E

2 αλμείψυό άψ%ιέόό%ό,άύίε (όύ.30)

3 έ %όύό άέ%ψ,ΐέέί%είψυό (όύ.67)

4 αλμείψυό ίέύέ,όέ.ψψ άέίε (όύ.36)

5 αψιόό-ίψ άψόέόέ/ίψιόό-ίψ ψψ άέίό,ό -ίόίψ (όύ.12)

6 άψόέό, , άέέίά LP (όύ.12)

7 έάέεί όά άίά-άίέψ ίάίύ° (όύ.12)

8 έ-άύ-εί ίάίύ° (όύ.15)

9 αλμείψυό AUTODATE (όύ.12)

10 αλμείψυό όόύψ,ά,όόψάψψ%ψ ψψ άέίό,ό -ίόίψ (όύ.40)



11 Νψψ, , άίψ έίε ίψ%όέό, (όύ.27,32)

12 έ-άύ-εί ίάίύ° (cύψ.15)

άλμείψυό %ψύ° έίε, άίάίε (όύψ.27)

13 έ %όύό άέ%ψ,ΐέέέί%είψυό (όύψ.67)

14 αλμείψυό όόύψ,ά,όόψάψψ%ψ ψψ άέίό,ό -ίόίψ (όύψ.40)



Warning Indicators



Επιεικτικές Προειδοποιήσεις

All indicators appear only when you use the camcorder in CAMERA mode. If indicators flash in the viewfinder, or a caution lamp on the camcorder flashes, check the following:

Όλες οι προειδοποιήσεις εμφανίζονται μόνο όταν χρησιμοποιείτε την κάμερα. Εάν κάποιο από τα εικονίδια προειδοποίησης αναβοσβήνει στο οπίσθιο φακό ή κάποιο από τα εικονίδια προειδοποίησης στην κάμερα αναβοσβήνει, ελέγξτε τα παρακάτω:

♪: You can hear the beep sound when BEEP is set to ON (p. 34).

♪: Όταν ο ήχος προειδοποίησης είναι ενεργός (σελ. 34), μπορείτε να ακούσετε τον ήχο προειδοποίησης.
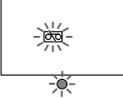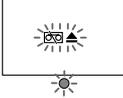
<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>7</p> 	<p>8</p> 	<p>9</p> 

- 1 **Battery Remaining**
Slow flashing: The battery is weak.
Fast flashing: The battery is dead.
- 2 **The tape is near the end.**
- 3 **The tape has run out.**
- 4 **No tape has been inserted.**
- 5 **The tab on the tape is out (red) (p. 11).**
- 6 **Moisture condensation has occurred (p. 45).**
▲ indicator appears only when the cassette is inserted.
- 7 **The video heads may be contaminated (p. 46).**
- 8 **Some other trouble has occurred.**
Disconnect the power source and contact your Sony dealer or local authorized facility.
- 9 **The lithium battery is weak or the lithium battery is not installed (p. 36).**
This indicator flashes just only after powering on.

- 1 ελλιπής μπαταρία.
αργό αναβοσβήνει: Η μπαταρία είναι αδύναμη.
γρήγορο αναβοσβήνει: Η μπαταρία είναι εκνευρισμένη.
- 2 Η ταινία είναι κοντά στο τέλος.
- 3 Η ταινία έχει τελειώσει.
- 4 Δεν έχει εισαχθεί ταινία.
- 5 Το κλείσιμο της ταινίας είναι έξω (κόκκινο) (σελ. 11).
- 6 Έχει συμβεί συμπύκνωση υδραερίων (σελ. 45).
▲ το εικονίδιο εμφανίζεται μόνο όταν η κασετίνα είναι εισαχθείσα (σελ. 11).
- 7 Τα κεφάλια βίντεο μπορεί να είναι μολυσμένα (σελ. 46).
- 8 Άλλο πρόβλημα.
Αποσυνδέστε την πηγή τροφοδοσίας και επικοινωνήστε με τον πωλητή ή τον εξουσιοδοτημένο αντιπρόσωπο της Sony.
- 9 Η μπαταρία λιθίου είναι αδύναμη ή η μπαταρία λιθίου δεν είναι εγκατεστημένη (σελ. 36).
Αυτό το εικονίδιο αναβοσβήνει μόνο μετά την ενεργοποίηση της κάμερας.

Additional Information

English

Index

A
 Adjusting viewfinder 13
 AUTO DATE 12
 A/V connecting cable 20

B
 BACK LIGHT 30
 Battery 26, 63
 Battery lamp 66
 Battery pack 7
 BEEP 15, 34

C
 Camera recording 12
 Car battery 27
 Charging battery 7
 Cleaning video heads 46
 Connection 20
 COUNTER RESET 15

D
 DATE/TIME 27
 DEMO 65
 Digital zoom 17

E
 Editing 35
 EDITSEARCH 19
 EJECT 11

F, G, H
 Fast-forward 22
 5 sec. recording 31
 High-speed shutter mode 28

I, J, K, L
 LANC 59
 Lithium battery 36

M, N, O, P
 MIC (microphone) jack 60
 Playback on TV 22
 Playback pause 23
 Power sources 24
 Power zoom 16
 PROGRAM AE 28

Q, R
 REC MODE 34
 Rec. Review 19
 Remote commander 62
 Rewind 22

S
 Shoulder strap 62
 Sports mode 28
 STANDBY 12
 Standby mode 13
 Supplied accessories 5

T, U, V, W, X, Y
 Tape counter 15
 Title 32
 Tripod mounting 18
 Trouble check 51
 Twilight mode 27
 Wide mode 33

Z
 Zoom 16

αὐτοματὴ

ἰνδείξεις

Α, Α
 Αὐτοματὴ ἰνδείξη 27
 Ἀποσύνδεση καλωδίου 7
 Ἀποσύνδεση 66
 Ἀποσύνδεση 26, 63

Β
 Βατάρια 22
 Βατάρια MIC (ἰνδείξη) 60
 ΝΑΙ/ΟΙΟὐ (DEMO) 65
 ΝΑ ἰνδείξη ἰσορροπίας 18
 ἄκουστικό 12
 ἄκουστικό 7

Γ
 ἄκουστικό 32
 ἄκουστικό 16
 ἄκουστικό 46

Ε
 ἔκδοση 23
 ἔκδοση 22
 ἔκδοση 62
 ἔκδοση 20
 ἔκδοση 16
 ἔκδοση 5
 ἔκδοση 54
 ἔκδοση 19
 ἔκδοση 62
 ἔκδοση 31

Ε
 ἔκδοση 13
 ἔκδοση 28
 ἔκδοση 13
 ἔκδοση 28
 ἔκδοση 27

Ε - ο
 ἔκδοση 20
 ἔκδοση 15

Ι
 ἰσορροπία 22
 ἰσορροπία 17
 ἰσορροπία 33

Α, Β, Γ
 AUTO DATE 12
 BACK LIGHT 30
 BEEP 15, 34
 COUNTER RESET 15

Δ, Ε
 DATE/TIME 27
 EDITSEARCH 19
 EJECT 11

Λ
 LANC 59

Π
 PROGRAM AE 28

Ρ
 REC MODE 34

Σ
 STANDBY 12