



# User Manual

**WSU6608XC/  
WSU6608KXC**



If you have questions or need assistance, please call customer service.  
Contact details can be found on the last page of user manual.

## CONGRATULATIONS

Dear customer,

Congratulations on the purchase of your new Westinghouse dishwasher.

Before you use the dishwasher, we recommend that you read through the whole user manual which provides the description of the dishwasher and its functions.

To avoid the risks that are always present when you use an electrical appliance, it is important that the dishwasher is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the appliance, please check it is not damaged. If in doubt, do not use the appliance but contact your local Customer Care Centre.

For contact details, refer to the last page of this user manual.

### Conditions of use

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

**Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.**

Record model and serial number here:

Model number:.....

Serial number:.....

PNC:.....

### IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Westinghouse manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Westinghouse manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

## CONTENTS

|                                |    |
|--------------------------------|----|
| Safety instructions .....      | 3  |
| Product description .....      | 5  |
| Technical specifications ..... | 6  |
| Control panel .....            | 7  |
| Program table .....            | 9  |
| Hints and tips .....           | 10 |
| Installation .....             | 11 |
| Preparing for use .....        | 15 |
| Loading .....                  | 22 |
| Maintenance and cleaning ..... | 23 |
| Troubleshooting .....          | 25 |
| Warranty .....                 | 28 |

Please read the user manual carefully and store in a handy place for later reference.

The symbols you will see in this booklet have these meanings:



### WARNING

This symbol indicates information concerning your personal safety.



### CAUTION

This symbol indicates information on how to avoid damaging the appliance.



### IMPORTANT

This symbol indicates tips and information about use of the appliance.



### ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the appliance.

# SAFETY INFORMATION

Please read the user manual carefully and store in a handy place for later reference. Pass the user manual on to possible new owners of the appliance.

Read the following carefully to avoid damage or injury.

**Note: You must read these warnings carefully before installing or using the appliance. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.**

## Children and vulnerable people safety.



### WARNING

Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open. Check that the detergent compartment is empty after completion of wash cycle.



### WARNING

Risk of injury or permanent disability.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Do not let children play with the appliance.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is for cleaning household-type dishes and tableware only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels
- Children less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Follow the maximum number of 15 place settings.
- Do not use high pressure water sprays and/or steam to clean the appliance.



### WARNING

It is important to use your appliance safely. Check these safety points before using your appliance.

## General Safety

- Do not change the specification of this appliance.
- Water inlet supply pressure must be between 0.04(0.4) /1 (10) MPa (bar).
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Put knives and cutlery with sharp points in the cutlery basket with the points down or in a horizontal position.
- Do not leave the appliance door open without supervision to prevent causing a trip hazard.
- Before maintenance, turn the appliance off and disconnect the plug from the mains.
- Do not use water spray and steam to clean the appliance, use soft damp cloth.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.
- The ventilation openings in the base (if applicable) must not be obstructed.
- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
- Check that the detergent receptacle is empty after completion of the wash cycle.

## Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0°C.
- Obey the installation instruction supplied with the appliance.
- Make sure that the appliance is installed below and adjacent to safe structures.

## SAFETY INSTRUCTIONS



### WARNING

Risk of fire and electrical shock.

#### Electrical connection

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate is the same as the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- The power supply is AC 220-240V/50Hz.


#### Water connection

- Make sure not to cause damage to the water hoses.  
Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean.
- The first time you use the appliance, make sure that there is no leakage. If possible, recommend to run a quick cycle outside the enclosure.
- Without electrical power, the water protection system is not active. In this case there is a risk of flooding.
- The water inlet hose has a safety valve and a sheath with an inner mains cable.



### WARNING

Use the new water inlet hose supplied with your machine, do not use an old machine's hose.

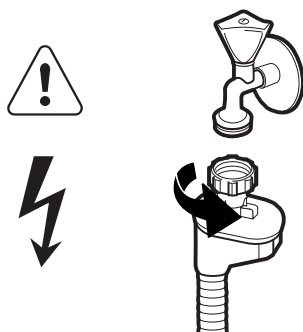

### WARNING

When connecting inlet, hold body of inlet and twist the nut with hand to tighten. Open tap to confirm no leak.  
Do not use tools to tighten.



### WARNING

Dangerous voltage

- If the water inlet hose is damaged, immediately disconnect the mains plug from the mains socket. Contact the Authorised Service Centre to replace the water inlet hose.

#### Use

- Do not sit or stand on the open door.
- Dishwasher detergents are dangerous. Obey the safety instructions on the detergent packaging.
- Do not drink and play with the water in the appliance.
- Do not remove the dishes from the appliance until the program is completed. There can be detergent on the dishes.
- The appliance can release hot steam if you open the door while a program operates.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

#### Service

- To repair the appliance, contact the Authorized Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.



### WARNING

Risk of injury or suffocation.


#### Disposal

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

## PRODUCT DESCRIPTION

### IMPORTANT

To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

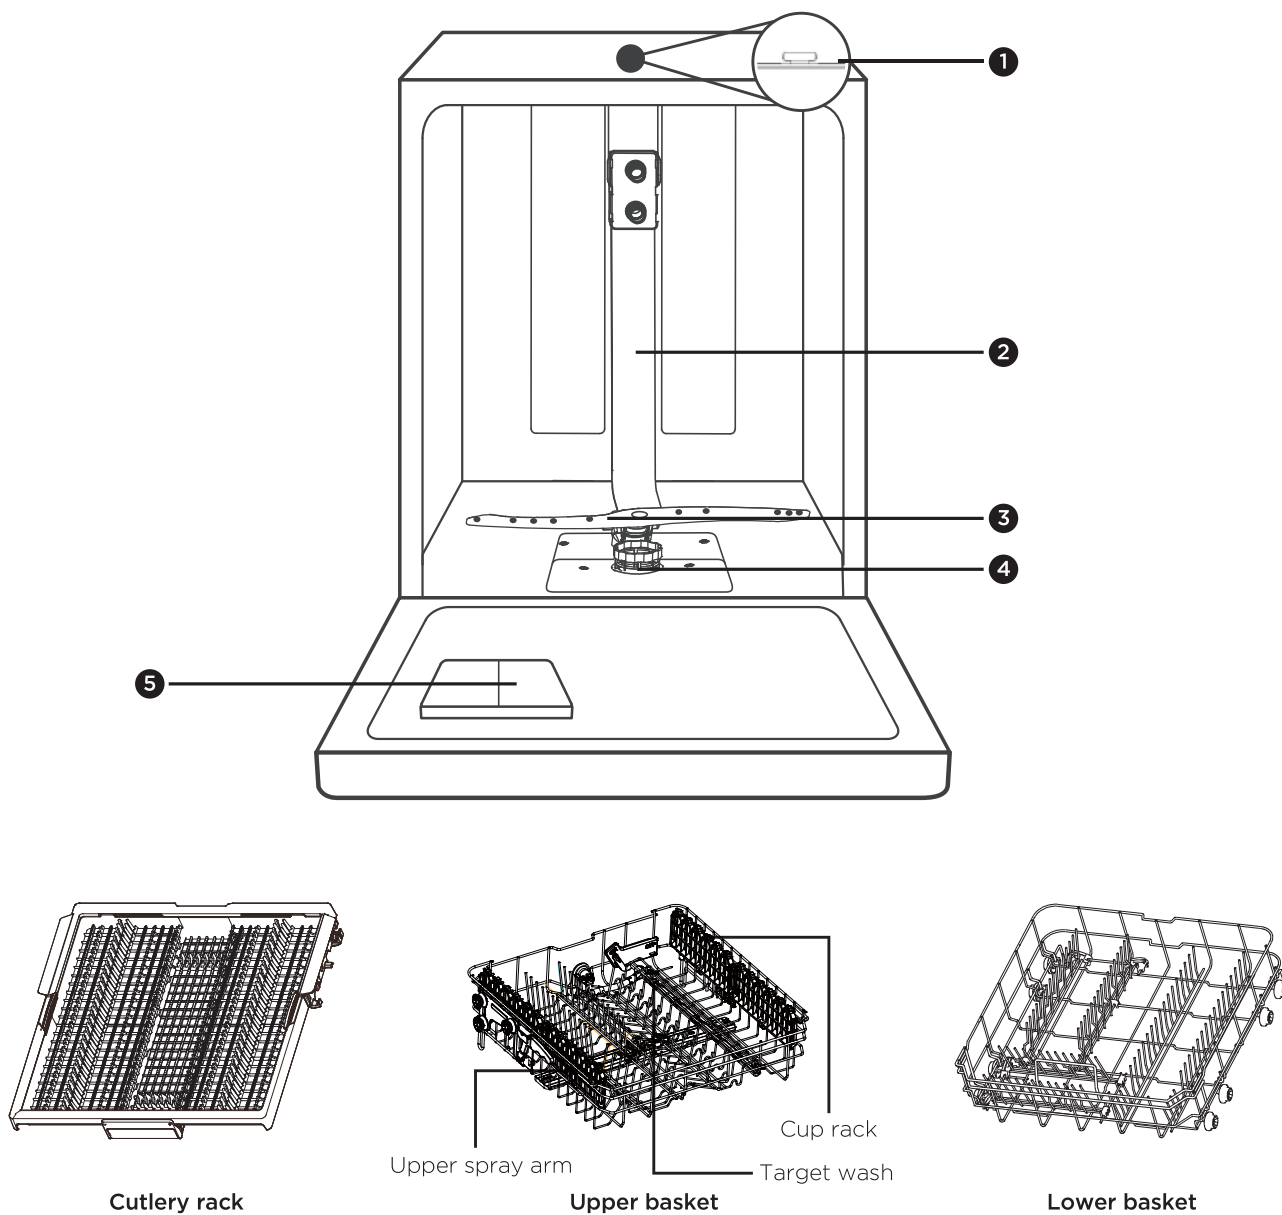


- 1 Top spray arm      2 Inner pipe      3 Lower spray arm      4 Filter assembly      5 Dispenser

### NOTE:

Images are for reference only. Actual products may vary slightly between different models.

# TECHNICAL SPECIFICATIONS

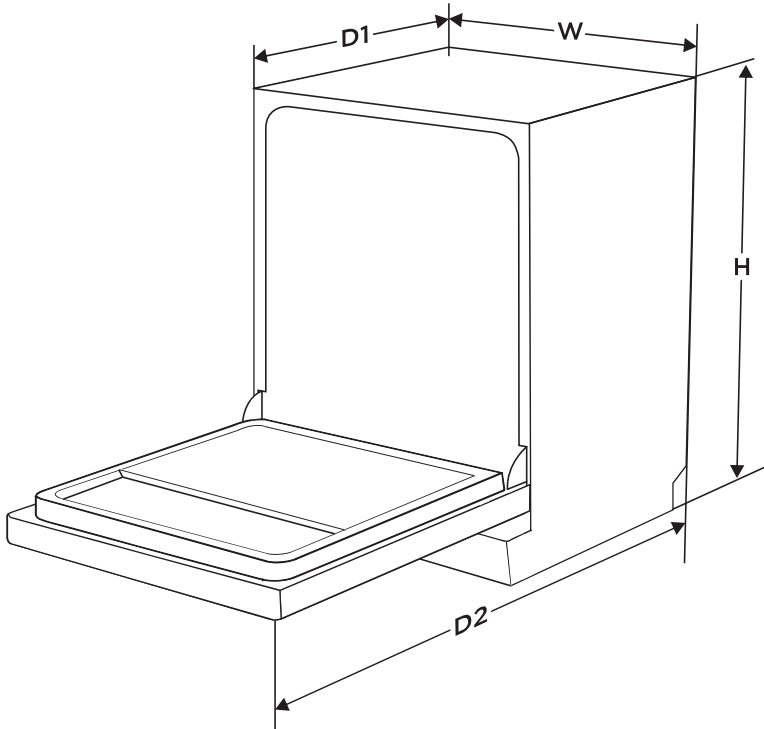


WSU6608XC/WSU6608KXC

|            |                                   |
|------------|-----------------------------------|
| Height (H) | 815mm                             |
| Width (W)  | 598mm                             |
| Depth (D1) | 570mm (with the door closed)      |
| Depth (D2) | 1150mm (with the door opened 90°) |

| MODEL                                             | WSU6608XC/WSU6608KXC   |
|---------------------------------------------------|------------------------|
| Manufacturer                                      | Westinghouse           |
| Standard place settings                           | 15                     |
| Energy efficiency class                           | 4                      |
| Water consumption class                           | 5.5                    |
| Standard cleaning cycle                           | ECO                    |
| Energy consumption of the standard cleaning cycle | 0.632 kWh              |
| Water consumption of the standard cleaning cycle  | 11.0 liter             |
| Power consumption of off-mode                     | 0.49 W                 |
| Power consumption of left-on mode                 | 0.99W                  |
| Program duration of the standard cleaning cycle   | 239 min                |
| Noise level                                       | 45 dB(A) re 1 pW       |
| Mounting                                          | Build under            |
| Could be built-in                                 | YES                    |
| Power consumption                                 | 1760-2100W             |
| Rated voltage / frequency                         | AC 220-240V/50Hz       |
| Water pressure (flow pressure)                    | 0.04-1.0MPa=0.4-10 bar |

## CONTROL PANEL

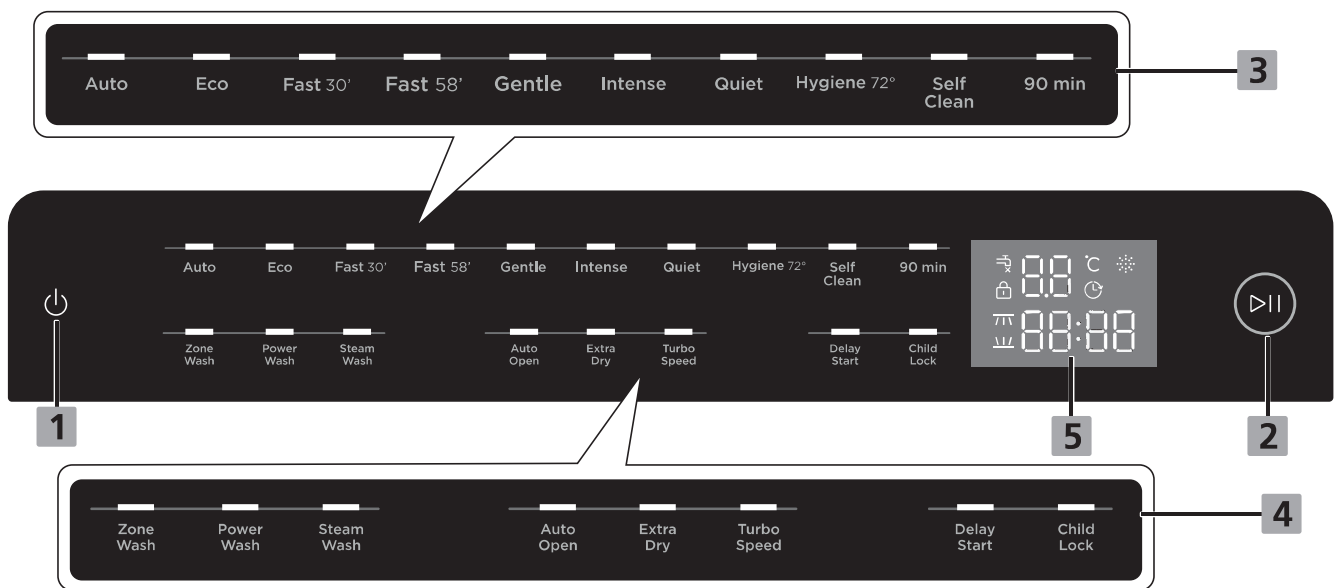

### 1. Power

Press this button to turn on your dishwasher, the screen lights up.

### 2. Start / Pause

To start the selected washing program or pause it when the dishwasher is working.

### 3. Program indicator

Press this button to select the appropriate washing program, the selected program indicator will be lit.

|                    |                                                                                                                                                                                                                  |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Auto</b>        | <b>Auto</b><br>Auto sensing wash, lightly, normally or heavily soiled crockery, with or without dried-on food.                                                                                                   |
| <b>Eco</b>         | <b>Eco</b><br>This is standard program, it is suitable to clean normally soiled tableware and it is the most efficient program in terms of its combined energy and water consumption for that type of tableware. |
| <b>Fast 30'</b>    | <b>Fast 30'</b><br>A shorter wash for lightly soiled loads that do not need drying.                                                                                                                              |
| <b>Fast 58'</b>    | <b>Fast 58'</b><br>For normally soiled loads that need 58 min wash.                                                                                                                                              |
| <b>Gentle</b>      | <b>Gentle</b><br>For lightly soiled crockery and glass.                                                                                                                                                          |
| <b>Intense</b>     | <b>Intense</b><br>For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for a while.                                                      |
| <b>Quiet</b>       | <b>Quiet</b><br>Lower noise and normally energy consumption, used for washing in evening.                                                                                                                        |
| <b>Hygiene 72°</b> | <b>Hygiene 72°</b><br>Use to sanitize your dishes and glassware. The highest water temperature is 72°C.                                                                                                          |

### Self Clean

### Self Clean

This program provides an effective cleaning of the dishwasher itself.

### 90 min

### 90 Min

For lightly soiled loads that need quick wash.

### 4. Function indicator

### Zone Wash

### Zone Wash

Press the button to select either upper basket or lower basket loaded, and the corresponding indicator will light up.

### Power Wash

### Power Wash

To wash very dirty, hard to clean dishes. (It can not be used with Auto, Fast 30' & Self Clean.)

### Steam Wash

### Steam Wash

To wash persistent soiled dishes with high temperature steam in main wash phase. (It can not be used with Auto, Fast 30' & Self Clean.)

### Auto Open

### Auto Open

After washing, the door will open automatically to achieve better drying effect. (It can not be used with Fast 30' & Self Clean.)

### Extra Dry

### Extra Dry

For better drying result. (It can not be used with Auto, Fast 30' & Self Clean.)

### Turbo Speed

### Turbo Speed

Reduce the program time. (It can not be used with Auto, Fast 30' & Self Clean.)

### Delay Start

### Delay Start

Press the button to set the delay time.

### Child Lock

### Child Lock

This option allows you to lock the buttons on the control panel, except the Power button so children cannot accidentally start the dishwasher by pressing the buttons on the panel.

## CONTROL PANEL

### 5. Screen



To show the remaining program time and delay time, error code etc.



#### **Rinse Aid**

If the “ ” indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.



#### **Water Supply Failure**

If the “ ” indicator is lit, it means that no water is reaching the dishwasher.



#### **Child Lock**

If the icon is illuminated, it means child lock function has been activated.



#### **Delay Start**

If this icon is illuminated, it means the dishwash is under delay start mode.



#### **Upper**

When you select Upper, only the dishes in the upper rack will be washed. The spray system of the lower basket will not operate.



#### **Lower**

When you select Lower, only the dishes in the lower rack will be washed. The spray system of the upper basket will not operate.

## PROGRAM TABLE

### PROGRAMMING THE DISHWASHER

#### Wash Cycle Table

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs.

(●)Means: need to fill rinse into the Rinse-Aid Dispenser.

| Program                             | Description Of Cycle                                           | Detergent Pre/Main                 | Running Time(min) | Energy (kWh) | Water (L) | Rinse Aid |
|-------------------------------------|----------------------------------------------------------------|------------------------------------|-------------------|--------------|-----------|-----------|
| <b>Auto</b>                         | Pre-wash(42℃)<br>Wash(50-65℃)<br>Rinse<br>Rinse(60℃)<br>Drying | $\frac{5/28.75g}{(1 \text{ tab})}$ | 186               | 0.90-1.30    | 12.6-14.3 | ●         |
| <b>Eco</b><br>(*AS/NZS 2007.1:2021) | Prewash<br>Wash(46℃)<br>Rinse<br>Rinse(37℃)<br>Drying          | $\frac{5/30g}{(1 \text{ tab})}$    | 239               | 0.632        | 11.0      | ●         |
| <b>Fast 30'</b>                     | Wash(45℃)<br>Rinse<br>Rinse(45℃)                               | $\frac{15g}{(1 \text{ tab})}$      | 30                | 0.584        | 10.5      | ○         |
| <b>Fast 58'</b>                     | Wash(60℃)<br>Rinse<br>Rinse(55-60℃)<br>Drying                  | $\frac{33.75g}{(1 \text{ tab})}$   | 58                | 0.930        | 10.5      | ●         |
| <b>Gentle</b>                       | Pre-wash<br>wash(45℃)<br>Rinse<br>Rinse(55-60℃)<br>Drying      | $\frac{5/28.75g}{(1 \text{ tab})}$ | 130               | 0.850-0.925  | 13.9      | ●         |
| <b>Intense</b>                      | Pre-wash<br>Wash(60℃)<br>Rinse<br>Rinse(65-72℃)<br>Drying      | $\frac{5/28.75g}{(1 \text{ tab})}$ | 178               | 1.280-1.385  | 13.9      | ●         |
| <b>Quiet</b>                        | Wash(55℃)<br>Rinse<br>Rinse (55-65℃)<br>Drying                 | $\frac{33.75g}{(1 \text{ tab})}$   | 245               | 1.035-1.180  | 10.8      | ●         |
| <b>Hygiene 72°</b>                  | Pre-wash<br>Wash(72℃)<br>Rinse<br>Rinse(65-72℃)<br>Drying      | $\frac{5/28.75g}{(1 \text{ tab})}$ | 195               | 1.510-1.615  | 13.9      | ●         |
| <b>Self Clean</b>                   | Pre-wash<br>Wash(60℃)<br>Rinse<br>Rinse (70-72℃)<br>Drying     | $\frac{5/28.75g}{(1 \text{ tab})}$ | 135               | 1.235-1.265  | 13.9      | ●         |
| <b>90 min</b>                       | Wash(55℃)<br>Rinse<br>Rinse (60-65℃)<br>Drying                 | $\frac{33.75g}{(1 \text{ tab})}$   | 90                | 1.000-1.030  | 11.1      | ●         |



#### NOTE:

AS/NZS 2007.1:2021 This program is the test cycle. The information for comparability test in accordance with AS/NZS 2007.1.

## HINTS AND TIPS

### If the digital screen “:” stops flashing and the buzzer sounds every 60 seconds

- Your machine's door is open, shut the door to continue.

### If the program won't start

- Check if the plug is connected.
- Check your indoor fuses.
- Check that the water inlet tap is turned on.
- Check that you have closed the machine door.
- Check that you switched on the machine by pressing the power on/off button.
- Check that the water inlet filter and the machine filters are not clogged.

### If detergent residues are left in the detergent compartment

- Detergent has been added when the detergent compartment was wet.
- Large dishes have blocked the dispenser door.

### If water is left inside the machine at the end of the program

- The water drain hose is clogged or twisted.
- The filters are clogged.
- The program is not finished yet.
- Check drain spigot for blockage.



### IMPORTANT

At the end of the program, water may still remain on the sides and door of the appliance.

### If the machine stops during a wash operation

- Power failure.
- Water inlet failure.
- Program is on standby mode.

### If shaking and hitting noises are heard during a wash operation

- Dishes are placed incorrectly.
- The spray arm is hitting the dishes.

### If there are partial food wastes left on the dishes

- Dishes are placed incorrectly into the machine, sprayed water did not reach related places.
- Basket overloaded.
- Dishes leaning against one another.
- Very small amount of detergent added.
- An unsuitable, rather weak wash program selected.
- Spray arm clogged with food waste.
- Filters clogged.
- Filters incorrectly fitted.
- Water drain pump clogged.

### If there are white stains on the dishes

- A very small amount of detergent is being used.
- Rinse aid dosage setting at a very low level.

### If the dishes won't dry

- A program without a dry operation selected.
- Rinse aid dosage set too low.
- Dishes unloaded too fast.
- Use a hotter program.

### If there is rust on the dishes

- Stainless-steel quality of the dishes washed is insufficient.

### Unloading the baskets


- For improved drying results with the most effective use of energy, open the door approximately 10cm at the end of the program.
- Allow the tableware to cool for 30-40 minutes as hot items can easily be damaged.
- First remove items from the lower basket before removing the items from the upper basket.

### Call an authorised service if the problem still persists after the controls or in case of any malfunction not described above.

### Useful Information

- Whenever you will not be operating your machine:
  - Unplug the machine and then turn water off.
  - Leave the door slightly ajar in order to prevent the formation of unpleasant smells.
- Keep the machine interior clean.
- Correct loading of dishes in the machine, enables reduced energy consumption and improved washing and drying performance.
- Remove all large food remnants before you placing dirty dishes into the machine.
- Operate the machine after it is completely full.
- If the appliance is located in a place where the risk of freezing exists, you must completely drain the water that has remained in the machine. Turn off the water tap, disconnected the water inlet hose from the tap and allow the interior water to drain.

# INSTALLATION

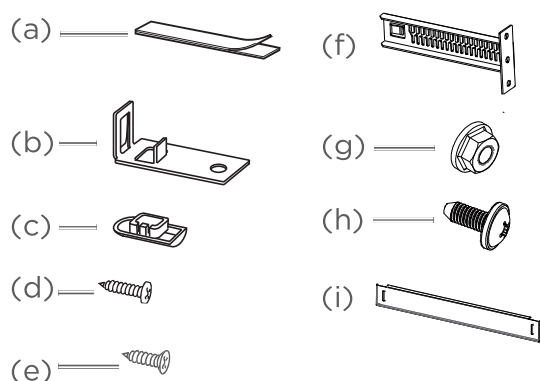

The type plate for your appliance is located on the side of the door.



## WARNING

Never use a damaged appliance.

- Never use a damaged appliance.
- The installation of the pipes and electrical equipment should be done by professionals.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.

## Package contents

- (a) Film to protect the worktop from condensation, 1x
- (b) Mounting bracket to secure the appliance to the worktop, 2x
- (c) Cover cap for holes, 2x
- (d) Round-head screw to secure the appliance to the kitchen units, 2x
- (e) Countersunk screw to secure the appliance to the worktop, 2x
- (f) Mounting bracket to assemble to the kickplate, 2x
- (g) Screw nuts to fix mounting bracket to the kickplate, 4x
- (h) Screws to fix mounting bracket to the kickplate, 4x
- (i) Kickplate to decorate the gap between dishwasher and floor, 1x



## WARNING



### Electrical Shock Hazard

Disconnect electrical power before installing dishwasher. Failure to do so could result in death or electrical shock.

## Attention

- The installation of the pipes and electrical equipment should be done by professionals.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.


## Check package contents

1. Move the appliance to a suitable place and unpack it (see "Installation and connection").
2. Remove all parts of the packaging, plastic profiles, tape and foam padding.
3. Check that the delivery is complete.
4. Check whether the appliance was damaged during transit.
5. If the delivery is incomplete or the appliance has been damaged during transit, please contact our service department

## Choose a suitable location

The planned location must fulfil the following prerequisites:

- The location must be a dry and frost-safe room with a firm ground.
- The appliance must be positioned beneath a full worktop which is joined together with the cupboards adjacent to the appliance.
- In order to install the connection pipes, the appliance must be positioned near to a washing/dishwashing basin.
- The measurements of the recess must at least correspond to the details in the following diagram.

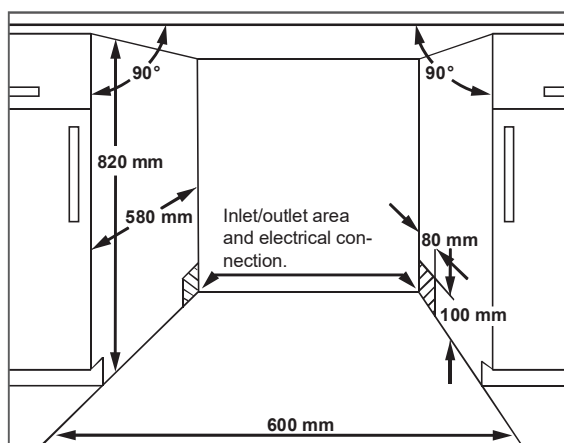

## CAUTION!

Risk of injury!

Improper handling of the appliance may lead to injuries.

- The appliance is heavy and bulky. Seek the help of another person during transport, installation and assembly.
- If a trolley is used to move the appliance, the appliance must be moved as shown on the packaging.
- Only lift the appliance as shown on the packaging.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.

## Having the outlet hose connected

Connecting the outlet hose (22) to the trap (siphon) of your washbasin/sink requires specialist work.

For this reason, the outlet hose may only be connected by a professional plumber or a member of our service department (see "Service" on page EN-39).


# INSTALLATION

## ! NOTICE

Potential malfunction!

Failure to connect the appliance correctly may cause malfunctions during operation.

- Make sure that the waste water can drain freely at any time. To that end, the outlet pipe must have a minimum diameter of 40 mm.
- Ensure that there are no kinks or damage to the outlet hose.
- Make sure that the end of the hose is not submerged in the pumped water.
- Do not extend the outlet hose or replace with another drainage pipe.

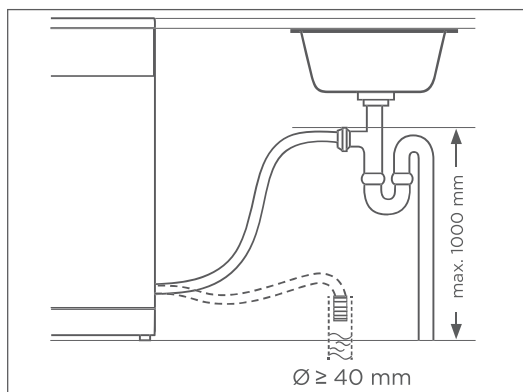

### Option A:

Direct securely fix to the washing basin with clamp. The outlet hose must be a maximum of 1000mm above the floor.

### Option B:

Connection to a floor drain.


## Connecting the inlet hose

## ! NOTICE

Risk of damage!

The dishwasher is set up for a water pressure of 0.4 bar to 10 bar (0.04 MPa to 1.0 MPa). Water must always be able to run freely into the appliance; otherwise, this can damage the appliance.

- For water pressure of less than 10 bar, install a pressure reducer (in case of doubt, seek information from the water supply company).
- Do not connect the dishwasher to the tap or mixing arm of a water heater (e.g. continuous flow heater, pressure-free boiler).
- Ensure that the inlet hose is correctly connected and is not kinked or damaged.
- Do not damage the inlet hose; it contains electrical components. If the inlet hose is damaged, contact our service department.

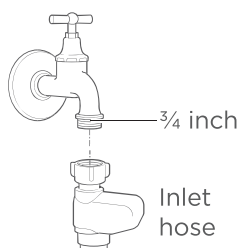

You will require a valve with a 3/4-inch screw connector for the water supply.

1. Screw the safety valve's lock nut to the tap hand-tight.
2. Check that the connection to the water tap is sealed. Turn on the water tap slowly and ensure that no water is escaping. Then close the tap again.

## ! WARNING

When connecting inlet, hold body of inlet and twist the nut with hand to tighten. Open tap to confirm no leak.

Do not use tools to tighten.

## Connecting the dishwasher to the electricity

## ! WARNING

Risk of electric shock / fire hazard!

- Prior to connecting the appliance, ensure that you have page Safety
- taken note of all the safety instructions and adhered to them.

Depending on the installation recess, the appliance must be connected before or after installation.

- For the electrical connection of the appliance, a professional must install an earthed power socket with its own fuse of a sufficient size (230 V~/50 Hz/10 A).
- The plug must be installed in such a way that the recess into which the dishwasher will be fitted is deep enough even when the plug is plugged in.
- Do not use a multi-socket extension cable, multi-socket plug, travel adapter, extension cable or similar.
- We recommend using a pulse-sensitive residual current device (RCD).


- Insert the mains plug into the socket.

## Installing the dishwasher

## ! NOTICE


Risk of damage!

- Use the screws which are supplied in the delivery or screws of an appropriate length.

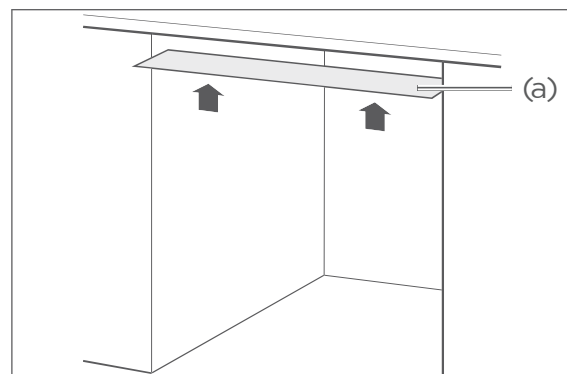


# INSTALLATION


1. To protect the worktop against condensation (d), affix the enclosed protective film to the underside of the worktop. This will help you minimise damage to the worktop from the outflow of hot steam.

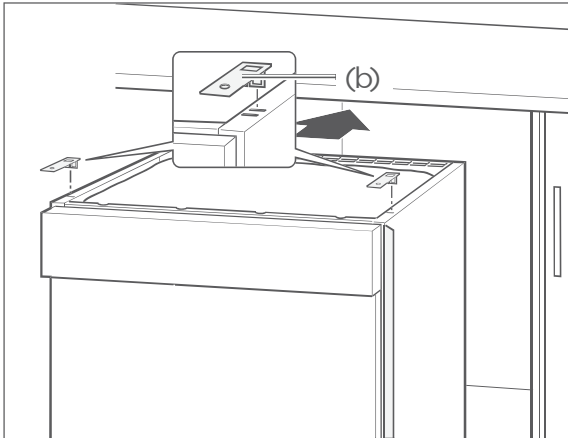

2. Insert the two mounting brackets (f) into the front slots on the top of the appliance so that you can screw the appliance to the worktop later on.

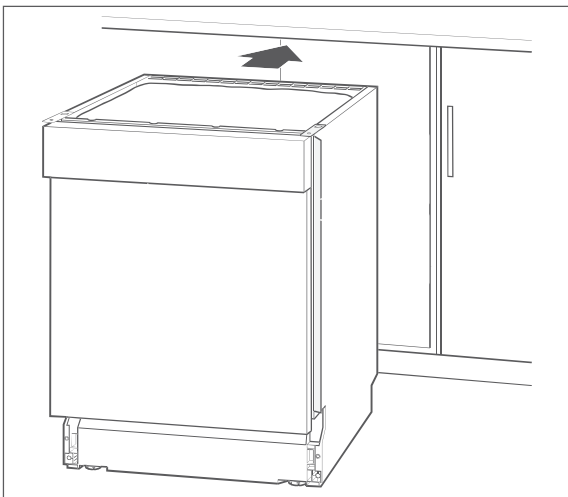


3. Slide the appliance into the recess.

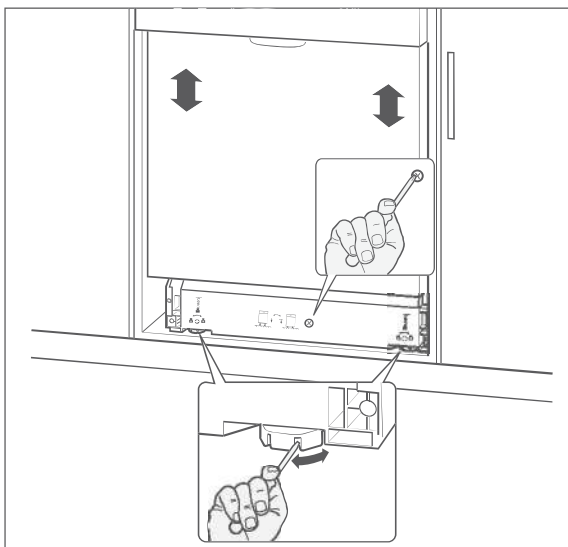

4. The height of both front feet and the back foot of the appliance can be adjusted in order to level the appliance.

The front feet are equipped with slots. Insert a screwdriver into one of the slots and use it to turn the appliance feet to the desired height.


5. With the help of the middle adjustment screw you can adjust the height of the rear appliance foot. Use a Phillips-tip screwdriver for this.
6. Check the alignment with a spirit level.
7. Make sure that the top edge of the appliance is up to the bottom edge of the worktop to prevent it from tipping forward when you open the appliance door.

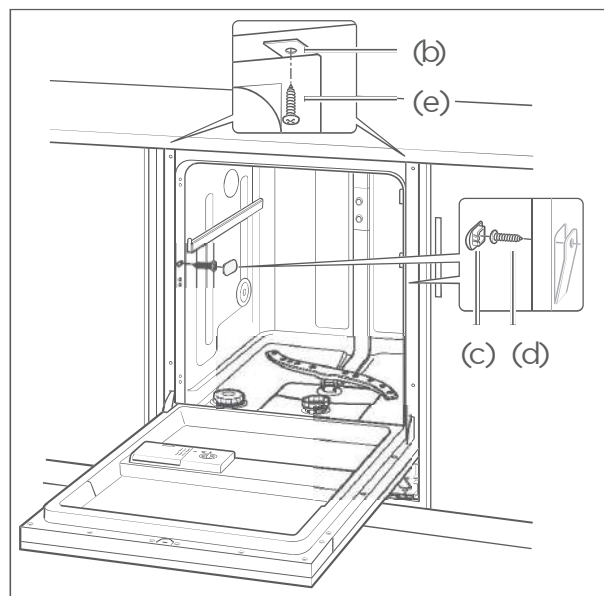

8. Screw the appliance to the kitchen unit.
  - If you have granite worktops, remove the internal Side cover caps (g) and screw the appliance to the adjacent kitchen cupboards. Cover the screws again with the cover caps.
  - For all other worktops, screw the mounting bracket (f) firmly to the worktop.

## Adjusting the door's accessibility

You can adjust how easy or difficult it is to open the appliance door. You can change the spring force of the door by turning both lower screws.

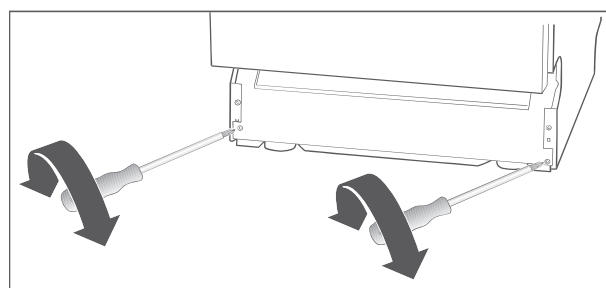


## INSTALLATION

- Turn the screw anticlockwise to adjust the door more smoothly.
- Turn the screws clockwise to make it harder to open the door.


### Assemble the kickplate

Use tools to bend the tine of the mounting brackets, the position of the tine depends on how much distance the kickplate assembled forward or backward.

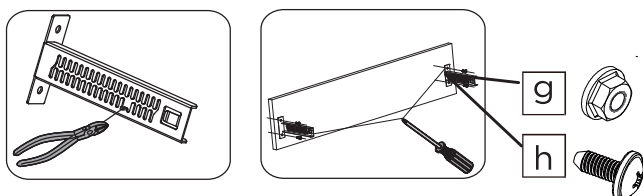

Then fix the mounting brackets on the kickplate by the screws and the nuts.

After that, insert the kickplate into the hole on the basement of the dishwasher.

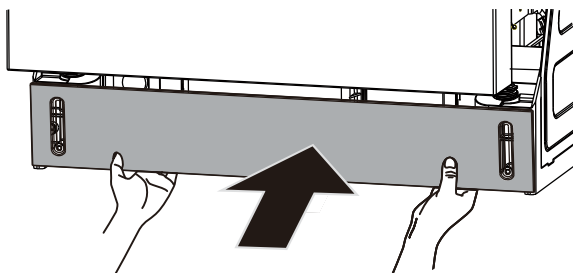


# PREPARING FOR USE

## QUICK USER GUIDE

Please read the corresponding content on the instruction manual for detailed operating method.


1. Install the dishwasher  
(Please refer to the INSTALLATION section for detailed instructions.)

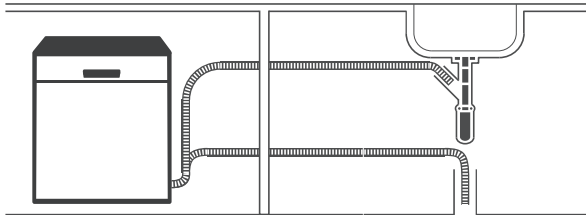


2. Removing the larger residue on the cutlery



3. Loading the baskets

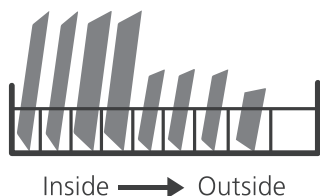

4. Filling the dispenser

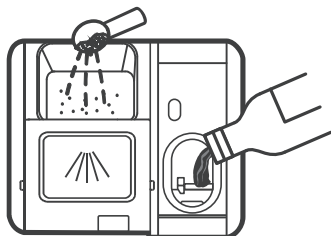

5. Selecting a program and running the dishwasher



## Preparing And Loading Dishes

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

## For washing the following cutlery/dishes

### Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

### Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolour during washing
- Glazed patterns may fade if machine washed frequently

## Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water. For best performance of the dishwasher, follow these loading guidelines. (Features and appearance of baskets and cutlery baskets may vary from your model.) Place objects in the dishwasher in following way:

- Items such as cups, glasses, pots/pans, etc. are faced downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.

## PREPARING FOR USE

- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.



### NOTE:

Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

### Removing the dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.



### WARNING




### Items will be hot!

To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.


### Loading the upper basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.

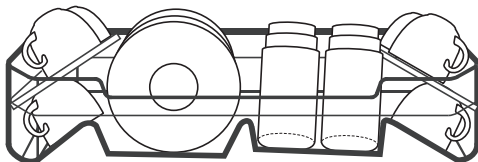

### Loading the lower basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm. The maximum diameter advised for plates in front of the detergent dispenser is of 19 cm, this not to hamper the opening of it.

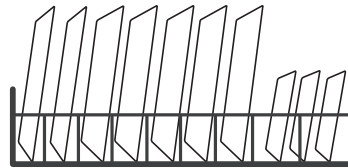

### Loading the cutlery basket

Cutlery should be placed in the cutlery rack separately from each other in the appropriate positions, and do make sure the utensils do not nest together, this may cause bad performance.



### WARNING



Do not let any item extend through the bottom.  
Always load sharp utensils with the sharp point down!



### NOTE:

For better washing performance, please load the baskets referring to the loading patterns in **LOADING** section.

### Function Of The Rinse Aid And Detergent

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids.



### WARNING

Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

### When to refill the rinse aid dispenser

The regularity of the dispenser needing to be refilled depends on how often dishes are washed and the rinse aid setting used.

- The Low Rinse Aid indicator (  ) will be lit when more rinse aid is needed.
- Do not overfill the rinse aid dispenser.

## PREPARING FOR USE

### Function of detergent

The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.



### WARNING

- Proper Use of Detergent  
Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.  
Don't put powdered detergent into the dispenser until you are ready to wash dishes.




Dishwasher detergent is corrosive! Keep dishwasher detergent out of the reach of children.


- Don't use dishwasher sheets.  
Dishwasher sheets are not recommended for best clean.

### Filling The Rinse Aid Reservoir


1. Remove the rinse reservoir cap by lifting up the handle .

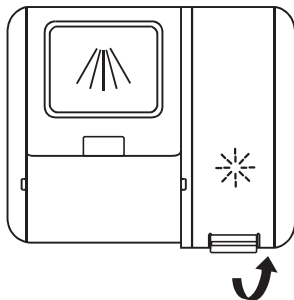

2. Pour the rinse aid into the dispenser, being careful not to overfill.

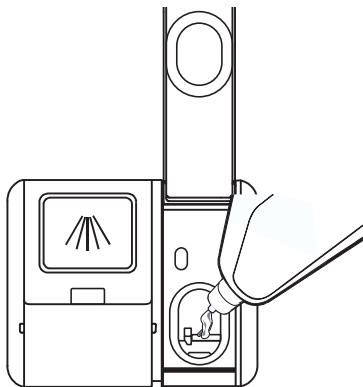

3. Close the cap after all.

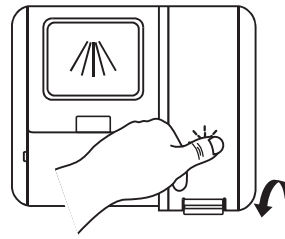


### Adjusting the rinse aid reservoir

To achieve a better drying performance with limited rinse aid, the dishwasher is designed to adjust the consumption by user. Follow the below steps.

- Close the door, switch on the appliance.
- Within 60 seconds after the appliance was switched on press the 90 min for more than 5 seconds to enter the set model, the rinse aid indication blinks as 1Hz frequency.
- Press the 90 min again to select the proper set according to your using habits, the setting will change in the following sequence: d5→d6 → d1→d2 →d3→d4→d5. The default is d5.  
The higher the number, the more rinse aid the dishwasher uses.
- Without operation in 5 seconds or press the Power button to complete the setup and exit the setting mode.



### Filling The Detergent Dispenser

1. Please choose an open way according to the actual situation. Open the cap by pressing in the release latch.

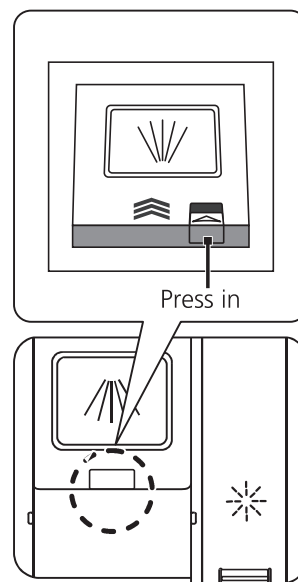


## PREPARING FOR USE

2. Add detergent into the larger cavity (A) for main wash. For better cleaning result, especially if you have very dirt items, pour a small amount of detergent onto the door. The additional detergent will activate during the pre-wash phase.

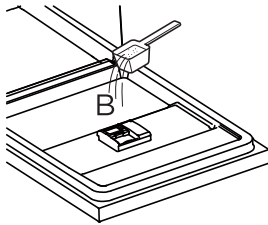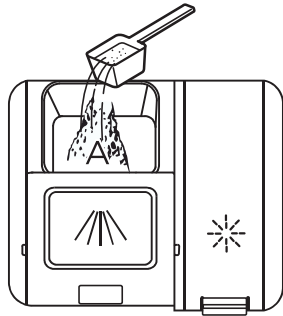

3. Close the flap by sliding it to the front and then pressing it down.

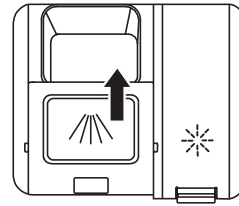

### **NOTE:**

Please observe the manufacturer's recommendations on the detergent packaging.

## PREPARING FOR USE

### Starting A Cycle Wash

1. Draw out the lower and upper basket, load the dishes and push them back. It is commended to load the lower basket first, then the upper one.
2. Pour in the detergent.
3. Insert the plug into the socket. The power supply refer to the page 'TECHNICAL SPECIFICATIONS'. Make sure that the water supply is turned on to full pressure.
4. Close the door, press the Power button, to switch on the machine.
5. Choose a program, the response light will turn on. Then press the Start/Pause button, the dishwasher will start its cycle.

### Changing The Program Mid-cycle

A wash cycle can only be changed if it has been running for a short time otherwise, the detergent may have already been released and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, follow the instructions below:

 
1. Press the Start/Pause button to pause the washing.
2. Press any program button for more than 3 seconds - the program will cancel.
3. Press the Program button to select the desired program.
4. Press the Start/Pause button, the dishwasher will start after a few seconds.



### Forget To Add A Dish?

A forgotten dish can be added any time before the detergent dispenser opens. If this is the case, follow the instructions below:

1. Press the Start/Pause button to pause the washing.
2. Wait 5 seconds then open the door.
3. Add the forgotten dishes.
4. Close the door.
5. Press the Start/Pause button, the dishwasher will start after a few seconds.



#### WARNING



It is dangerous to open the door mid-cycle, as hot steam may scald you.

### Auto Open

After washing, the door will open automatically to achieve better drying effect.



#### NOTE:

 
The dishwasher door must not be blocked when set to open automatically. This can disrupt door lock functionality.




### USING YOUR DISHWASHER

Before using your dishwasher :

Before using your dishwasher :



Inside → Outside

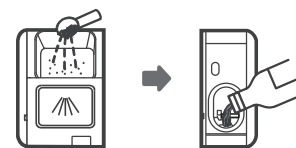


1. Loading the basket
2. Fill the rinse aid (Please refer to dispenser section for details)
3. Fill the detergent (Please refer to dispenser section for details)

### Basket Loading Tips


#### Adjusting the upper basket

##### Type 1:

1. To raise the upper basket, just lift the upper basket at the center of each side until the basket locks into place in the upper position. It is not necessary to lift the adjuster handle.

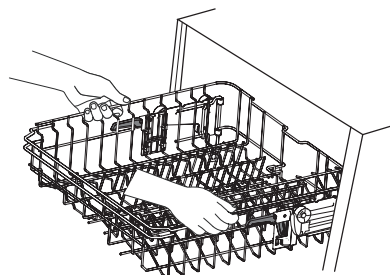

2. To lower the upper basket, lift the adjust handles on each side to release the basket and lower it to the lower position.

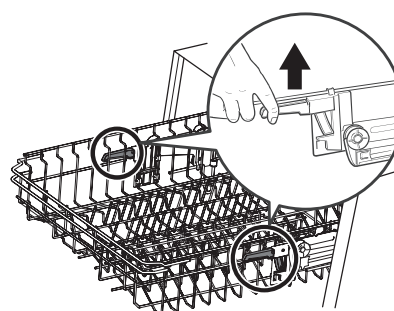


#### WARNING


The change of the position of the upper basket can be done ONLY with empty basket. Don't do it with basket fully loaded.

# PREPARING FOR USE


## Loading System Used Tips

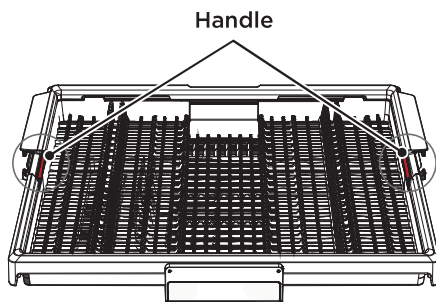

## Two flexible trays side by side

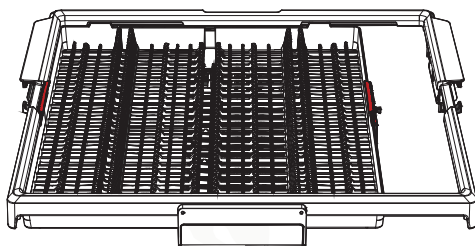

## Two flexible trays move to one side

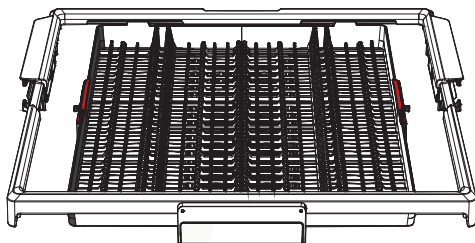


## Two flexible trays retracted in the middle




## Foldable Cup Rack


Cup racks fold down when not used

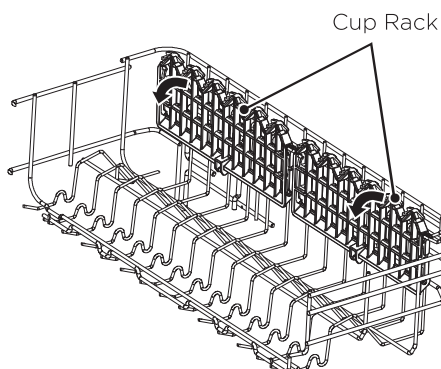

Cup racks support cups when fold up

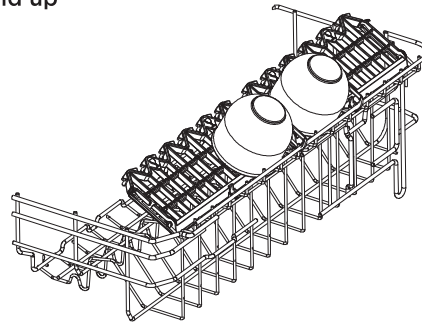


Cup racks hold wine glass when fold up

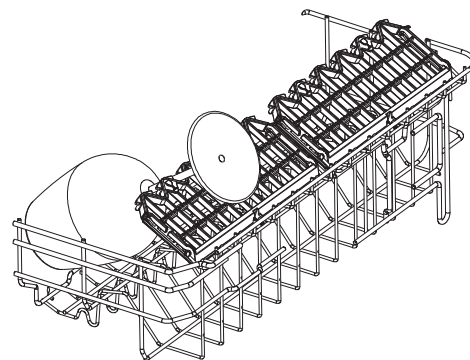


## Foldable Tines

There are 6 foldable tines in the upper rack to make it flexible for different loading situation, like large bottom pot.

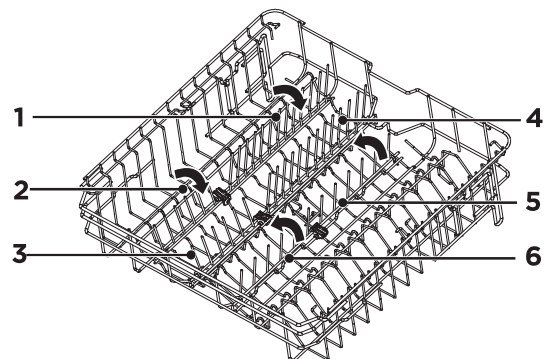



The foldable tines stand up

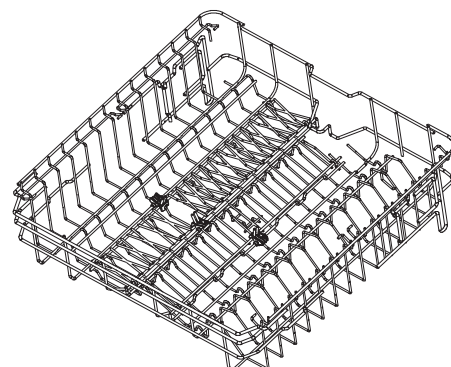


The foldable tines fold down

## PREPARING FOR USE

There are 8 foldable tines in the lower rack to make it flexible for different loading situation. Two different tine distance options to satisfy different shape of plate loading.

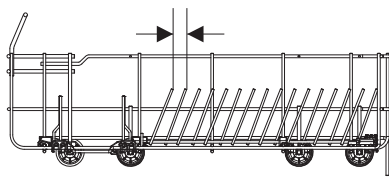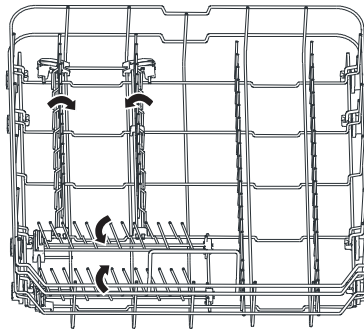



Narrow tine distance

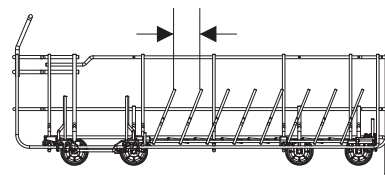


Wide tine distance

## Target Wash

Target Wash is to wash deep bottles. Users can turn off/on this feature by manually rotating the handle to the OFF/ON position.

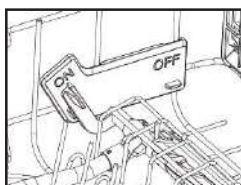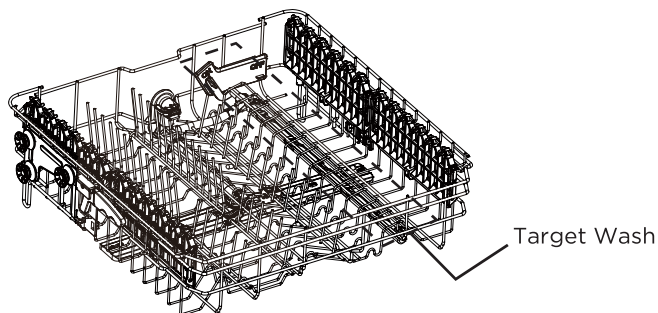

Turn to ON to open target wash

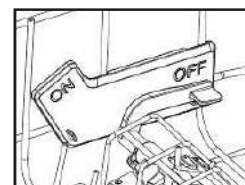


Turn to OFF to close target wash

# LOADING


LOADING THE BASKETS  
ACCORDING TO AS/NZS 2007.1:2021

1. Upper basket:

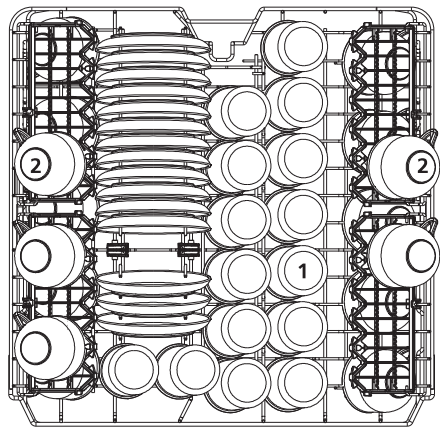



| Number | Item    |
|--------|---------|
| 1      | Glasses |
| 2      | Cups    |
| 3      | Saucers |

2. Lower basket:

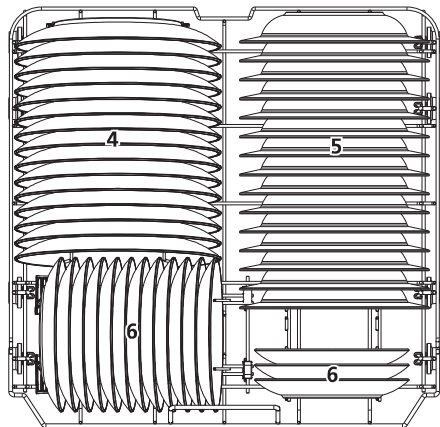

| Number | Item           |
|--------|----------------|
| 4      | Dinner plates  |
| 5      | Soup plates    |
| 6      | Dessert dishes |

3. Cutlery basket:

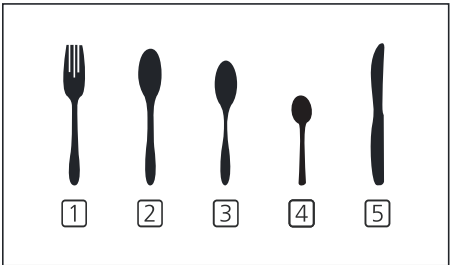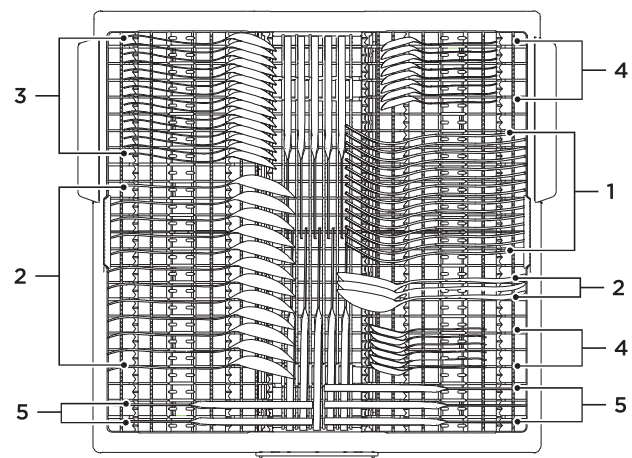

| Number | Item           |
|--------|----------------|
| 1      | Forks          |
| 2      | Soup spoons    |
| 3      | Dessert spoons |
| 4      | Teaspoons      |
| 5      | Knives         |

# MAINTENANCE AND CLEANING

## External Care

### The door and the door seal

Clean the door seals regularly with a soft damp cloth to remove food deposits. When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arms. Any deposits should be wiped off before the door is closed.

### The control panel

If cleaning is required, the control panel should be wiped with a soft damp cloth only.



## WARNING

- To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- Never use abrasive cleaners or scouring pads on the outer surfaces because they may scratch the finish. Some paper towels may also scratch or leave marks on the surface.

## Internal Care

### Filtering system


The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle, including foreign objects such as tooth picks or shards. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly, carefully remove foreign objects and clean the parts of the filtering system if necessary with water. Follow the steps below to clean the filter.




## NOTE:

Pictures are only for reference, different models of the filtering system and spray arms may be different.


1. Hold the coarse filter and rotate it anticlockwise to unlock the filter. Lift the filter upwards and out of the dishwasher.

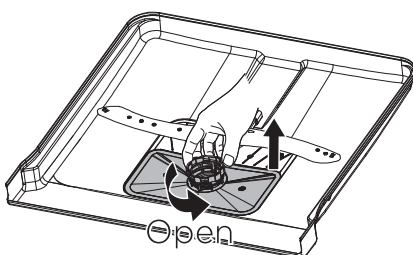


2. The fine filter can be pulled off the bottom of the filter assembly. The coarse filter can be detached from the main filter by gently squeezing the tabs at the top and pulling it away.

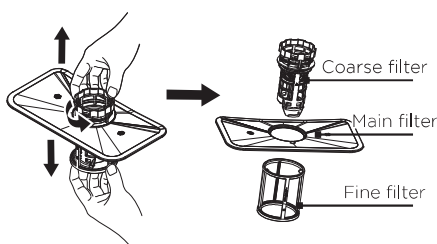

3. Larger food remnants can be cleaned by rinsing the filter under running water. For a more thorough clean, use a soft cleaning brush.

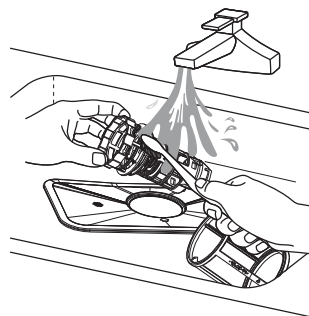

4. Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.

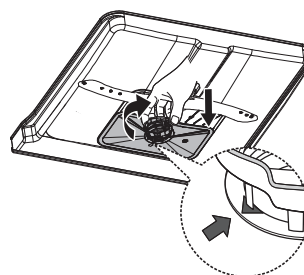

## WARNING


- Do not over tighten the filters. Put the filters back in sequence securely, otherwise coarse debris could get into the system and cause a blockage.
- Never use the dishwasher without filters in place. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

### Spray arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings.


To clean the spray arms, follow the instructions below:

1. To remove the upper spray arm, hold the nut in the center still and rotate the spray arm counterclockwise to remove it.

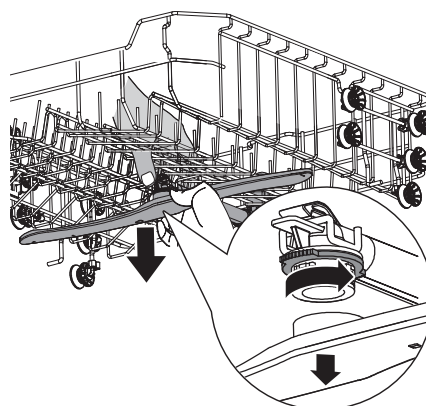

## MAINTENANCE AND CLEANING

2. To remove the lower spray arm, pull out the spray arm upward.

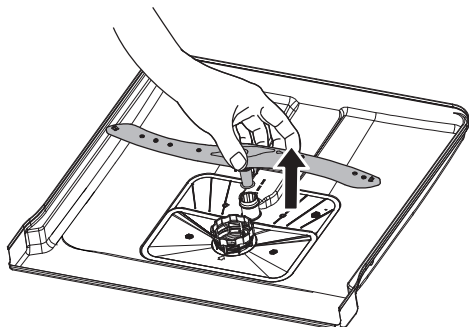

3. Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

### Caring For The Dishwasher

#### Frost precaution

Please take frost protection measures on the dishwasher in winter. Every time after washing cycles, please operate as follows:

1. Cut off the electrical power to the dishwasher at the supply source.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain the water from the inlet pipe and water valve. (Use a pan to gather the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.

#### After every wash

After every wash, turn off the water supply to the appliance and leave the door slightly open for a while so that moisture and odors are not trapped inside.

#### Remove the plug

Before cleaning or performing maintenance, always remove the plug from the socket.

#### No solvents or abrasive cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water.

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little vinegar, or a cleaning product made specifically for dishwashers.

#### When not in use for a long time

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

#### Moving the appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

#### Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

## TROUBLESHOOTING

### Before Calling For Service

Reviewing the charts on the following pages may save you from calling for service.

| Problem                          | Possible Causes                                 | What To Do                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------|-------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dishwasher doesn't start         | Fuse blown, or the circuit break tripped.       | Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.                                                                                                                                                                                                                                                                                   |
|                                  | Power supply is not turned on.                  | Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.                                                                                                                                                                                                                                                          |
|                                  | Water pressure is low                           | Check that the water supply is connected properly and the water is turned on.                                                                                                                                                                                                                                                                                                                      |
|                                  | Door of dishwasher not properly closed.         | Make sure to close the door properly and latch it.                                                                                                                                                                                                                                                                                                                                                 |
| Water not pumped from dishwasher | Twisted or trapped drain hose.                  | Check the drain hose.                                                                                                                                                                                                                                                                                                                                                                              |
|                                  | Filter clogged.                                 | Check and clean the filter.                                                                                                                                                                                                                                                                                                                                                                        |
|                                  | Kitchen sink clogged.                           | Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink that is not draining, use a drill to clear any blockage in the sink drain spigot. If it doesn't work you may need a plumber rather than a serviceman for dishwashers                                                                                                                                   |
| Suds in the tub                  | Wrong detergent.                                | Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the bottom of the dishwasher. Close the dishwasher door, then select any cycle. Initially, the dishwasher will drain out the water. Open the door after draining stage is complete and check if the suds have disappeared. Repeat if necessary. |
|                                  | Spilled rinse-aid.                              | Always wipe up rinse-aid spills immediately.                                                                                                                                                                                                                                                                                                                                                       |
| Stained tub interior             | Detergent with colourant may have been used.    | Make sure that the detergent has no colourant.                                                                                                                                                                                                                                                                                                                                                     |
| White film on inside surface     | Hard water minerals.                            | To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher Detergent. Otherwise, it may cause foaming or suds. Moreover, run a high-temperature cycle, like Intense, using a dishwasher-specific self-cleaning agent.                                                                                                  |
| There are rust stains on cutlery | The affected items are not corrosion resistant. | The items should be corrosion resistant.                                                                                                                                                                                                                                                                                                                                                           |

## TROUBLESHOOTING

| Problem                           | Possible Causes                                                                                                                               | What To Do                                                                                                                                                                                                                                                           |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Knocking noise in the dishwasher  | A spray arm is knocking against an item in a basket                                                                                           | Interrupt the program and rearrange the items which are obstructing the spray arm.                                                                                                                                                                                   |
| Rattling noise in the dishwasher  | Items of crockery are loose in the dishwasher.                                                                                                | Interrupt the program and rearrange the items of crockery.                                                                                                                                                                                                           |
| Knocking noise in the water pipes | This may be caused by on-site installation or the cross-section of the piping.                                                                | This has no influence on the dishwasher function. If in doubt, contact a qualified plumber.                                                                                                                                                                          |
| The dishes are not clean.         | The dishes were not loaded correctly.                                                                                                         | See notes in "Loading & unloading your dishwasher".                                                                                                                                                                                                                  |
|                                   | Not enough detergent was dispensed.                                                                                                           | Use more detergent, or change your detergent.                                                                                                                                                                                                                        |
|                                   | Items are blocking the movement of the spray arms.                                                                                            | Rearrange the items so that the spray can rotate freely.                                                                                                                                                                                                             |
|                                   | The filter combination is not clean or is not correctly fitted in the base of wash cabinet. This may cause the spray arm jets to get blocked. | Clean and/or fit the filter correctly. Clean the spray arm jets.                                                                                                                                                                                                     |
|                                   | The washing cycle selected is not proper.                                                                                                     | Use a longer, hotter cycle combined with Power Wash function.                                                                                                                                                                                                        |
| Cloudiness on glassware.          | Combination of soft water and too much detergent.                                                                                             | Use less detergent if you have soft water and select a shorter cycle to wash the glassware and to get them clean.                                                                                                                                                    |
| Black or grey marks on dishes     | Aluminium utensils have rubbed against dishes                                                                                                 | Use a mild abrasive cleaner to eliminate those marks.                                                                                                                                                                                                                |
| Detergent left in dispenser       | Dishes block detergent dispenser                                                                                                              | Re-loading the dishes properly.                                                                                                                                                                                                                                      |
| The dishes aren't drying          | Improper loading                                                                                                                              | Load the dishwasher as suggested in the directions.                                                                                                                                                                                                                  |
|                                   | Too little rinse-aid                                                                                                                          | Increase the amount of rinse-aid/refill the rinse-aid dispenser.                                                                                                                                                                                                     |
|                                   | Dishes are removed too soon                                                                                                                   | Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can come out. Take out the dishes until the inside temperature is safe to touch. Unload the lower basket first to prevent the dropping water from the upper basket. |
|                                   | The washing cycle selected is not proper.                                                                                                     | Use a hotter cycle combined with Extra Dry function or Auto Open function if available.                                                                                                                                                                              |

## TROUBLESHOOTING

| Problem                  | Possible Causes                            | What To Do                                                                                                                          |
|--------------------------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| The dishes aren't drying | Wrong program has been selected.           | With a short program, the washing temperature is lower, decreasing cleaning performance. Choose a program with a long washing time. |
|                          | Use of cutlery with a low-quality coating. | Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.   |

### ERROR CODES

If there is a malfunction, the dishwasher will display error codes to identify these:

| Codes | Meanings                                                                        | Possible Causes                                                                     |
|-------|---------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| E1    | Longer inlet time                                                               | Faucets is not opened, or water intake is restricted, or water pressure is too low. |
| E3    | Not reaching required temperature.                                              | Malfunction of heating element.                                                     |
| E4    | Overflow.                                                                       | Some element of dishwasher leaks.                                                   |
| E8    | Failure of orientation of distributary valve.                                   | Open circuit or break of distributary valve.                                        |
| Ec    | Washing control system fail.                                                    | PCB or motor fail.                                                                  |
| Ed    | Failure of communication between main circuit board with display circuit board. | Open circuit or break wiring for the communication.                                 |



### WARNING

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.



**This document sets out the terms and conditions of the product warranties for Westinghouse Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.**

## 1. In this warranty:

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- (c) 'ASC' means Electrolux's authorised serviced centres;
- (d) 'Electrolux' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this 3 warranty;
- (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

**2. Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.

**3. Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.

**4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

**5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

**6. Proof of purchase** is required before you can make a claim under this warranty.

**7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;
- (b) parts and Appliances not supplied by Electrolux;
- (c) cosmetic damage which does not affect the operation of the Appliance;
- (d) damage to the Appliance caused by:

- (i) negligence or accident;
- (ii) misuse or abuse, including failure to properly maintain or service;
- (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
- (iv) normal wear and tear;
- (v) power surges, electrical storm damage or incorrect power supply;
- (vi) incomplete or improper installation;
- (vii) incorrect, improper or inappropriate operation;
- (viii) insect or vermin infestation;
- (ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced

**8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;
- (b) have the model and serial number of the Appliance available;
- (c) have the proof of purchase (e.g. an invoice) available;
- (d) telephone the numbers shown below.

**9. Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

**10. New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

**11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

## Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

|                    |                                                                                                                                                                                   |                                                                                                                                                                                |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>AUSTRALIA</b>   | <b>FOR SERVICE</b><br>or to find the address of your nearest authorised service centre in Australia<br><b>PLEASE CALL 13 13 49</b><br><small>For the cost of a local call</small> | <b>FOR SPARE PARTS</b><br>or to find the address of your nearest spare parts centre in Australia<br><b>PLEASE CALL 13 13 50</b><br><small>For the cost of a local call</small> |
| <b>NEW ZEALAND</b> | <b>FOR SERVICE</b><br>or to find the address of your nearest authorised service centre in New Zealand<br><b>PLEASE CALL 0800 10 66 10</b>                                         | <b>FOR SPARE PARTS</b><br>or to find the address of your nearest spare parts centre in New Zealand<br><b>PLEASE CALL 0800 10 66 20</b>                                         |

For more information on all Westinghouse appliances, or for dimension and installation information, call into your retailer, phone or email our customer care team or visit our website:

#### **AUSTRALIA**

service: 13 13 49  
spare parts: 13 13 50  
email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
web: [westinghouse.com.au](http://westinghouse.com.au)

#### **NEW ZEALAND**

service: 0800 10 66 10  
spare parts: 0800 10 66 20  
email: [customercare@electrolux.co.nz](mailto:customercare@electrolux.co.nz)  
web: [westinghouse.co.nz](http://westinghouse.co.nz)

 and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.  
Used under license by Electrolux Home Products Pty Ltd. All Rights Reserved.

© 2019 Electrolux Home Products Pty Ltd. ABN 51 004 762 341

