



RICE COOKER

Model Number SIRCSC5 / SIRCSC10C / SIRC15C



USER MANUAL



Distributed in AUS / NZ By:
Blessington Pty Ltd
Unit 17 / 167 Prospect Highway Seven Hills
NSW 2147 Australia
Phone: +61 2 8811 1900

IMPORTANT SAFETY INSTRUCTIONS (Retain for future reference)

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use oven gloves when removing cover or handling hot containers.
3. To protect against electrical shock, do not immerse cord, plug or base unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from outlet when not in use and before cleaning. Unplug before putting on or taking off parts, and allow to cool before cleaning.
6. The use of accessory attachments is not recommended by the manufacturer as it may cause injuries.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
11. Do not use appliance for other than intended use.
12. Do not use steel wool or any metallic scouring pad to clean the electrical pin terminals on either the appliance or cord set. Metal slivers can reduce electrical spacing and cause a shock hazard.
13. To reduce the risk of electrical shock, cook only in supplied removable container. Do not pour liquid into outer pan.
14. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of

experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

16. Children should be supervised to ensure that they do not play with the appliance.
17. In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

Servicing should only be performed by authorized service personnel.


ADDITIONAL IMPORTANT SAFEGUARDS

1. CAUTION: This appliance generates heat and escaping steam during use. Proper precaution must be taken to prevent the risk of burns, fires or other damage to persons or property.
2. All users of this appliance must read and understand this manual before operating or cleaning this appliance.
3. The cord to this appliance should be plugged into a 220-240V AC electrical outlet only.
4. When using this appliance, provide adequate space above and on all sides for air circulation. Do not allow this appliance to touch or be situated near to curtains, wall coverings, clothing, dish towels or other flammable materials during use.
5. Do not leave this appliance unattended during use.
6. This appliance generates steam. Do not operate uncovered.
7. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance. Do not use the Inner Pot if cracked or chipped
8. Always unplug the appliance when not in use. Unplug by grasping the plug, never pull on the cord.
9. Do not use the **"WARM"** function to reheat cold rice or other foods.

10. Use the Automatic Rice Cooker on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Automatic Rice Cooker could cause it to malfunction.
11. Avoid electric shock by unplugging the appliance before washing or adding water.
12. To avoid burns, stay clear of the steam vent during cooking. Also, wait for the appliance to cool down completely before touching or cleaning the Glass Lid, Inner Pot or Heating Plate.
13. Never use the Inner Pot on a gas or electric cook top or on an open flame.
14. Do not leave the plastic Paddle or Measuring Cup in the Inner Pot while on and in use.

PARTS

- A. Glass Lid
- B. Housing
- C. COOK Indicator
- D. Power Cord
- E. COOK Switch
- F. WARM Indicator
- G. Measuring cup
- H. Paddle
- I. Handles
- J. Inner pot
- K. Steam Vent
- L. Outer Steamer (Not Supplied with Model SIRCI SC)

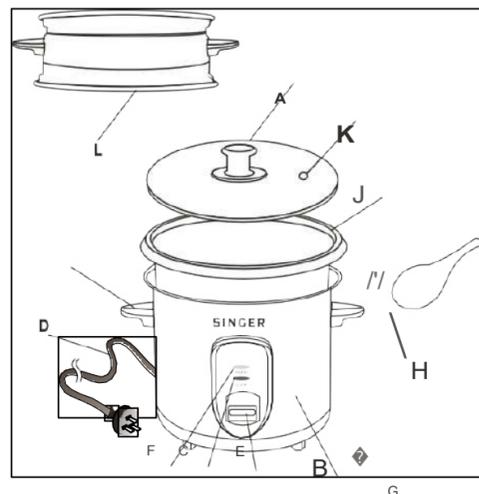

OPERATING INSTRUCTIONS INSTRUCTIONS FOR USE

Cooking Rice

With the automatic Rice Cooker, you can cook any kind of rice. Measure the amount of rice that you would like to cook using the Measuring Cup provided. Measuring Cup is included with your cooker. Filling the measuring cup with rice makes approximately 2¹/₂ cups of cooked rice.

NOTE: Make sure that the rice is leveled when the cup is filled. The Rice Cooker has the capacity for 10 measuring cups of dry rice.

1. Pour desired amount of rice into a separate container. Wash and rinse the rice until the rinse water is clear.
2. Take the Inner Pot out of the Rice Cooker.
3. Place the washed rice into the Inner Pot and add appropriate amount of water. (If you are making 10 cups of dry rice, add water to the 10 mark in the inside of the Inner Pot.)
4. Wipe the outside of the Inner Pot dry, then place it back into the Automatic Rice Cooker
5. Rotate the Inner Pot slightly to make sure that it is well seated on the Heating Plate.

NOTE: Make sure to always wipe down the outer surface of the Inner Pot. If the Inner Pot is wet when placed into the Cooker, this may cause a cracking noise while the unit heats up. Keep the outer surface dry to prevent damage to the inner workings of the appliance.

6. Place the Glass Lid on top of the Rice Cooker.
7. **CAUTION:** Do not operate the Automatic Rice Cooker without closing

the Lid. Steam is generated during use.

8. Plug the Automatic Rice Cooker into a 220-240V AC outlet.
9. Press down the Switch on the unit and the "COOK" light will illuminate.
10. When the Automatic Rice Cooker is done cooking, the "**WARM**" light will illuminate. For best results, let the cooked rice sit for 15 minutes before stirring or removing. This allows the steam to finish the cooking process.

11. After rice has steamed for 15 minutes, carefully open the lid as steam will escape. Use the Paddle provided, or any other non-metal long handled utensil, to scoop and mix the rice well. Allow all steam to escape.

Keep Warm

1. When the cooking is completed, the Automatic Rice Cooker will automatically go into the "**WARM**" mode. At this time, the "**WARM**" light will illuminate.
2. NOTE: Do not warm rice for more than 4 hours. It is recommended to consume the rice within a four hour period.
3. If the "**WARM**" mode is not desired, simply unplug the Automatic Rice Cooker from the wall. Do not touch the Base Unit or Inner Pot until they cool completely.
4. Allow the Automatic Rice Cooker to cool completely before cleaning.
5. When the Automatic Rice Cooker is not being used, please keep it unplugged.

HOWTO USE THE OUTER STEAMER

Many other foods may be cooked in the Rice Cooker/Food Steamer including meat, fish, poultry, vegetables, or even puddings and cakes. Steam cooking is quick and easy, but more importantly, it preserves the original flavours and nutritional value.

1. To steam cook, add water to the Rice Bowl and place the Outer Steamer onto the inner rim of the Rice Bowl.

NEVER PUT ANY LIQUID INTO THE MAIN BASE UNIT.

2. Put the food in the Outer Steamer and place the lid on the Cooker.
3. Plug cord into 220-240V AC outlet. Depress the switch (COOK) to start cooking and the red cooking indicator light will glow.
4. Steam until done to taste.

When removing the lid after steaming, take care to avoid the the hot steam, and take care not to allow water droplets to fall onto food, such as custards or puddings.

TECHNICAL SPECIFICATIONS

Model Number: SIRC5C / SIRC5C-S /
SIRCI0C / SIRCI5C Voltage:220-240V-
50/60Hz
Power: 400W I 700W I 900W

NOTE: Steam cooking times will vary depending on the food being cooked and the desired degree of cooking. Experiment with this healthy method of cooking by varying the quantity of water and the cooking time. This will help you to obtain the best results to suit your individual taste.

BROWN RICE

Brown rice may be cooked using the same instructions as for white rice. (NOTE: For best results we suggest washing the brown rice thoroughly before cooking.) It is important to leave the rice in the "**WARM**" cycle for at least 15 minutes, as brown rice takes slightly longer to prepare.

FLAVOURED RICE

Prepare rice in Rice Cooker, as directed, except substitute the water with chicken broth or beef broth. Apple juice, orange juice, pineapple juice or tomato juice may also be substituted for half of the water.

USER MAINTENANCE INSTRUCTIONS

This appliance should be cleaned after every use.

1. Unplug the Automatic Rice Cooker when not in use or before cleaning. Never immerse Base Unit in water or any other liquid. Allow the Automatic Rice Cooker to cool completely before cleaning.
2. Do not use abrasive cleaners, scouring pads, or steel wool to clean the Automatic Rice Cooker.
3. To clean the Base Unit, lightly wipe the exterior with a damp cloth or sponge. Do not immerse Base Unit into water or any liquid. Dry thoroughly with a soft cloth.
4. To clean the Inner Pot, remove from the rice cooker and fill with hot water from the tap. Let it sit for a while and then wash with hot, soapy water. Rinse thoroughly and dry.
5. The Measuring Cup and Paddle can be washed in warm, soapy water. They are not dishwasher safe.
6. Wipe down the inside of the Lid, if necessary, with a clean, damp cloth or sponge.
7. Make sure that grains of rice do not stick to the Heating Element in the bottom of the Base Unit. If this occurs, remove immediately. If grains of rice are stuck to the Heating Plate, a non-abrasive pad can be used to remove it. Clean the area thoroughly for good contact between the Heating Plate and the bottom of the Inner Pot.
8. This appliance has no user serviceable parts. Do not attempt to repair this appliance yourself, as you could cause damage to yourself and to the appliance. Refer to qualified service personnel only.
9. This appliance is for household use only.
10. Do not use bleach, vinegar, or other harsh chemicals to clean the Automatic Rice Cook

